




## **Electrical Guide**

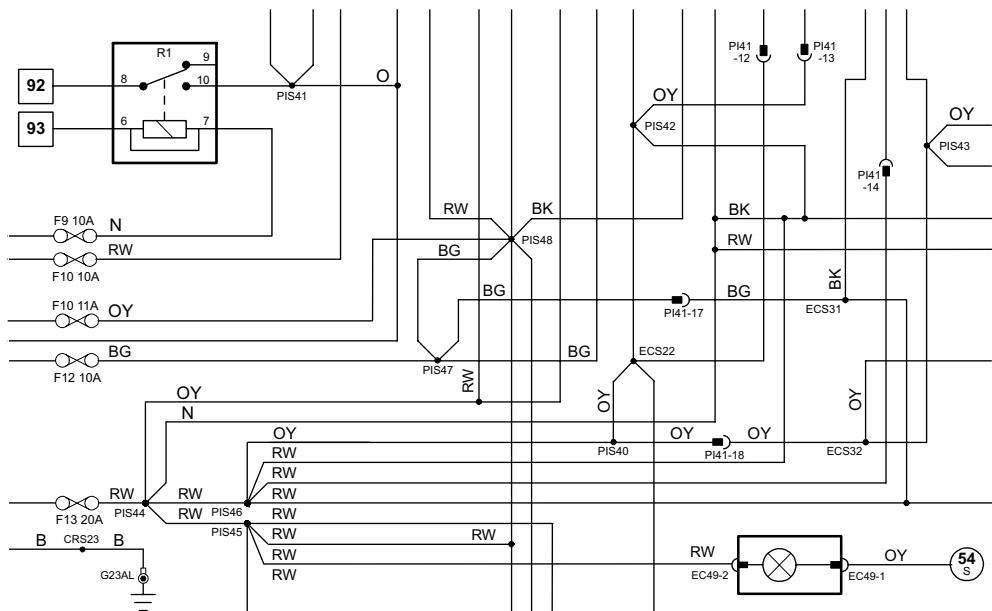

XJ

**including LWB  
Gasoline and Diesel**

VIN: H18680 >





BY APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH II  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH  
THE QUEEN MOTHER  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO  
HIS ROYAL HIGHNESS THE PRINCE OF WALES  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY

---

## Electrical Guide

---

**XJ**

**including LWB  
Gasoline and Diesel**

**VIN: H18680 >**

---

Published by Technical Communications, **Jaguar Cars Limited**

Publication Part Number JLR 12 85 10\_1E, May 2007

While every effort is made to ensure accuracy, design changes to the vehicle may be made in the period between the completion of this publication and the introduction of vehicles.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form: electronic, mechanical, including photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.

Table of Contents: Figures .....	2
Abbreviations and Acronyms .....	5
Introduction .....	7
User Instructions .....	8
Symbols and Codes .....	10
Network Configuration .....	15
Major Harnesses and Fusebox Location .....	16
Relay and Fuse Location .....	17
Fusebox Connectors .....	18
Harness In-Line Connectors .....	19
Ground Point Location .....	22
Control Module Location .....	23
Control Module Pin Identification .....	25
Diesel Engine Sensors and Actuators .....	36
Electrical Guide Figures and Data .....	follows after page 37
(pages are numbered by Figure number)	
Component Index .....	follows after Electrical Guide Figures and Data

## FIGURES

Fig.	Description	Variant
<b>01</b>	<b>Power Distribution</b>	
Fig. 01.1	Main Power Distribution .....	All Vehicles
Fig. 01.2	Battery Power Distribution: Part 1 .....	All Vehicles
Fig. 01.3	Battery Power Distribution: Part 2 .....	All Vehicles
Fig. 01.4	Ignition Switched Power Distribution: I (Accessory) .....	All Vehicles
Fig. 01.5	Ignition Switched Power Distribution: II (Run) .....	All Vehicles
Fig. 01.6	Switched System Power Distribution: Part 1 .....	All Vehicles
Fig. 01.7	Switched System Power Distribution: Part 2 .....	All Vehicles
Fig. 01.8	Engine Management Switched Power Distribution .....	All Vehicles
<b>02</b>	<b>Battery; Starter; Generator</b>	
Fig. 02.1	Battery; Starter; Generator: V6 .....	V6 Vehicles
Fig. 02.2	Battery; Starter; Generator: V8 .....	V8 Vehicles
Fig. 02.3	Battery; Starter; Generator: Diesel 2.7V6 .....	Diesel 2.7V6
<b>03</b>	<b>Engine Management</b>	
Fig. 03.1	Engine Management: V6 – Part 1 .....	V6 Vehicles
Fig. 03.2	Engine Management: V6 – Part 2 .....	V6 Vehicles
Fig. 03.3	Engine Management: V8 N/A – Part 1 .....	V8 N/A Vehicles
Fig. 03.4	Engine Management: V8 N/A – Part 2 .....	V8 N/A Vehicles
Fig. 03.5	Engine Management: V8 SC – Part 1 .....	V8 SC Vehicles
Fig. 03.6	Engine Management: V8 SC – Part 2 .....	V8 SC Vehicles
Fig. 03.7	Engine Management: Diesel 2.7V6 - Part 1 .....	Diesel 2.7V6
Fig. 03.8	Engine Management: Diesel 2.7V6 - Part 2 .....	Diesel 2.7V6
Fig. 03.9	Engine Management: Secondary Air Injection - NAS .....	NAS Gasoline Vehicles
<b>04</b>	<b>Transmission</b>	
Fig. 04.1	Transmission (Automatic) .....	Automatic Vehicles
<b>05</b>	<b>Chassis</b>	
Fig. 05.1	Dynamic Stability Control .....	All Vehicles
Fig. 05.2	Electronic Parking Brake; Variable Assist Power Steering .....	All Vehicles
Fig. 05.3	Air Suspension System .....	All Vehicles
Fig. 05.4	Adaptive Speed Control .....	Adaptive Speed Control Vehicles
Fig. 05.5	Tire Pressure Monitoring System .....	Tire Pressure Monitoring Vehicles
<b>06</b>	<b>Climate Control</b>	
Fig. 06.1	Climate Control: Part 1 .....	All Vehicles
Fig. 06.2	Climate Control: Part 2 .....	All Vehicles
Fig. 06.3	Rear Climate Control .....	Rear Climate Control Vehicles
<b>07</b>	<b>Instrumentation</b>	
Fig. 07.1	Instrument Cluster .....	All Vehicles
<b>08</b>	<b>Exterior Lighting</b>	
Fig. 08.1	Exterior Lighting: Gasoline .....	Gasoline Vehicles
Fig. 08.2	Exterior Lighting: Diesel .....	Diesel Vehicles
Fig. 08.3	Exterior Lighting: Rear .....	All Vehicles
Fig. 08.4	Exterior Lighting: Rear – European Trailer Towing .....	European Trailer Towing Vehicles
Fig. 08.5	Exterior Lighting: Rear – U.K. Trailer Towing .....	U.K. Trailer Towing Vehicles
Fig. 08.6	Headlamp Leveling .....	HID Headlamp Vehicles

**FIGURES**

<b>Fig.</b>	<b>Description</b>	<b>Variant</b>
<b>09</b>	<b>Interior Lighting</b>	
Fig. 09.1 . . . . .	Interior Lighting . . . . .	All Vehicles
Fig. 09.2 . . . . .	Dimmer-Controlled Lighting: Part 1 . . . . .	All Vehicles
Fig. 09.3 . . . . .	Dimmer-Controlled Lighting: Part 2 . . . . .	All Vehicles
<b>10</b>	<b>Steering Column; Pedals and Mirrors</b>	
Fig. 10.1 . . . . .	Steering Column Adjust; Pedal Adjust . . . . .	All Vehicles
Fig. 10.2 . . . . .	Door Mirrors: Electrochromic Rear View Mirrors . . . . .	All Vehicles
<b>11</b>	<b>Seat Systems</b>	
Fig. 11.1 . . . . .	Driver Seat: 12-way Movement with Memory . . . . .	12-way Driver Seat Memory Vehicles
Fig. 11.2 . . . . .	Driver Seat: 16-way Movement with Memory . . . . .	16-way Driver Seat Memory Vehicles
Fig. 11.3 . . . . .	Passenger Seat: 12-way Movement . . . . .	12-way Passenger Seat Vehicles
Fig. 11.4 . . . . .	Passenger Seat: 16-way Movement . . . . .	16-way Passenger Seat Vehicles
Fig. 11.5 . . . . .	Passenger Seat: 16-way Movement with Rear Override . . . . .	Powered Rear Seats Vehicles
Fig. 11.6 . . . . .	Front Seat Heaters . . . . .	Heated Front Seats Vehicles
Fig. 11.7 . . . . .	Powered Rear Seats: LH Seat . . . . .	Powered Rear Seats Vehicles
Fig. 11.8 . . . . .	Powered Rear Seats: RH Seat . . . . .	Powered Rear Seats Vehicles
Fig. 11.9 . . . . .	Rear Seat Heaters . . . . .	Heated Rear Seats Vehicles
Fig. 11.10 . . . . .	Climate Seats - LHD . . . . .	Climate Seats Vehicles (LHD)
Fig. 11.11 . . . . .	Climate Seats - RHD . . . . .	Climate Seats Vehicles (RHD)
<b>12</b>	<b>Central Locking; Security</b>	
Fig. 12.1 . . . . .	Central Locking . . . . .	All Vehicles
Fig. 12.2 . . . . .	Security System . . . . .	All Vehicles
<b>13</b>	<b>Wash / Wipe</b>	
Fig. 13.1 . . . . .	Wash / Wipe System . . . . .	All Vehicles
<b>14</b>	<b>Powered Windows; Sliding Roof</b>	
Fig. 14.1 . . . . .	Powered Windows; Sliding Roof . . . . .	All Vehicles
<b>15</b>	<b>In-Car Entertainment</b>	
Fig. 15.1 . . . . .	In-Car Entertainment: Premium . . . . .	Premium ICE Vehicles
Fig. 15.2 . . . . .	In-Car Entertainment: Audiophile . . . . .	Audiophile ICE Vehicles
Fig. 15.3 . . . . .	In-Car Entertainment - Rear . . . . .	Rear ICE Vehicles
Fig. 15.4 . . . . .	In-Car Entertainment - DAB, SDARS & IBOC (Europe, USA) . . . . .	Europe, USA Vehicles
<b>16</b>	<b>Telematics</b>	
Fig. 16.1 . . . . .	Telephone System - Japan . . . . .	Telephone only Vehicles (Japan)
Fig. 16.2 . . . . .	Telephone System (Except Japan) . . . . .	Telephone with Voice Vehicles (except Japan)
Fig. 16.3 . . . . .	Navigation System: (Except Japan) . . . . .	Navigation Vehicles (except Japan)
Fig. 16.4 . . . . .	Navigation System with Television: (Except Japan) . . . . .	Navigation + Television Vehicles (Except Japan)
Fig. 16.5 . . . . .	Navigation System: Japan . . . . .	Japan Navigation Vehicles
<b>17</b>	<b>Occupant Protection</b>	
Fig. 17.1 . . . . .	Advanced Restraints System: Part 1 . . . . .	All Vehicles
Fig. 17.2 . . . . .	Advanced Restraints System: Part 2 . . . . .	All Vehicles
<b>18</b>	<b>Driver Assist</b>	
Fig. 18.1 . . . . .	Parking Aid System . . . . .	Parking Aid Vehicles

## FIGURES

Fig.	Description	Variant
<b>19</b>	<b>Ancillaries</b>	
Fig. 19.1 . . . . .	Ancillaries: Part 1 . . . . .	All Vehicles
Fig. 19.2 . . . . .	Ancillaries: Part 2 . . . . .	All Vehicles
<b>20</b>	<b>Vehicle Multiplex Systems</b>	
Fig. 20.1 . . . . .	Controller Area Network . . . . .	All Vehicles
Fig. 20.2 . . . . .	Standard Corporate Protocol Network; Serial Data Link: LHD . . . . .	LHD Vehicles
Fig. 20.3 . . . . .	Standard Corporate Protocol Network; Serial Data Link: RHD . . . . .	RHD Vehicles
Fig. 20.4 . . . . .	D2B Network . . . . .	All Vehicles

The following abbreviations and acronyms are used throughout this Electrical Guide:

A/C	Air Conditioning
APP SENSOR	Accelerator Pedal Position Sensor
APP1	Accelerator Pedal Position Sensor Element 1
APP2	Accelerator Pedal Position Sensor Element 2
ASCM	Adaptive Speed Control Module
ASM	Air Suspension Module
AUDIO	Audio Unit
AUTO	Automatic Transmission
B+	Battery Voltage
BANK 1	RH Cylinder Bank
BANK 2	LH Cylinder Bank
CAN	Controller Area Network
CCM	Climate Control Module
CKP SENSOR	Crankshaft Position Sensor
CM	Control Module
CMP SENSOR / 1	Camshaft Position Sensor / RH Bank
CMP SENSOR / 2	Camshaft Position Sensor / LH Bank
CPM	Cellular Phone Module
D2B	D2B Network
DAB	Digital Audio Broadcasting
DDM	Driver Door Module
DPF	Diesel Particulate Filter
DSC	Dynamic Stability Control
DSCM	Dynamic Stability Control Module
DSM	Driver Seat Module
ECM	Engine Control Module
ECT SENSOR	Engine Coolant Temperature Sensor
EFT SENSOR	Engine Fuel Temperature Sensor
EGR	Exhaust Gas Recirculation
EGT SENSOR	Exhaust Gas Temperature Sensor
EOT SENSOR	Engine Oil Temperature Sensor
EVAP CANISTER CLOSE VALVE	Evaporative Emission Canister Close Valve
EVAP CANISTER PURGE VALVE	Evaporative Emission Canister Purge Valve
FEM	Front Electronic Module
FPDB	Front Power Distribution Box
FTP SENSOR	Fuel Tank Pressure Sensor
GPS	Global Positioning System
HID	High Intensity Discharge
HLM	Headlamp Leveling Module
HO2 SENSOR 1 / 1	Heated Oxygen Sensor – RH Bank / Upstream
HO2 SENSOR 1 / 2	Heated Oxygen Sensor – RH Bank / Downstream
HO2 SENSOR 2 / 1	Heated Oxygen Sensor – LH Bank / Upstream
HO2 SENSOR 2 / 2	Heated Oxygen Sensor – LH Bank / Downstream
IAT SENSOR	Intake Air Temperature Sensor
IBOC	In Band On Channel
IC	Instrument Cluster
ICE	In-Car Entertainment
IMT VALVE / 1	Intake Manifold Tuning Valve / Top
IMT VALVE / 2	Intake Manifold Tuning Valve / Bottom
IP SENSOR	Injection Pressure Sensor
JGM	J-Gate Module
KS / 1	Knock Sensor / RH Bank
KS / 2	Knock Sensor / LH Bank
LH	Left-Hand
LHD	Left-Hand Drive
MAF SENSOR	Mass Air Flow Sensor
MAN	Manual Transmission
MAP SENSOR	Manifold Absolute Pressure Sensor
MCP	Multimedia Control Panel
N/A	Normally Aspirated
NAS	North American Specification
NCM	Navigation Control Module
PAM	Parking Aid Module
PATS	Passive Anti-Theft System
PBM	Parking Brake Module
PJB	Passenger (Primary) Junction Box
PWM	Pulse Width Modulated

RCCM	Rear Climate Control Module
RCM	Restraints Control Module
REM	Rear Electronic Module
RH	Right-Hand
RHD	Right-Hand Drive
RMM	Rear Memory Module
ROW	Rest of World
RPDB	Rear Power Distribution Box
SAI	Secondary Air Injection
SC	Supercharged
SCLM	Steering Column Lock Module
SCP	Standard Corporate Protocol
SDARS	Satellite Digital Audio Receiver System
TCM	Transmission Control Module
TED	Thermo Electrical Device
TMAP	Temperature Manifold Absolute Pressure Sensor
TP SENSOR	Throttle Position Sensor
TP1	Throttle Position Sensor Element 1
TP2	Throttle Position Sensor Element 2
TPMS	Tire Pressure Monitoring System
TURN	Turn Signal
TV	Television
V6	V6 Engine
V8	V8 Engine
VAM	Voice Activation Module
VICS	Vehicle Information Control System
VVT VALVE / 1	Variable Valve Timing Valve / Bank 1
VVT VALVE / 2	Variable Valve Timing Valve / Bank 2
+Ve	Positive
-Ve	Negative

## Electrical Guide Format

This Electrical Guide is made up of two major sections:

- the first section, at the front of the book, provides general information for and about the use of the book; model-specific information and illustrations to aid in the understanding of the electrical / electronic systems, as well as the location and identification of components.
- the second section includes the Figures, which are the basis of the book. Each Figure is identified by a Figure Number (e.g. Fig. 01.1) and Title. The page adjacent to the Figure contains data information specific to that Figure.

**NOTE:** Data pages are not available for inclusion in Provisional versions of the Electrical Guide.

It is recommended that the user read through the front section of the book to develop a familiarity with the layout of the book and with the system of symbols and abbreviations used. The Table of Contents should help to guide the user.

## Vehicle Identification Numbers (VIN)

VIN ranges are presented throughout the book in the following manner:

› VIN 123456 indicates 'up to VIN 123456'; VIN 123456 › indicates 'from VIN 123456 on'.

## Electrical System Architecture

### Power Supplies

The electrical system is a supply-side switched system. The ignition switch directly carries much of the ignition switched power supply load.

Power supply is provided via three methods:

- Direct battery power supply;
- Ignition switched power supply;
- Switched system power supply.

The 'Switched System Power Supply' circuit is controlled via the FEM (Front Electronic Module) and the REM (Rear Electronic Module). Refer to Fig. 01.6 for circuit activation details.

### Fuse Boxes

The electrical harness incorporates three serviceable power distribution fuse boxes:

- the Front Power Distribution Fuse Box, located in the engine compartment;
- the Rear Power Distribution Fuse Box, located in the trunk.
- the Primary Junction Fuse Box, located in the front right-hand foot well.

All fuses and relays (except the trailer towing accessory kit) are located in the three fuse boxes.

### Vehicle Networks

Three different networks are employed:

- CAN (Controller Area Network) for high-speed power train communications;
- SCP (Standard Corporate Protocol) network for slower speed body systems communications;
- D2B (Optical) Network for very high-speed 'real-time' audio data transfer.

**NOTE:** The D2B Network is a fiber optic network with a gateway to the remaining vehicle networks via the Audio Unit. Technician access to the three networks and the Serial Data Link is via the Data Link Connector.

### Ground Studs

Circuit ground connections are made at body studs located throughout the vehicle. There are no separate power and logic grounding systems; however, there are a certain number of components that use unique ground points.

## Figure and Data Page Layout

### Figure Pages

Each Figure represents a specific electrical system of the vehicle. The Figures are arranged numerically by system (**01 – Power Distribution, 02 – Battery; Starter; Generator, etc.**) with variations in the system identified by a numeral following a decimal point (**01.1, 01.2, etc.**). Refer to the **Table of Contents: Figures** for a complete list of the Figures.

The Figures **01 – Power Distribution** detail the distribution of power to each of the systems. Numbered reference symbols refer the user to a specific Figure and from a specific Figure back to the Power Distribution Figures. This method eliminates the need to include detailed Power Distribution information on each of the Figures. The reference symbols are defined on page 10.

Each Figure appears on a right-hand page with a corresponding Data page to the left. The Figure and Data pages are folding pages. The user must fold out both pages in order to access all the information provided.

### Data Pages

The Data page includes information to assist the user in identifying and locating components, connectors and grounds. This information is supplemented by the illustrations in this front section of the book.

Most circuits that incorporate a control module include pinout information. The characteristics listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. This information is provided to assist the user in understanding circuit operation and should be used FOR REFERENCE ONLY.

## CONTROL MODULE PIN OUT INFORMATION

Engine Control Module		
Pin	Description and Characteristic	
I	ENGINE CRANK, B+	
PIN-31	MANUAL PARK / NEUTRAL SIGNAL, B+ WHEN ACTIVATED	
PIN-32	MANUAL PARK / NEUTRAL SIGNAL, B+ WHEN DEACTIVATED	
O	RH-41	
O	FUEL PUMP DRIVE (TO FUEL PUMP MODULE), PWM, 150 Hz, NORMAL POSITIVE DUTY CYCLE RANGE = 4% - 5%	
O	FUEL PUMP DRIVE (TO FUEL PUMP MODULE), PWM, 150 Hz, NORMAL POSITIVE DUTY CYCLE RANGE = 4% - 5%	
I	PIN-53	GENERATOR FAULT, CAN + CAN -
I	PIN-79	CAN + CAN -
O	PIN-124	CAN + CAN -

Instrument Cluster		
Pin	Description and Characteristic	
I	FC14-2	KEY-IN ALARM, WARNING, B+ / TRUNK KEY IN
B+	FC14-3	IGNITION SIGNAL, B+ / POWER SUPPLY, B+
SG	FC14-4	SIGNAL GROUND, GROUND
B+	FC15-2	BATTERY POWER SUPPLY (LOCAL), B+
B+	FC15-3	IGNITION SIGNAL, B+ / POWER SUPPLY, B+
D	FC15-4	PATS TRANSMITTER ENCODED COMMUNICATION
D	FC15-5	PATS RECEIVER ENCODED COMMUNICATION
C	FC15-14	CAN + CAN -
C	FC15-15	CAN + CAN -

Transmission Control Module		
Pin	Description and Characteristic	
B+	FC16-2	IGNITION SIGNAL, B+ / POWER SUPPLY, B+
O	GC2-10	PARK NEUTRAL SIGNAL, GROUND WHEN ACTIVATED
PG	GC2-11	POWER GROUND, GROUND
PG	GC2-16	POWER GROUND, GROUND

NOTE: Refer to the Appendix at the rear of this book for Network Messages.

## FIGURE NUMBER

## COMPONENT, CONNECTOR AND GROUND INFORMATION

Fig. 2.1

COMPONENTS		Connector(s)	Connector Description	Location
BATTERIES	—	CA286	8-WAY / BLACK	LUGGAGE COMPARTMENT
CLUTCH PEDAL SAFETY SWITCH	—	FC118	8-WAY / BLACK	UNDER CLUTCH PEDAL, FLOOR PAN
DRIVING CONTROL MODULE	PI1	54-WAY / BLACK	PILOT, PASSENGER SIDE	ENGINE COMPARTMENT, RH SIDE
FRONT POWER DISTRIBUTION FUSE BOX	—	—	—	—
GENERATOR (48V)	PI47	8-WAY / BLACK	ENGINE, RH SIDE, FRONT	STEERING COLUMN, IGNITION SWITC
IGNITION SWITCH	S17	—	EVLET	STEERING COLUMN, COLLING
INSTRUMENT CLUSTER	FC118	8-WAY / BLACK	PILOT	INSTRUMENT PANEL
PIATS ANTENNA SYSTEM TRANSCIEVER	FC115	80-WAY / BLACK	PILOT	PIATS ANTENNA, PIATS
PRIMARY JUNCTION FUSE BOX	FC233	32-WAY / BLACK	PILOT	PIATS ANTENNA, PIATS
STATER MEGAFUSE	CA2	8-WAY / BLACK	PILOT	PIATS ANTENNA, PIATS
STARTER MOTOR	—	—	—	ENGINE BLOCK, RH SIDE
STARTER RELAY	—	—	—	FRONT POWER DISTRIBUTION FUSE BOX - R2E
TRANSMISSION CONTROL MODULE	GC2	16-WAY / BLACK	PILOT	TRANSMISSION CONTROL, VALUE ASSEMBLY

HARNESS IN-LINE CONNECTORS		Connector	Connector Description / Location	Location
FNC3		16-WAY / BLUE	CABIN HARNESS TO FRONT HARNESS	LH K POST
PNC1		16-WAY / WHITE	CABIN HARNESS TO FRONT HARNESS	UNDER FLOOR OF HATCHBACK, IN ENGINE TUNNEL
PNC2		40-WAY / BLACK	ENGINE HARNESS TO VEHICLE HARNESS	ENGINE COMPARTMENT, BEHIND LH WHEEL, ARCH LINER
PNC2		8-WAY / BLACK	ENGINE HARNESS TO FRONT HARNESS	ENGINE COMPARTMENT, BEHIND LH WHEEL, ARCH LINER
PNC3		2-WAY / GREY	FRONT HARNESS TO STARTER LINK	ENGINE COMPARTMENT, REARWARD OF RH WHEEL ARCH

GROUNDS		Ground	Location
FC238		UNDER FLOOR OF HATCHBACK, IN ENGINE TUNNEL	UNDER FLOOR OF HATCHBACK, BATTERY GROUND
JEL		—	ENGINE COMPARTMENT, BEHIND RH WHEEL, ARCH LINER
PNC1 (LHD)		—	ENGINE COMPARTMENT, BEHIND LH WHEEL, ARCH LINER
PNC2 (RHD)		—	ENGINE COMPARTMENT, BEHIND LH WHEEL, ARCH LINER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

## DATA PAGE

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Invert	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SG	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.


NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

DATE OF ISSUE: February 2004

DATE OF ISSUE

## FIGURE MODEL RANGE AND YEAR

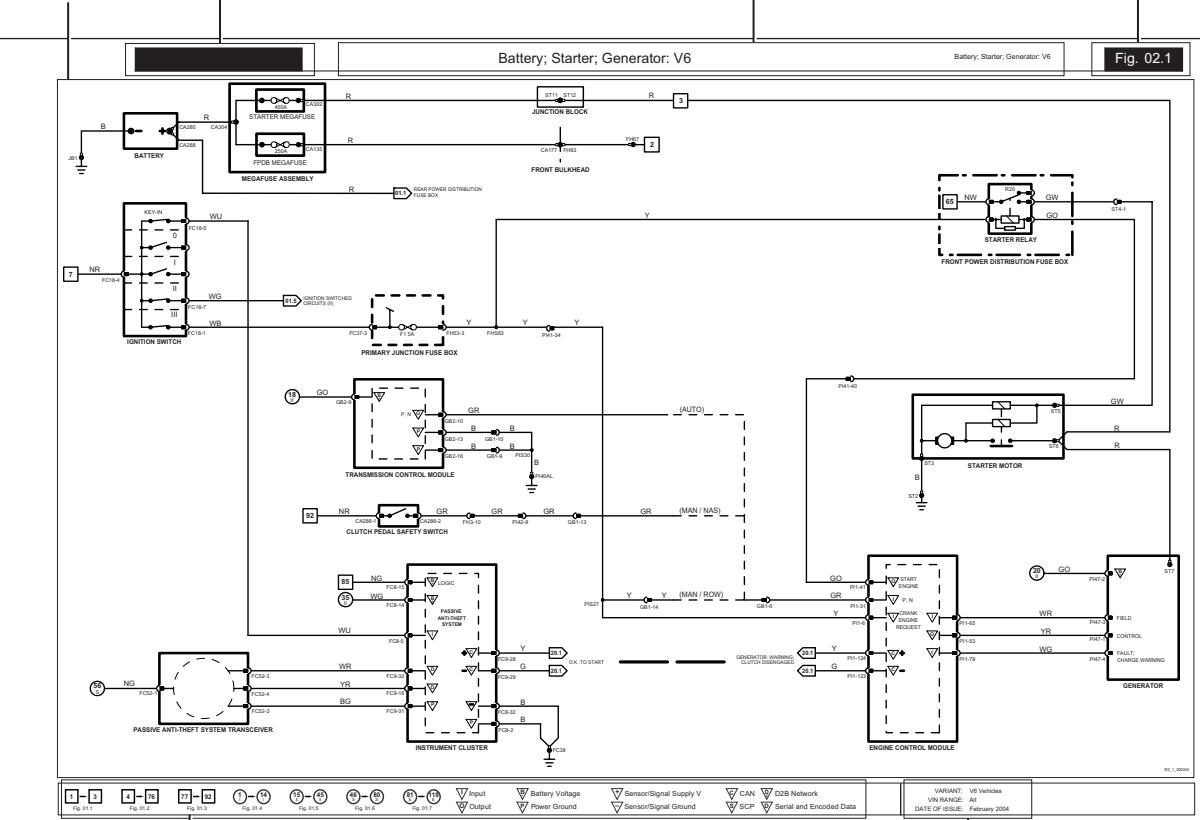

## FIGURE PAGE

## KEY TO REFERENCE SYMBOLS

## VARIANT, VIN RANGE AND DATE OF ISSUE

**NOTE:** In the examples on this page, an 'X' is used where a number would appear on an actual Figure.

## Reference Symbols

	Battery power supply
	Ignition switched auxiliary power supply (key I, II)
	Ignition switched power supply (key II, III)
	Switched System Power Supply power supply
	Engine Management System power supply
	Figure number reference
	Controller Area Network
	Standard Corporate Protocol network
	D2B network

## Control Module Pin Symbols


	Input		CAN network
	Output		SCP network
	Battery voltage		D2B network
	Power ground		Serial and encoded data
	Sensor / signal supply V *		
	Sensor / signal ground **		

\* May also indicate Reference Voltage.

\*\* May also indicate Reference Ground or Logic Ground.

Refer to Control Module Pin-out Information.

## Wiring Symbols

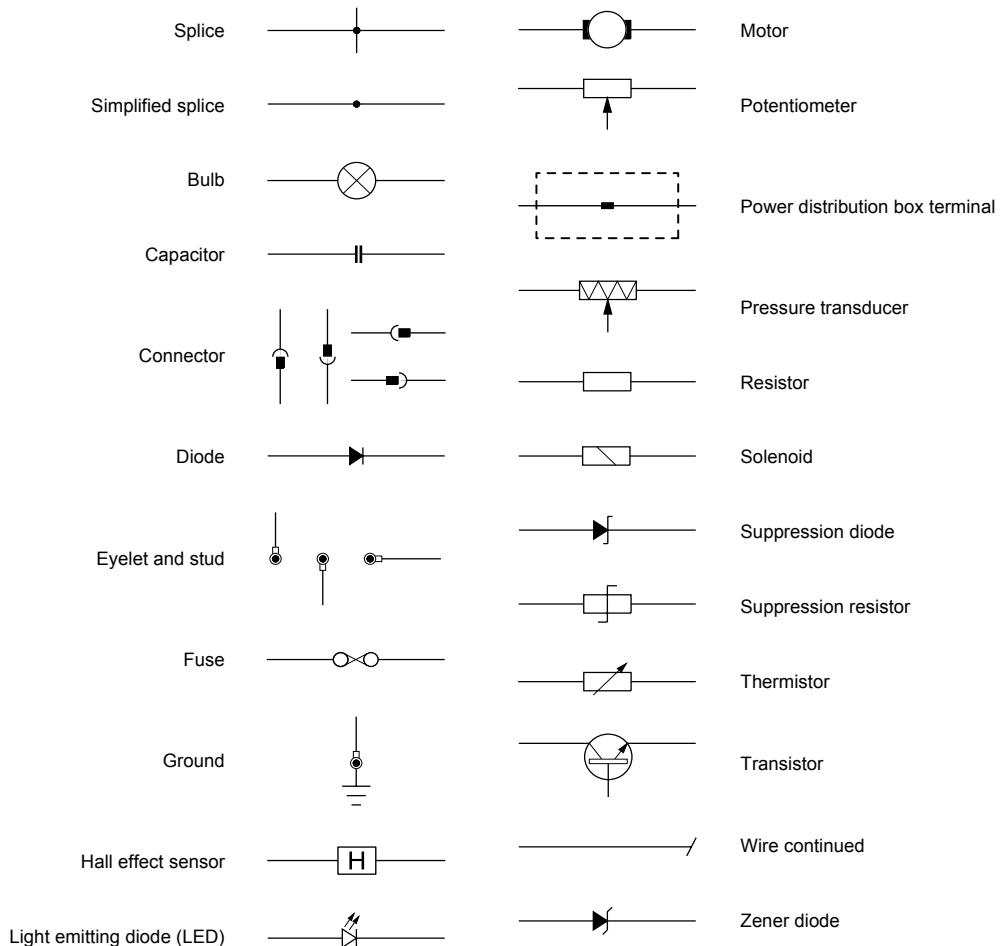

**Harness Codes**

AC Climate Control Link  
BC Battery Ground Harness  
BF Front Bumper Harness  
BL Cabin to Trunk Lid Harness  
BO Battery Harness  
BR Rear Bumper Harness  
BS Battery Backed Sounder Harness  
BT Trunk Lid Harness  
CC Center Console Harness  
CL Center Console Link Harness  
CP Cooling Pump Harness  
CR Cabin Harness  
CV EVAP Canister Close Valve Link Harness  
DB D2B Network Harness  
DD Driver Door Harness  
DL Driver Seat Lumbar Harness  
DT Driver Door Trim Harness  
EC Engine Compartment Harness  
EL Starter Motor Solenoid Link Harness  
FP Fuel Tank Link Harness  
GB Transmission Harness  
GC Radiator Cooling Fan Harness  
IJ Fuel Injector Link  
IL Fuel Injector Link  
IP Instrument Panel (Fascia) Harness  
IS Fuel Injector Link Harness  
LL LH Rear Seat Lumbar Harness  
LS LH Rear Seat Harness  
LT LH Rear Door Trim Harness  
PD Passenger Door Harness  
PH Telephone Harness  
PI Engine Management Harness  
PL Passenger Seat Lumbar Harness  
PS Passive Security Sounder Harness  
PT Passenger Door Trim Harness

RA Rear Air Conditioning Harness  
RC Rear In-Car Entertainment Controls Harness  
RF Roof Harness  
RL LH Rear Door Harness  
RR RH Rear Door Harness  
RS RH Rear Seat Harness  
RT RH Rear Door Trim Harness  
SD Driver Seat Harness  
SL LH Rear Seat Motor Harness  
SP Passenger Seat Harness  
SR RH Rear Seat Motor Harness  
SW Steering Wheel Harness  
TL Telematics Harness  
TT Trailer Tow Harness  
VL LH Rear Television Harness  
VP Voice Activation Pre-Wire Harness  
VR RH Rear Television Harness  
VX RH Rear Television Link Harness  
VY LH Rear Television Link Harness  
YL RH Rear Seat Lumbar Harness

## Wiring Color Codes

N	Brown	O	Orange
B	Black	S	Slate
W	White	L	Light
K	Pink	U	Blue
G	Green	P	Purple
R	Red	BRD	Braid
Y	Yellow	BOF	Black fiber optic (D2B Network)

## Code Numbering

When numbering connectors, grounds and splices, Jaguar Engineering uses a three-position format: CA001, CA002, etc. Because space is limited in this Electrical Guide the codes have, in most cases, been shortened. Thus CA001–001 becomes CA1–1, CA002–001 becomes CA2–1, etc.

## Resistor Values



The omega symbol often used to represent resistance is not used in this publication.

- Whole-number resistor values below 1000 ohms are suffixed with 'R', for example: 820R.
- Whole-number resistor values above 1000 ohms are suffixed with 'K', for example: 820K.
- Fractional resistors values have 'R' or 'K' inserted at the position of the decimal point, for example: 8R2 represents 8.2 ohms, 1K0 represents 1K ohms.

## Grounds



- There may be up to three eyelets on one ground stud.
- A, B and C are used to indicate the position of the eyelet on the stud: A – first (bottom), B – second (middle), C – third (top).
- Two eyelet variations are used: a single eyelet and an eyelet pair. The single eyelet has a single leg, which is identified by an S; the eyelet pair has two legs, identified as L (left) or R (right).

EXAMPLE:

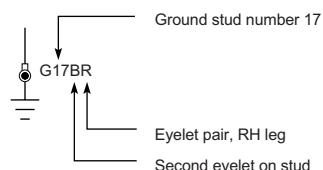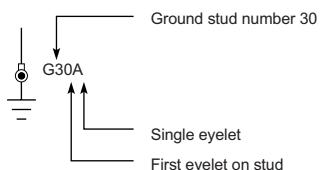

On figures where LHD and RHD circuits are combined and the ground designation differs from LHD to RHD, the RHD ground code is shown in parentheses. If the ground designation is the same for LHD and RHD, only one ground code is used, with no parentheses.

EXAMPLE:




## Relays


Serviceable Relays:

- are located in all three fuse boxes;
- do not have a separate relay connector (base);
- use the ISO pin numbering system (1, 2, 3, 4, 5);
- are identified by an 'R' number unique only to the fuse box in which it is located.

EXAMPLE:

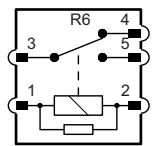

CHANGE-OVER RELAY

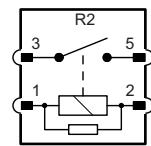


NORMALLY OPEN RELAY

Non-Serviceable Relays:


- are located in all three fuse boxes.
- are a component part of the fuse box printed circuit board (PCB) and are arranged in singles or pairs.
- use the ISO pin numbering system – 1, 2, 3, 4, 5 (single relay or top pair relay) and 6, 7, 8, 9, 10 (bottom pair relay).
- are identified by an 'R' number unique only to the fuse box in which it is located.

**NOTE:** Pair relays are normally depicted separately.


EXAMPLE:

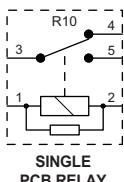

SINGLE  
PCB RELAY

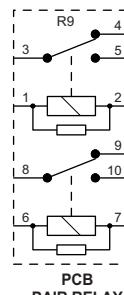

PCB  
PAIR RELAY

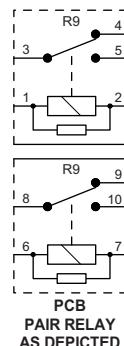


PCB  
PAIR RELAY  
AS DEPICTED

## Fuses

Each fuse is identified by an 'F' number unique only to the fuse box in which it is located.


EXAMPLE:



## Networks

In most instances, networks are shown as a broken grey line to indicate that there is network communication between the depicted control modules. Refer to Figs. 20 for circuit details.

EXAMPLE:

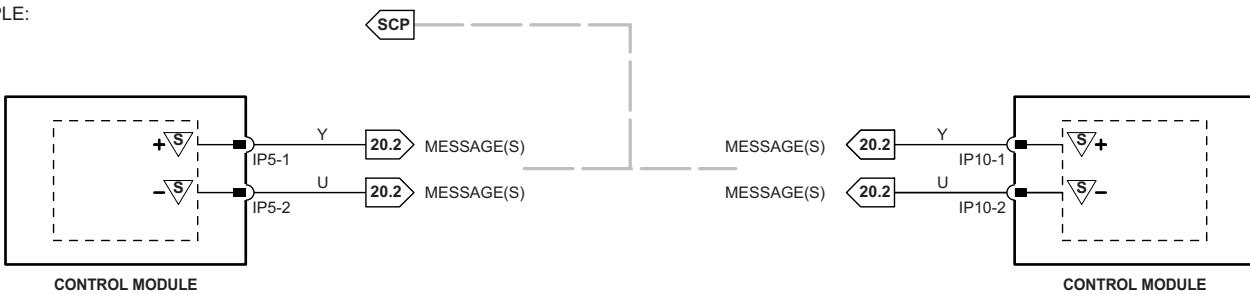

## Component Depictions

EXAMPLE:




COMPLETE COMPONENTS  
AND CONTROL MODULES




INCOMPLETE COMPONENTS  
(EXCEPT CONTROL MODULES)





ASSEMBLIES AND  
POWER DISTRIBUTION FUSE BOXES

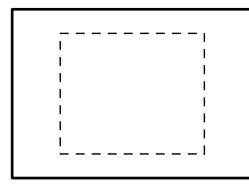



COMPONENTS WITH  
INTERNAL ELECTRONIC CIRCUIT



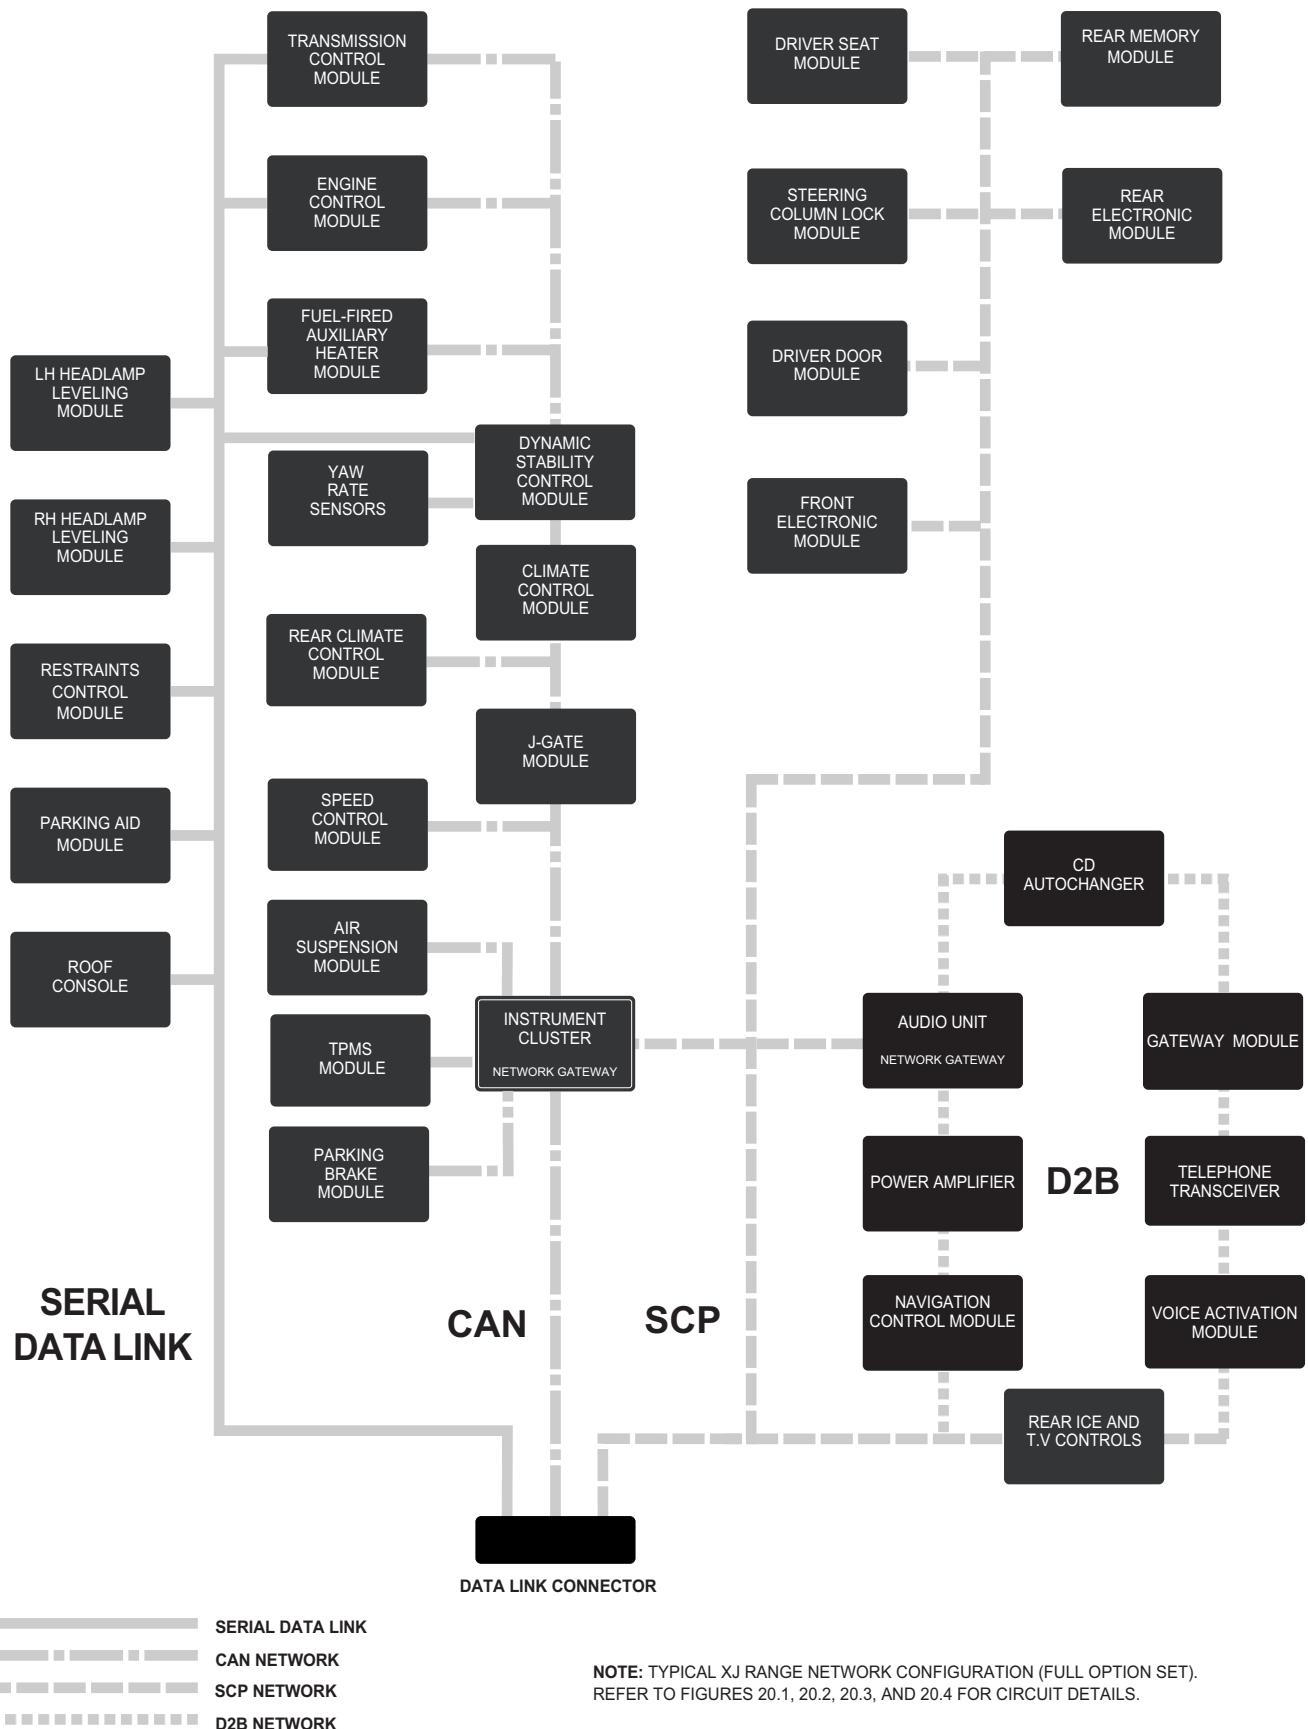


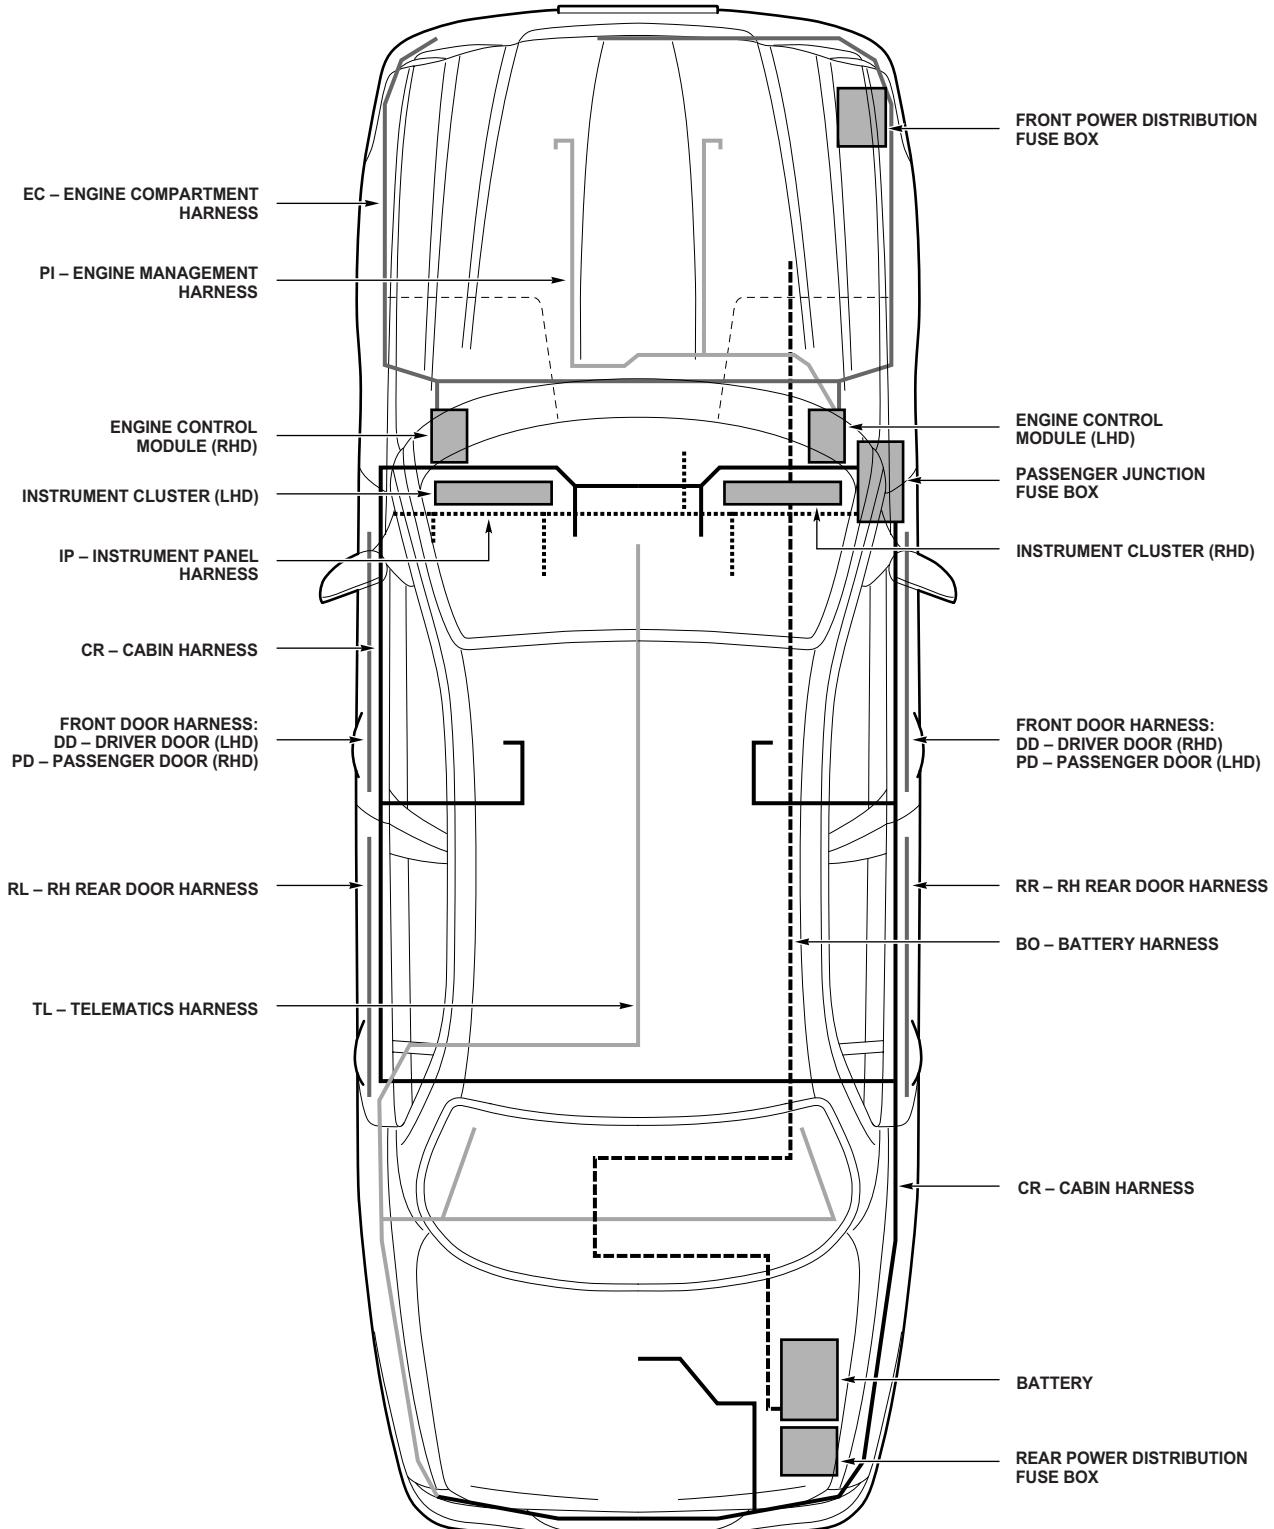

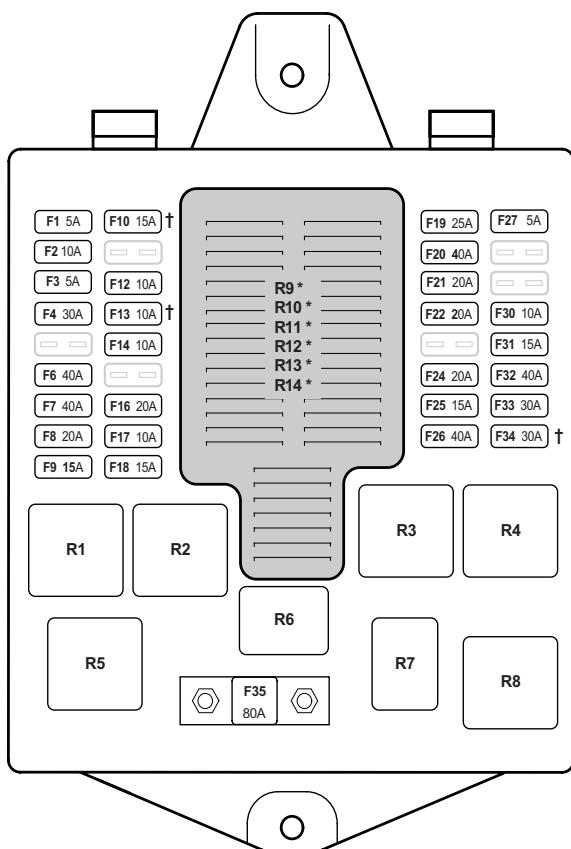


† NOTE: DIESEL VEHICLES  
F10 = 20A, F13 = 20A, F34 = 10A

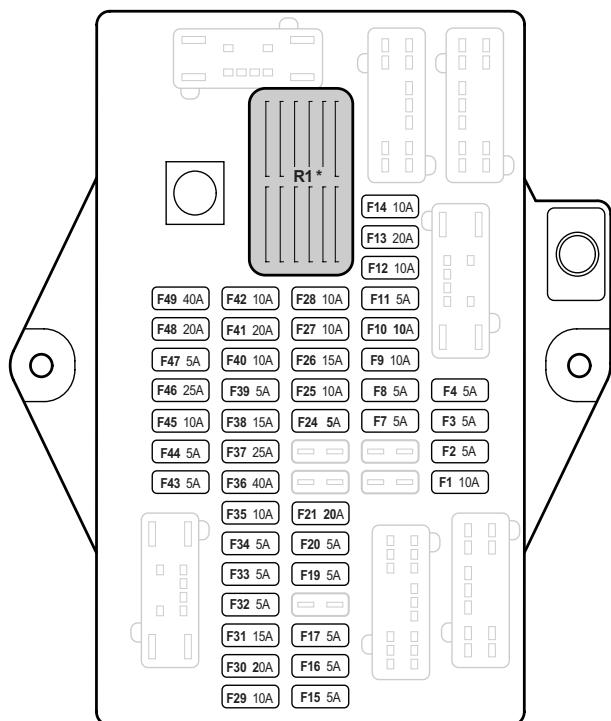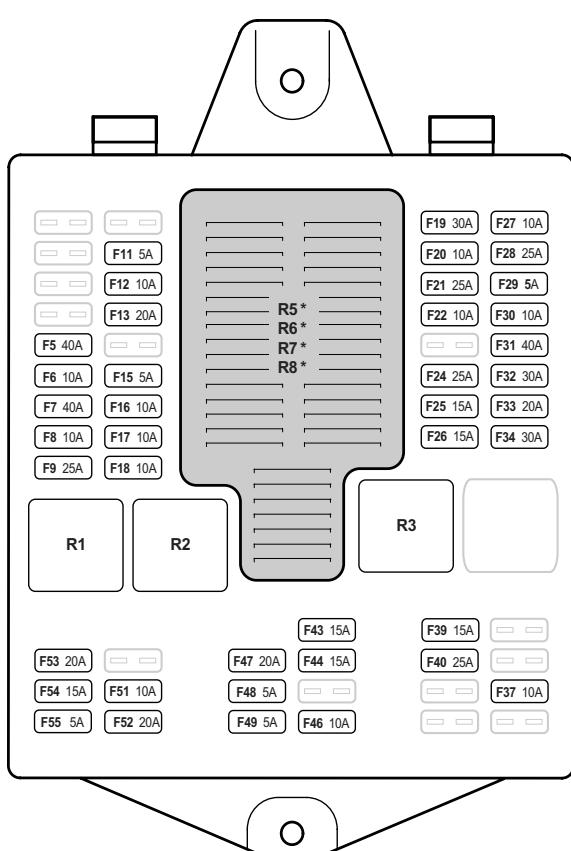


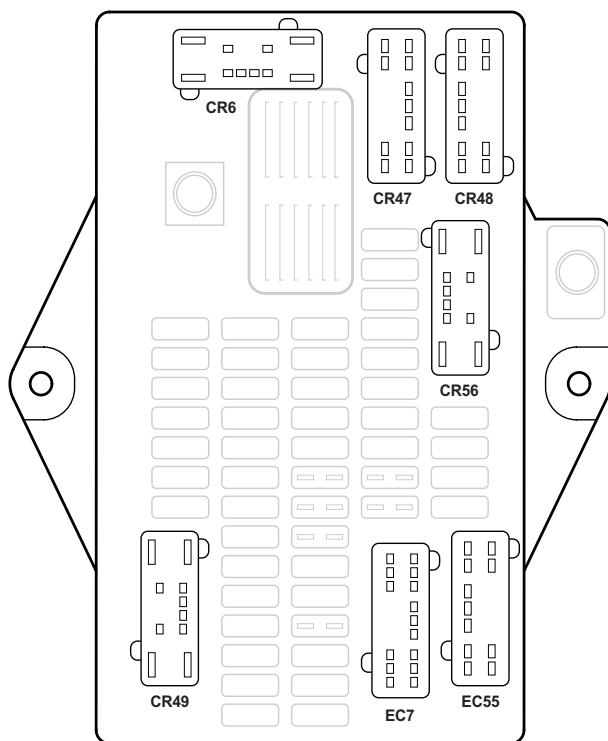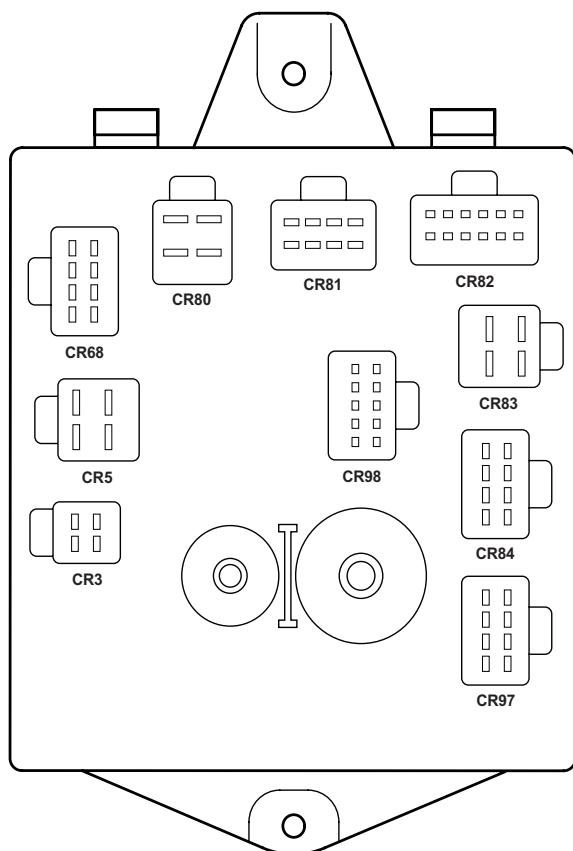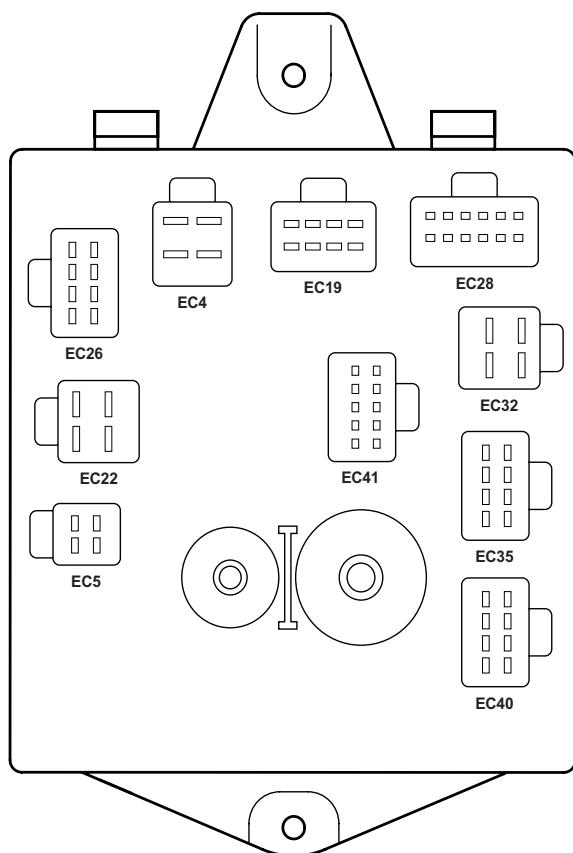


## Instrument Panel and Seat Harnesses

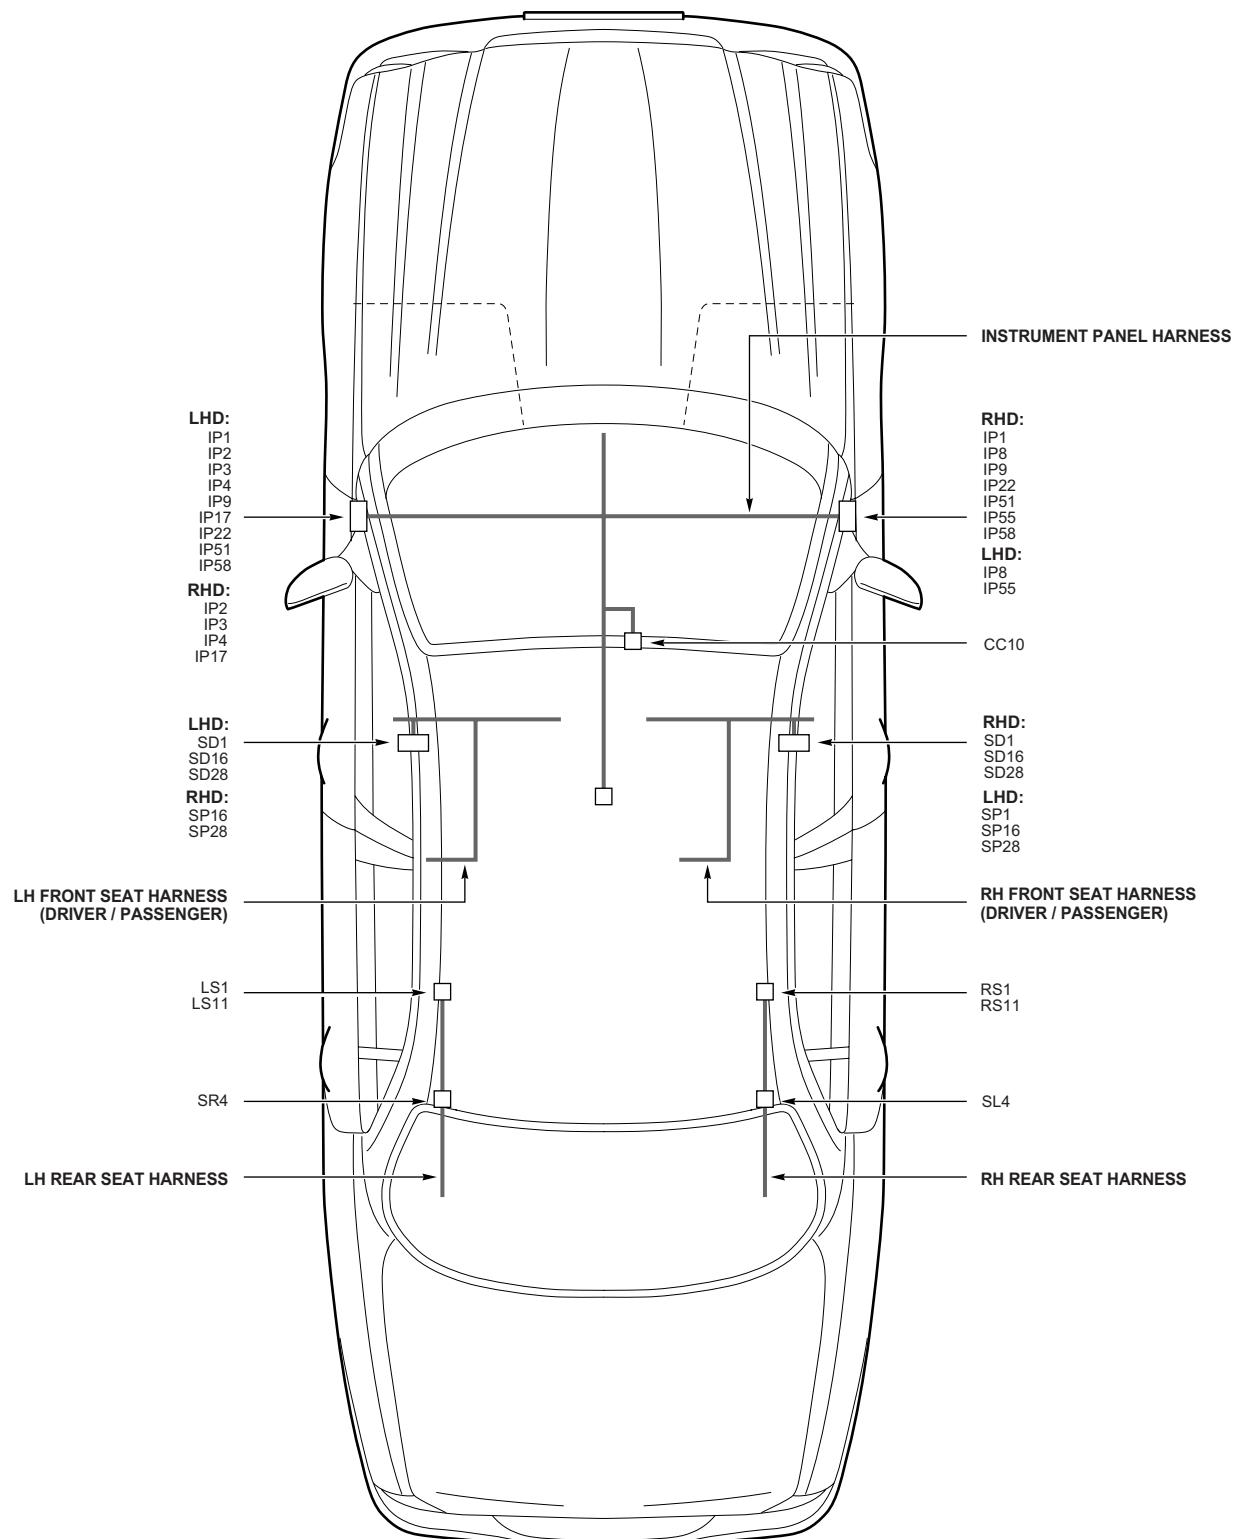


## Small Harnesses

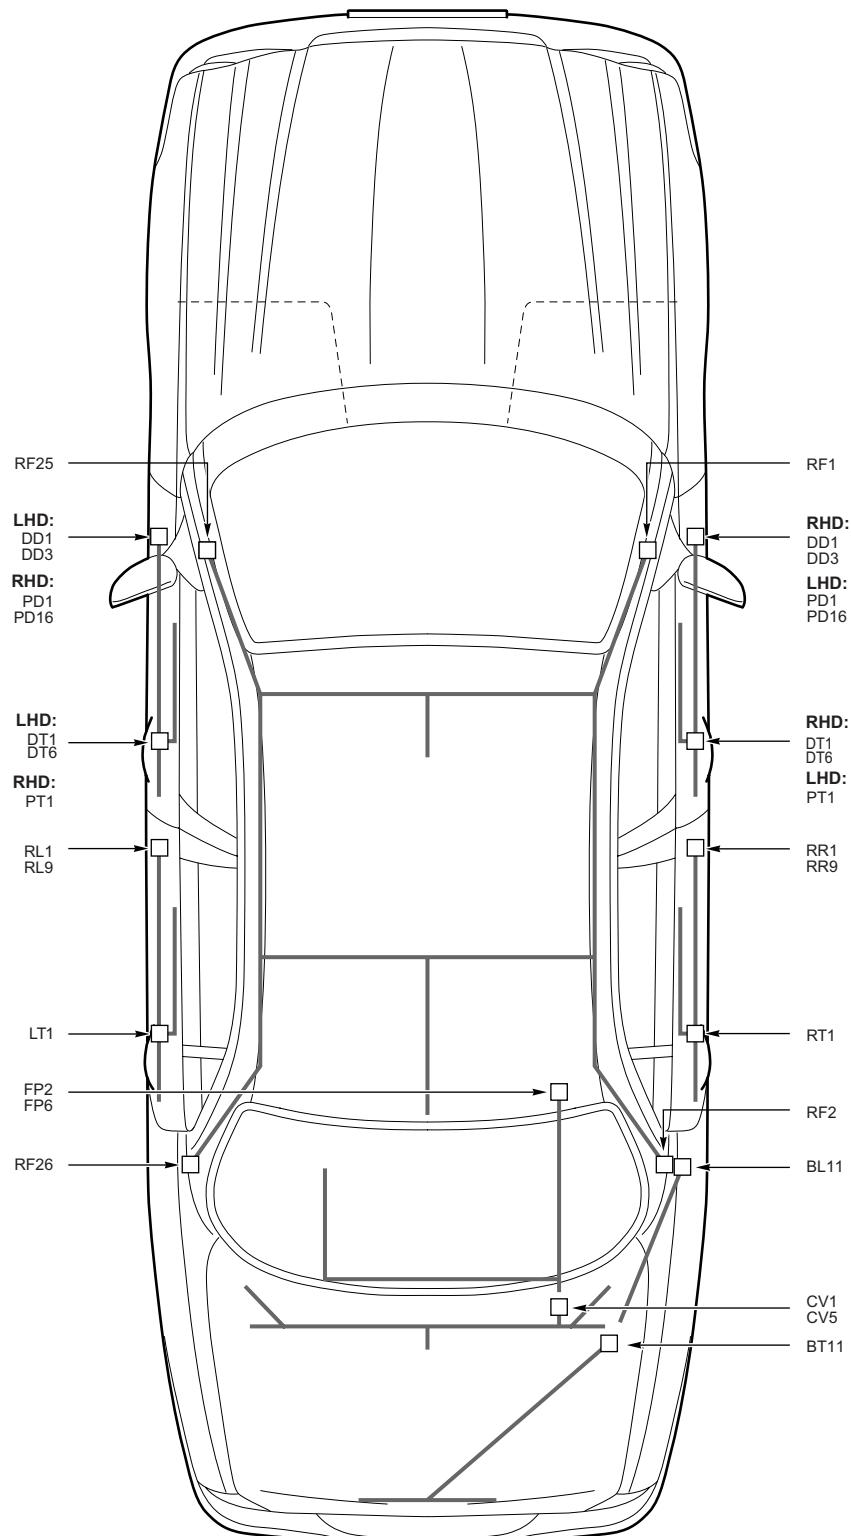

small\_harn\_35008

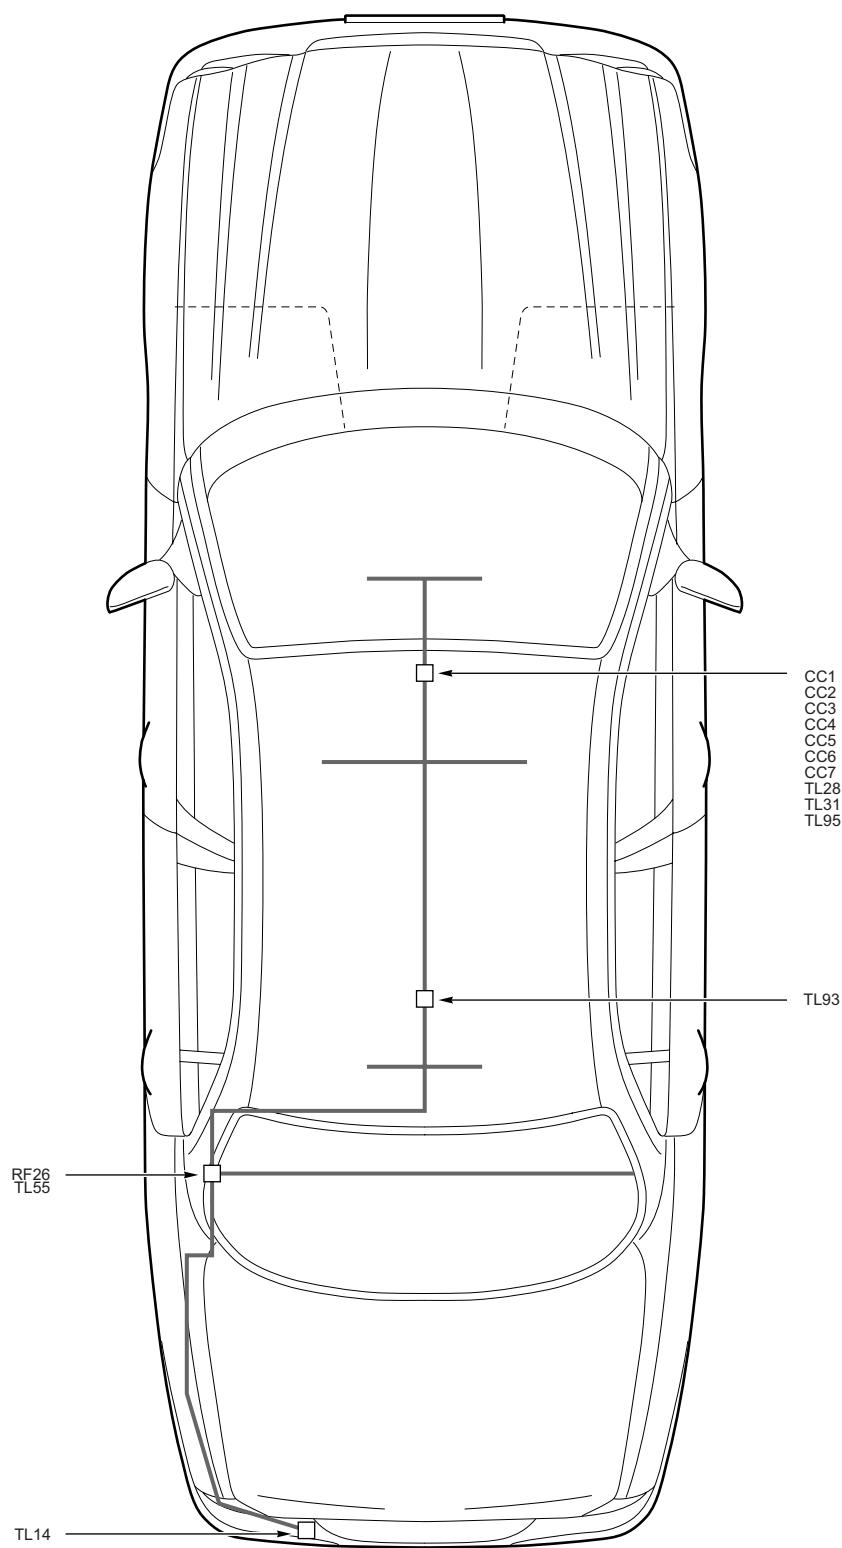
**Telematics Harness**

tele-harn\_35008

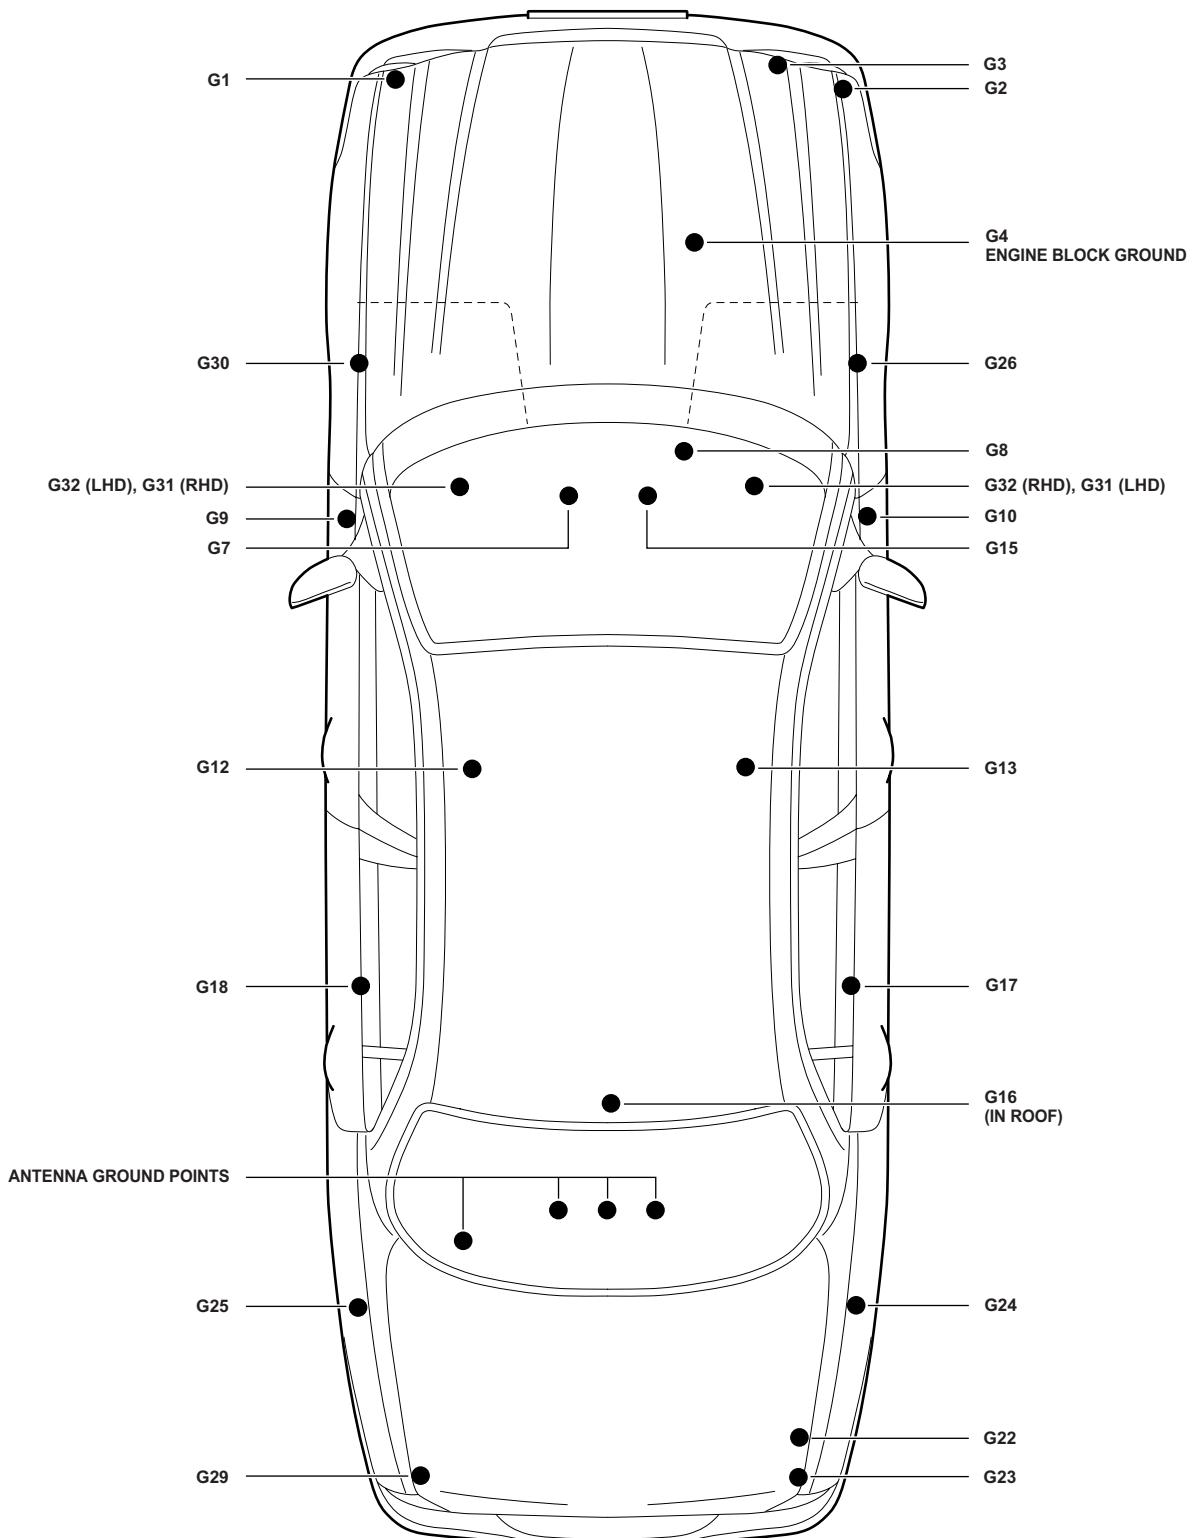


## LHD

NOTE: THE TRANSMISSION CONTROL MODULE IS CONTAINED WITHIN THE TRANSMISSION.

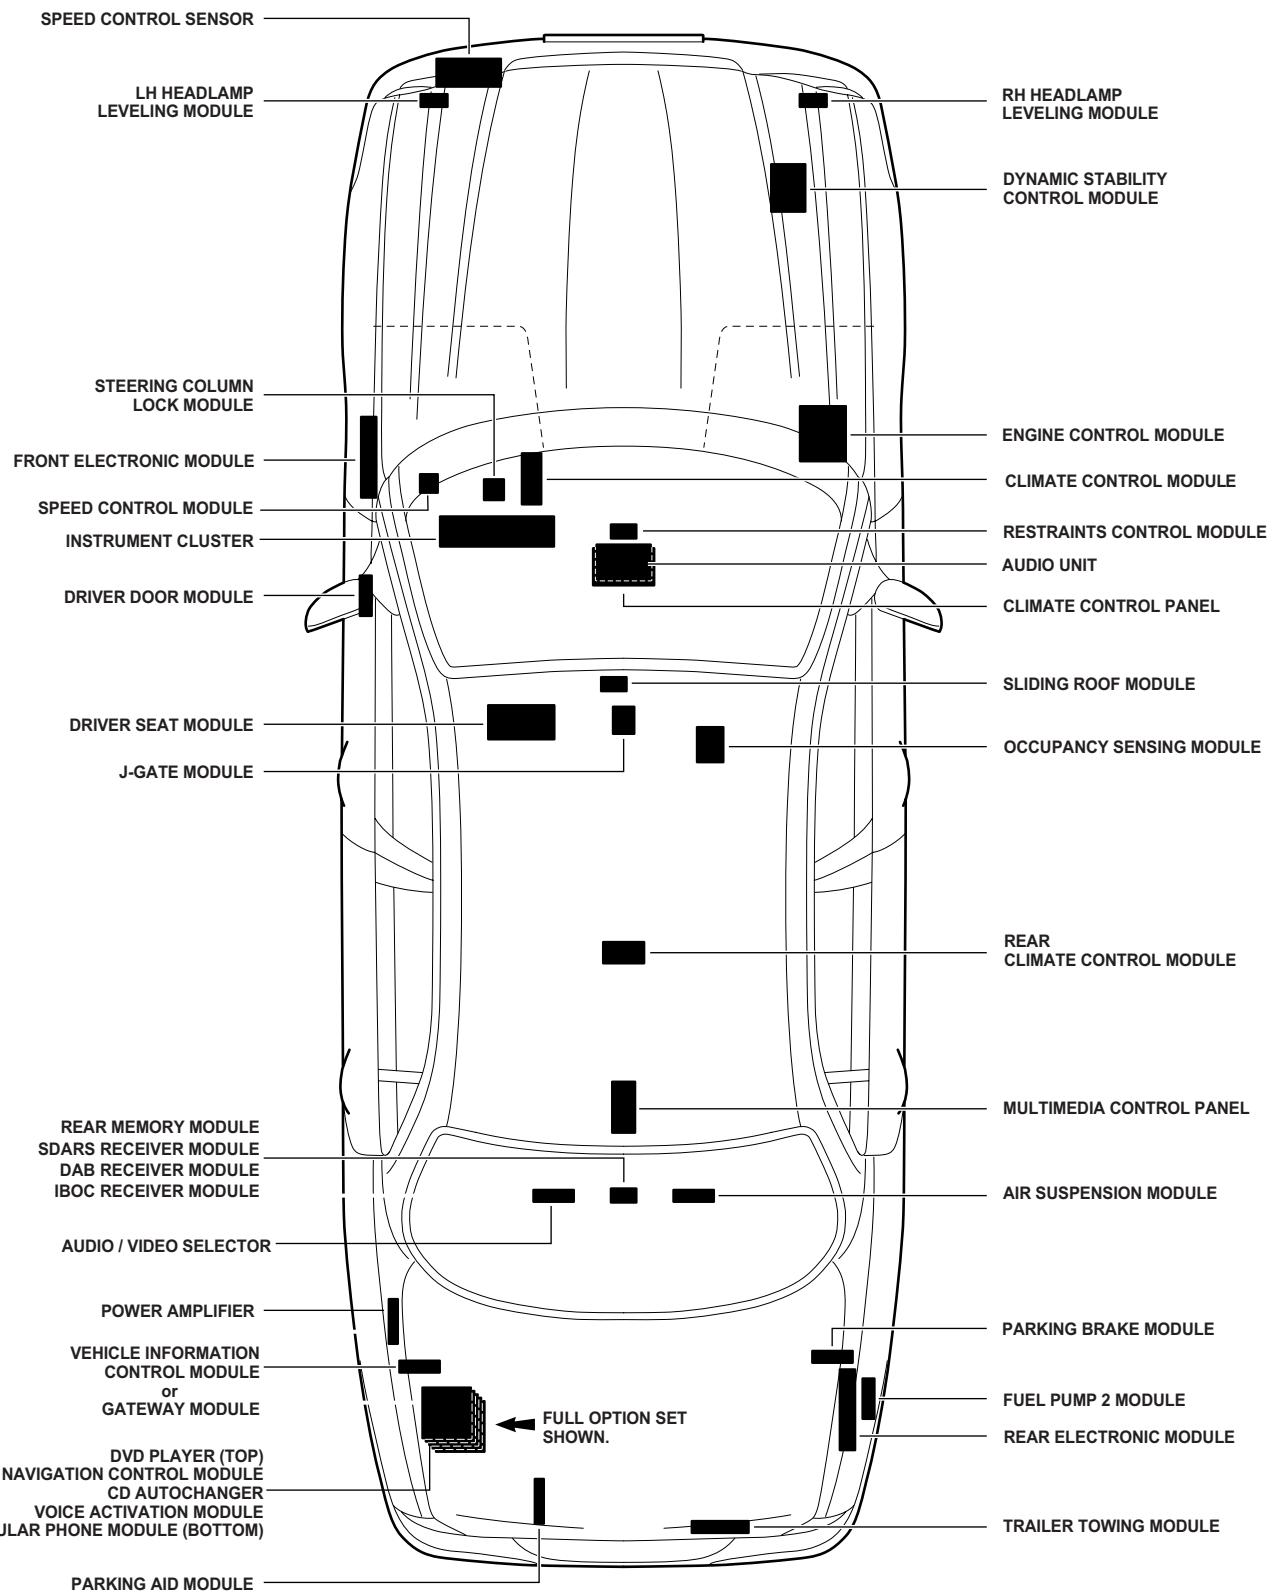


RHD

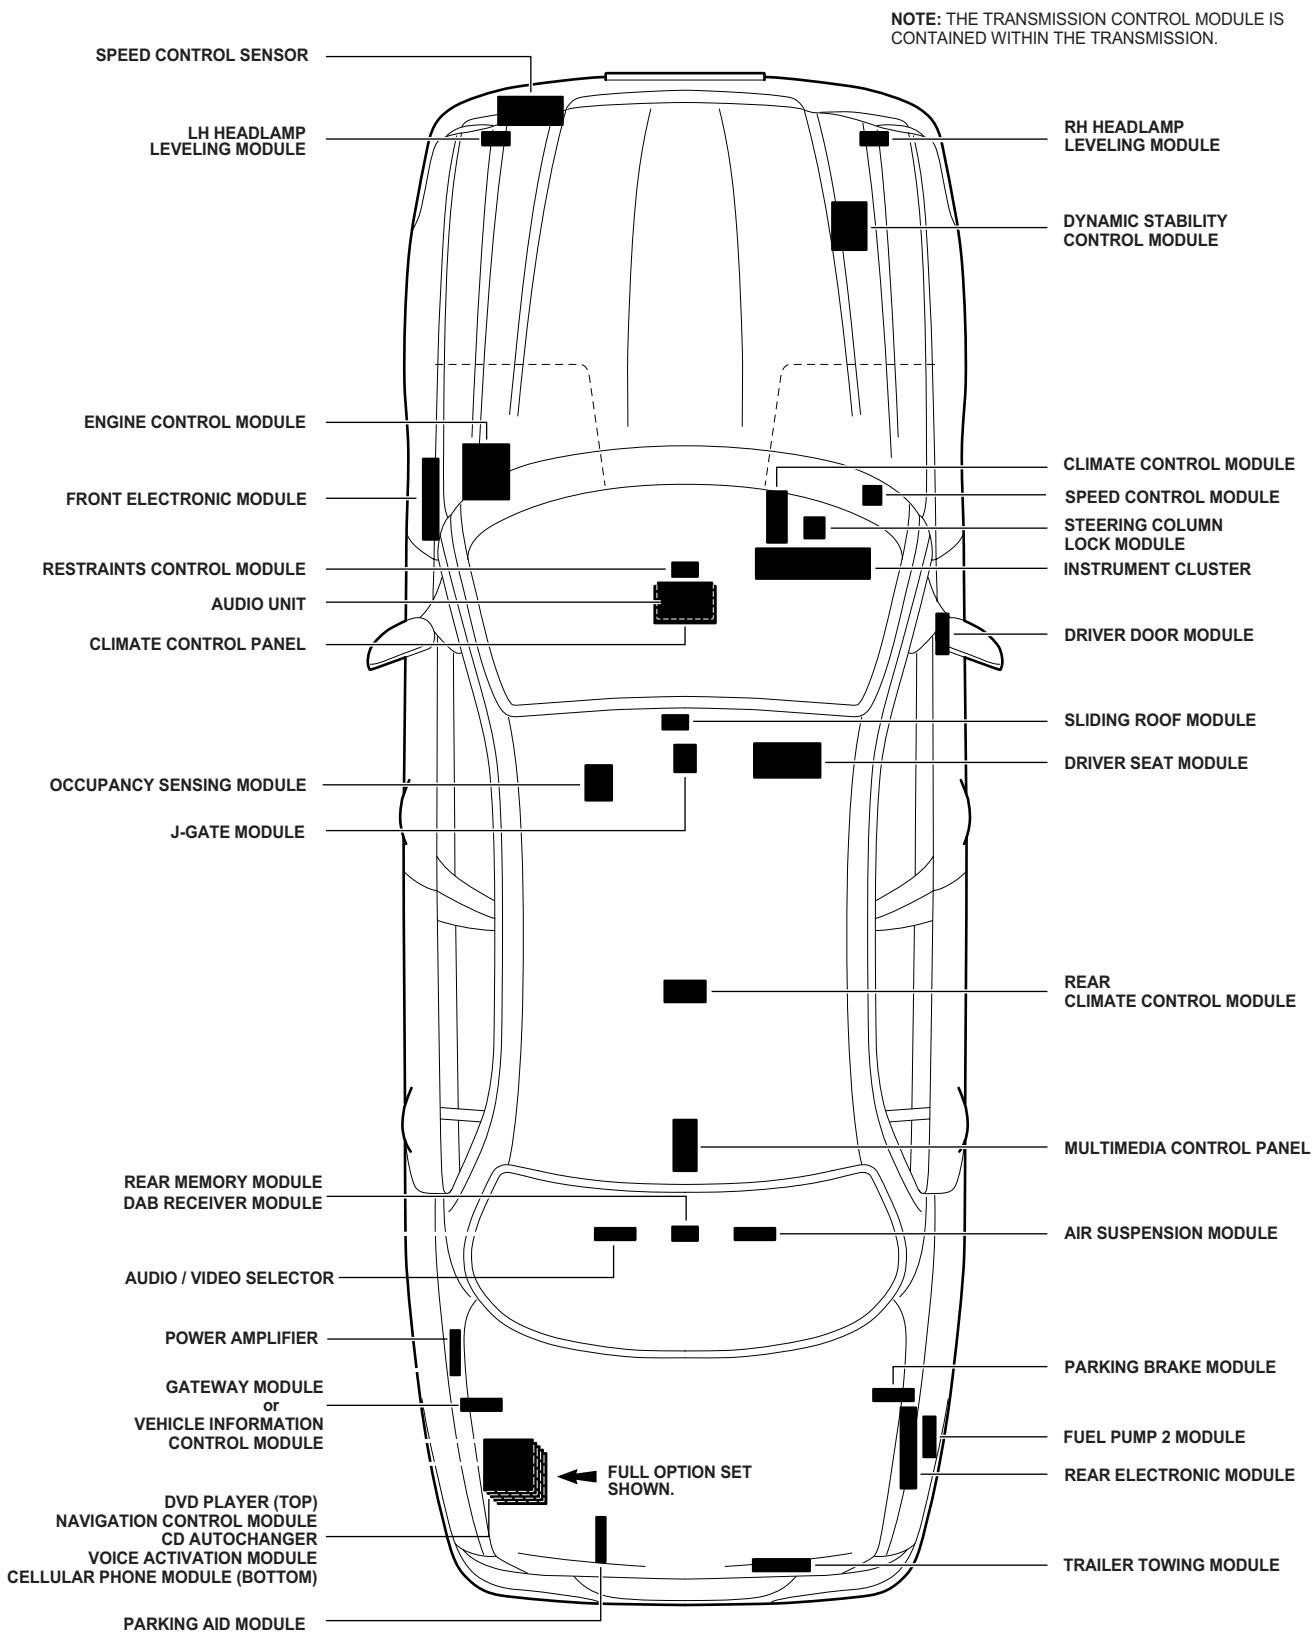

rhd\_cm\_loc\_35008

## ENGINE CONTROL MODULE

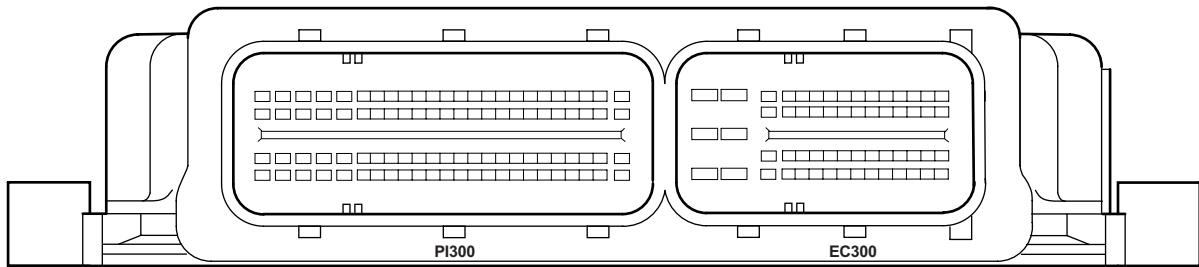

PI300 / BLACK


73	74 GW	75 RW	76 RU	77 RW	78 BG	79 BR	80 BK	81 BO	82 BU	83 U	84 BW	85 UY	86 Y	87 YU	88 UY	89 RW	90 OG	91 —	92 UY	93 —	94 NY	95 —	96 YR
49 U	50 YU	51 YR	52 YG	53 YU	54 YR	55 GR	56 GR	57 YR	58 GW	59 Y	60 GW	61 GU	62 GB	63 —	64 YB	65 R	66 U	67 Y	68 UY	69 BK	70 GW	71 U	72 U

25	26 —	27 G	28 N	29 R	30 Y	31 O	32 —	33 N	34 Y	35 —	36 BK	37 —	38 YU	39 N	40 U	41 N	42 N	43 —	44 B	45 GR	46 YR	47 OY	48 —
1 Y	2 G	3 WR	4 —	5 —	6 B	7 R	8 G	9 —	10 BG	11 BG	12 BG	13 —	14 —	15 BG	16 YR	17 —	18 BK	19 B	20 B	21 —	22 BW	23 Y	24 OW

EC300 / BLACK

5 B	6 WG	46 —	47 —	48 R	49 WU	50 NW	51 GO	52 G	53 —	54 NR	55 BU	56 —	57 —	58 Y	33 U	34 —	35 YG	36 YR	37 —	38 Y	39 —	40 U	41 GO	42 GU	43 Y	44 —	45 G
3 B	4 WG	20 N	21 Y	22 —	23 Y	24 R	25 —	26 —	27 —	28 —	29 —	30 GO	31 —	32 U	7 G	8 BG	9 —	10 —	11 WU	12 Y	13 —	14 GR	15 BW	16 Y	17 —	18 OY	19
1 B	2 B																										

## DIESEL POWERTRAIN CONTROL MODULE

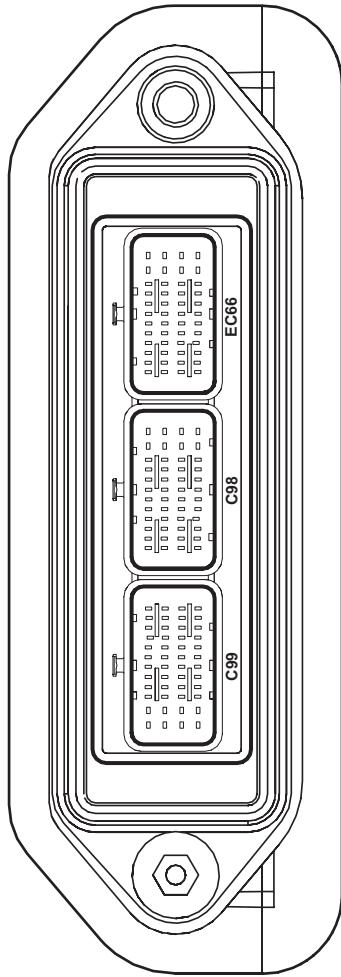

C99 / GREY

M4	L4	K4	J4	H4	G4	F4	E4	D4	C4	B4	A4
BG	GB	GR	YP	MP	NW	WP	WB	WB	WB	WB	WB
M3	L3	K3	J3	H3	G3	F3	E3	D3	C3	B3	A3
BW	GW	SB	WR	NW	NR	NR	WR	—	WR	—	WR
M2	L2	K2	J2	H2	G2	F2	E2	D2	C2	B2	A2
BW	GU	SB	WR	BU	NR	WR	NG	NU	WR	BR	WR
M1	L1	K1	J1	H1	G1	F1	E1	D1	C1	B1	A1
—	—	EU	GU	GU	YR	WR	W	NR	NY	WR	—


C98 / BROWN

A1	B1	C1	D1	E1	F1	G1	H1	I1	J1	K1	M1
W	WR	—	WG	WU	YU	—	WP	GO	BY	BO	—
A2	B2	C2	D2	E2	F2	G2	H2	I2	J2	K2	M2
—	—	—	YG	NG	NU	—	—	—	—	WU	GO
A3	B3	C3	D3	E3	F3	G3	H3	I3	K3	Y	—
G	—	—	VR	WG	RB	BY	—	GO	BU	GR	—
A4	B4	C4	D4	E4	F4	G4	H4	I4	J4	K4	M4
Y	—	NR	NY	WB	—	—	—	—	BU	BR	—

EC66 / BLACK

A1	B1	C1	D1	E1	F1	G1	H1	I1	J1	K1	M1
WR	—	WR	—	WR	Y	—	WR	—	WR	—	WR
A2	B2	C2	D2	E2	F2	G2	H2	I2	K2	WU	WG
—	—	—	—	—	—	—	—	—	—	—	—
A3	B3	C3	D3	E3	F3	G3	H3	I3	K3	Y	—
G	—	—	VR	WG	RB	BY	—	GO	BU	GR	—
A4	B4	C4	D4	E4	F4	G4	H4	I4	J4	K4	M4
Y	—	NR	NY	WB	—	—	—	—	BU	BR	—

## INSTRUMENT CLUSTER

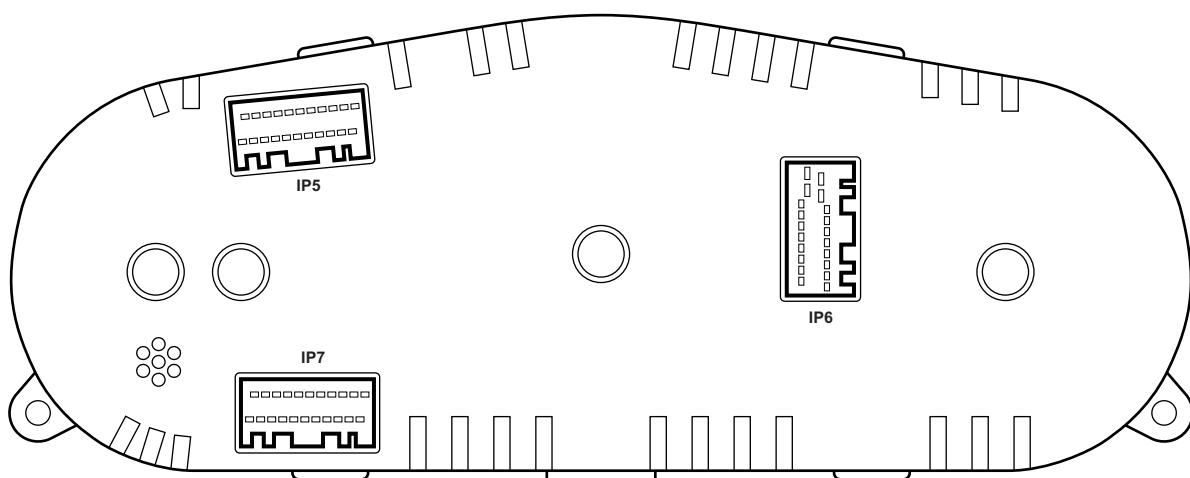

IP5 / GREY

22	21	20	19	18	17	16	15	14	B	13	12
WB	—	GO	Y	YR	R	—	CG	YG	GO	RW	YU

IP6 / BLACK

11	R	1	OY
12	U	2	B
13	GB	3	O
14	RG	4	BG
15	RW	5	WR
16	W	6	GR
17	WB	7	—
18	Y	8	Y
19	G	9	G
20	Y	10	U


IP7 / BLACK

22	21	20	19	18	17	16	15	14	13	12
—	WB	GW	UY	BR	Y	NW	BO	YU	WR	W

11	10	9	8	7	6	5	4	3	2	1
BG	—	GU	GO	GR	YB	RW	G	BW	WG	O

## FRONT ELECTRONIC MODULE

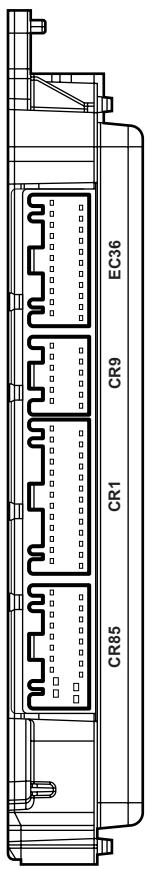

CR85 / BLACK	
1	2
NW	B
11	12
RW	RW
13	14
B	B
Y	Y
15	15
B	U
16	16
WG	YB
17	17
WB	WU
18	18
WB	RU
19	19
WU	RW
20	20
Y	Y


CR1 / BLACK	
1	2
GU	GW
14	15
RU	RW
16	16
WG	WG
17	17
WB	WB
18	18
WB	WB
19	19
WU	WU
20	20
RU	RU
Y	Y

CR9 / BLACK	
1	2
GU	GW
14	15
YB	YR
16	17
WG	WB
17	18
WB	WB
18	19
WB	WB
19	20
WU	RU
20	21
RU	UO
Y	Y

EC36 / BLACK	
1	2
BR	U
12	13
BR	BR
13	14
U	U
14	15
BR	BR
15	16
U	O
16	17
BG	BR
17	18
BR	Y
18	19
BR	Y
19	20
BR	BR
20	21
BR	BW
21	22
BR	BR
22	23
BR	OG
23	24
BR	OG
24	25
BR	U
25	26
BR	Y
26	27
BR	Y
27	28
BR	BR
28	29
BR	BR
29	30
BR	BR
30	31
BR	BR
31	32
BR	BR
32	33
BR	BR
33	34
BR	BR
34	35
BR	BR
35	36
BR	BR
36	37
BR	BR
37	38
BR	BR
38	39
BR	BR
39	40
BR	BR
40	41
BR	BR
41	42
BR	BR
42	43
BR	BR
43	44
BR	BR
44	45
BR	BR
45	46
BR	BR
46	47
BR	BR
47	48
BR	BR
48	49
BR	BR
49	50
BR	BR
50	51
BR	BR
51	52
BR	BR
52	53
BR	BR
53	54
BR	BR
54	55
BR	BR
55	56
BR	BR
56	57
BR	BR
57	58
BR	BR
58	59
BR	BR
59	60
BR	BR
60	61
BR	BR
61	62
BR	BR
62	63
BR	BR
63	64
BR	BR
64	65
BR	BR
65	66
BR	BR
66	67
BR	BR
67	68
BR	BR
68	69
BR	BR
69	70
BR	BR
70	71
BR	BR
71	72
BR	BR
72	73
BR	BR
73	74
BR	BR
74	75
BR	BR
75	76
BR	BR
76	77
BR	BR
77	78
BR	BR
78	79
BR	BR
79	80
BR	BR
80	81
BR	BR
81	82
BR	BR
82	83
BR	BR
83	84
BR	BR
84	85
BR	BR
85	86
BR	BR
86	87
BR	BR
87	88
BR	BR
88	89
BR	BR
89	90
BR	BR
90	91
BR	BR
91	92
BR	BR
92	93
BR	BR
93	94
BR	BR
94	95
BR	BR
95	96
BR	BR
96	97
BR	BR
97	98
BR	BR
98	99
BR	BR
99	100
BR	BR
100	101
BR	BR
101	102
BR	BR
102	103
BR	BR
103	104
BR	BR
104	105
BR	BR
105	106
BR	BR
106	107
BR	BR
107	108
BR	BR
108	109
BR	BR
109	110
BR	BR
110	111
BR	BR
111	112
BR	BR
112	113
BR	BR
113	114
BR	BR
114	115
BR	BR
115	116
BR	BR
116	117
BR	BR
117	118
BR	BR
118	119
BR	BR
119	120
BR	BR
120	121
BR	BR
121	122
BR	BR
122	123
BR	BR
123	124
BR	BR
124	125
BR	BR
125	126
BR	BR
126	127
BR	BR
127	128
BR	BR
128	129
BR	BR
129	130
BR	BR
130	131
BR	BR
131	132
BR	BR
132	133
BR	BR
133	134
BR	BR
134	135
BR	BR
135	136
BR	BR
136	137
BR	BR
137	138
BR	BR
138	139
BR	BR
139	140
BR	BR
140	141
BR	BR
141	142
BR	BR
142	143
BR	BR
143	144
BR	BR
144	145
BR	BR
145	146
BR	BR
146	147
BR	BR
147	148
BR	BR
148	149
BR	BR
149	150
BR	BR
150	151
BR	BR
151	152
BR	BR
152	153
BR	BR
153	154
BR	BR
154	155
BR	BR
155	156
BR	BR
156	157
BR	BR
157	158
BR	BR
158	159
BR	BR
159	160
BR	BR
160	161
BR	BR
161	162
BR	BR
162	163
BR	BR
163	164
BR	BR
164	165
BR	BR
165	166
BR	BR
166	167
BR	BR
167	168
BR	BR
168	169
BR	BR
169	170
BR	BR
170	171
BR	BR
171	172
BR	BR
172	173
BR	BR
173	174
BR	BR
174	175
BR	BR
175	176
BR	BR
176	177
BR	BR
177	178
BR	BR
178	179
BR	BR
179	180
BR	BR
180	181
BR	BR
181	182
BR	BR
182	183
BR	BR
183	184
BR	BR
184	185
BR	BR
185	186
BR	BR
186	187
BR	BR
187	188
BR	BR
188	189
BR	BR
189	190
BR	BR
190	191
BR	BR
191	192
BR	BR
192	193
BR	BR
193	194
BR	BR
194	195
BR	BR
195	196
BR	BR
196	197
BR	BR
197	198
BR	BR
198	199
BR	BR
199	200
BR	BR
200	201
BR	BR
201	202
BR	BR
202	203
BR	BR
203	204
BR	BR
204	205
BR	BR
205	206
BR	BR
206	207
BR	BR
207	208
BR	BR
208	209
BR	BR
209	210
BR	BR
210	211
BR	BR
211	212
BR	BR
212	213
BR	BR
213	214
BR	BR
214	215
BR	BR
215	216
BR	BR
216	217
BR	BR
217	218
BR	BR
218	219
BR	BR
219	220
BR	BR
220	221
BR	BR
221	222
BR	BR
222	223
BR	BR
223	224
BR	BR
224	225
BR	BR
225	226
BR	BR
226	227
BR	BR
227	228
BR	BR
228	229
BR	BR
229	230
BR	BR
230	231
BR	BR
231	232
BR	BR
232	233
BR	BR
233	234
BR	BR
234	235
BR	BR
235	236
BR	BR
236	237
BR	BR
237	238
BR	BR
238	239
BR	BR
239	240
BR	BR
240	241
BR	BR
241	242
BR	BR
242	243
BR	BR
243	244
BR	BR
244	245
BR	BR
245	246
BR	BR
246	247
BR	BR
247	248
BR	BR
248	249
BR	BR
249	250
BR	BR
250	251
BR	BR
251	252
BR	BR
252	253
BR	BR
253	254
BR	BR
254	255
BR	BR
255	256
BR	BR
256	257
BR	BR
257	258
BR	BR
258	259
BR	BR
259	260
BR	BR
260	261
BR	BR
261	262
BR	BR
262	263
BR	BR
263	264
BR	BR
264	265
BR	BR
265	266
BR	BR
266	267
BR	

## REAR ELECTRONIC MODULE

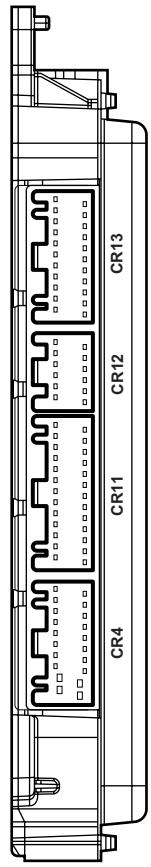

CR4 / BLACK


1	2	3	4	5	6	7	8	9	10	11	12	13
Y	YB	NW	RW	GU	OY	WB	WB	WG	WB	BO	B	WU
11	12	YG	O	14	15	16	17	18	19	20	21	22
YG	YG	OY	OG	N	—	GW	GW	—	GW	OY	RW	RG
11	12	13	14	15	16	17	18	19	20	21	22	23

CR11 / NATURAL

—	1	2	3	4	5	6	7	8	9	10	11	12	13
Y	YB	RU	R	U	YB	Y	OG	GO	Y	BO	B	WU	—
14	15	16	17	18	19	20	21	22	23	24	25	26	—
—	—	GW	OY	OG	N	—	OY	RG	—	RW	GU	8	—
11	12	13	14	15	16	17	18	19	20	21	22	23	24


CR12 / BLACK

—	1	2	3	4	5	6	7	8	9	10	11	12	13
Y	YB	RU	R	U	YB	Y	OG	GO	Y	BO	B	WU	—
14	15	16	17	18	19	20	21	22	23	24	25	26	—
—	—	GW	OY	OG	N	—	OY	RG	—	RW	GU	8	—
11	12	13	14	15	16	17	18	19	20	21	22	23	24

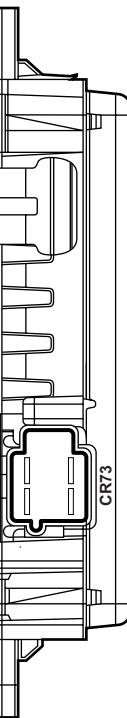

CR73 / BLACK


1	2	3	4	5	6	7	8
N	—	U	O	GB	G	RU	RU
3	4	5	6	7	8	RU	RU

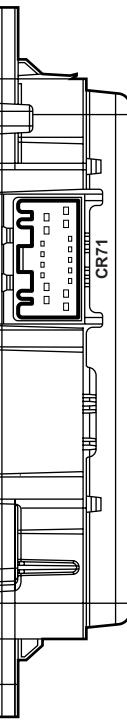


CR13 / BLACK

1	2	3	4	5	6	7	8
Y	YB	RU	R	U	YB	Y	YG
12	13	14	15	16	17	18	19

## DYNAMIC STABILITY CONTROL MODULE

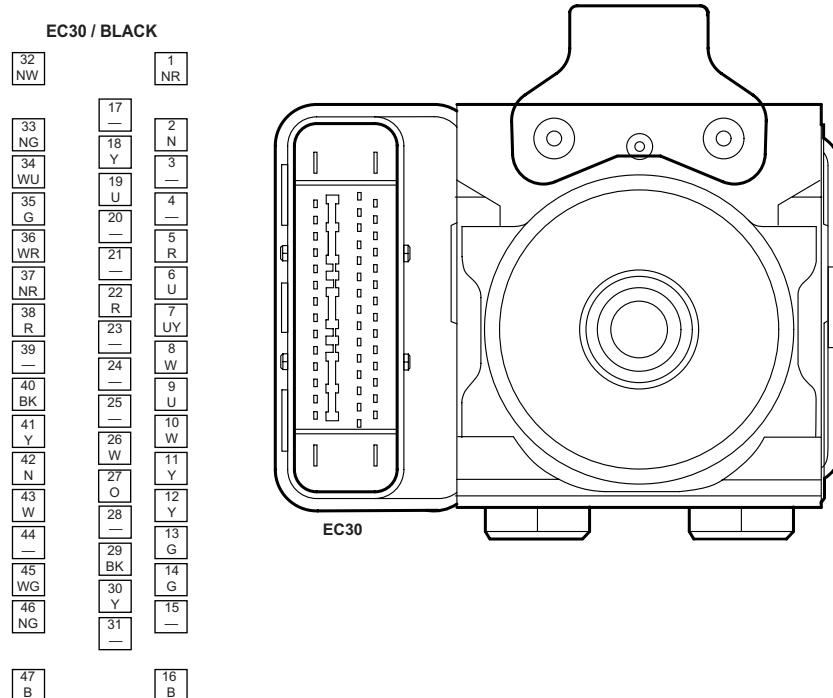


## PARKING AID MODULE

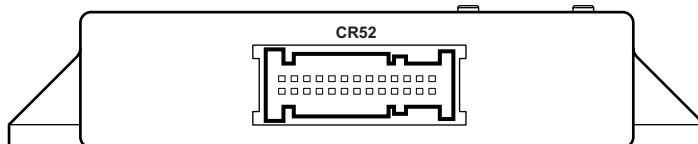

**CR52 / BLACK**

1	WR	2	RU	3	B	4	BO	5	W	6	OY	7	GW	8	RG	9	OG	10	WU	11	WG	12	YU	13	YR
14	RU	15	RW	16	BG	17	YR	18	Y	19	GU	20	-	21	-	22	WR	23	W	24	YB	25	W	26	Y

## ELECTRONIC PARKING BRAKE MODULE

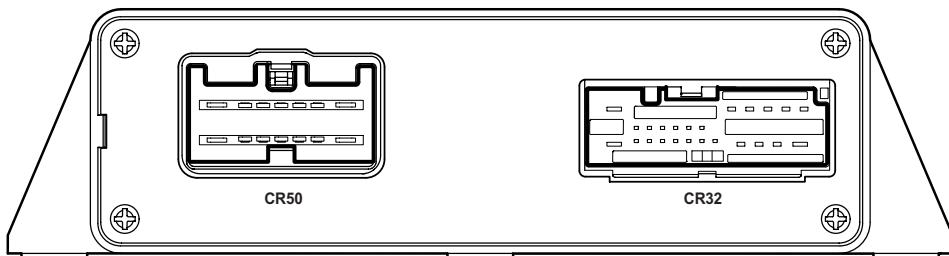

### CR50 / LIGHT GREY


1	-	2	-	3	-	4	-	5	-	6	-	7	GW
8	-	9	-	10	U	11	G	12	Y	13	WU	14	RW

### CR32 / GREY

1	NW	2	R	3	-	4	G	5	Y	6	WU	7	GO	8	-	9	WR	10	YB	11	NW	12	-
13	B	14	Y	15	GB	16	-	17	-	18	-	19	20	21	-	22	-	23	-	24	-	-	-

dsc\_pam\_pbm\_35008

## AIR SUSPENSION MODULE

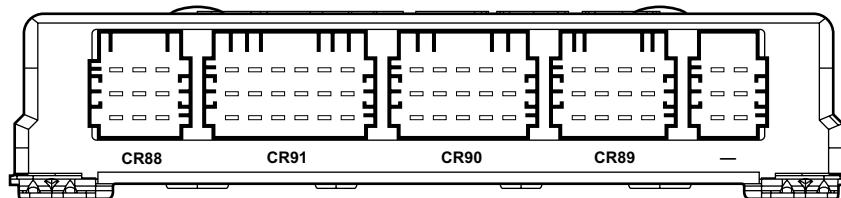

CR88 / BLACK

1 NW	4 —	7 Y
2 N	5 —	8 G
3 B	6 —	9 —

CR91 / BLACK

1 YG	4 —	7 —	10 YU	13 —	16 Y
2 WR	5 WU	8 BO	11 U	14 GO	17 G
3 WB	6 WG	9 —	12 NR	15 —	18 BK


CR90 / BLACK

1 G	4 —	7 BW	10 YR	13 Y
2 GU	5 —	8 BR	11 YG	14 G
3 GB	6 —	9 BK	12 YU	15 BK

CR89 / BLACK

1 BO	4 WR	7 WG	10 BG
2 BK	5 WU	8 WB	11 BG
3 Y	6 —	9 —	12 —

## TPMS MODULE

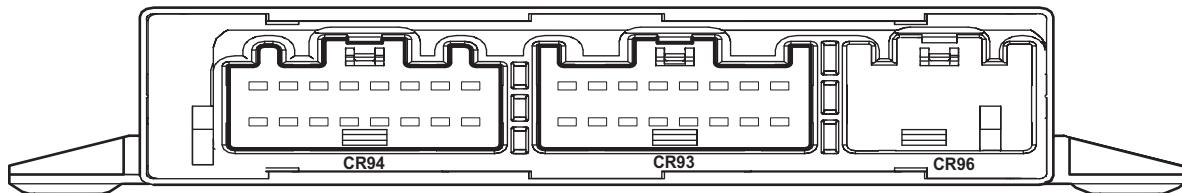


CR94 / BLUE

1 —	2 —	3 —	4 —	5 NR	6 GB	7 GU	8 GO
9 —	10 —	11 —	12 BO	13 BW	14 BR	15 B	16 B

CR93 / GREY

1 —	2 G	3 Y	4 U	5 —	6 —	7 —	8 WU
9 —	10 —	11 —	12 B	13 —	14 —	15 —	16 NW


## SPEED CONTROL SENSOR

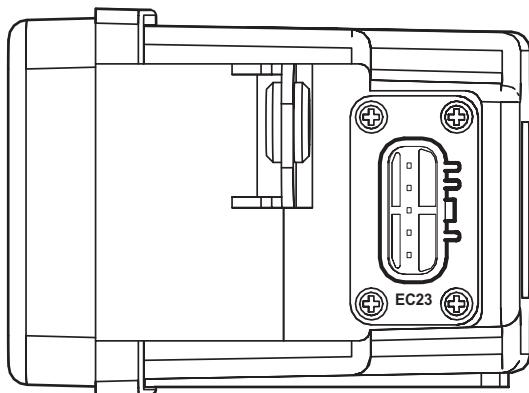

EC23 / BLACK

1 WG
2 B
3 U
4 R
5 NW


## SPEED CONTROL MODULE

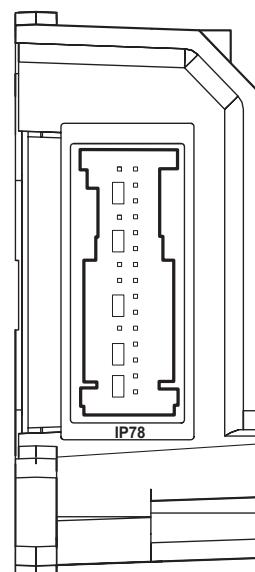

IP78 / YELLOW

15 NW	30 —
14 WG	29 —
13 —	28 —
12 B	27 —
11 —	26 —
10 —	25 —
9 Y	24 —
8 G	23 —
7 —	22 —
6 R	21 —
5 R	20 U
4 —	19 —
3 R	18 —
2 U	17 —
1 —	16 —

## CLIMATE CONTROL MODULE

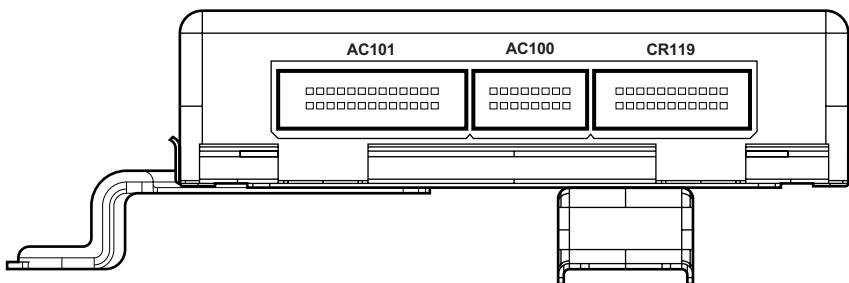

AC101 / BLACK

13	YR	12	WG	11	YG	10	BR	9	YB	8	N	7	NW	6	RY	5	—	4	RB	3	GY	2	GU	1	U
26	GR	25	BG	24	NB	23	WU	22	Y	21	UO	19	WY	18	—	17	K	16	O	15	R	14	BY		


AC100 / BLACK

8	GB	7	UB	6	GB	5	S	4	O	3	UY	2	NR	1	UR									
16	WR	15	RG	14	GW	13	G	12	RW	11	WO	10	LG	9	YU									

CR119 / BLACK

11	RW	10	RU	9	RW	8	Y	7	G	6	Y	5	B	4	RG	3	WG	2	N	1	—		
22	B	21	GW	20	YG	19	OY	18	BW	17	G	16	Y	15	—	14	—	13	—	12	—		

## REAR CLIMATE CONTROL MODULE

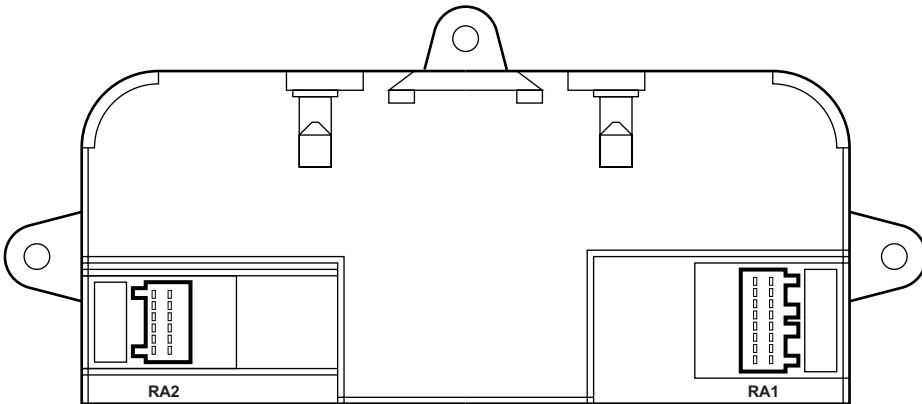



RA2 / BLACK

1	NB	7	WR
2	—	8	RB
3	KB	9	—
4	G	10	KW
5	KG	11	W
6	U	12	KU

RA1 / BLACK

16	G	8	Y
15	—	7	—
14	GW	6	RW
13	BW	5	—
12	NR	4	—
11	OW	3	YB
10	—	2	YU
9	UR	1	YR

## DRIVER SEAT MODULE

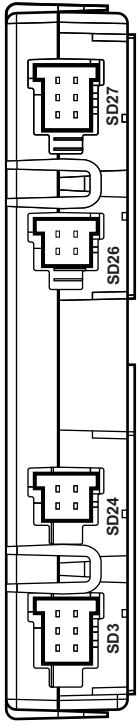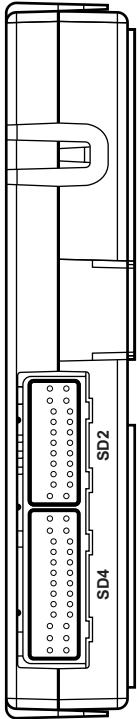


SD2 / BLACK												
1	2	3	4	5	6	7	8	9	10	11	12	13
Y	OG	GW	WU	U	—	—	—	—	—	UY	GR	NG
12	13	14	15	16	17	18	19	20	21	22	23	24
NR	OY	O	R	O	R	O	R	U	G	BR	—	GO

SD3 / BLACK												
6	4	2	1	Y	—	—	—	—	—	—	—	—
NR	—	—	—	—	—	—	—	—	—	—	—	—
5	3	1	U	—	—	—	—	—	—	—	—	—
B	—	—	—	—	—	—	—	—	—	—	—	—

SD26 / BLACK												
4	2	1	Y	—	—	—	—	—	—	—	—	—
GU	—	—	—	—	—	—	—	—	—	—	—	—
3	1	U	—	—	—	—	—	—	—	—	—	—
RU	YU	—	—	—	—	—	—	—	—	—	—	—

SD27 / BLACK												
6	4	2	1	Y	—	—	—	—	—	—	—	—
GR	GO	—	—	—	—	—	—	—	—	—	—	—
5	3	1	U	—	—	—	—	—	—	—	—	—
RG	GW	—	—	—	—	—	—	—	—	—	—	—

## DRIVER DOOR MODULE

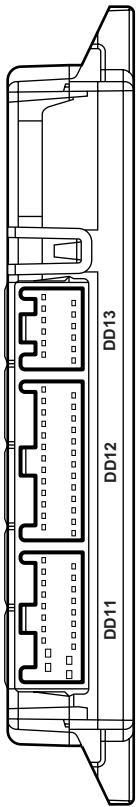


## DD12 / BLACK

1	2	3	4	5	6	7	8	9	10	11	12	13
GU	—	—	—	—	—	—	—	—	—	—	—	—
GW	Y	YG	—	—	—	—	—	—	—	—	—	—
14	15	16	17	18	19	20	21	22	23	24	25	26
YR	Y	OY	O	R	O	R	O	R	G	BR	—	GO



## DD12 / NATURAL

1	2	3	4	5	6	7	8	9	10	11	12	13
GU	—	—	—	—	—	—	—	—	—	—	—	—
GW	Y	YG	—	—	—	—	—	—	—	—	—	—
14	15	16	17	18	19	20	21	22	23	24	25	26
YR	Y	OY	O	R	O	R	O	R	G	BR	—	GO

## DD13 / BLACK

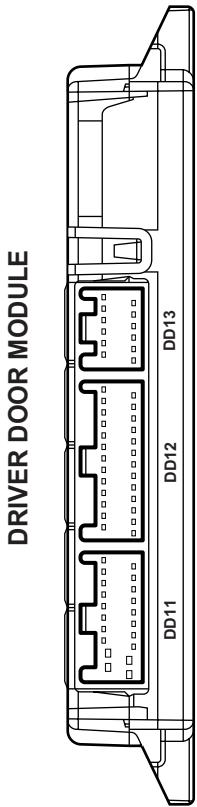

## REAR MEMORY MODULE

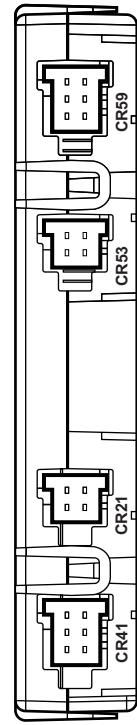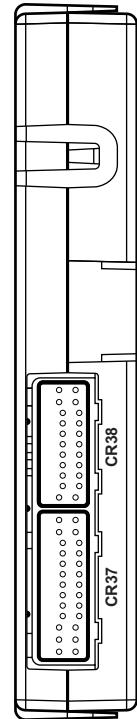


CR21 / BLACK												
6	4	2	1	Y	—	—	—	—	—	—	—	—
NR	RG	—	—	—	—	—	—	—	—	—	—	—
5	3	1	U	—	—	—	—	—	—	—	—	—
B	WU	WR	—	—	—	—	—	—	—	—	—	—

CR53 / BLACK												
6	4	2	1	Y	—	—	—	—	—	—	—	—
GR	NG	—	—	—	—	—	—	—	—	—	—	—
5	3	1	U	—	—	—	—	—	—	—	—	—
RU	—	—	—	—	—	—	—	—	—	—	—	—

CR59 / BLACK												
6	4	2	1	Y	—	—	—	—	—	—	—	—
GR	NG	—	—	—	—	—	—	—	—	—	—	—
5	3	1	U	—	—	—	—	—	—	—	—	—
RU	—	—	—	—	—	—	—	—	—	—	—	—

## CLIMATE-CONTROLLED SEAT MODULE

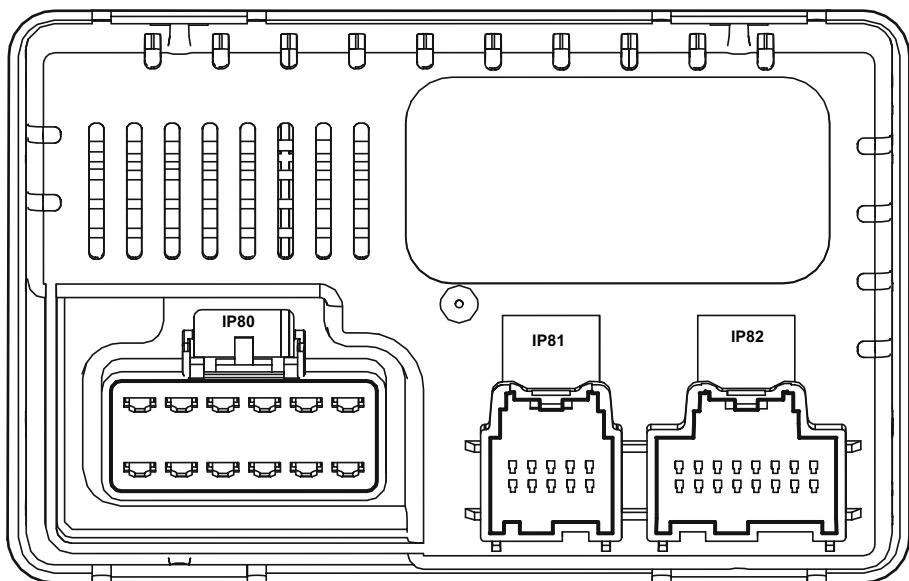

IP80 /12-WAY / BLACK


A Y	B N	C R	D UY	E R	F Y
G G	H U	J O	K W	L —	M B

IP81 /10-WAY / BLACK


1 WU	2 YU	3 WB	4 RW	5 BR
6 —	7 RU	8 GB	9 WG	10 BO


IP82 /16-WAY / BLACK


1 Y	2 G	3 YR	4 GU	5 —	6 RW	7 BG	8 GO
9 —	10 —	11 OG	12 UY	13 —	14 RW	15 BW	16 GR

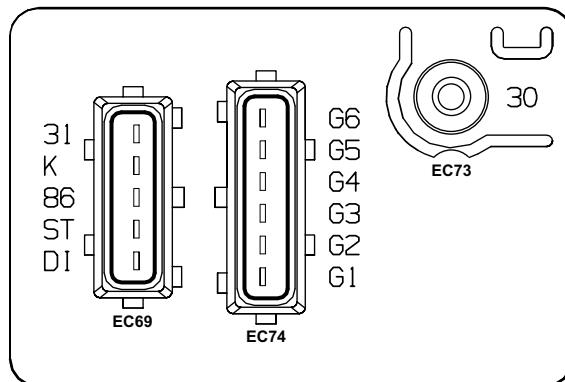**GLOW PLUG CONTROL MODULE**

EC69 / BLACK	EC74 / BLACK	EC73
1 B	6 RG	1 B
2 BW	5 RU	
3 NR	4 R	
4 —	3 RG	
5 WG	2 RU	
	1 R	

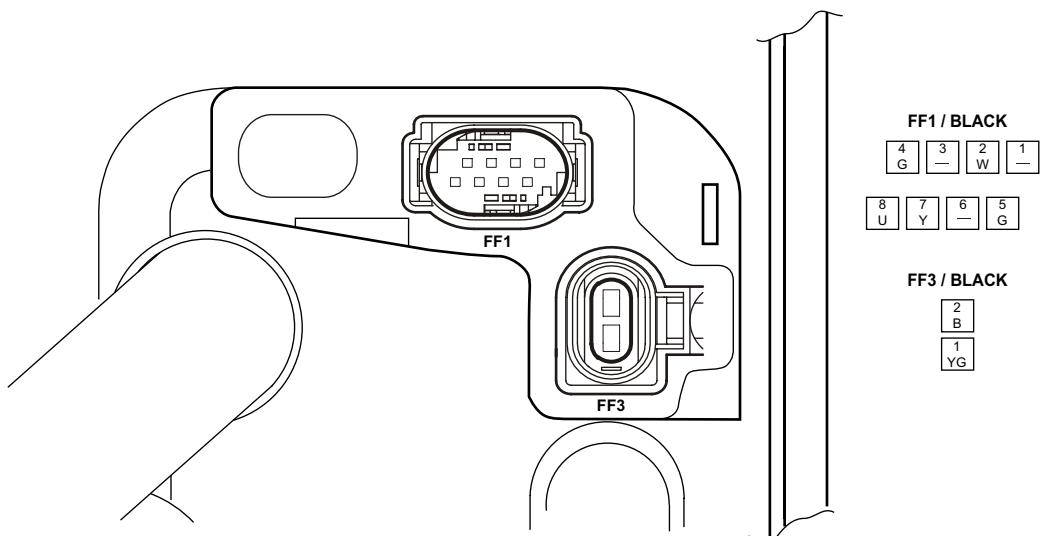**FUEL-FIRED AUXILIARY HEATER MODULE**

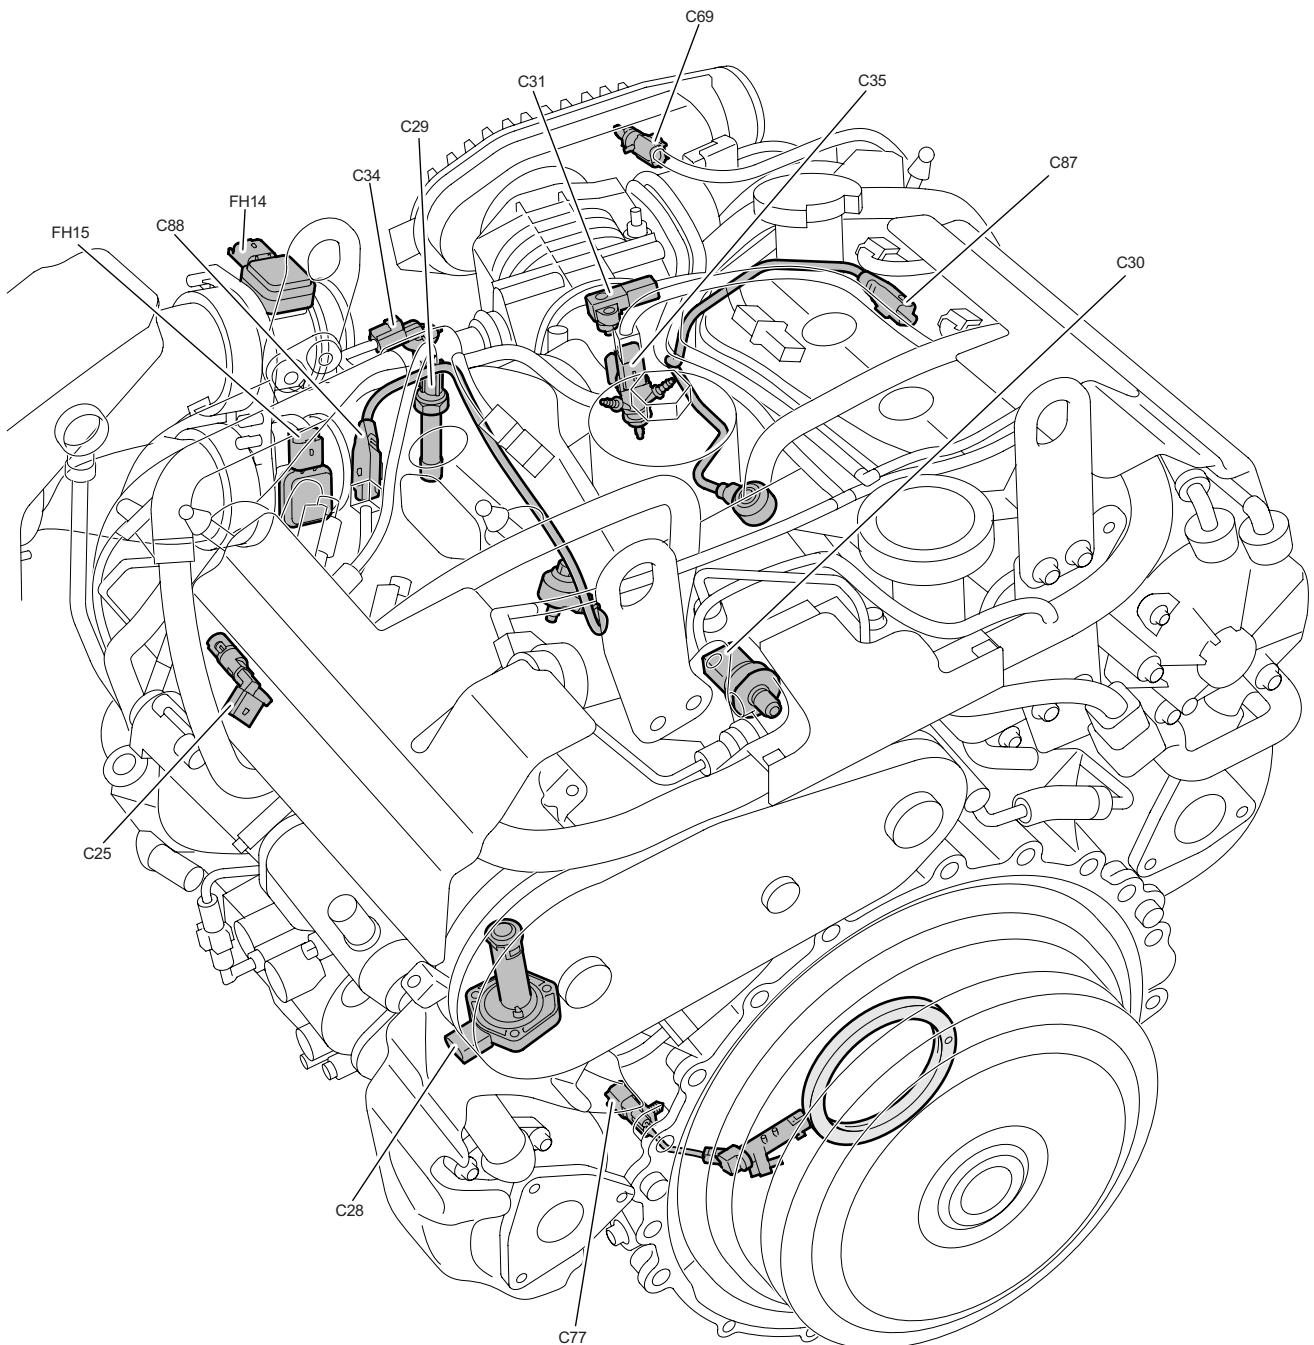

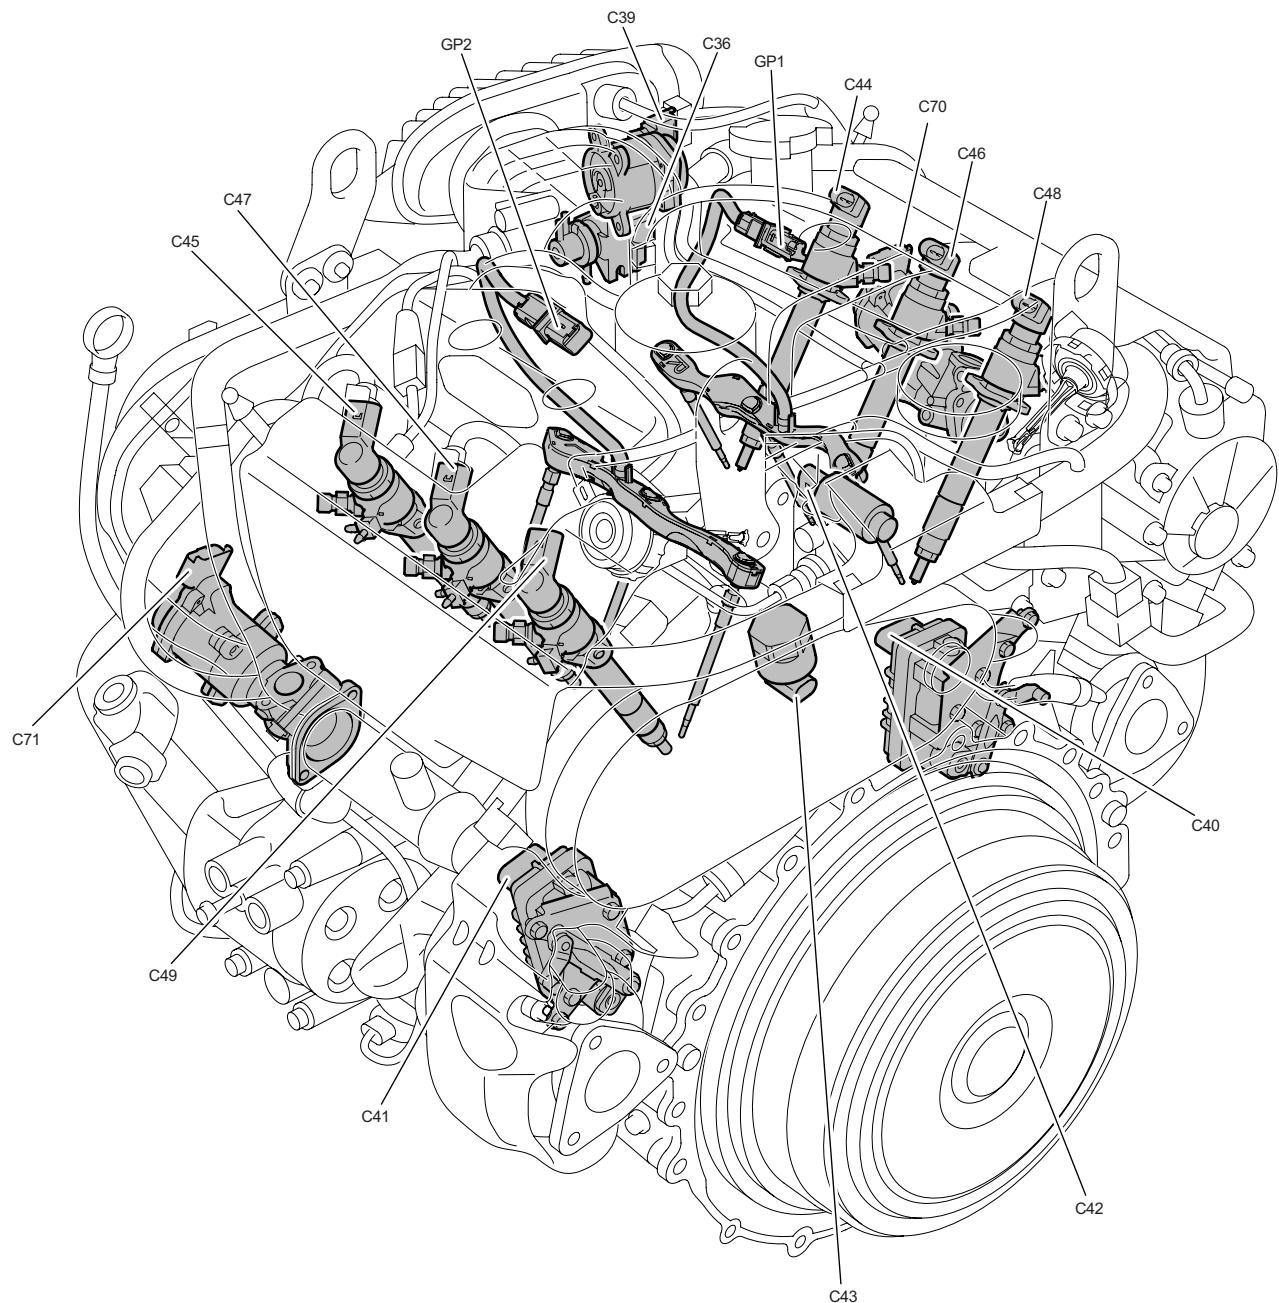

# Fig. 01.1

## COMPONENTS

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	TRUNK / RH SIDE
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN
MEGAFUSES	—	—	TRUNK / RH SIDE
PASSENGER (PRIMARY) JUNCTION FUSE BOX	CR6 CR47 CR48 CR49 CR56 EC7 EC55	10-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 10-WAY / BLACK 10-WAY / BLACK 15-WAY / BLACK 11-WAY / BLACK	CABIN / RH 'A' POST
REAR POWER DISTRIBUTION FUSE BOX	CR3 CR5 CR68 CR80 CR81 CR82 CR83 CR84 CR97 CR98	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	TRUNK / RH REAR
TRANSIT ISOLATION RELAY	CR95	2-WAY / WHITE	TRUNK / ADJACENT TO BATTERY


## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP58	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)

## GROUNDS

Ground	Location
BC1	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC3	TRUNK / RH SIDE / ADJACENT TO BATTERY
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

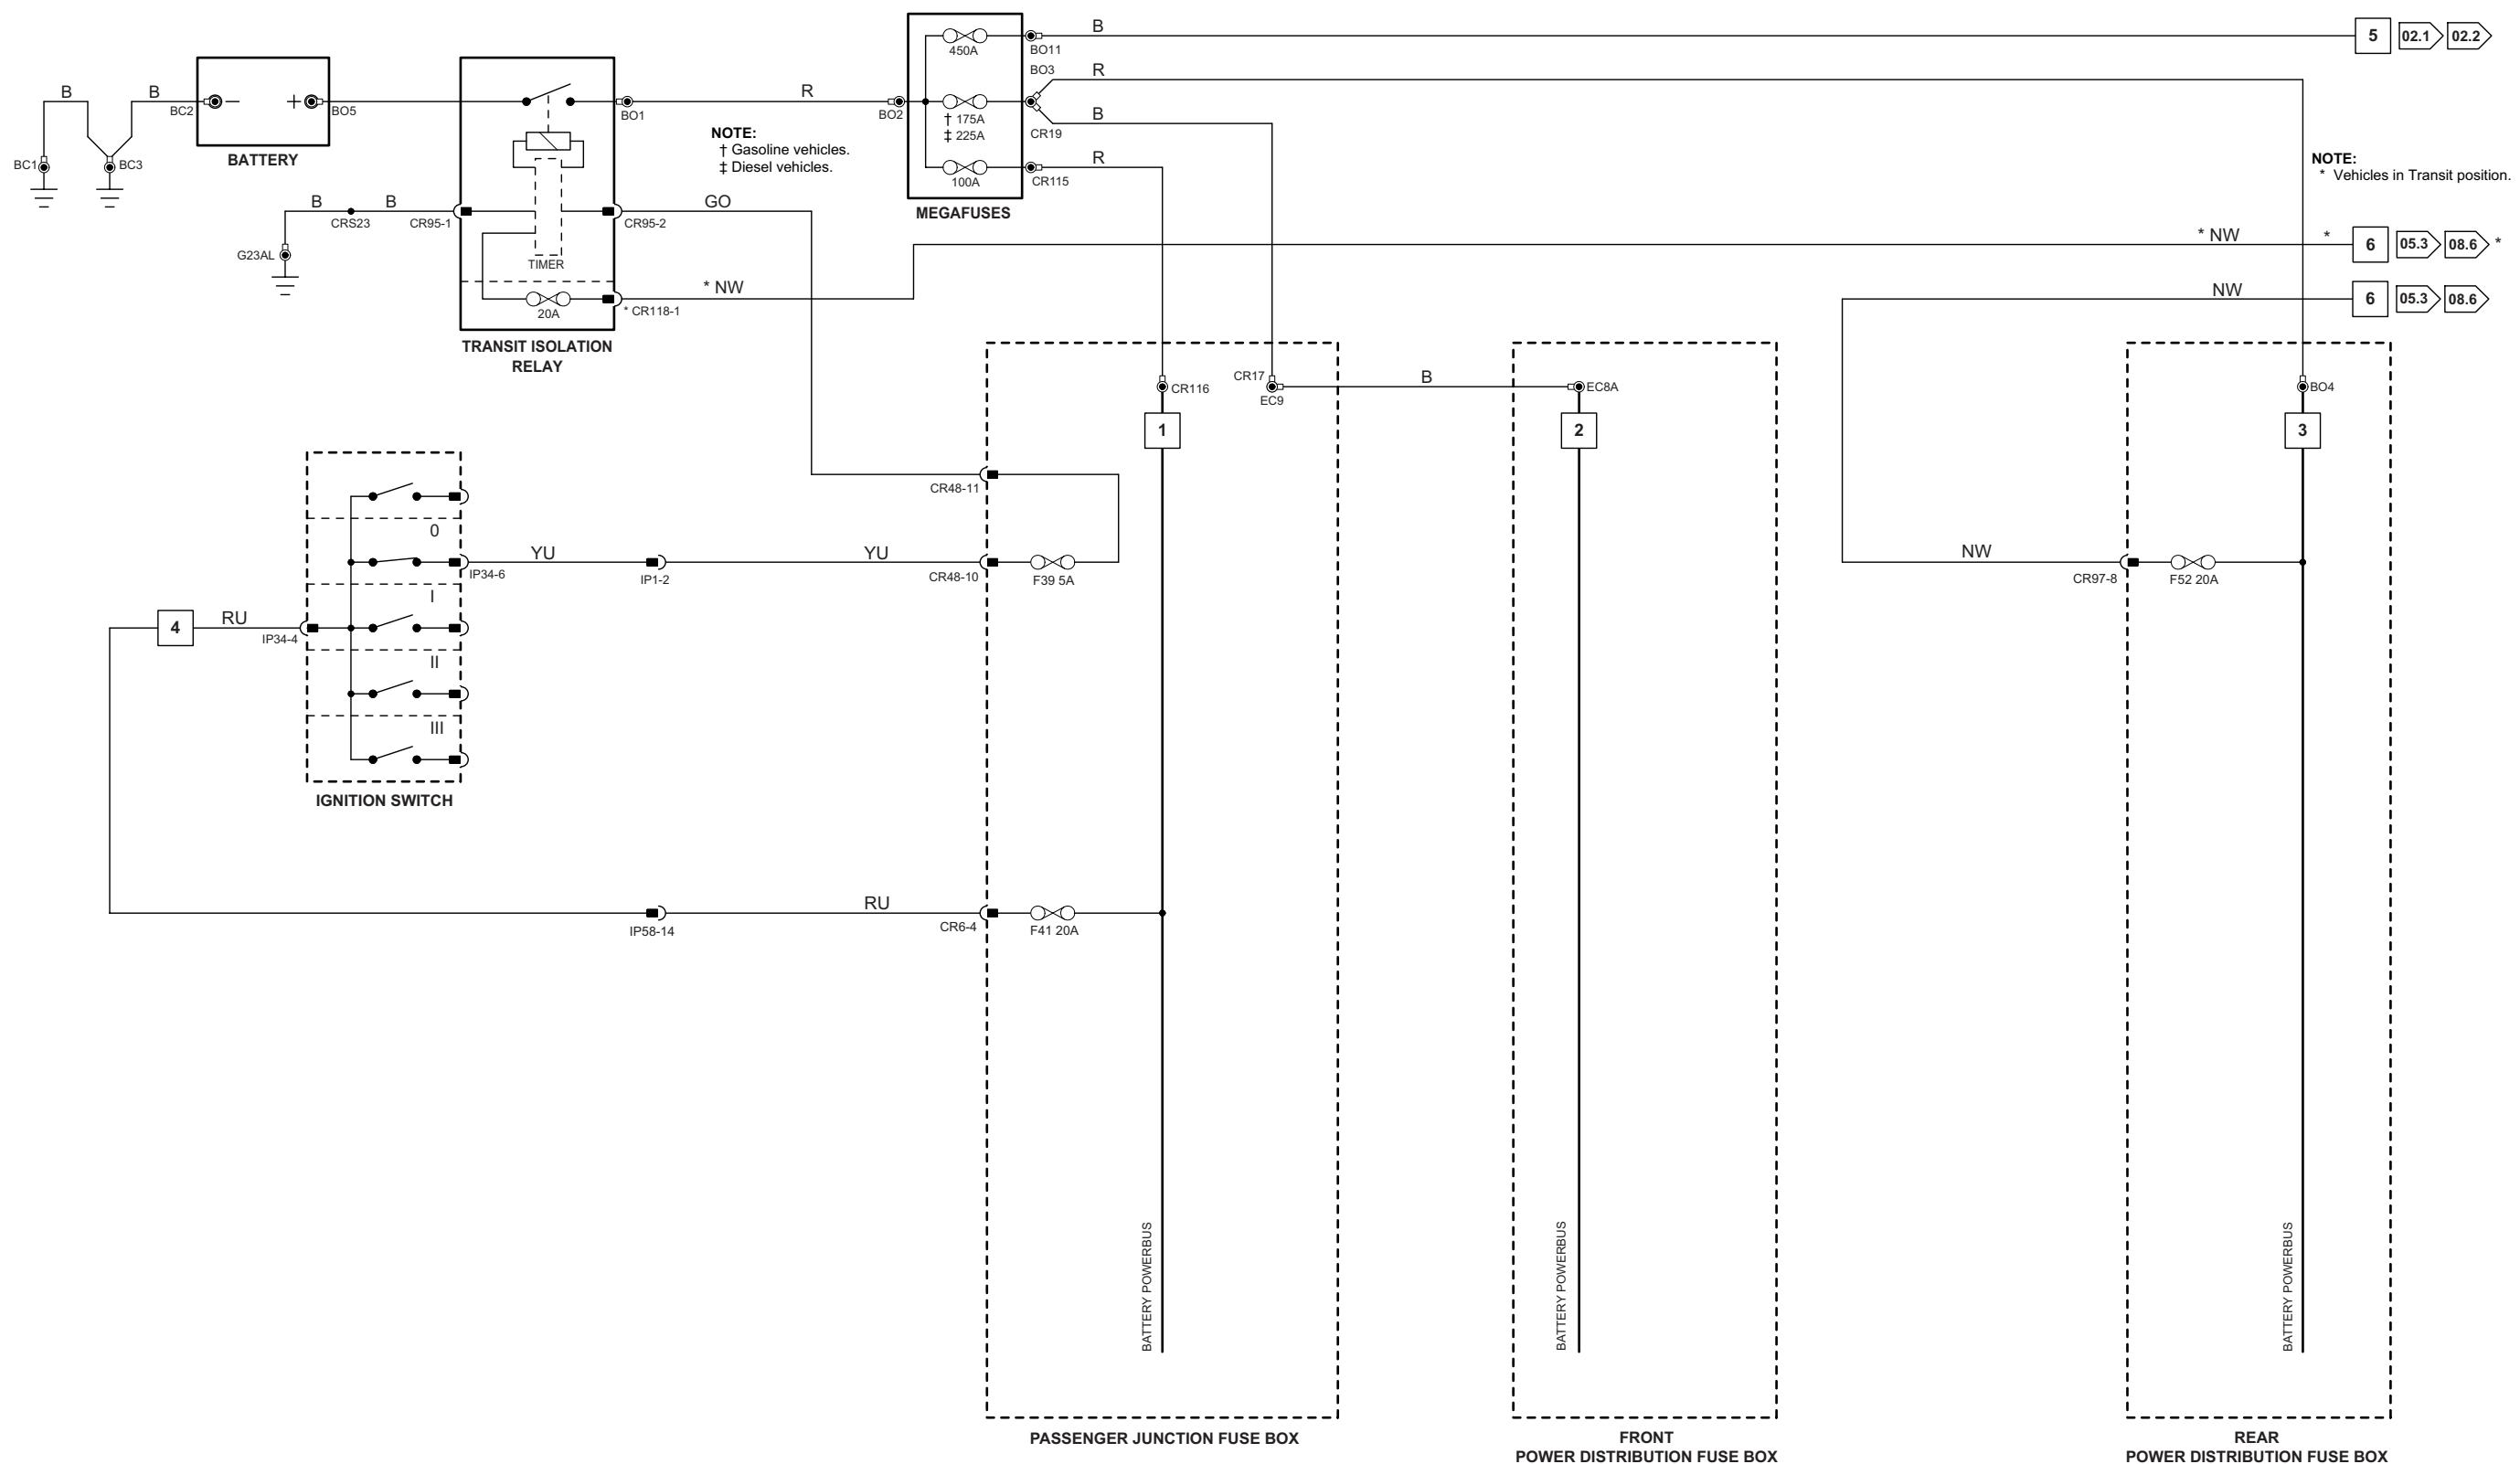

**Fig. 01.2**


**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	4-WAY / GREY 4-WAY / TAN 8-WAY / GREY 4-WAY / SLATE 8-WAY / SLATE 12-WAY / SLATE 4-WAY / SLATE 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
REAR POWER DISTRIBUTION FUSE BOX	CR3 CR5 CR68 CR80 CR81 CR82 CR83 CR84 CR97 CR98	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	TRUNK / RH REAR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESS	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE
RC2	8-WAY / BLACK / TELEMATICS HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL14	14-WAY / GREY / CABIN HARNESS TO TELEMATICS HARNESS	TRUNK / LH SIDE / BEHIND CD AUTOCHANGER
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

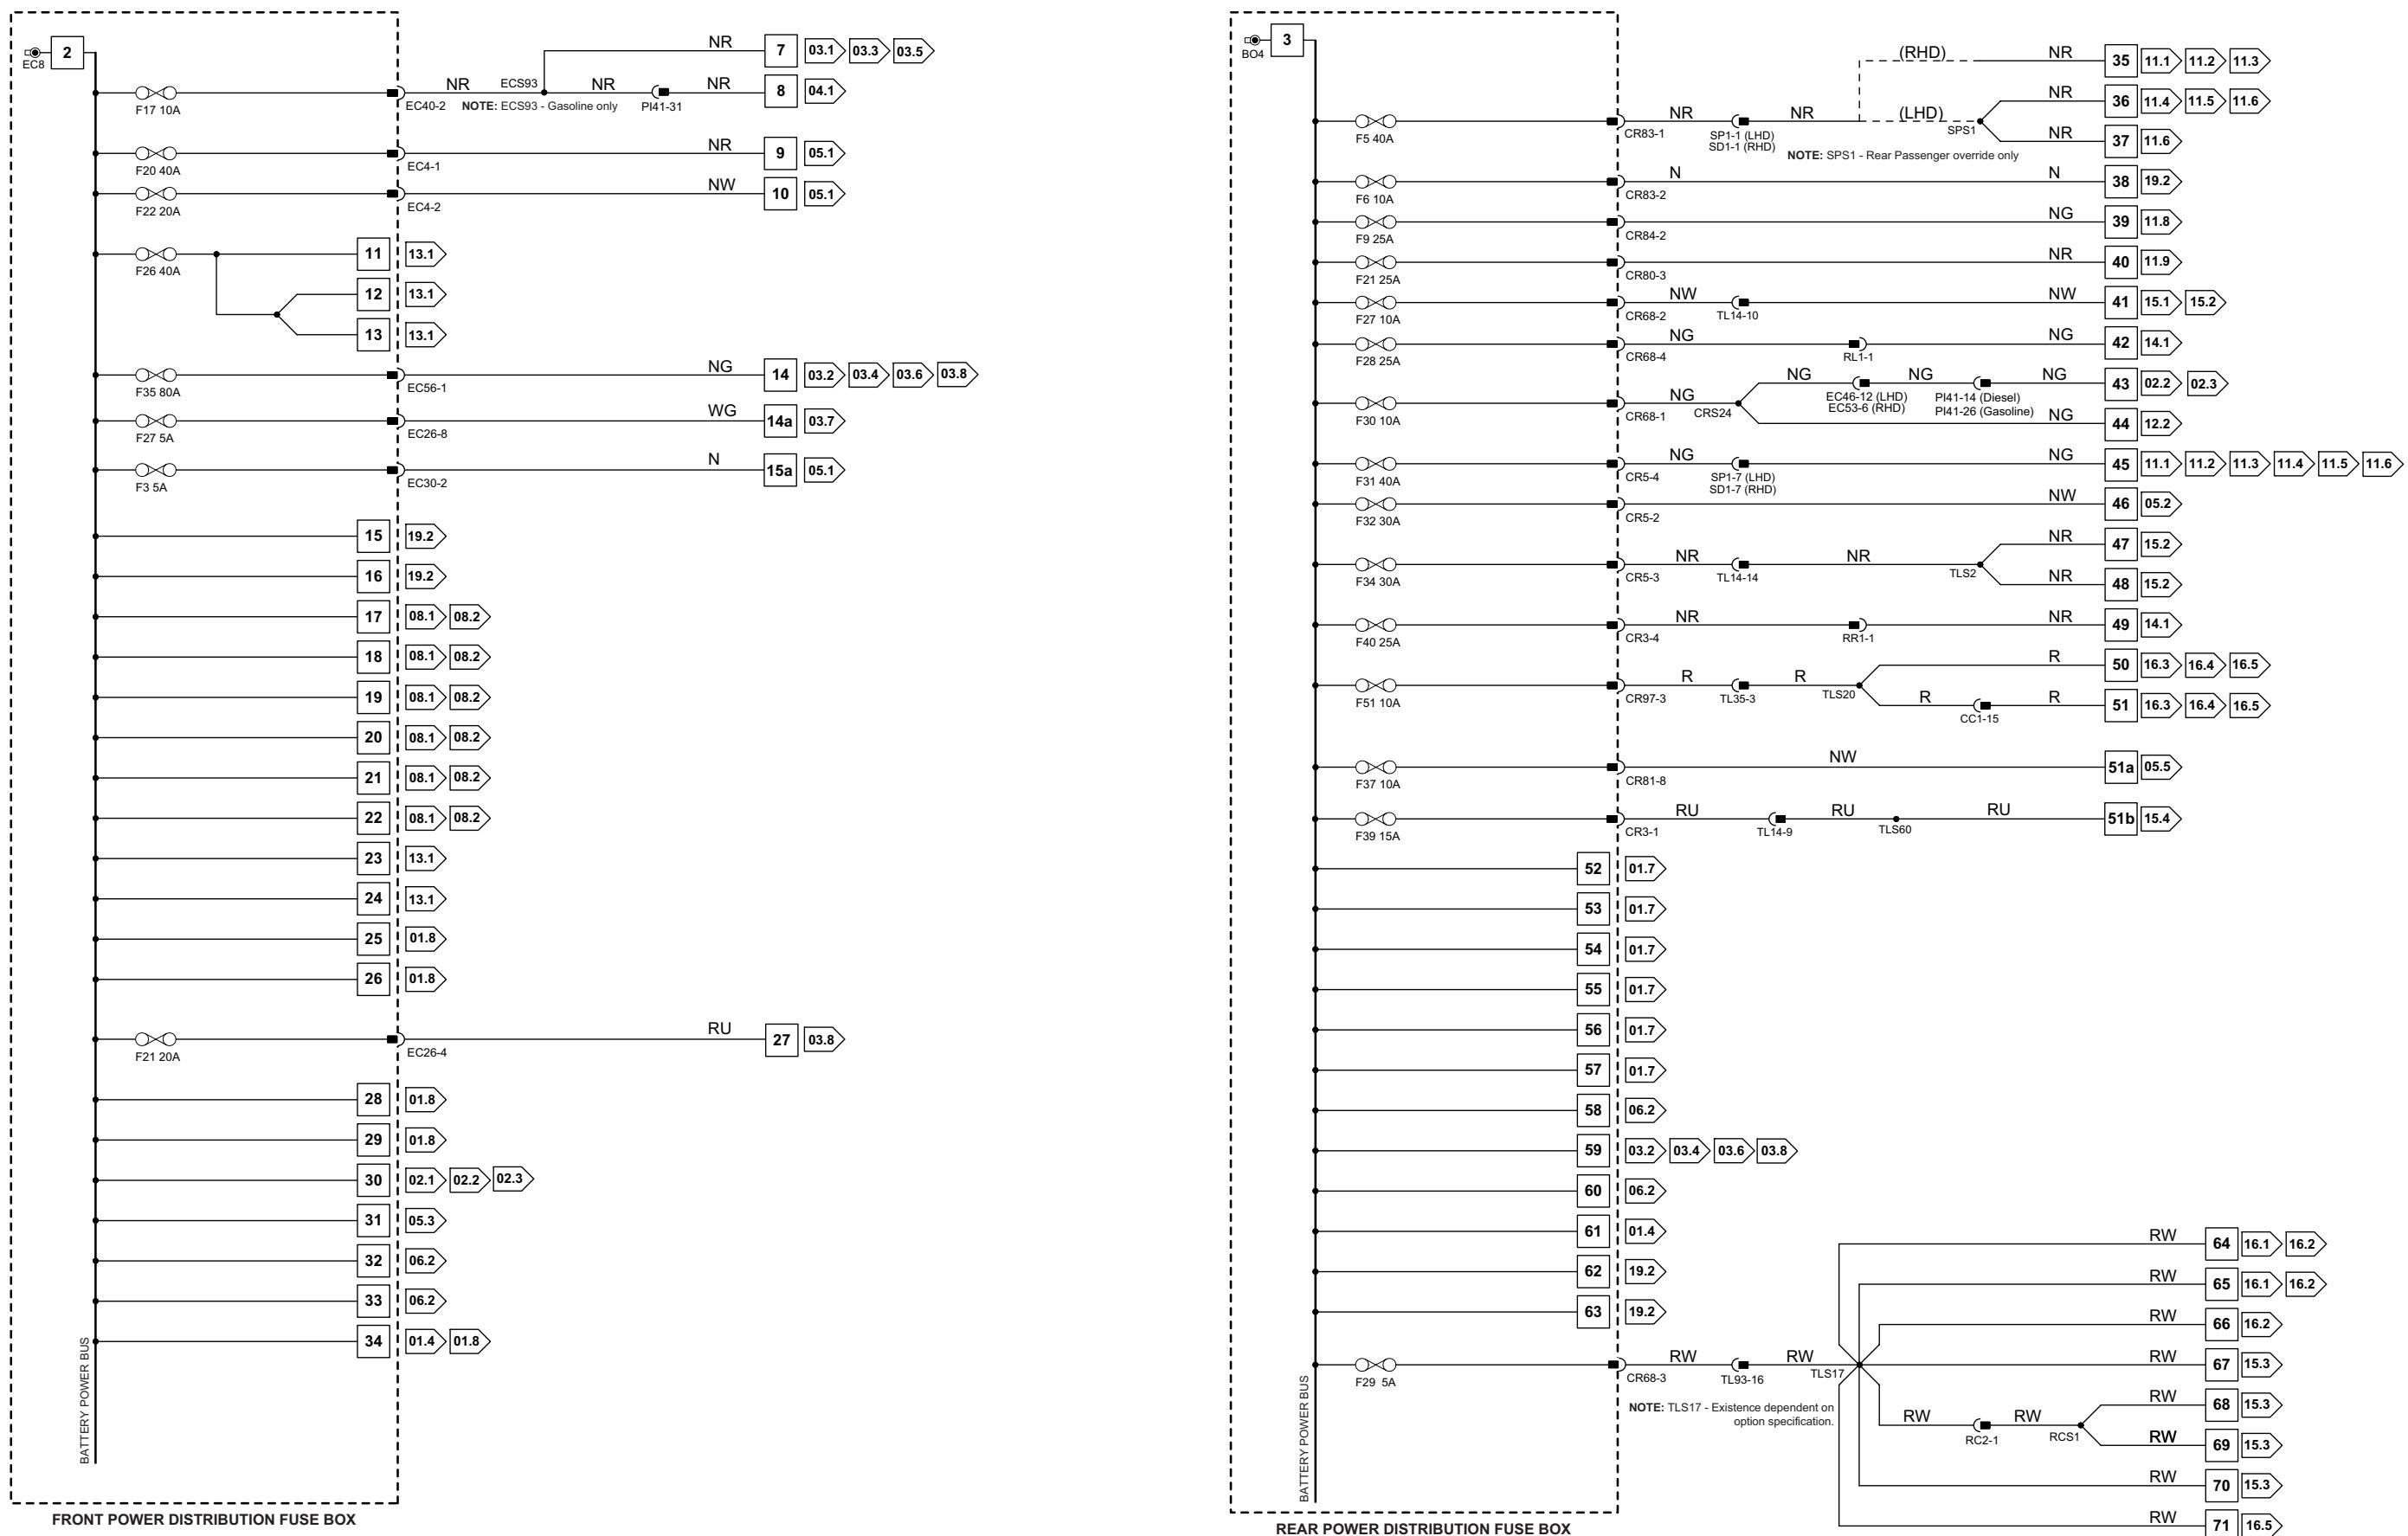

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	+ Sensor/Signal Supply V	A ACP	S SCP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	- Sensor/Signal Ground	C CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

**Fig. 01.3**


**COMPONENTS**

<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
PASSENGER (PRIMARY) JUNCTION FUSE BOX	CR6 CR47 CR48 CR49 CR56 EC7 EC55	10-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 10-WAY / BLACK 10-WAY / BLACK 15-WAY / BLACK 11-WAY / BLACK	CABIN / RH 'A' POST

**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
DD1	22-WAY / BLACK / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP58	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL31	14-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

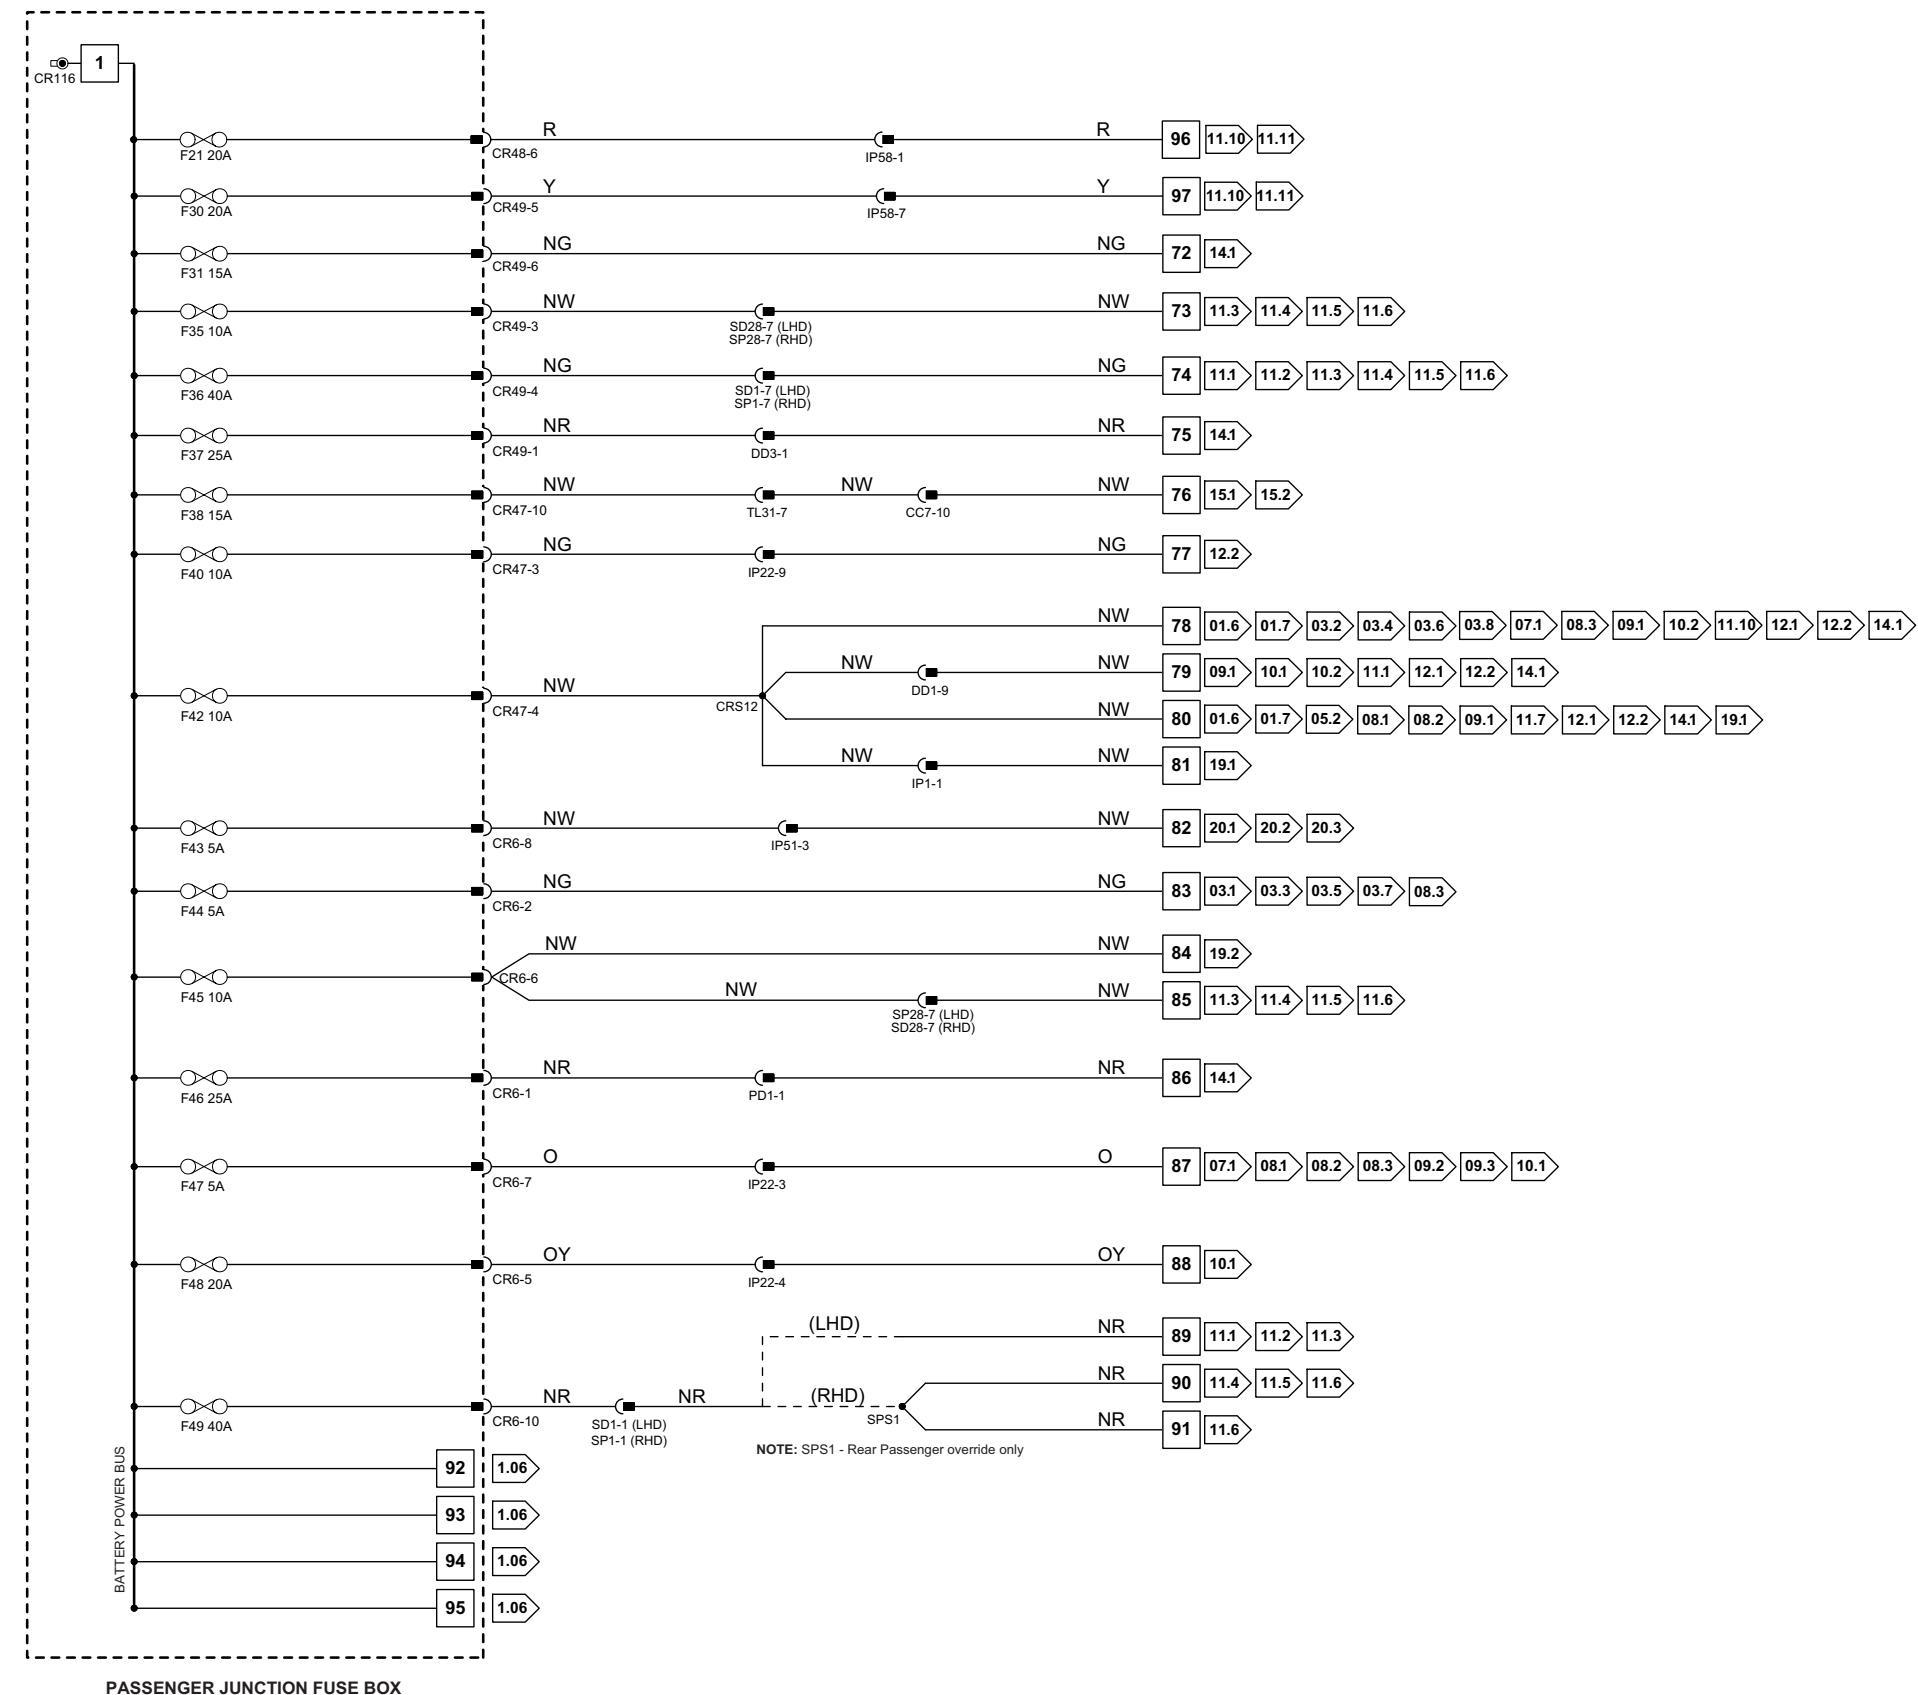

**Fig. 01.4**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN
PASSENGER (PRIMARY) JUNCTION FUSE BOX	CR6 CR47 CR48 CR49 CR56 EC7 EC55	10-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 10-WAY / BLACK 10-WAY / BLACK 15-WAY / BLACK 11-WAY / BLACK	CABIN / RH 'A' POST
REAR IGNITION RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R2
REAR POWER DISTRIBUTION FUSE BOX	CR3 CR5 CR68 CR80 CR81 CR82 CR83 CR84 CR97 CR98	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	TRUNK / RH REAR
SLAVE IGNITION RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R9


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP58	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP66	14-WAY / GREY / INSTRUMENT PANEL HARNESS TO REAR AIR CONDITIONING HARNESS	CABIN / BELOW CENTER CONSOLE
RC2	8-WAY / BLACK / TELEMATICS HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

**GROUNDS**

Ground	Location
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

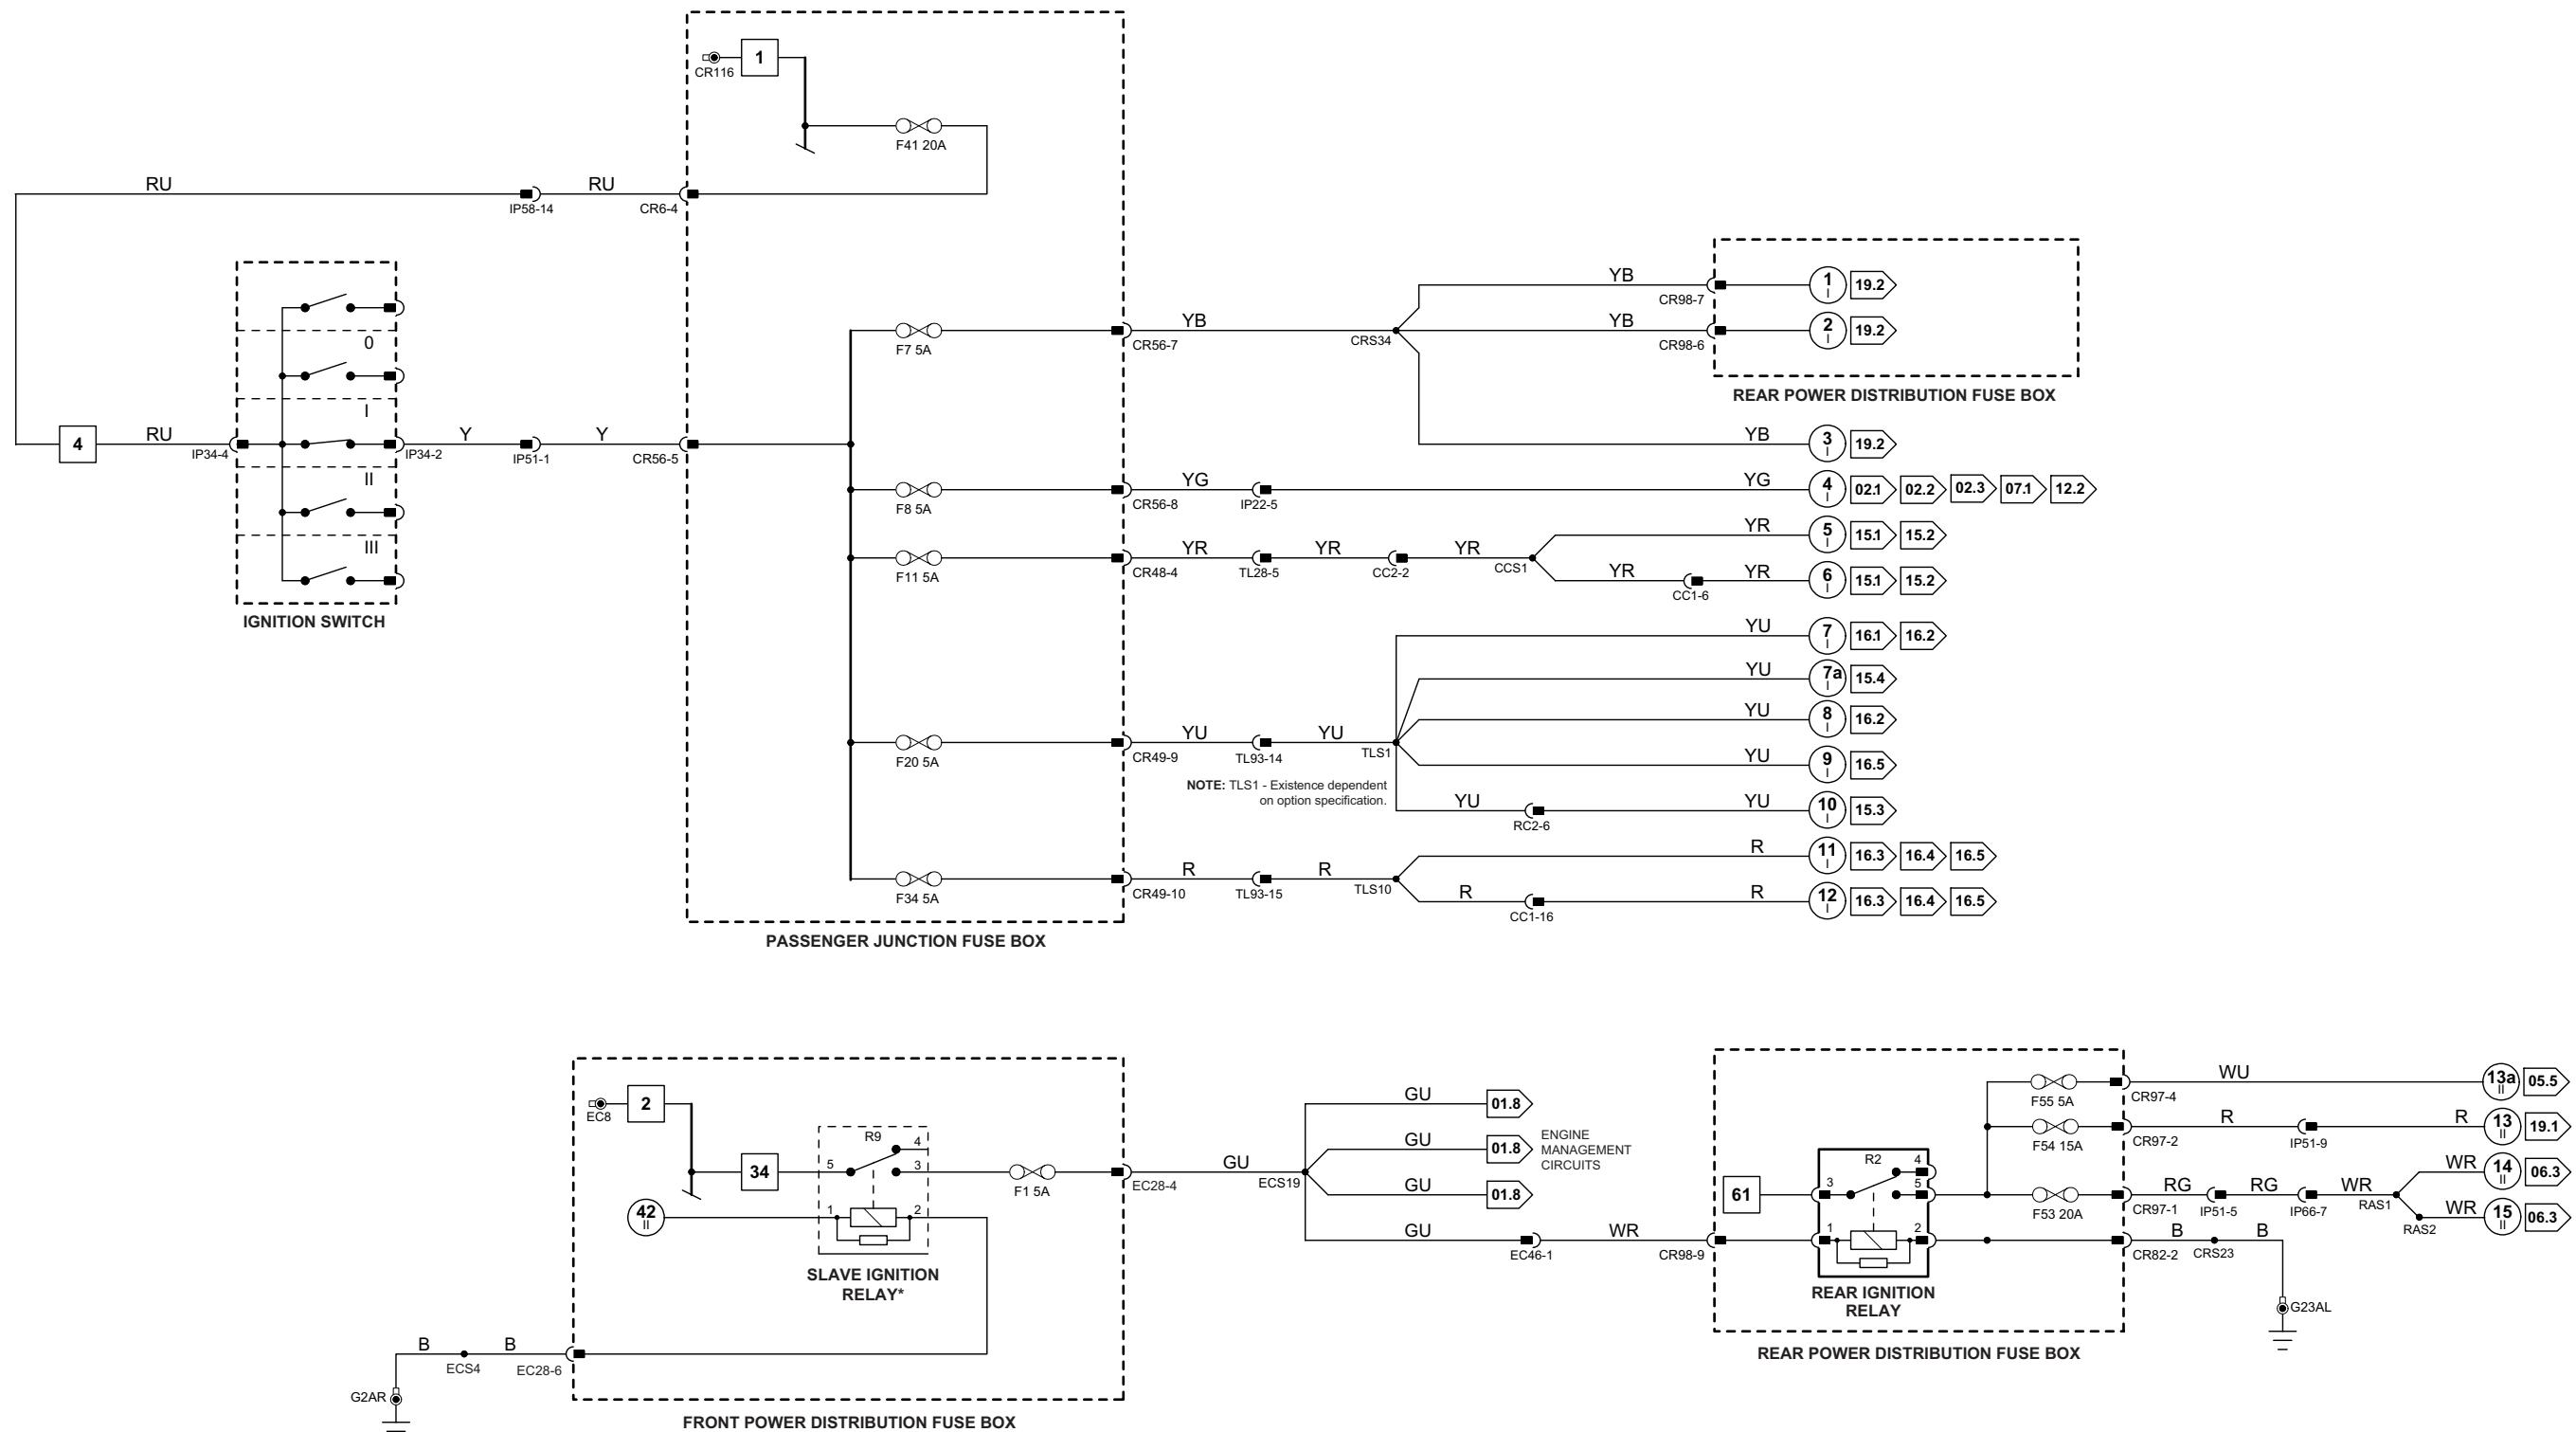

**\*NOTE:** Refer to Fig. 01.8 for complete Slave Ignition Relay circuit detail.

**Fig. 01.5**


**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN
INERTIA SWITCH	CR2	3-WAY / GREY	LH 'A' POST
PASSENGER (PRIMARY) JUNCTION FUSE BOX	CR6 CR7 CR47 CR48 CR49 CR56 EC7 EC55 CR3	10-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 10-WAY / BLACK 10-WAY / BLACK 15-WAY / BLACK 11-WAY / BLACK 4-WAY / BLACK	CABIN / RH 'A' POST
REAR POWER DISTRIBUTION FUSE BOX	CR5 CR68 CR80 CR81 CR82 CR83 CR84 CR97 CR98	4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	TRUNK / RH REAR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
CR120	8-WAY / BLACK / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL / LH SIDE
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
GB1	16-WAY / GREY / ENGINE HARNESS TO TRANSMISSION HARNESS	ADJACENT TO TRANSMISSION BELL HOUSING
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP4	14-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP56	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS CABIN / UPPER	CABIN / RH 'A' POST
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL14	14-WAY / GREY / CABIN HARNESS TO TELEMATICS HARNESS	TRUNK / LH SIDE / BEHIND CD AUTOCHANGER
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE
TT5	DATA NOT AVAILABLE	
TT10	2-WAY / GREY / TRAILER TOWING HARNESS	TRUNK / SPARE WHEEL WELL

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

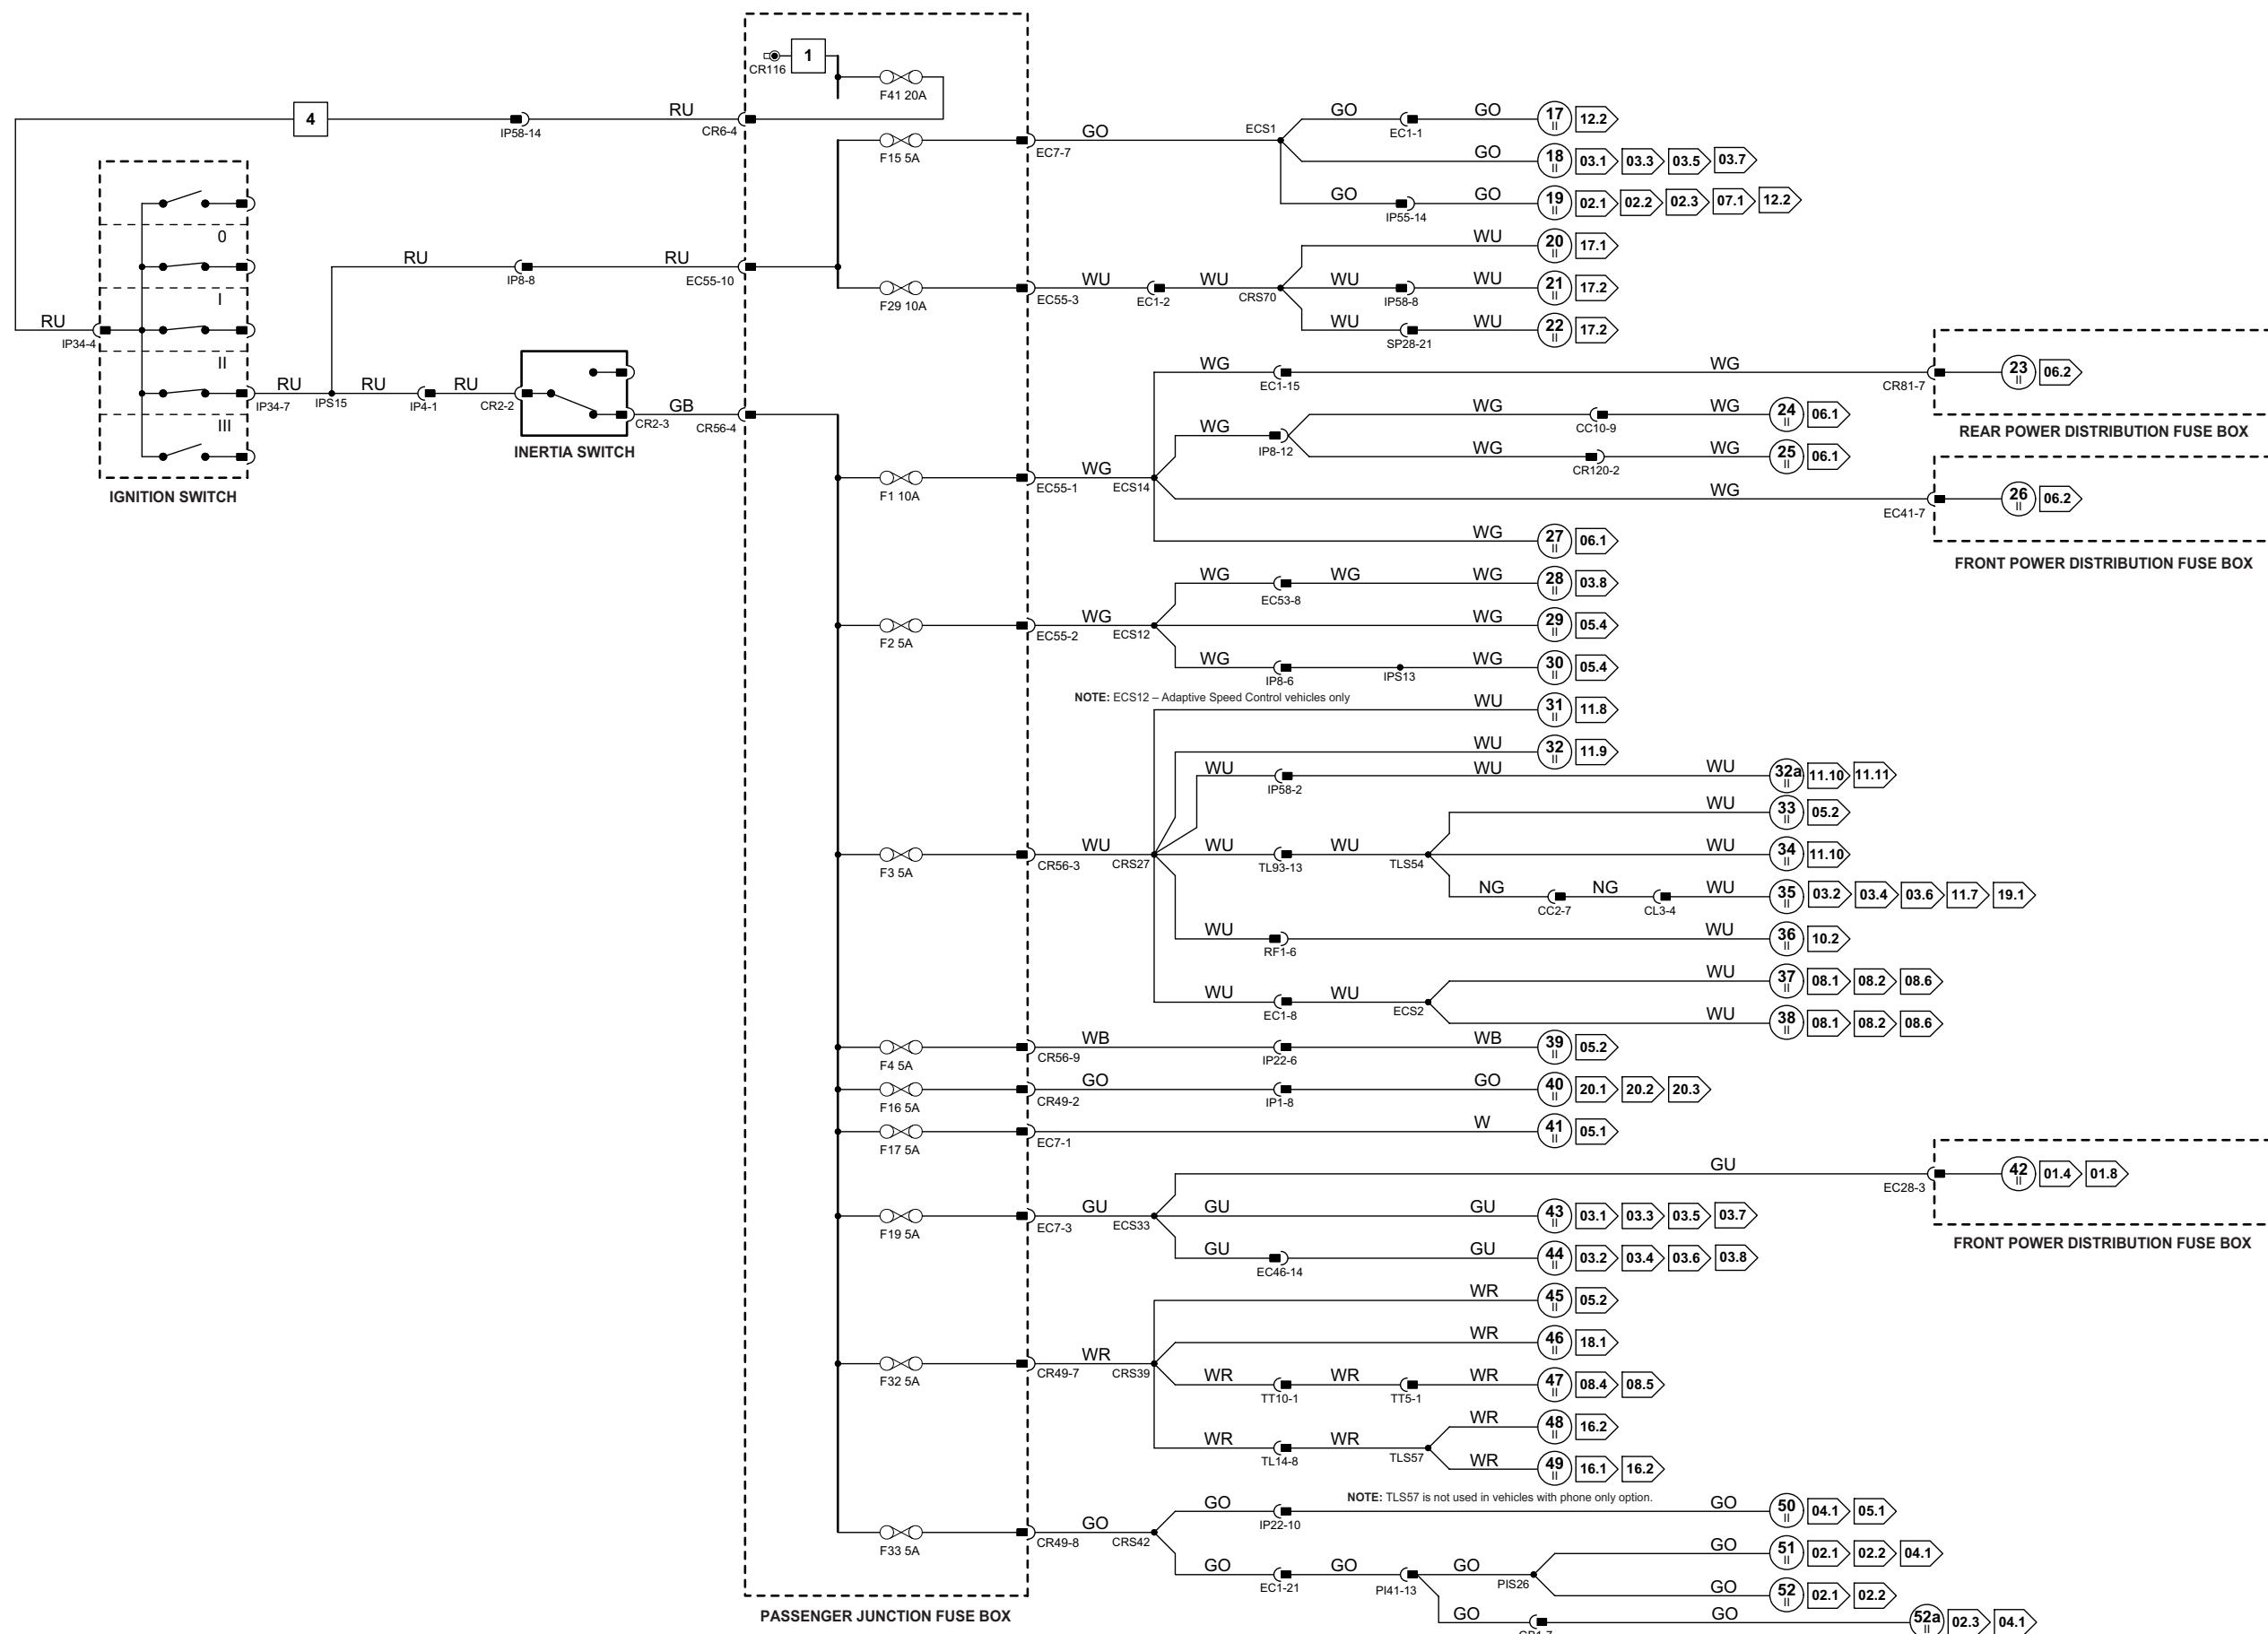

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	+	Sensor/Signal Supply V	A ACP	S SCP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	-	Sensor/Signal Ground	C CAN	D Serial and Encoded Data	VIN RANGE: All
										DATE OF ISSUE: May 2007

**Fig. 01.6**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT ELECTRONIC MODULE	CR1 CR9 CR10 CR85 EC36	26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK	CABIN / LH 'A' POST
PASSENGER (PRIMARY) JUNCTION FUSE BOX	CR6 CR47 CR48 CR49 CR56 EC7 EC55	10-WAY / BLACK 11-WAY / BLACK 11-WAY / BLACK 10-WAY / BLACK 10-WAY / BLACK 15-WAY / BLACK 11-WAY / BLACK	CABIN / RH 'A' POST
REAR ELECTRONIC MODULE	CR4 CR11 CR12 CR13 CR71 CR73	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK 4-WAY / BLACK	TRUNK / RH REAR
SWITCHED SYSTEM POWER RELAY 1	—	—	PASSENGER JUNCTION FUSE BOX - R1
SWITCHED SYSTEM POWER RELAY 2	—	—	PASSENGER JUNCTION FUSE BOX - R1

**HARNESS IN-LINE CONNECTORS**


Connector	Connector Description / Location	Location
BF1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO FRONT BUMPER HARNESS	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
DD1	22-WAY / BLACK / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP58	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP66	14-WAY / GREY / INSTRUMENT PANEL HARNESS TO REAR AIR CONDITIONING HARNESS	CABIN / BELOW CENTER CONSOLE
IP69	14-WAY / GREEEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PD16	22-WAY / BLACK / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

**SCP NOTE:** The Switched System Power Relays are activated by the FEM or the REM whenever messages are present on the SCP Network. After the ignition is switched off, the relays remain activated until all SCP messages are removed.

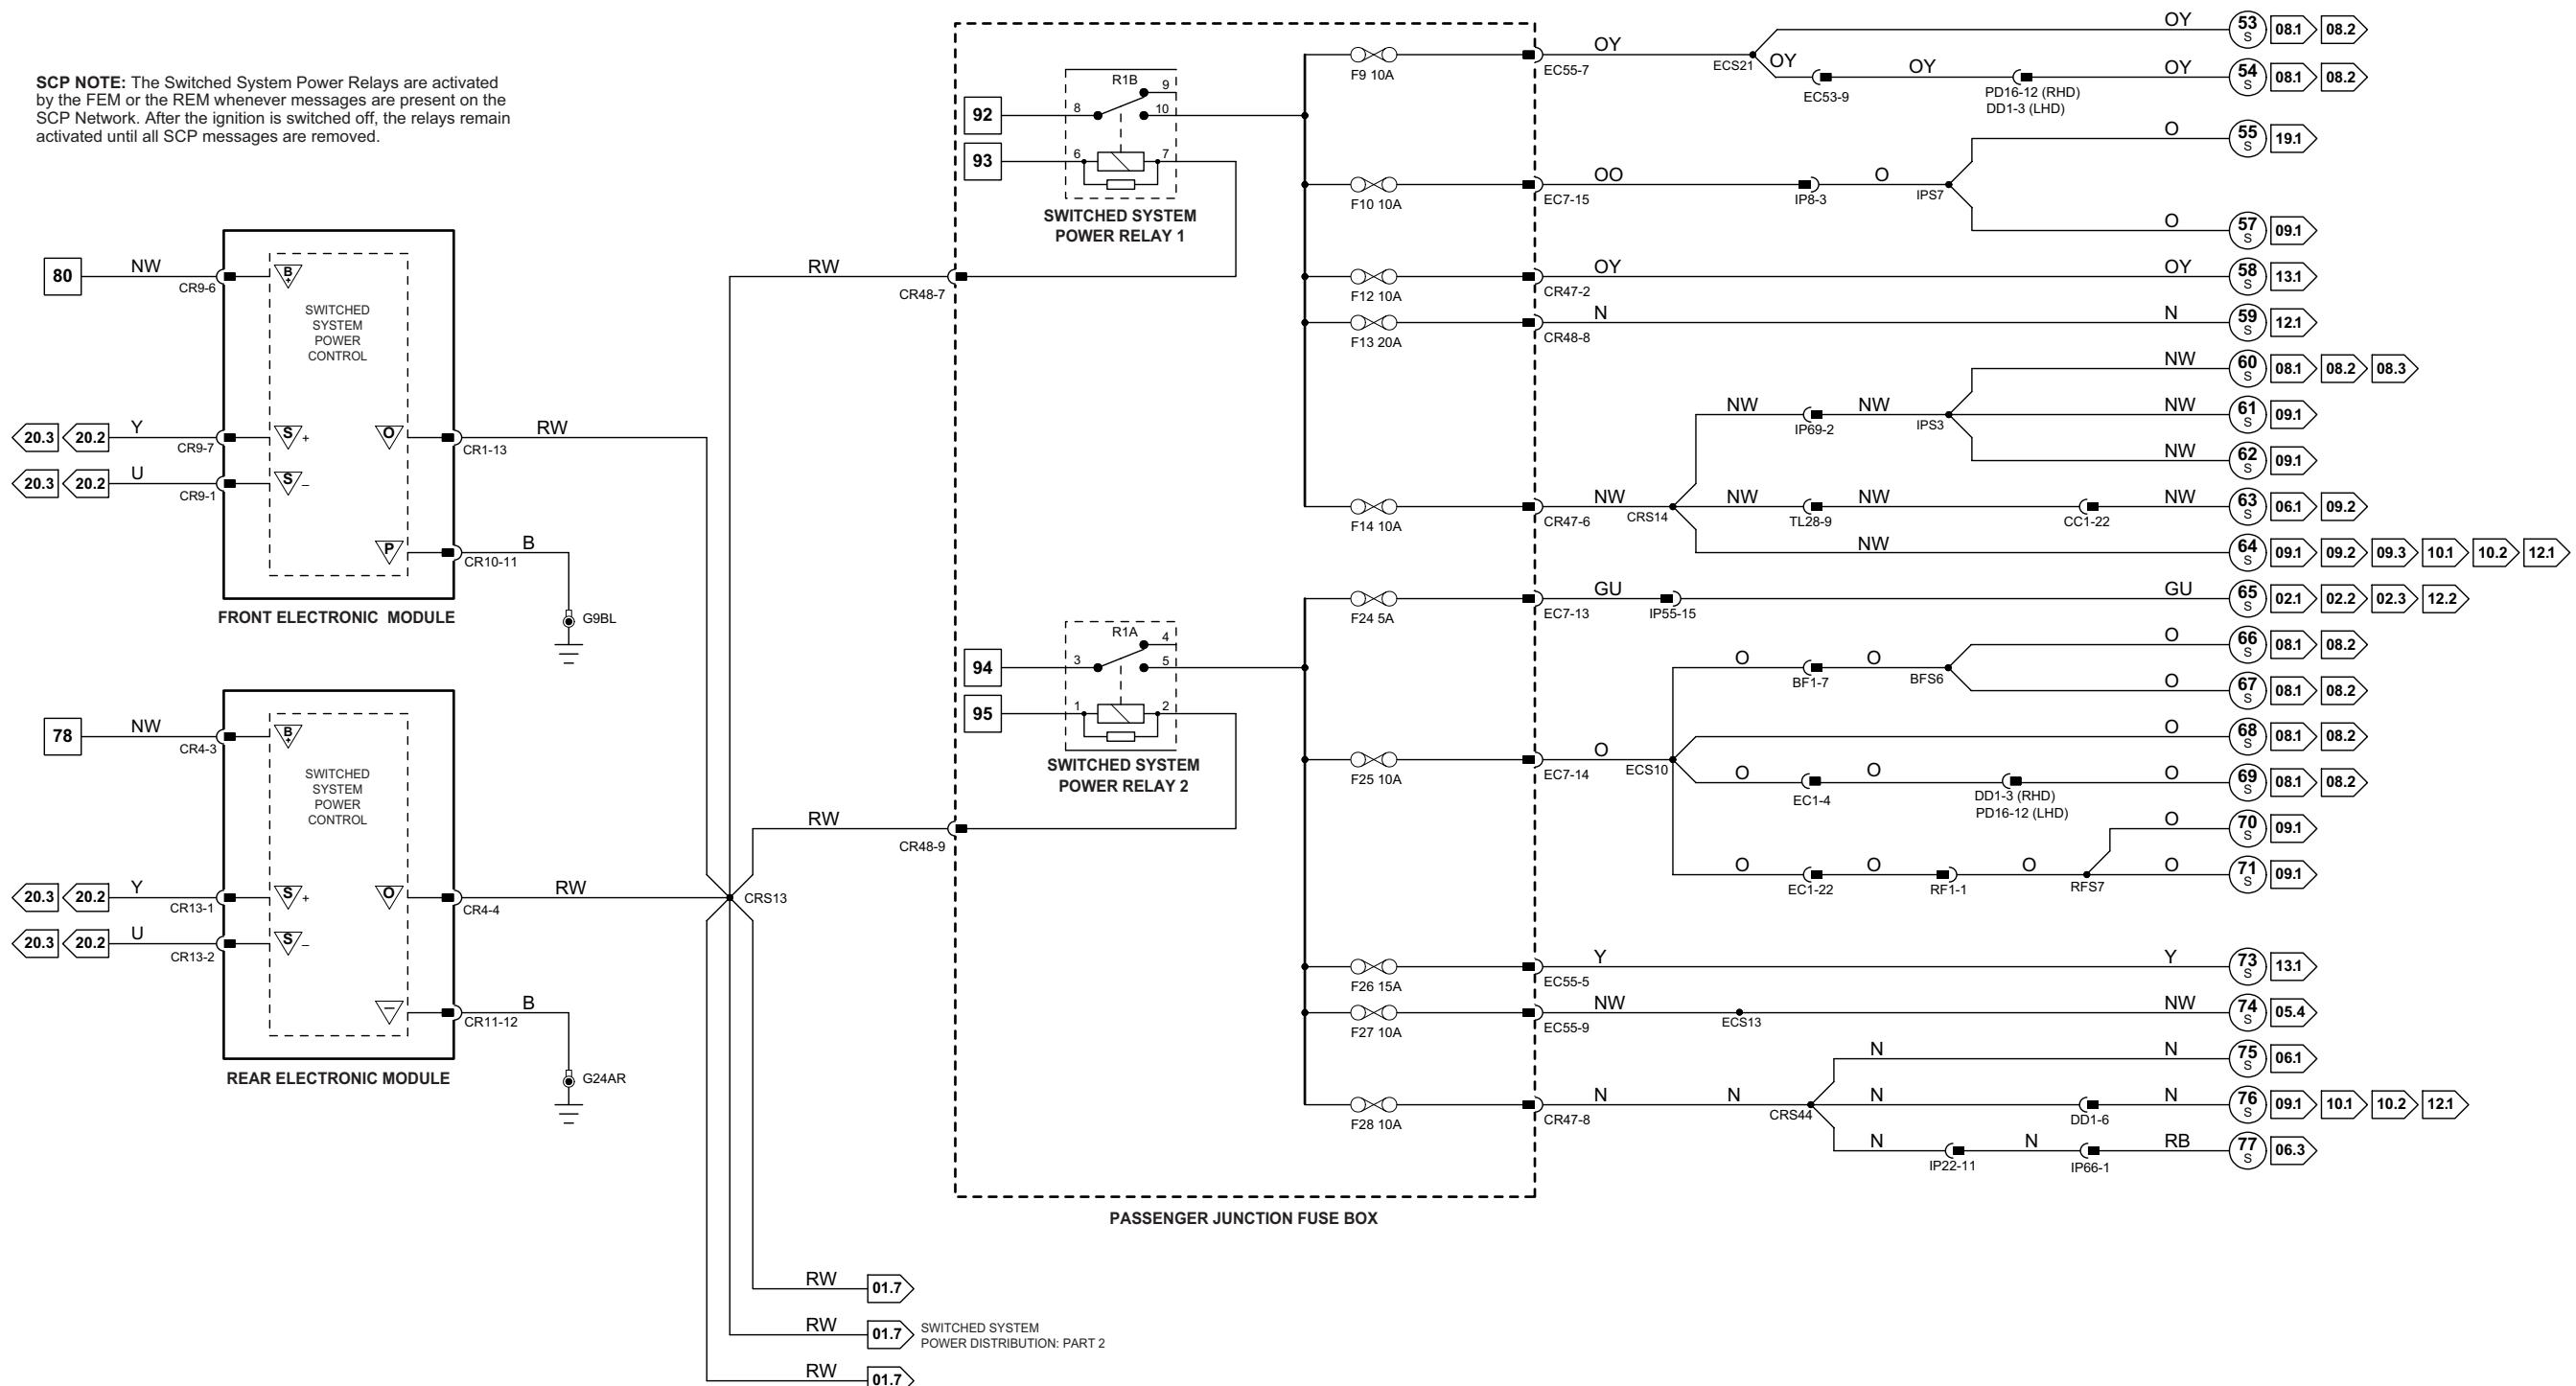

**Fig. 01.7**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT ELECTRONIC MODULE	CR1 CR9 CR10 CR85 EC36	26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK	CABIN / LH 'A' POST
REAR ELECTRONIC MODULE	CR4 CR11 CR12 CR13 CR71 CR73	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK 4-WAY / BLACK	TRUNK / RH REAR
REAR POWER DISTRIBUTION FUSE BOX	CR3 CR5 CR68 CR80 CR81 CR82 CR83 CR84 CR97 CR98	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	TRUNK / RH REAR
SWITCHED SYSTEM POWER RELAY 3	—	—	PASSENGER JUNCTION FUSE BOX – R7A
SWITCHED SYSTEM POWER RELAY 4	—	—	PASSENGER JUNCTION FUSE BOX – R7B
SWITCHED SYSTEM POWER RELAY 5	—	—	PASSENGER JUNCTION FUSE BOX – R8B

**HARNESS IN-LINE CONNECTORS**


Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BR1	10-WAY / GREY / CABIN HARNESS TO REAR BUMPER HARNESS	TRUNK / RH SIDE / ADJACENT TO REAR ELECTRONIC MODULE
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
LS1	22-WAY / BLACK / CABIN HARNESS TO LH REAR SEAT HARNESS	CABIN / BELOW LH REAR SEAT
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
RS1	22-WAY / BLACK / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

**SCP NOTE:** The Switched System Power Relays are activated by the FEM or the REM whenever messages are present on the SCP Network. After the ignition is switched off, the relays remain activated until all SCP messages are removed.

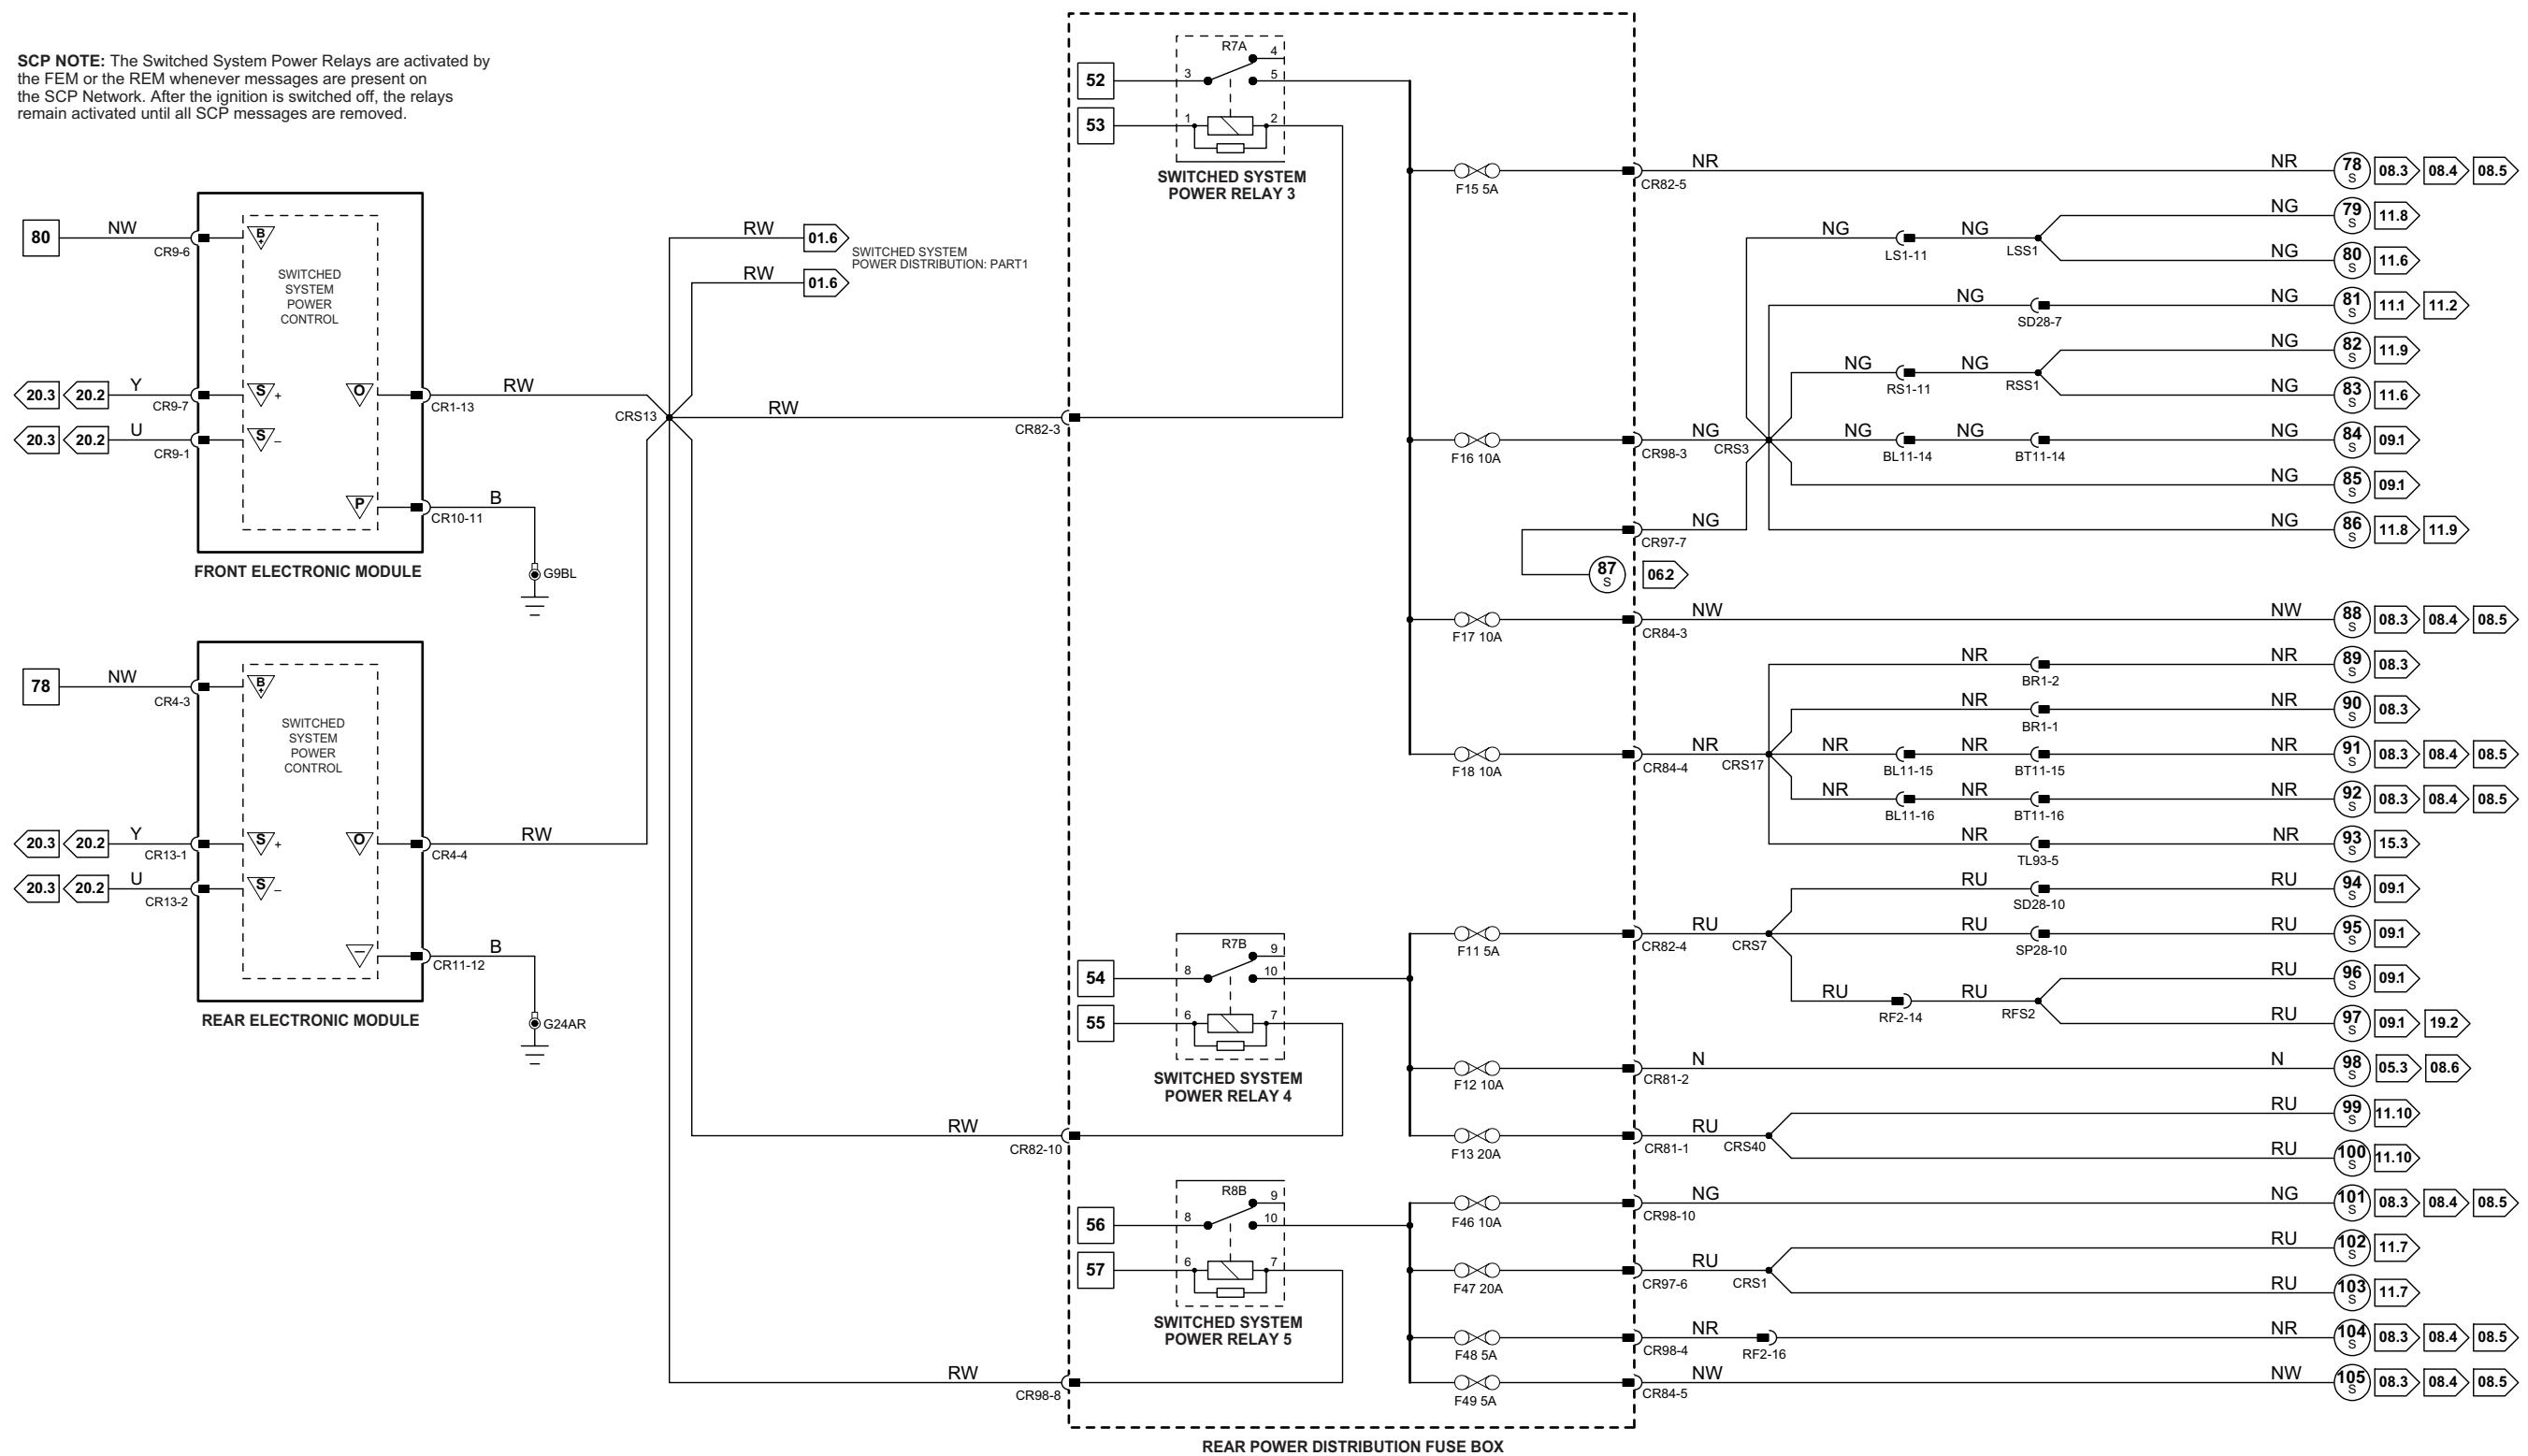

**Engine Control Module**

Pin	Description and Characteristic
O EC300-16	EMS CONTROL RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND

**Powertrain Control Module**

Pin	Description and Characteristic
O EC66-J3	EMS CONTROL RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND

**Fig. 01.8**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
EMS CONTROL RELAY (Diesel)	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R5
EMS CONTROL RELAY (Gasoline)	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R11
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	ENGINE COMPARTMENT BULKHEAD / PASSENGER SIDE
FRONT POWER DISTRIBUTION FUSE BOX	EC300	96-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
	EC4	4-WAY / BLACK	
	EC5	4-WAY / BLACK	
	EC19	8-WAY / BLACK	
	EC22	4-WAY / BLACK	
	EC26	8-WAY / BLACK	
	EC28	12-WAY / BLACK	
	EC32	4-WAY / BLACK	
	EC35	8-WAY / BLACK	
	EC40	8-WAY / BLACK	
	EC41	10-WAY / BLACK	
HO2S RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R12
IGNITION COIL RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R7
INTERCOOLER RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R12B
POWERTRAIN CONTROL MODULE	C98	48-WAY / BROWN	ENGINE COMPARTMENT BULKHEAD / PASSENGER SIDE
	C99	48-WAY / GREY	
	EC66	48-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR3	4-WAY / BLACK	TRUNK / RH REAR
	CR5	4-WAY / BLACK	
	CR68	8-WAY / BLACK	
	CR80	4-WAY / BLACK	
	CR81	8-WAY / BLACK	
	CR82	12-WAY / BLACK	
	CR83	4-WAY / BLACK	
	CR84	8-WAY / BLACK	
	CR97	8-WAY / BLACK	
	CR98	10-WAY / BLACK	
SLAVE IGNITION RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R9

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CP1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INTERCOOLER COOLANT PUMP HARNESS	ENGINE COMPARTMENT / ADJACENT TO RADIATOR / RH SIDE
EC21	2-WAY / BLACK / ENGINE HARNESS TO COOLING FAN MODULE	ENGINE COMPARTMENT / ADJACENT TO RADIATOR / RH SIDE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH A' POST
IL10	12-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	REAR OF ENGINE
IS5	6-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	ENGINE COMPARTMENT / ENGINE / LH REAR
IS6	6-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	ENGINE COMPARTMENT / ENGINE / RH REAR
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

**GROUNDS**

Ground	Location
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

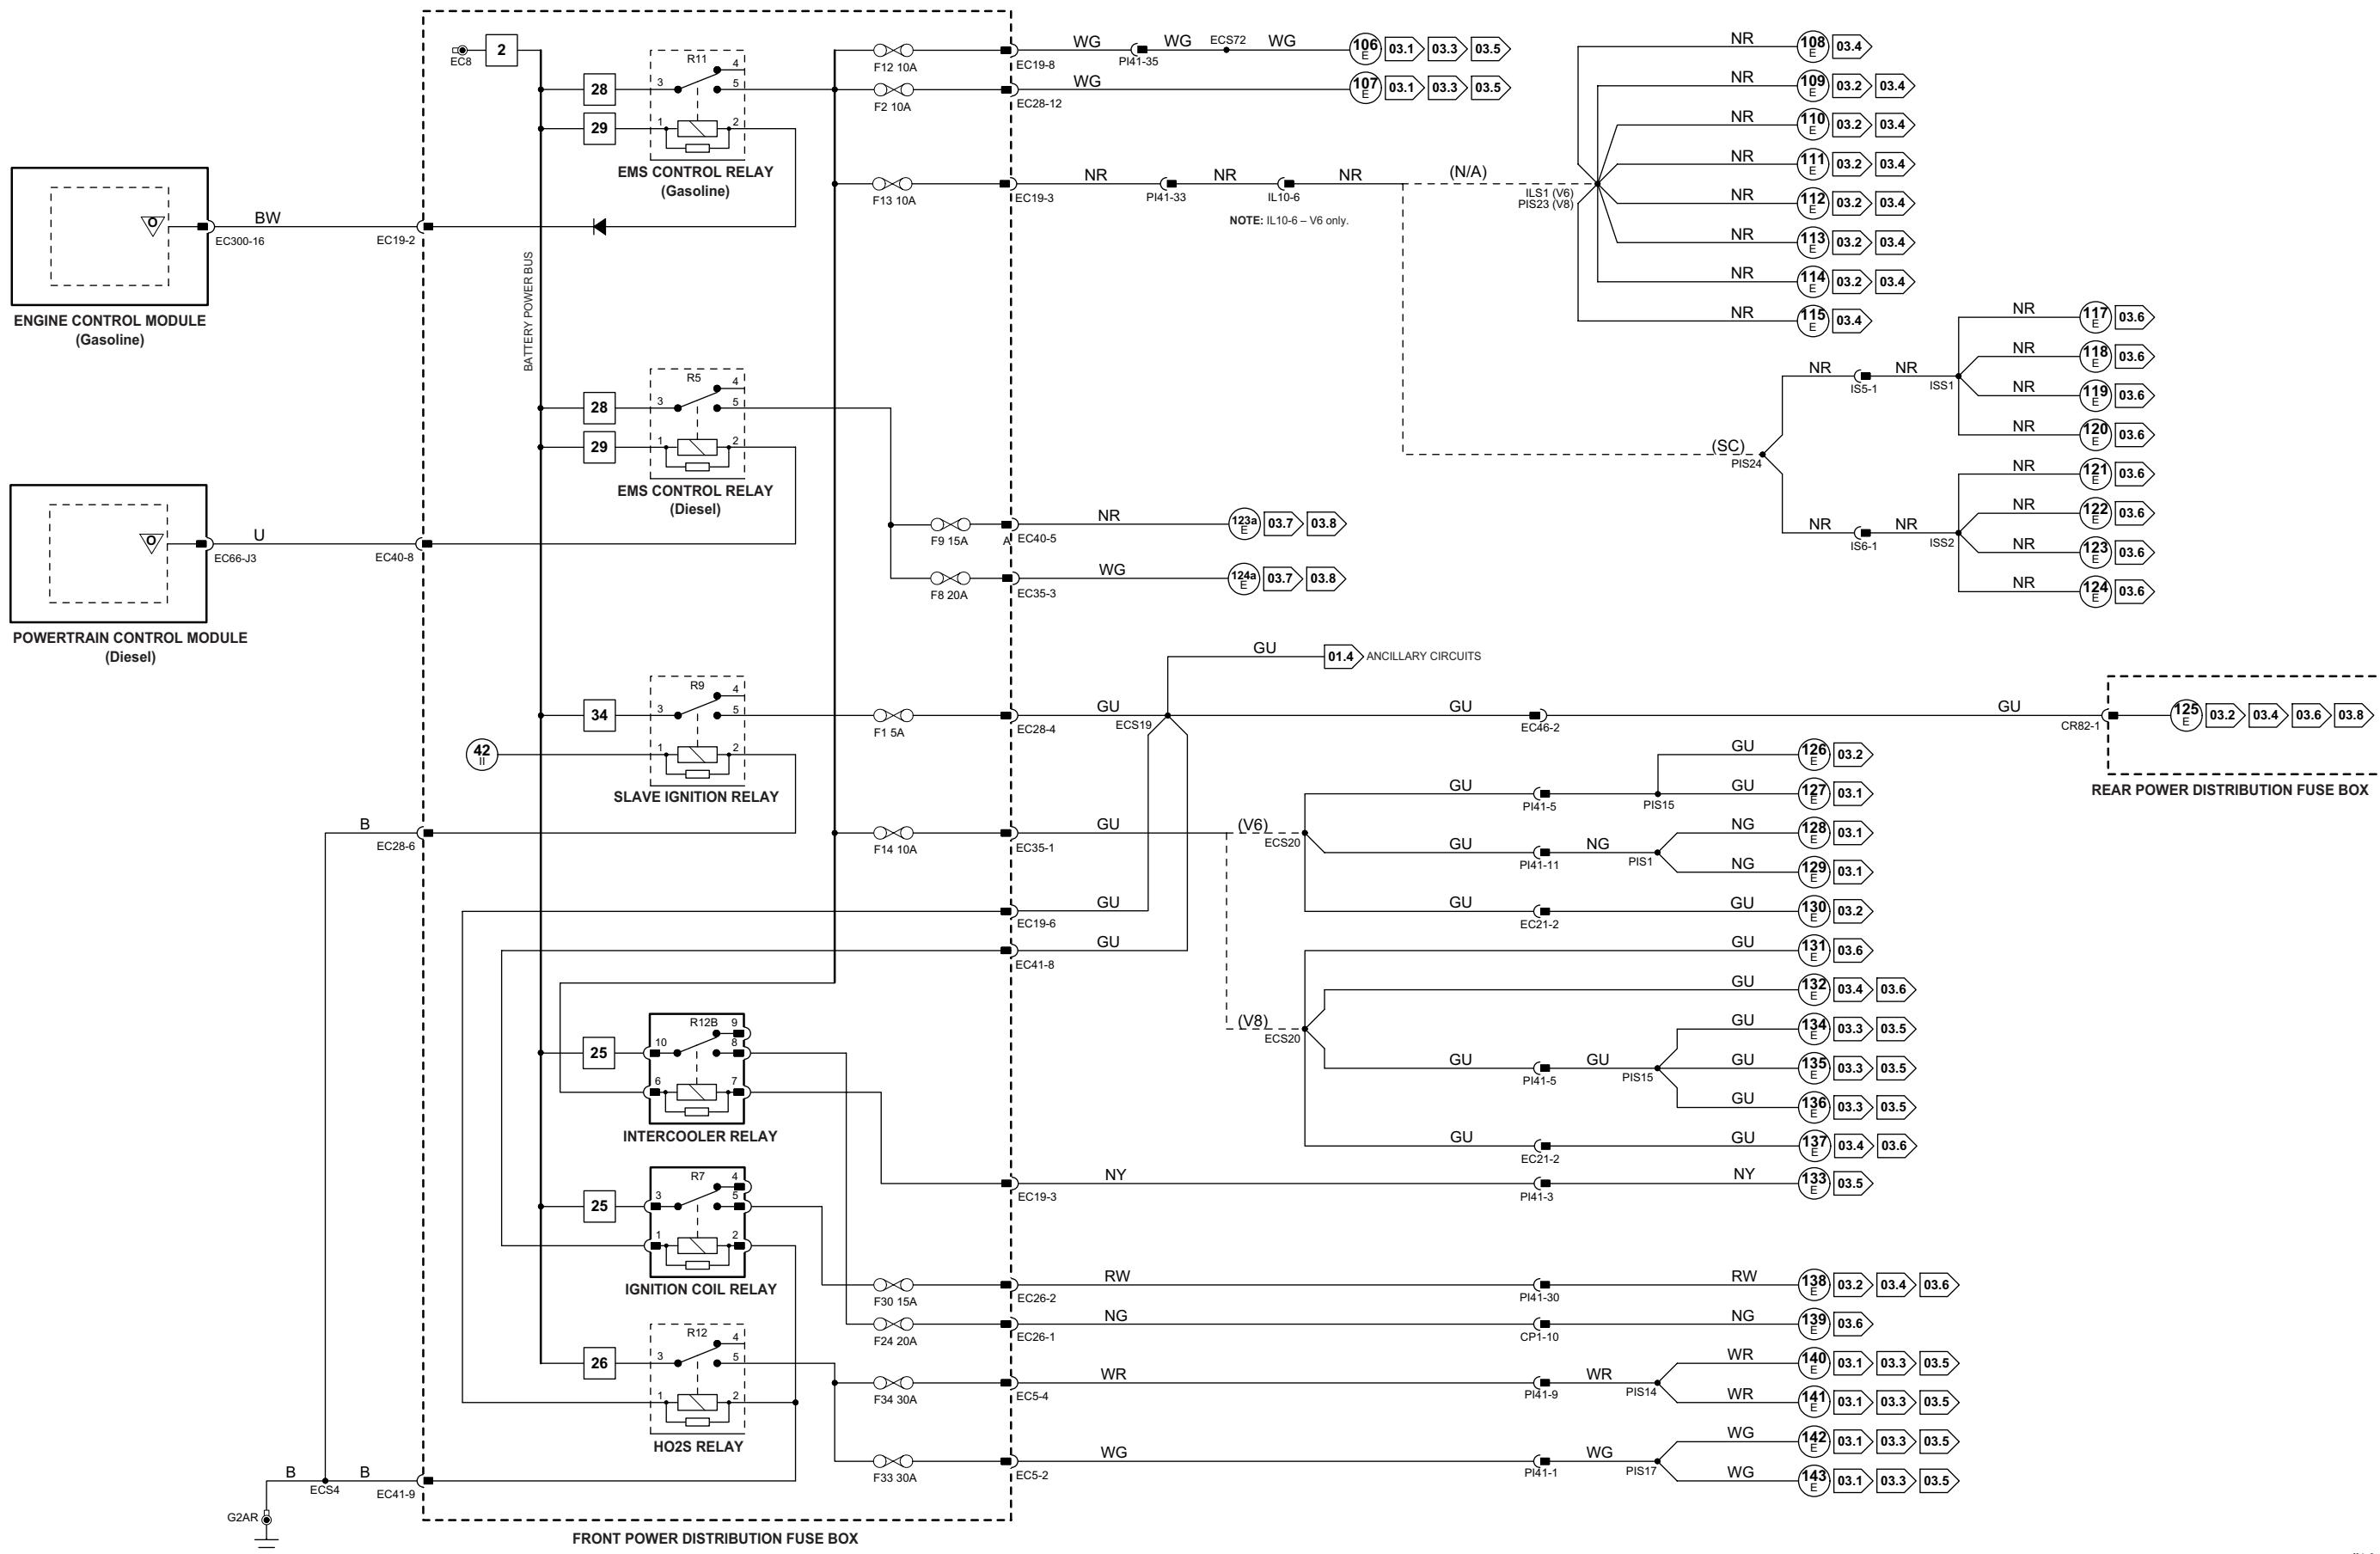

**Fig. 02.1**

**Engine Control Module**

Pin	Description and Characteristic
I	EC300-15 PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED
I	EC300-17 ENGINE CRANK: B+
C	EC300-45 CAN -
O	EC300-51 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
C	EC300-58 CAN +
I	PI300-3 GENERATOR FIELD RETURN SIGNAL: VARIABLE VOLTAGE BY GENERATOR OPERATING CONDITION
I	PI300-16 GENERATOR FAULT; CHARGE WARNING
O	PI300-96 GENERATOR CONTROL: VARIABLE VOLTAGE

**Instrument Cluster**

Pin	Description and Characteristic
I	IP5-2 KEY-IN AUDIBLE WARNING: B+ WHEN KEY IN
B+	IP5-3 IGNITION SWITCHED POWER SUPPLY (II): B+
B+	IP5-4 IGNITION SWITCHED POWER SUPPLY (I): B+
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
I	IP6-4 PATS GROUND: GROUND
D	IP6-5 PATS TRANSCIEVER: ENCODED COMMUNICATION
D	IP6-6 PATS TRANSCIEVER: ENCODED COMMUNICATION
C	IP6-8 CAN +
C	IP6-9 CAN -

**Transmission Control Module**

Pin	Description and Characteristic
B+	GB2-9 IGNITION SWITCHED POWER SUPPLY (II): B+
O	GB2-10 PARK / NEUTRAL SIGNAL: GROUND WHEN ACTIVATED
PG	GB2-13 POWER GROUND: GROUND
PG	GB2-16 POWER GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	TRUNK / RH SIDE
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	ENGINE COMPARTMENT BULKHEAD / PASSENGER SIDE
FRONT POWER DISTRIBUTION FUSE BOX	PI300	96-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
	EC4	4-WAY / BLACK	
	EC5	4-WAY / BLACK	
	EC19	8-WAY / BLACK	
	EC22	4-WAY / BLACK	
	EC26	8-WAY / BLACK	
	EC28	12-WAY / BLACK	
	EC32	4-WAY / BLACK	
	EC35	8-WAY / BLACK	
	EC40	8-WAY / BLACK	
	EC41	10-WAY / BLACK	
GENERATOR	BO10		ENGINE, RH SIDE, FRONT
IGNITION SWITCH	PI47	4-WAY / BLACK	
INSTRUMENT CLUSTER	IP34	7-WAY / BLACK	STEERING COLUMN
	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
MEGAFUSE	—	—	TRUNK / RH SIDE
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	IP18	4-WAY / GREEN	IGNITION SWITCH
STARTER MOTOR	—	—	ENGINE BLOCK / RH SIDE
STARTER RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX - R10
TRANSMISSION CONTROL MODULE	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC2	2-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER

**GROUNDS**

Ground	Location
BC1	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC3	TRUNK / RH SIDE / ADJACENT TO BATTERY
G4	ENGINE COMPARTMENT / ENGINE BLOCK GROUND
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

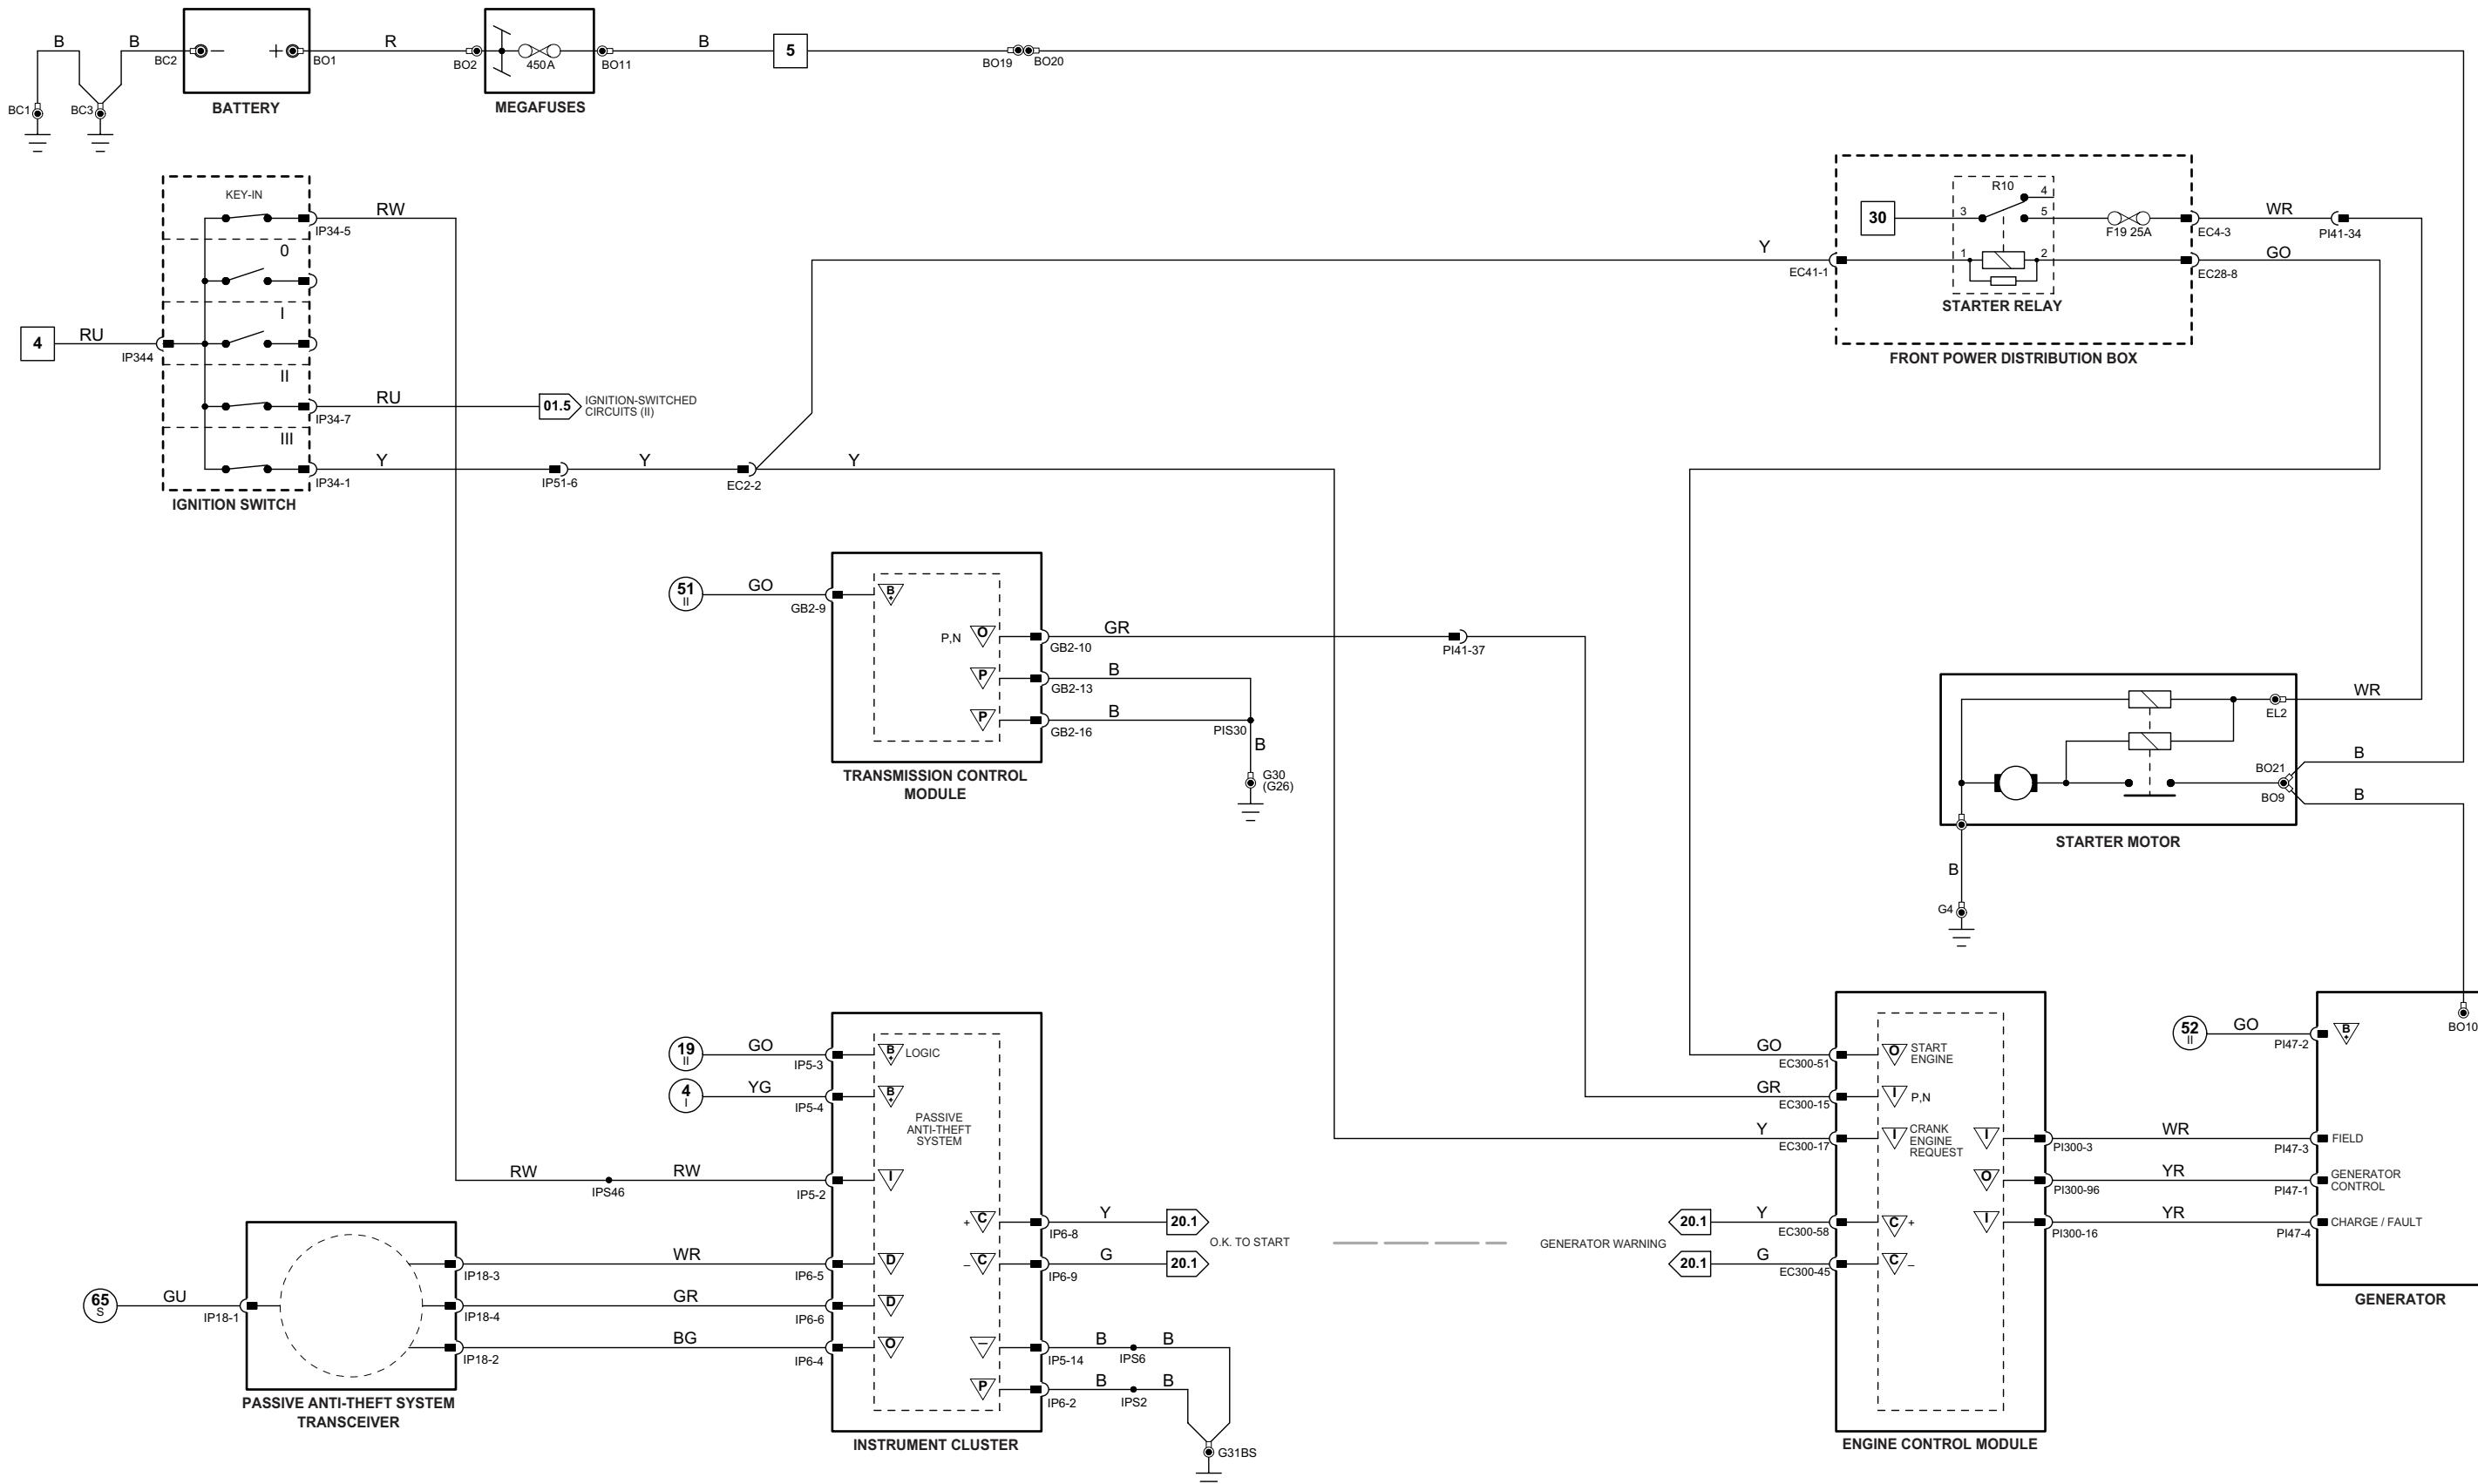

**Fig. 02.2**

**Engine Control Module**

Pin	Description and Characteristic
I	EC300-15 PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED
I	EC300-17 ENGINE CRANK: B+
C	EC300-45 CAN -
O	EC300-51 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
C	EC300-58 CAN +
I	PI300-16 GENERATOR FAULT; CHARGE WARNING

**Instrument Cluster**

Pin	Description and Characteristic
I	IP5-2 KEY-IN AUDIBLE WARNING: B+ WHEN KEY IN
B+	IP5-3 IGNITION SWITCHED POWER SUPPLY (II): B+
B+	IP5-4 IGNITION SWITCHED POWER SUPPLY (I): B+
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
I	IP6-4 PATS GROUND: GROUND
D	IP6-5 PATS TRANSCIEVER: ENCODED COMMUNICATION
D	IP6-6 PATS TRANSCIEVER: ENCODED COMMUNICATION
C	IP6-8 CAN +
C	IP6-9 CAN -

**Transmission Control Module**

Pin	Description and Characteristic
B+	GB2-9 IGNITION SWITCHED POWER SUPPLY (III): B+
O	GB2-10 PARK / NEUTRAL SIGNAL: GROUND WHEN ACTIVATED
PG	GB2-13 POWER GROUND: GROUND
PG	GB2-16 POWER GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	LUGGAGE COMPARTMENT
ENGINE CONTROL MODULE	EC300 PI300	58-WAY / BLACK 96-WAY / BLACK	ENGINE COMPARTMENT BULKHEAD / PASSENGER SIDE
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
GENERATOR	P148	4-WAY / BLACK	ENGINE, RH SIDE, FRONT
IGNITION SWITCH	ST7	EYELET	STEERING COLUMN COWLING
INSTRUMENT CLUSTER	FC18 IP5 IP6 IP7	7-WAY / BLACK 22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL
MEGAfuse	—	—	ENGINE COMPARTMENT, RH SIDE
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	IP18	4-WAY / GREEN	IGNITION SWITCH
STARTER MOTOR	—	—	ENGINE BLOCK, RH SIDE
STARTER RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX - R20
TRANSMISSION CONTROL MODULE	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE ASSEMBLY

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC2	2-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PI41	42-WAY / BLACK / ENGINE HARNESS TO VEHICLE HARNESSES	ENGINE COMPARTMENT, BULKHEAD, PASSENGER SIDE

**GROUNDS**

Ground	Location
BC1	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC3	TRUNK / RH SIDE / ADJACENT TO BATTERY
G4	ENGINE COMPARTMENT / ENGINE BLOCK GROUND
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

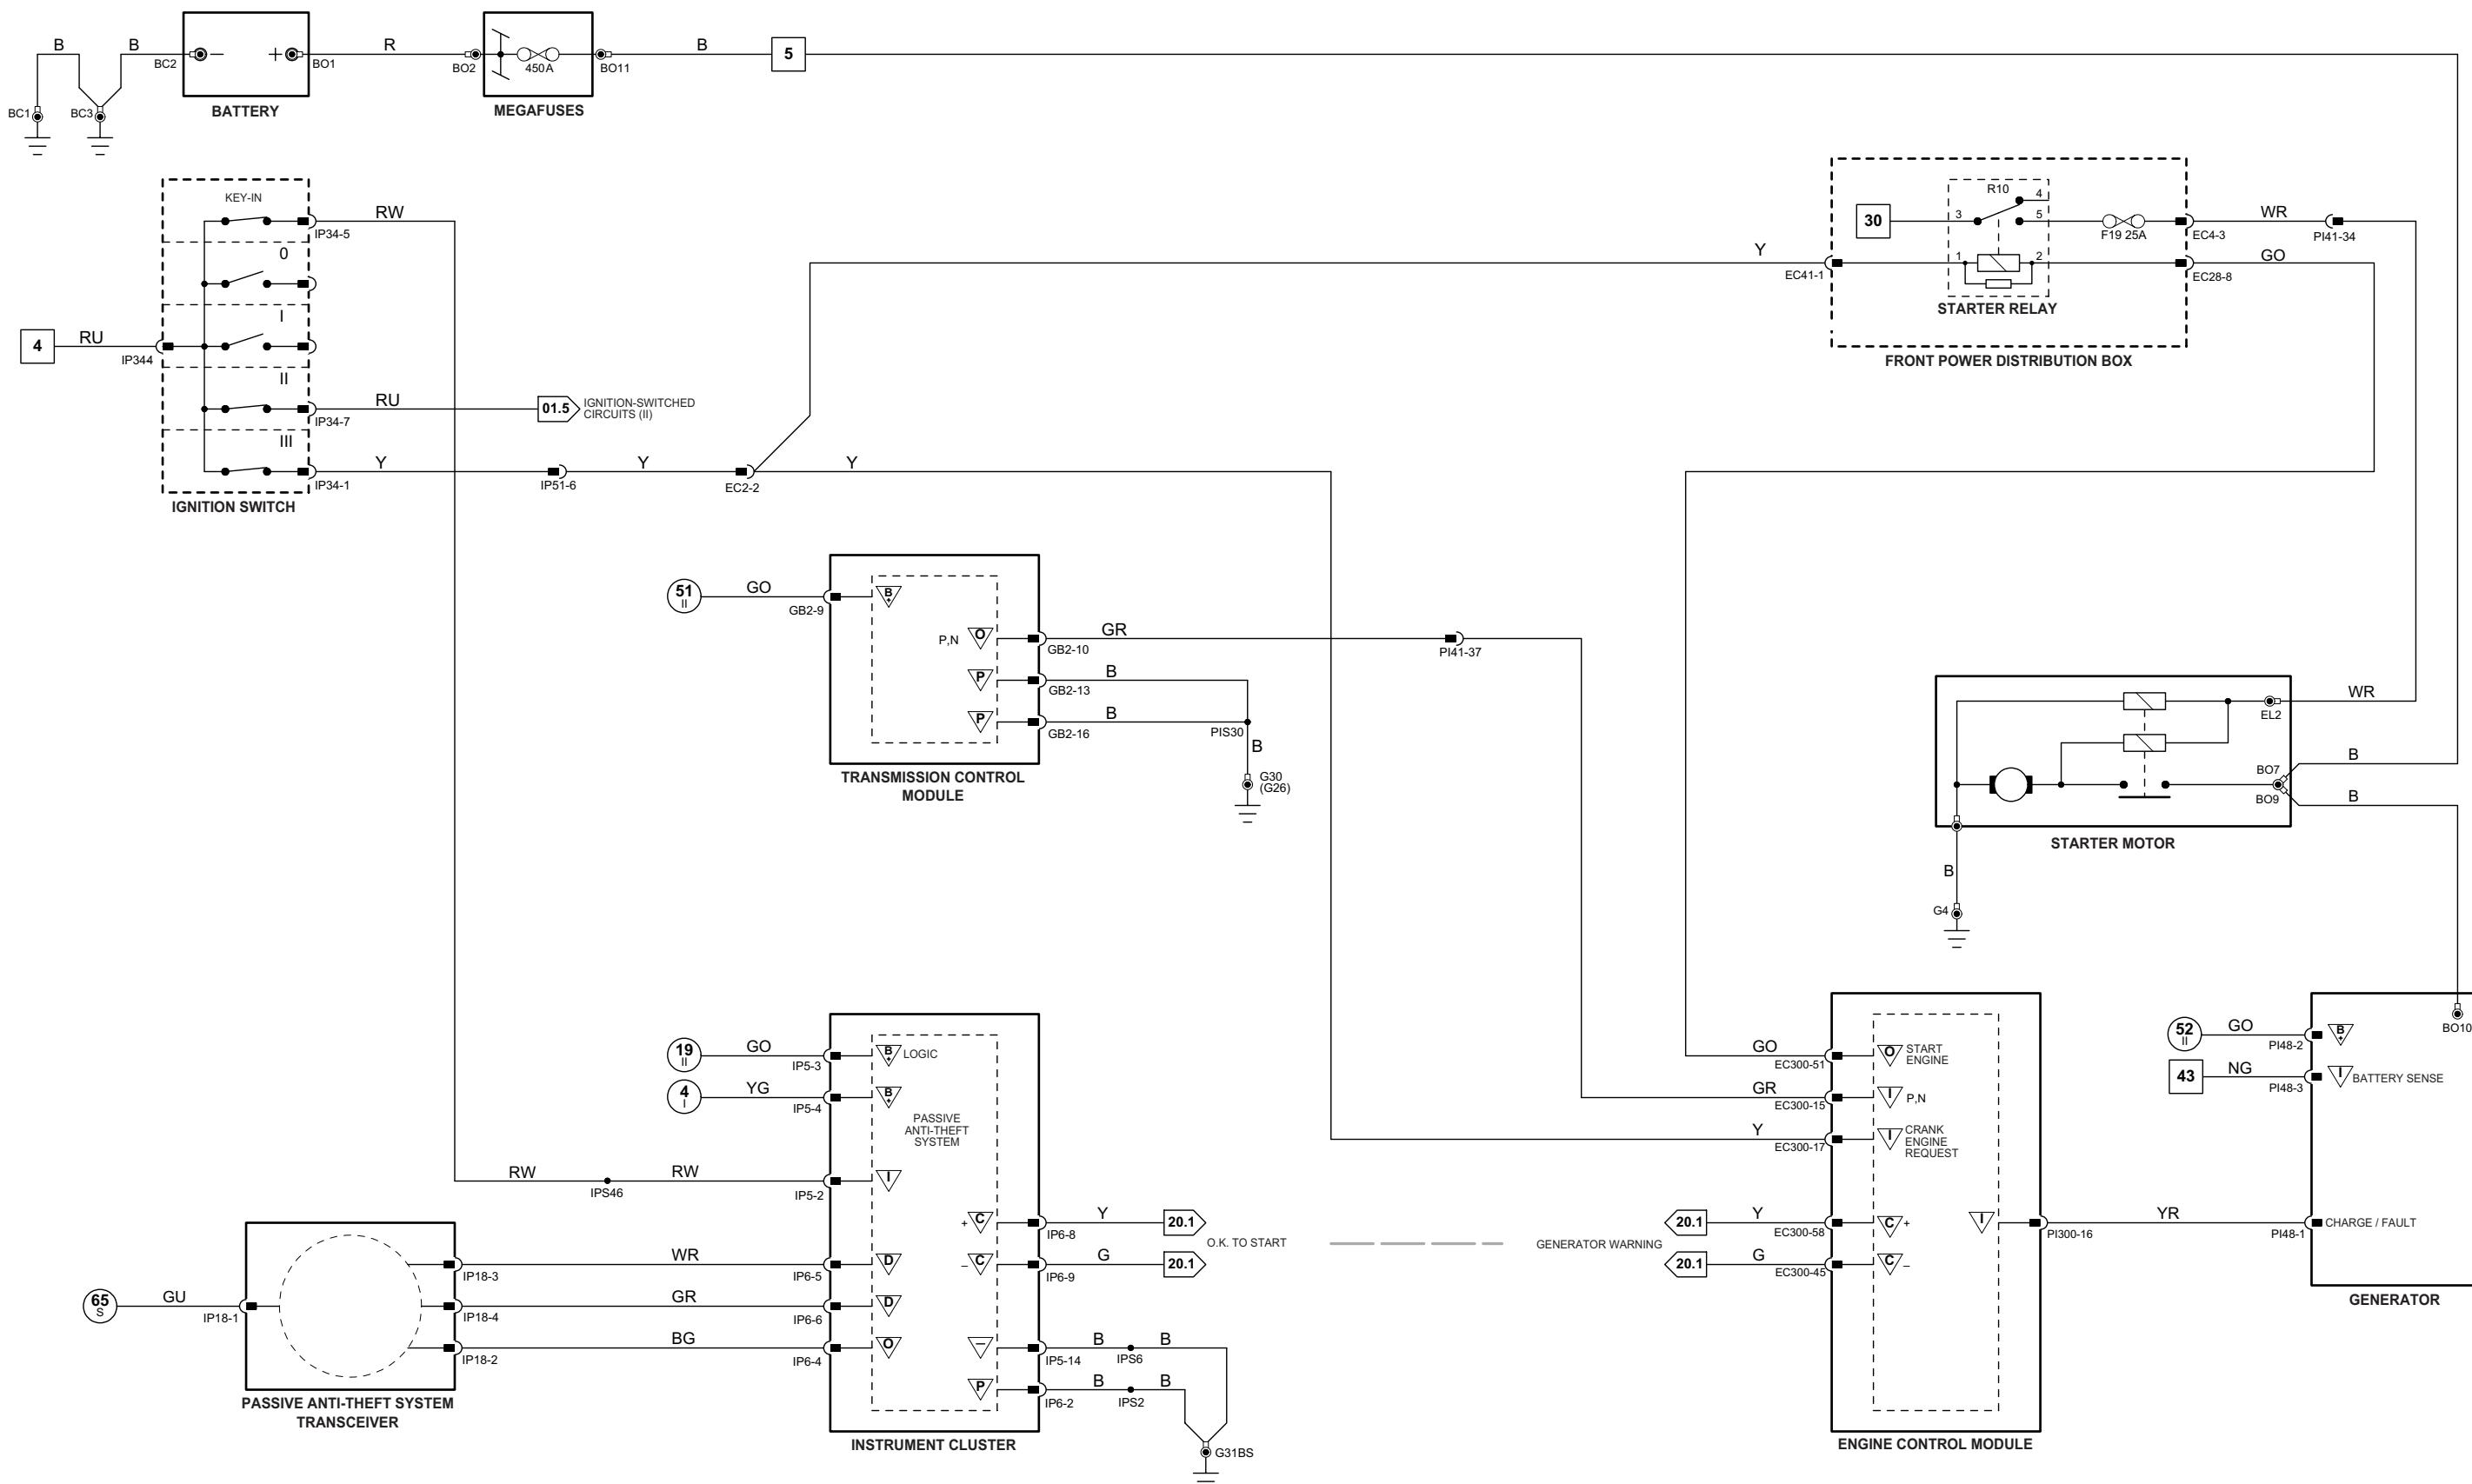

f02\_2\_35008

1 → 6	Fig. 01.1	72 → 97	Fig. 01.3	16 → 53	Fig. 01.5	78 → 105	Fig. 01.7	Input	B	Battery Voltage	+	Sensor/Signal Supply V	A	ACP	S	SCP	VARIANT: V8 Vehicles
7 → 71	Fig. 01.2	1 → 15	Fig. 01.4	53 → 77	Fig. 01.6	106 → 143	Fig. 01.8	Output	O	Power Ground	-	Sensor/Signal Ground	C	CAN	D	Serial and Encoded Data	VIN RANGE: All
																DATE OF ISSUE: May 2007	

**Fig. 02.3**

**Powertrain Control Module**

Pin	Description and Characteristic
C	C98-A3 CAN –
C	C98-A4 CAN +
O	C98-H1 GENERATOR COMMAND LINE: PWM
I	C99-F2 GENERATOR MONITOR LINE
O	EC66-B1 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	EC66-D4 PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED
I	EC66-F3 ENGINE CRANK: B+

**Instrument Cluster**

Pin	Description and Characteristic
I	IP5-2 KEY-IN AUDIBLE WARNING: B+ WHEN KEY IN
B+	IP5-3 IGNITION SWITCHED POWER SUPPLY (II): B+
B+	IP5-4 IGNITION SWITCHED POWER SUPPLY (I): B+
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
I	IP6-4 PATS GROUND: GROUND
D	IP6-5 PATS TRANSCIEVER: ENCODED COMMUNICATION
D	IP6-6 PATS TRANSCIEVER: ENCODED COMMUNICATION
C	IP6-8 CAN +
C	IP6-9 CAN –

**Transmission Control Module**

Pin	Description and Characteristic
B+	GB2-9 IGNITION SWITCHED POWER SUPPLY (II): B+
O	GB2-10 PARK / NEUTRAL SIGNAL: GROUND WHEN ACTIVATED
PG	GB2-13 POWER GROUND: GROUND
PG	GB2-16 POWER GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	LUGGAGE COMPARTMENT
FRONT POWER DISTRIBUTION FUSE BOX	EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35	4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
GENERATOR	EC40 EC41 C73 BO13	8-WAY / BLACK 10-WAY / BLACK 3-WAY / BLACK EYELET	ENGINE, RH SIDE, FRONT
IGNITION SWITCH	FC18	7-WAY / BLACK	STEERING COLUMN COWLING
IN-LINE MEGAfuse	EC307	—	INSTRUMENT PANEL
INSTRUMENT CLUSTER	IP5 IP6 IP7	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL
MEGAfuse	—	—	ENGINE COMPARTMENT, RH SIDE
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	IP18	4-WAY / GREEN	IGNITION SWITCH
POWERTRAIN CONTROL MODULE	C98 C99 EC66	48-WAY / BROWN 48-WAY / GREY 48-WAY / BLACK	ENGINE COMPARTMENT BULKHEAD / PASSENGER SIDE
STARTER MOTOR	—	—	ENGINE BLOCK, RH SIDE
STARTER RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R20
TRANSMISSION CONTROL MODULE	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE ASSEMBLY

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC2	2-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
GB1	16-WAY / GREY / ENGINE HARNESS TO TRANSMISSION HARNESS	ADJACENT TO TRANSMISSION BELL HOUSING
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PI41	42-WAY / BLACK / ENGINE HARNESS TO VEHICLE HARNESES	ENGINE COMPARTMENT, BULKHEAD, PASSENGER SIDE

**GROUNDS**

Ground	Location
BC5	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC6	TRUNK / RH SIDE / ADJACENT TO BATTERY
G4	ENGINE COMPARTMENT / ENGINE BLOCK GROUND
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

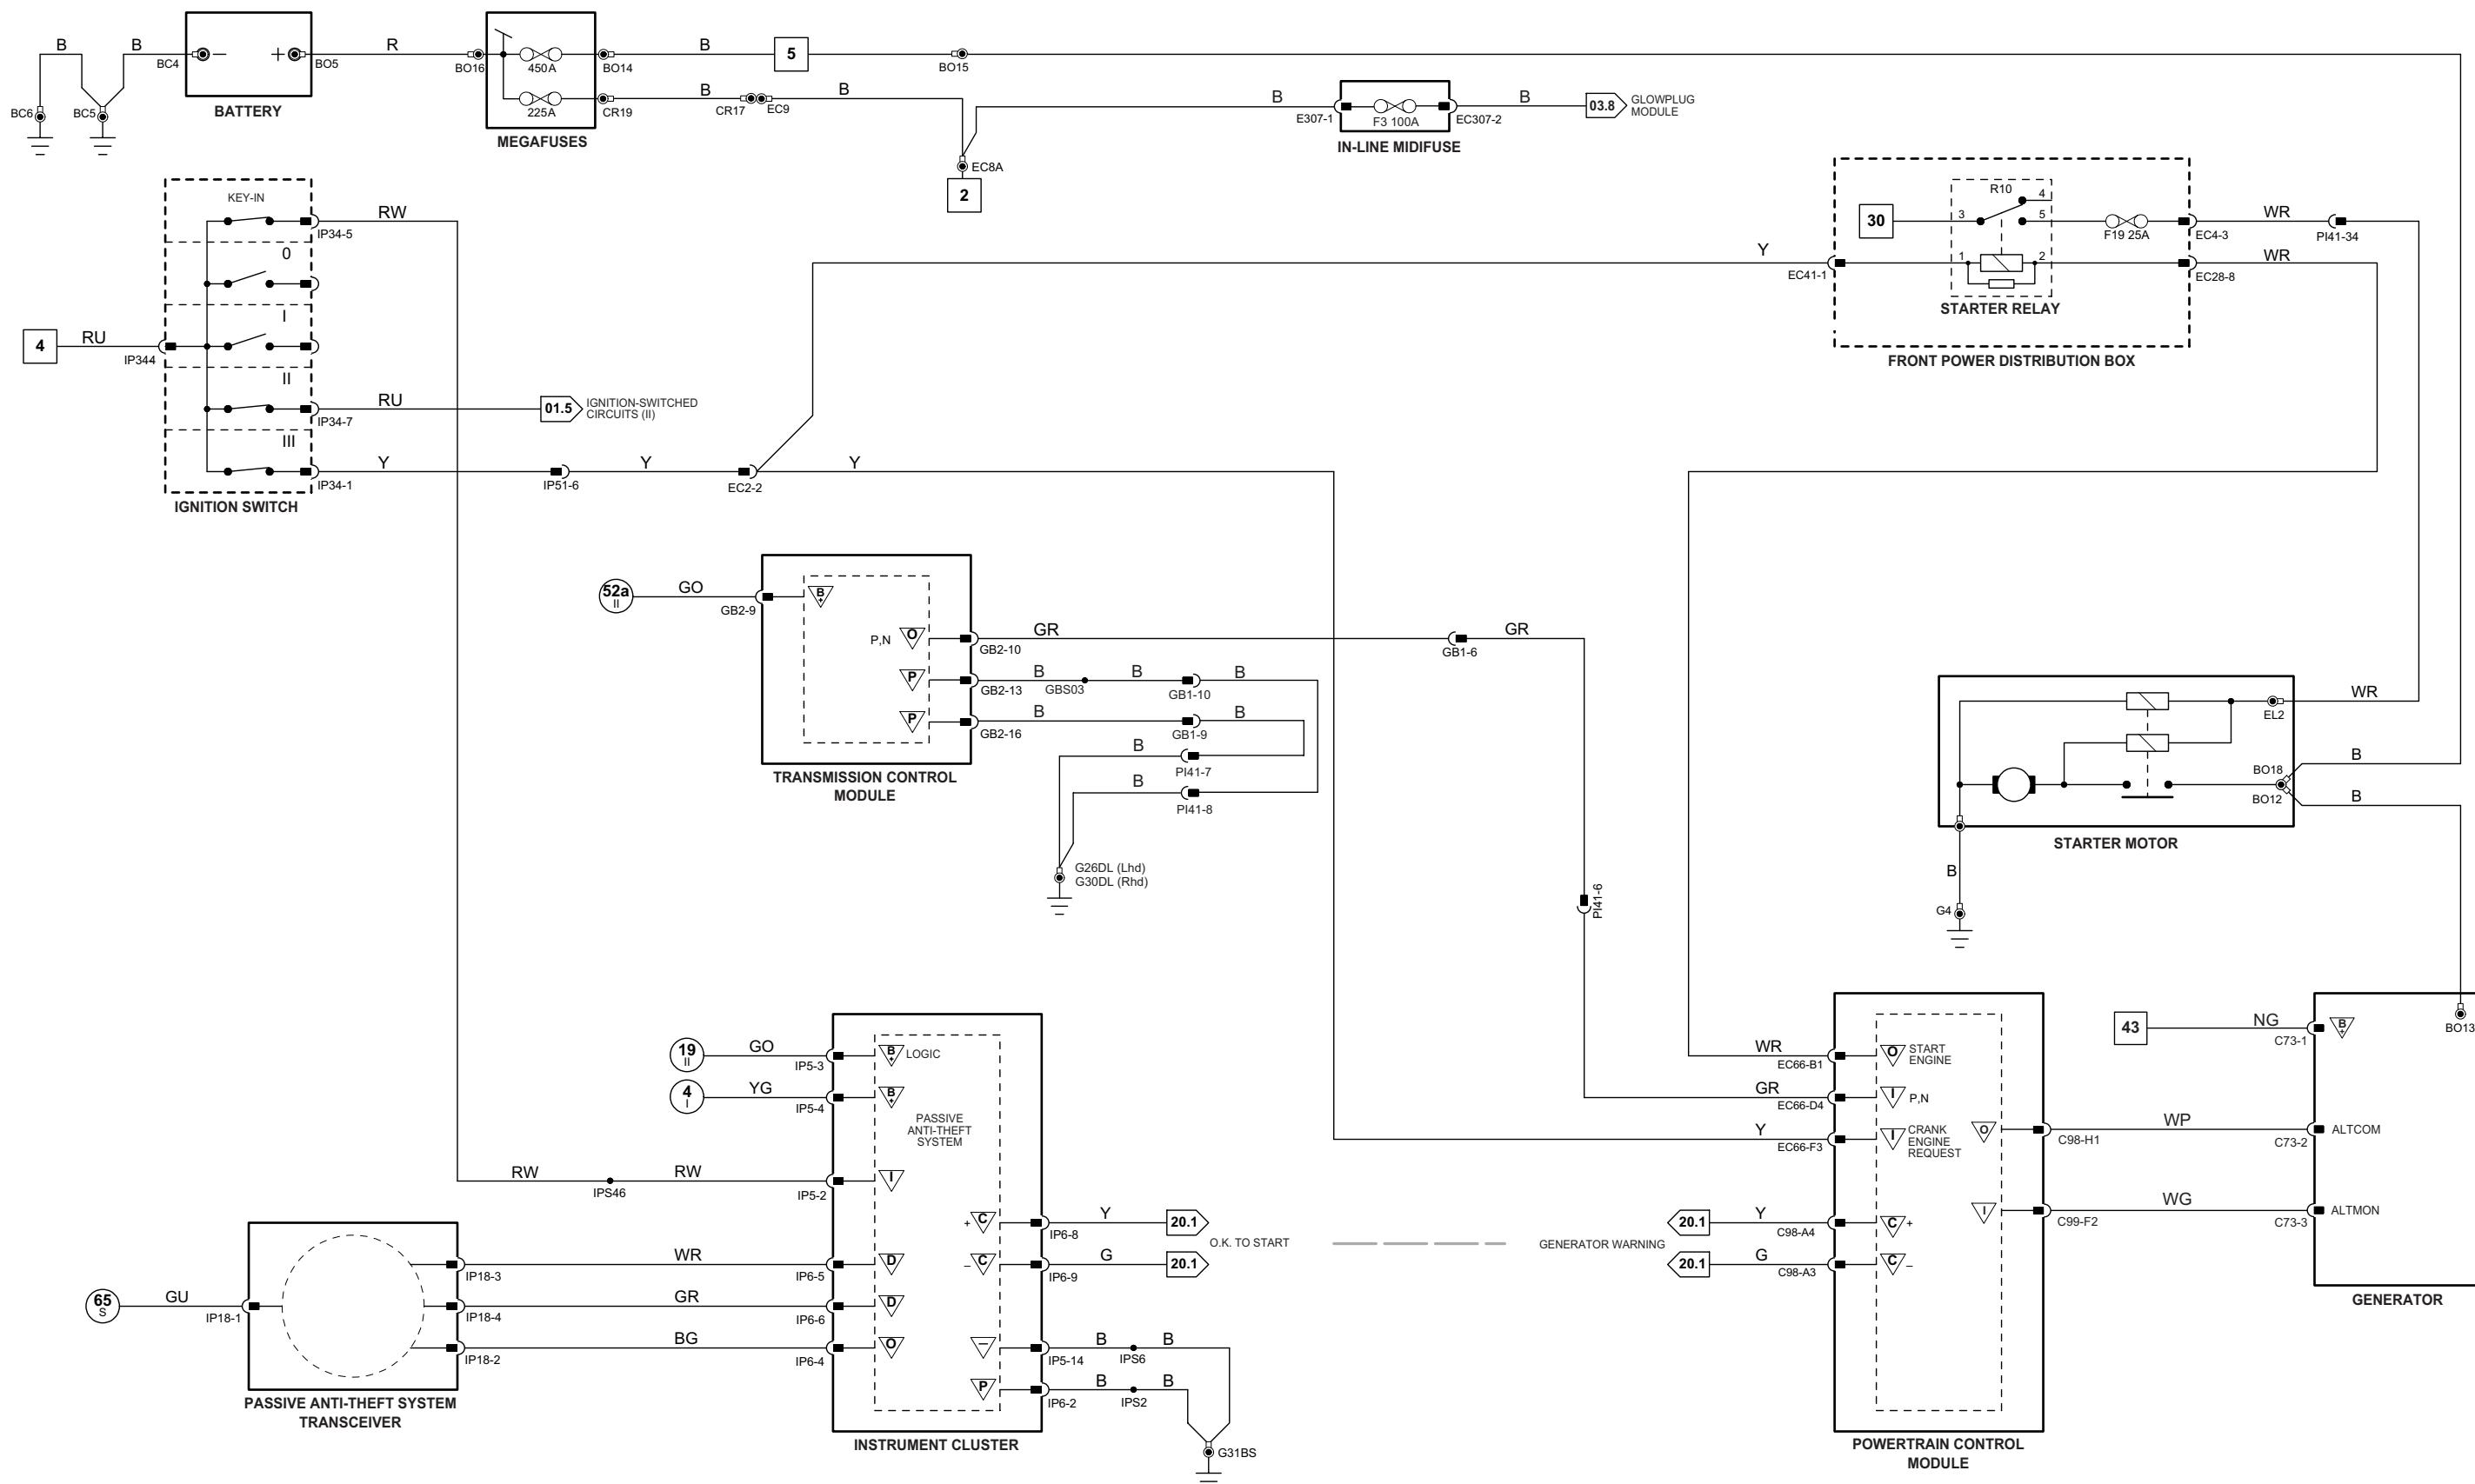

f02\_3\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP ACP	VARIANT: Diesel 2.7V6
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	Sensor/Signal Ground	SCP SCP	VIN RANGE: All
							CAN CAN	DATE OF ISSUE: May 2007
							D Serial and Encoded Data	

**Engine Control Module**

Pin	Description and Characteristic
SG	EC300-01 SMALL SIGNAL GROUND 1: GROUND
PG	EC300-02 POWER GROUND 1: GROUND
PG	EC300-03 POWER GROUND 2: GROUND
B+	EC300-04 EMS SWITCHED POWER SUPPLY 1: B+
PG	EC300-05 POWER GROUND 3: GROUND
B+	EC300-06 EMS SWITCHED POWER SUPPLY 2: B+
SG	EC300-07 SENSOR GROUND 1: GROUND
SG	EC300-08 SENSOR GROUND 2: GROUND
I	EC300-15 AUTOMATIC – PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED MANUAL, ROW – PARK / NEUTRAL SIGNAL: B+ WHEN IGNITION CRANK (III)
O	EC300-16 EMS CONTROL RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	EC300-17 ENGINE CRANK: B+
SS	EC300-19 SENSOR POWER SUPPLY 2: NOMINAL 5 V
I	EC300-24 ACCELERATOR PEDAL POSITION SENSOR 1 SIGNAL: FOOT OFF = 0.75 V; FULLY DEPRESSED = 3.40 V (AUTO) 3.20 V (MAN)
I	EC300-30 IGNITION ON: B+
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
I	EC300-38 ACCELERATOR PEDAL POSITION SENSOR 2 SIGNAL: FOOT OFF = 3.38 V; FULLY DEPRESSED = 2.05 V (AUTO) 2.14 V (MAN)
I	EC300-41 BRAKE ON / OFF SWITCH: NORMALLY OPEN / B+ WHEN ACTIVATED
O	EC300-42 INERTIA SWITCH: NORMALLY CLOSED / OPEN CIRCUIT WHEN ACTIVATED
B+	EC300-51 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
B+	EC300-54 BATTERY POWER SUPPLY: B+
C	PI300-01 CAN +
C	PI300-02 CAN -
I	PI300-03 GENERATOR FIELD RETURN SIGNAL: VARIABLE VOLTAGE BY GENERATOR OPERATING CONDITION
SG	PI300-06 CRANKSHAFT SENSOR SIGNAL GROUND: GROUND
SG	PI300-07 BANK 1 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-08 BANK 2 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-10 SENSOR GROUND: GROUND
SG	PI300-11 THROTTLE POSITION SENSOR GROUND: GROUND
SG	PI300-12 SENSOR GROUND: GROUND
SG	PI300-15 SENSOR GROUND: GROUND
I	PI300-16 GENERATOR FAULT; CHARGE WARNING
SG	PI300-18 MASS AIR FLOW SENSOR GROUND: GROUND
SG	PI300-19 BANK 1 KNOCK SENSOR GROUND: GROUND
SG	PI300-20 BANK 2 KNOCK SENSOR GROUND: GROUND
SG	PI300-22 HO2 SENSORS 1/2 SHIELD: GROUND
I	PI300-23 ENGINE OUT TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-24 SENSOR POWER SUPPLY: NOMINAL 5V
I	PI300-26 HO2 SENSOR 2/1 SIGNAL: VARIABLE CURRENT
I	PI300-27 HO2 SENSOR 2/1 SIGNAL: CONSTANT CURRENT
I	PI300-28 HO2 SENSOR 1/1 SIGNAL: VARIABLE CURRENT
I	PI300-29 HO2 SENSOR 1/1 SIGNAL: CONSTANT CURRENT
I	PI300-30 CRANKSHAFT SENSOR SIGNAL: PULSED SIGNAL, 70 PULSES PER ENGINE CYCLE
I	PI300-33 BANK 2 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-34 BANK 1 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-40 HO2 SENSOR 1/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-41 HO2 SENSOR 2/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-42 BANK 1 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
I	PI300-43 BANK 2 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
SG	PI300-45 HO2 SENSORS 2/2 SHIELD: GROUND
I	PI300-46 ENGINE FUEL TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-47 SENSOR POWER SUPPLY: NOMINAL 5V
I	PI300-55 THROTTLE POSITION SENSOR 1 SIGNAL: IDLE = 0.60 V; FULL THROTTLE = 4.30 V
I	PI300-66 INTAKE AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-67 THROTTLE POSITION SENSOR 2 SIGNAL: IDLE = 1.48 V; FULL THROTTLE = 4.40 V
I	PI300-68 ENGINE COOLANT TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-69 MAP SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS MANIFOLD ABSOLUTE PRESSURE INCREASES
I	PI300-70 MASS AIR FLOW SENSOR SIGNAL: NOMINAL 0 – 5 V: BY ENGINE OPERATING CONDITION
I	PI300-71 INJECTION PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5V: POTENSIOMETER – VOLTAGE INCREASES AS PRESSURE INCREASES
SS	PI300-72 THROTTLE POSITION SENSOR POWER SUPPLY: NOMINAL 5V
O	PI300-74 THROTTLE MOTOR GROUND: GROUND
O	PI300-75 THROTTLE MOTOR DRIVE: B+ TO ACTIVATE MOTOR
O	PI300-76 HO2 SENSOR HEATER CONTROL – 1/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-77 HO2 SENSOR HEATER CONTROL – 2/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-84 INTAKE MANIFOLD TUNING VALVE SOLENOID DRIVE – 1 / TOP: GROUND WHEN ACTIVATED
O	PI300-86 BANK 1 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-87 BANK 2 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-88 HO2 SENSOR HEATER CONTROL – 1/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-89 HO2 SENSOR HEATER CONTROL – 2/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-90 INTAKE MANIFOLD TUNING VALVE SOLENOID DRIVE – 2 / BOTTOM: GROUND WHEN ACTIVATED
O	PI300-92 EVAP CANISTER PURGE VALVE DRIVE: PWM, 10 Hz, POSITIVE DUTY CYCLE RANGE 7% – 100%
O	PI300-96 GENERATOR CONTROL: VARIABLE VOLTAGE

**Fig. 03.1**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
APP SENSOR	CR14	6-WAY / BLACK	TOP OF ACCELERATOR PEDAL
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
CKP SENSOR	PI21	2-WAY / BLACK	ENGINE TIMING COVER, CRANKSHAFT PULLEY
CMP SENSOR 1	PI23	2-WAY / BLACK	BANK 1 (RH) CAMSHAFT COVER, FRONT
CMP SENSOR 2	PI22	2-WAY / BLACK	BANK 2 (LH) CAMSHAFT COVER, FRONT
ECT SENSOR	PI25	2-WAY / BLACK	ENGINE VEE, COOLANT OUTLET CASTING
EFT SENSOR	IL9	2-WAY / BLACK	FUEL RAIL, FRONT
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
EOT SENSOR	PI300	96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
EVAP CANISTER PURGE VALVE	PI363	2-WAY / BLACK	ENGINE COMPARTMENT, LH SIDE, ADJACENT TO SUSPENSION TURRET
H02 SENSOR DOWNSTREAM 1/2	PI11	4-WAY / BLACK	RH EXHAUST, CATALYST CENTER
H02 SENSOR DOWNSTREAM 2/2	PI13	4-WAY / BLACK	LH EXHAUST, CATALYST CENTER
H02 SENSOR UPSTREAM 1/1	PI10	4-WAY / BLACK	RH EXHAUST, TOP OF CATALYST
H02 SENSOR UPSTREAM 2/1	PI12	4-WAY / BLACK	LH EXHAUST, TOP OF CATALYST
IMT SOLENOID VALVE 1	PI30	2-WAY / BLACK	INTAKE MANIFOLD, REAR
IMT SOLENOID VALVE 2	PI31	2-WAY / BLACK	INTAKE MANIFOLD, REAR
IP SENSOR	IL12	3-WAY / BLACK	FUEL RAIL, REAR
KNOCK SENSOR 1	PI60	2-WAY / BLACK	ENGINE VEE, TOWARD FRONT, BANK 2 (FRONT SENSOR)
KNOCK SENSOR 2	PI61	2-WAY / BLACK	ENGINE BLOCK, REAR, BANK 1 (REAR SENSOR)
MAF SENSOR	PI14	5-WAY / BLACK	ENGINE AIR INTAKE, ADJACENT TO AIR CLEANER
MAP SENSOR	PI29	4-WAY / BLACK	INTAKE MANIFOLD, UPPER REAR
THROTTLE BODY	PI26	—	ENGINE AIR INTAKE, FRONT
THROTTLE MOTOR	—	—	THROTTLE BODY
TP SENSOR	—	—	THROTTLE BODY
VVT SOLENOID VALVE 1	PI16	2-WAY / BLACK	RH CYLINDER HEAD, FRONT
VVT SOLENOID VALVE 2	PI17	2-WAY / BLACK	LH CYLINDER HEAD, FRONT

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC16	12-WAY / GREY / ENGINE HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
IL10	12-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	REAR OF ENGINE

**GROUNDS**

Ground	Location
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER

**FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.**


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

**CAUTION:** The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

**NOTE:** The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

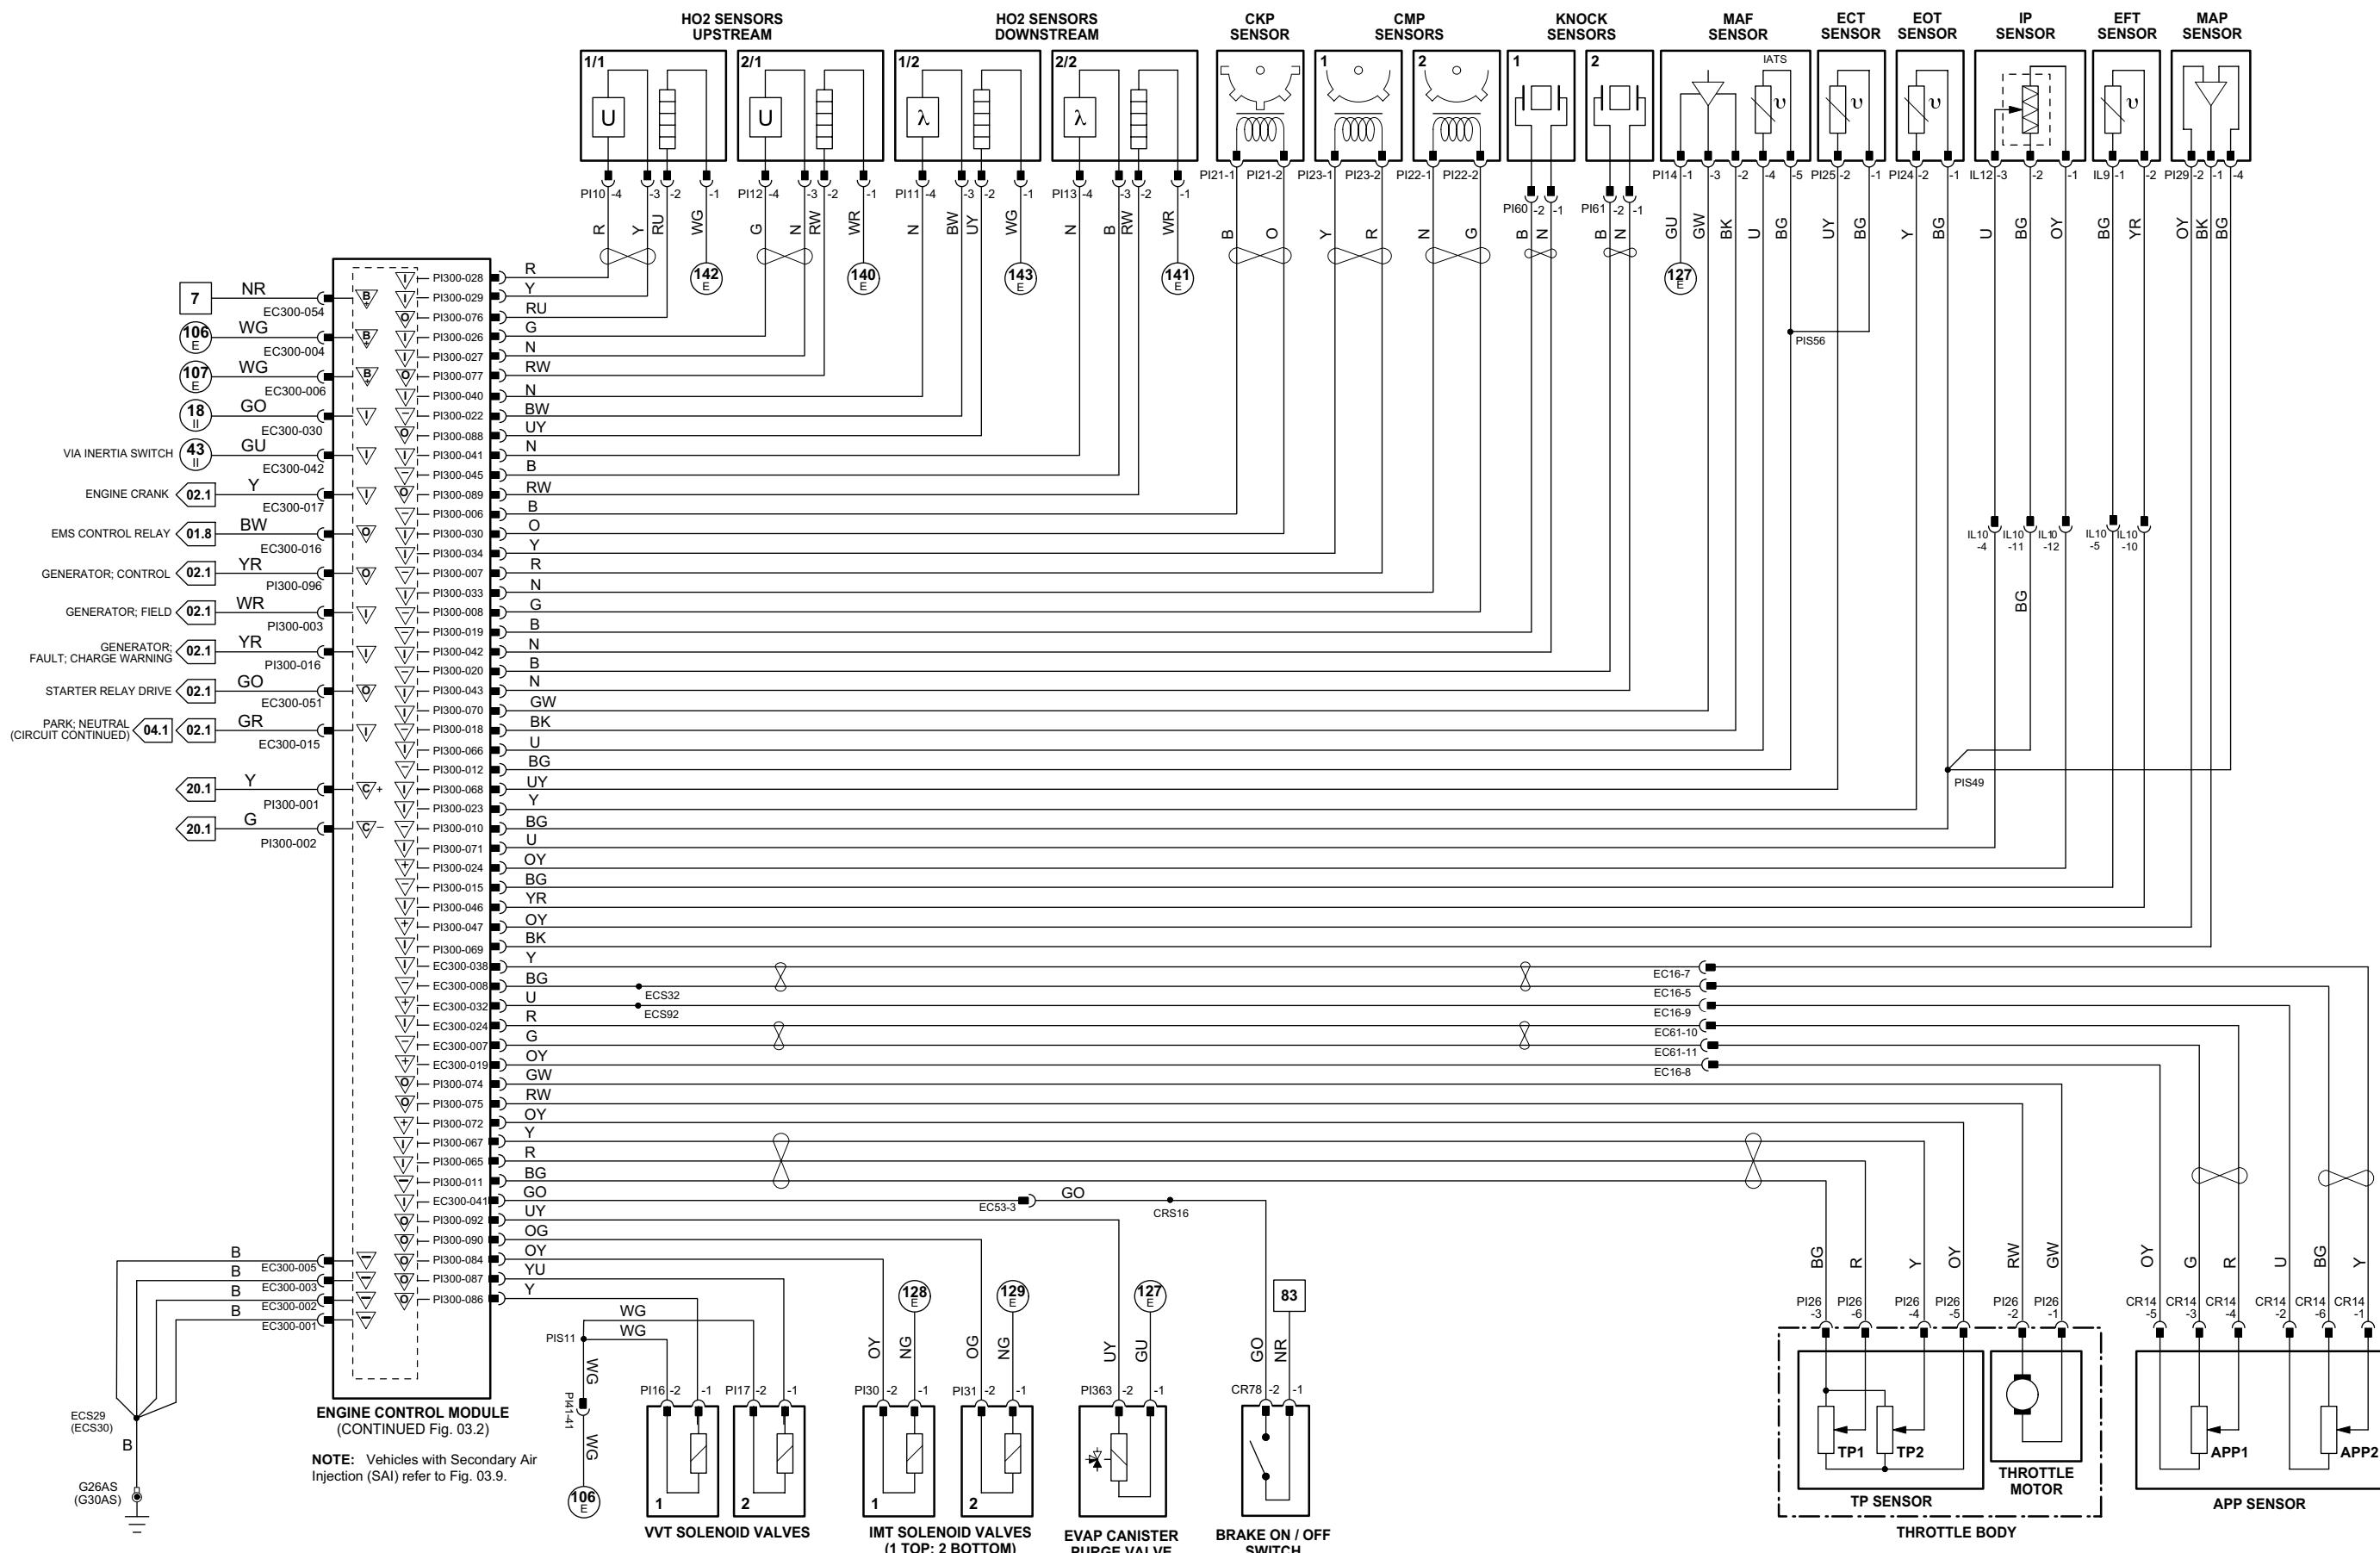

**Fig. 03.2**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING PRESSURE SENSOR	EC11	3-WAY / BLACK	ADJACENT TO RADIATOR / LH SIDE
ASL SWITCH	CL1	8-WAY / BLACK	CABIN, CENTRE CONSOLE
	CL2	8-WAY / BLACK	CABIN, CENTRE CONSOLE
BRAKE CANCEL SWITCH	CR77	2-WAY / BLACK	TOP OF BRAKE PEDAL
COOLING FAN MODULE	EC20	2-WAY / GREY	ENGINE COMPARTMENT, RH FRONT, REARWARD OF RADIATOR
	GC1	2-WAY / GREY	
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
	PI300	96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL INJECTOR 1	IL3	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 2	IL6	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 3	IL4	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 4	IL7	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 5	IL5	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 6	IL8	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL TANK	FP8	6-WAY / BLACK	FUEL TANK, RH SIDE
FUEL PUMP RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R6
IGNITION CAPACITOR	PI54	2-WAY / BLACK	LH CYLINDER HEAD, REAR
IGNITION MODULE AND COIL 1	PI2	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 2	PI6	4-WAY / BLACK	LH CYLINDER HEAD
IGNITION MODULE AND COIL 3	PI3	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 4	PI7	4-WAY / BLACK	LH CYLINDER HEAD
IGNITION MODULE AND COIL 5	PI4	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 6	PI8	4-WAY / BLACK	LH CYLINDER HEAD
LEAK DETECTION UNIT	CV9	4-WAY / BLACK	ABOVE FUEL TANK
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	LUGGAGE COMPARTMENT, RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR5	4-WAY / BLACK	LUGGAGE COMPARTMENT
	CR82	12-WAY / BLACK	
STEERING WHEEL SPEED CONTROL SWITCHES	—	—	STEERING WHEEL


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
CV1	8-WAY / GREY / FUEL PUMP LINK HARNESS TO PARKING BRAKE MOTOR HARNESS	REAR OF FUEL TANK / RH SIDE
CV5	12-WAY / GREY / FUEL PUMP LINK HARNESS TO EVAP CANISTER CLOSE VALVE LINK HARNESS	ABOVE REAR AXLE / CENTER
EC17		ENGINE COMPARTMENT / REAR RH SIDE
EC21	2-WAY / BLACK / ENGINE HARNESS TO COOLING FAN MODULE	ENGINE COMPARTMENT / ADJACENT TO RADIATOR / RH SIDE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
FP2	6-WAY / GREY / CABIN HARNESS TO FUEL PUMP HARNESS	CABIN / BELOW REAR SEAT CUSHION / RH SIDE
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IL10	12-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	REAR OF ENGINE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE

**GROUNDS**

Ground	Location
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION BOX
G9	CABIN / UPPER LH 'A' POST
G10	CABIN / RH A POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
PI51	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

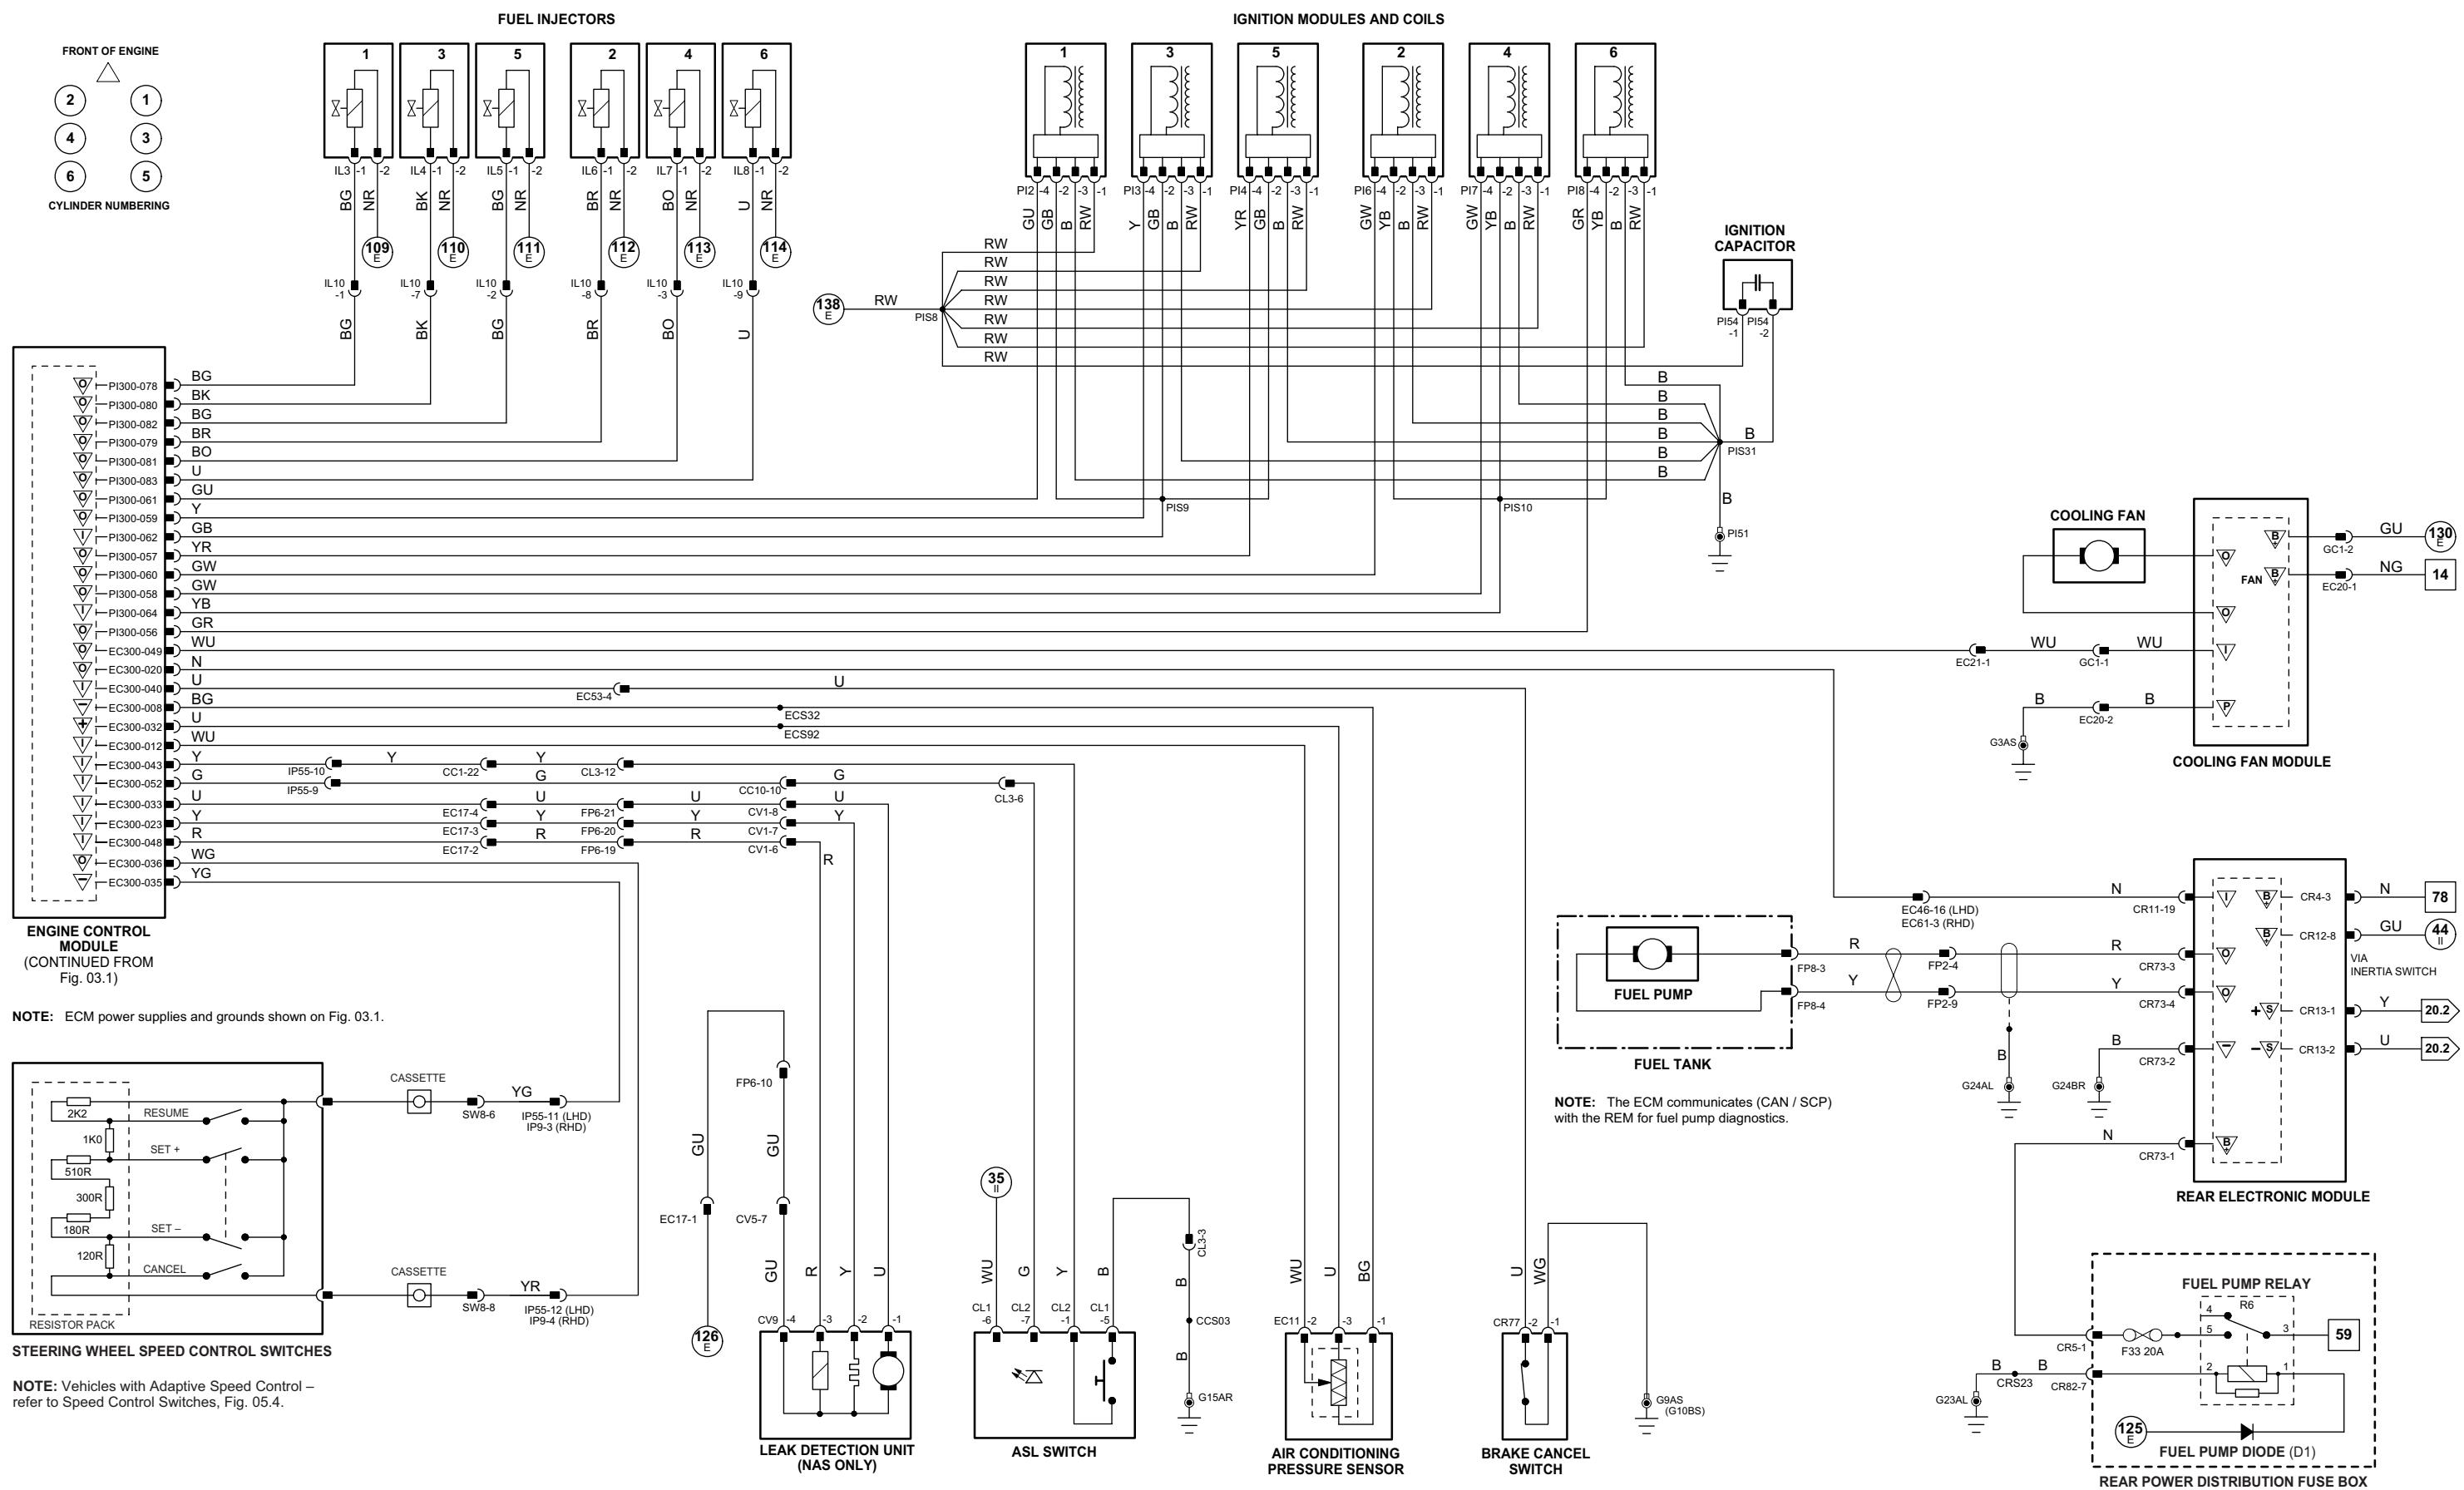

**Engine Control Module**

Pin	Description and Characteristic
SG	EC300-01 SMALL SIGNAL GROUND 1: GROUND
PG	EC300-02 POWER GROUND 1: GROUND
PG	EC300-03 POWER GROUND 2: GROUND
B+	EC300-04 EMS SWITCHED POWER SUPPLY 1: B+
PG	EC300-05 POWER GROUND 3: GROUND
B+	EC300-06 EMS SWITCHED POWER SUPPLY 2: B+
SG	EC300-07 SENSOR GROUND 1: GROUND
SG	EC300-08 SENSOR GROUND 2: GROUND
I	EC300-15 AUTOMATIC – PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED MANUAL, ROW – PARK / NEUTRAL SIGNAL: B+ WHEN IGNITION CRANK (III)
O	EC300-16 EMS CONTROL RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	EC300-17 ENGINE CRANK: B+
SS	EC300-19 SENSOR POWER SUPPLY 2: NOMINAL 5 V
I	EC300-24 ACCELERATOR PEDAL POSITION SENSOR 1 SIGNAL: FOOT OFF = 0.75 V; FULLY DEPRESSED = 3.40 V (AUTO) 3.20 V (MAN)
I	EC300-30 IGNITION ON: B+
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
I	EC300-38 ACCELERATOR PEDAL POSITION SENSOR 2 SIGNAL: FOOT OFF = 3.38 V; FULLY DEPRESSED = 2.05 V (AUTO) 2.14 V (MAN)
I	EC300-41 BRAKE ON / OFF SWITCH: NORMALLY OPEN / B+ WHEN ACTIVATED
I	EC300-42 INERTIA SWITCH: NORMALLY CLOSED / OPEN CIRCUIT WHEN ACTIVATED
O	EC300-51 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
B+	EC300-54 BATTERY POWER SUPPLY: B+
C	PI300-01 CAN +
C	PI300-02 CAN -
SG	PI300-06 CRANKSHAFT SENSOR SIGNAL GROUND: GROUND
SG	PI300-07 BANK 1 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-08 BANK 2 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-10 SENSOR GROUND: GROUND
SG	PI300-11 THROTTLE POSITION SENSOR GROUND: GROUND
SG	PI300-12 SENSOR GROUND: GROUND
SG	PI300-15 SENSOR GROUND: GROUND
I	PI300-16 GENERATOR FAULT: CHARGE WARNING
SG	PI300-18 MASS AIR FLOW SENSOR GROUND: GROUND
SG	PI300-19 BANK 1 KNOCK SENSOR GROUND: GROUND
SG	PI300-20 BANK 2 KNOCK SENSOR GROUND: GROUND
SG	PI300-22 HO2 SENSORS 1/2 SHIELD: GROUND
I	PI300-23 ENGINE OIL TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-24 SENSOR POWER SUPPLY: NOMINAL 5 V
I	PI300-26 HO2 SENSOR 2/1 SIGNAL: VARIABLE CURRENT
I	PI300-27 HO2 SENSOR 2/1 SIGNAL: CONSTANT CURRENT
I	PI300-28 HO2 SENSOR 1/1 SIGNAL: VARIABLE CURRENT
I	PI300-29 HO2 SENSOR 1/1 SIGNAL: CONSTANT CURRENT
I	PI300-30 CRANKSHAFT SENSOR SIGNAL: PULSED SIGNAL, 70 PULSES PER ENGINE CYCLE
I	PI300-33 BANK 2 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-34 BANK 1 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-40 HO2 SENSOR 1/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-41 HO2 SENSOR 2/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-42 BANK 1 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
I	PI300-43 BANK 2 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
SG	PI300-45 HO2 SENSORS 2/2 SHIELD: GROUND
I	PI300-46 ENGINE FUEL TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-47 SENSOR POWER SUPPLY: NOMINAL 5 V
O	PI300-50 EGR DRIVE 4: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-51 EGR DRIVE 3: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-52 EGR DRIVE 2: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-53 EGR DRIVE 1: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
I	PI300-65 THROTTLE POSITION SENSOR 1 SIGNAL IDLE = 0.60 V; FULL THROTTLE = 4.30 V
I	PI300-66 INTAKE AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-67 THROTTLE POSITION SENSOR 2 SIGNAL: IDLE = 1.48 V; FULL THROTTLE = 4.40 V
I	PI300-68 ENGINE COOLANT TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-69 MAP SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS MANIFOLD ABSOLUTE PRESSURE INCREASES
I	PI300-70 MASS AIR FLOW SENSOR SIGNAL: NOMINAL 0 – 5 V BY ENGINE OPERATING CONDITION
I	PI300-71 INJECTION PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: POTENIOMETER – VOLTAGE INCREASES AS PRESSURE INCREASES
SS	PI300-72 THROTTLE POSITION SENSOR POWER SUPPLY: NOMINAL 5 V
O	PI300-74 THROTTLE MOTOR GROUND: GROUND
O	PI300-75 THROTTLE MOTOR DRIVE: B+ TO ACTIVATE MOTOR
O	PI300-76 HO2 SENSOR HEATER CONTROL – 1/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-77 HO2 SENSOR HEATER CONTROL – 2/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-86 BANK 1 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-87 BANK 2 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-88 HO2 SENSOR HEATER CONTROL – 1/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-89 HO2 SENSOR HEATER CONTROL – 2/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-92 EVAP CANISTER PURGE VALVE DRIVE: PWM, 10 Hz, POSITIVE DUTY CYCLE RANGE 7% – 100%

**Fig. 03.3**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
APP SENSOR	CR14	6-WAY / BLACK	TOP OF ACCELERATOR PEDAL
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
CKP SENSOR	PI21	2-WAY / BLACK	ENGINE UNDER SIDE, FORWARD OF BELL HOUSING
CMP SENSOR 1	PI23	2-WAY / BLACK	BANK 1 (RH) CAMSHAFT COVER, REAR
CMP SENSOR 2	PI22	2-WAY / BLACK	BANK 2 (LH) CAMSHAFT COVER, REAR
ECT SENSOR	PI25	2-WAY / BLACK	ENGINE VEE, COOLANT OUTLET CASTING
EFT SENSOR	PI27	2-WAY / BLACK	FUEL RAIL, RH REAR
EGR VALVE	PI15	6-WAY / BLACK	INTAKE MANIFOLD, RH FRONT
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
EOT SENSOR	PI24	2-WAY / BLACK	ADJACENT TO OIL FILTER
EVAP CANISTER PURGE VALVE	EC63	2-WAY / BLACK	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
H02 SENSOR DOWNSTREAM 1/2	PI11	4-WAY / BLACK	RH EXHAUST, CATALYST CENTER
H02 SENSOR DOWNSTREAM 2/2	PI13	4-WAY / BLACK	LH EXHAUST, CATALYST CENTER
H02 SENSOR UPSTREAM 1/1	PI10	4-WAY / BLACK	RH EXHAUST, TOP OF CATALYST
H02 SENSOR UPSTREAM 2/1	PI12	4-WAY / BLACK	LH EXHAUST, TOP OF CATALYST
IAT SENSOR 2	PI43	2-WAY / BLACK	INTAKE MANIFOLD, RH SIDE, REAR
IP SENSOR	PI28	3-WAY / BLACK	FUEL RAIL, RH FRONT
KNOCK SENSORS	PI19	4-WAY / BLACK	ENGINE VEE
MAF SENSOR	PI14	5-WAY / BLACK	ENGINE AIR INTAKE, ADJACENT TO AIR CLEANER
MAP SENSOR	PI29	4-WAY / BLACK	INTAKE MANIFOLD, REAR, BELOW THROTTLE ASSEMBLY
THROTTLE BODY	PI26	—	ENGINE AIR INTAKE, REAR
THROTTLE MOTOR			THROTTLE BODY
TP SENSOR			THROTTLE BODY, THROTTLE SHAFT
VVT SOLENOID VALVE 1	PI16	2-WAY / BLACK	RH CYLINDER HEAD, FRONT
VVT SOLENOID VALVE 2	PI17	2-WAY / BLACK	LH CYLINDER HEAD, FRONT

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST

**GROUNDS**

Ground	Location
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER

**FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.**


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

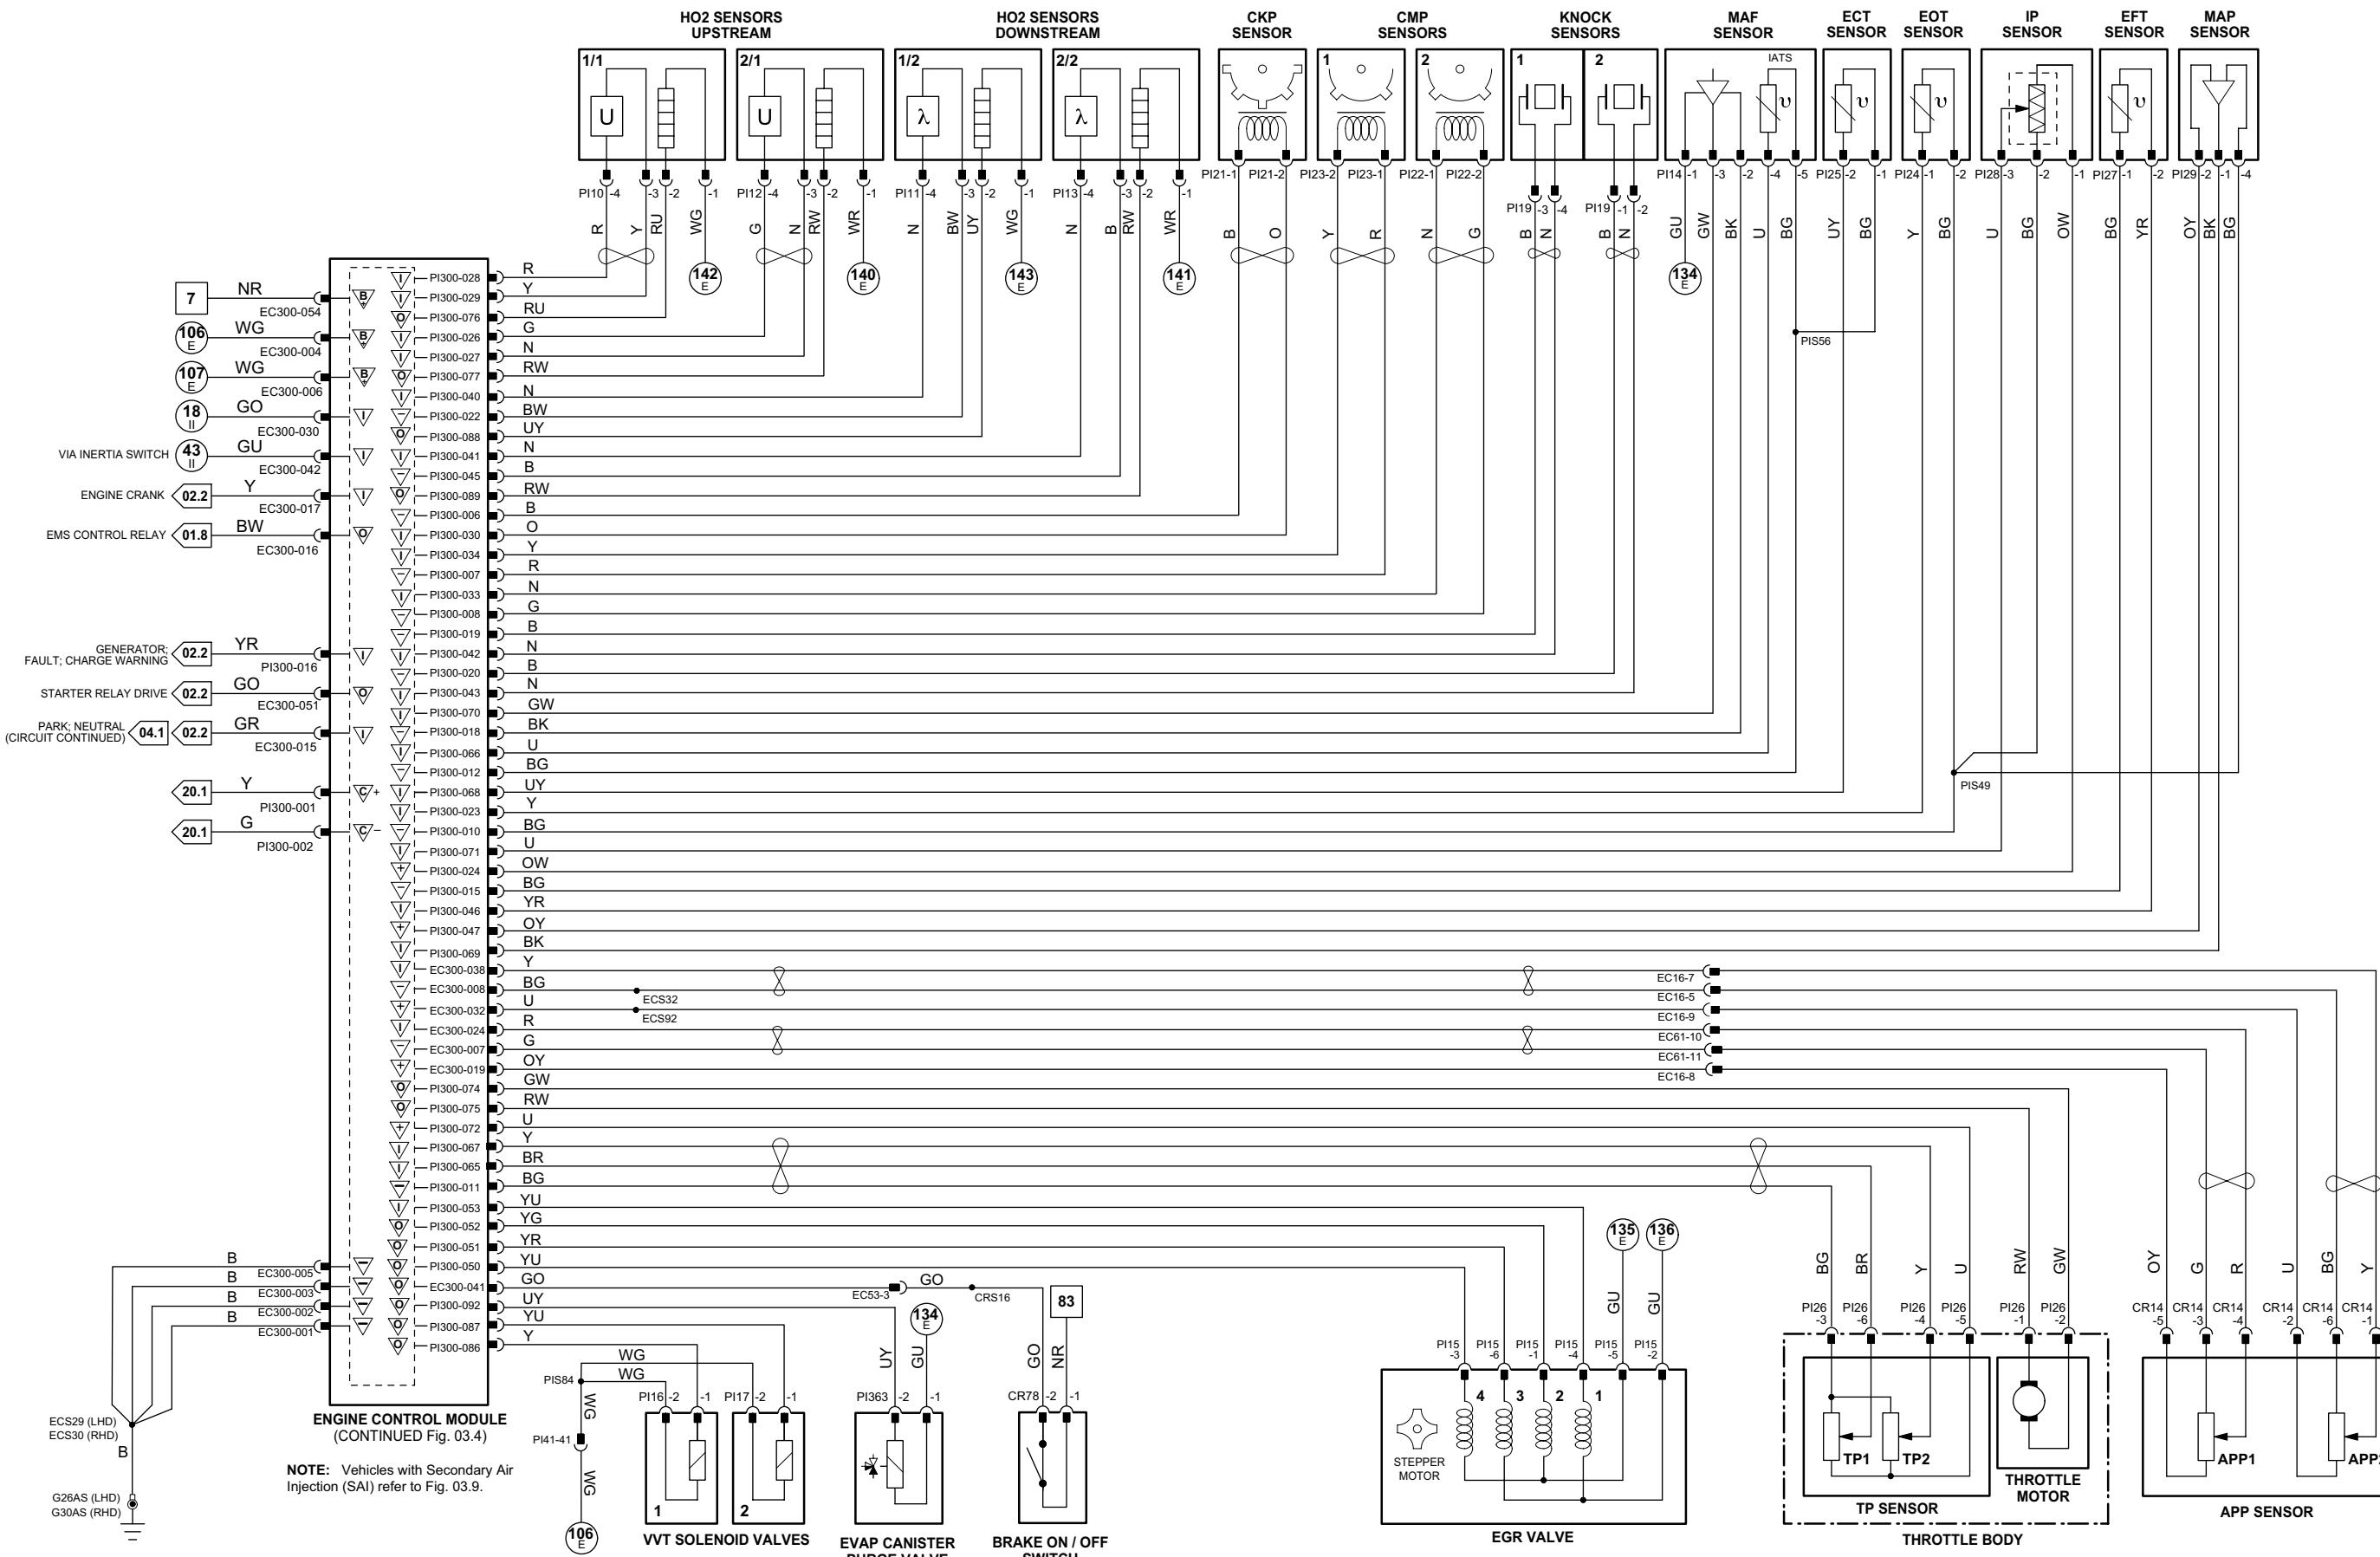

## Engine Control Module

Pin	Description and Characteristic
SG	EC300-08 SENSOR GROUND 1: GROUND
I	EC300-12 AIR CONDITIONING PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: TRANSDUCER – VOLTAGE INCREASES AS PRESSURE INCREASES
O	EC300-20 FUEL PUMP DRIVE SIGNAL (TO REM): PWM, 150 Hz, NORMAL POSITIVE DUTY CYCLE RANGE = 4% – 51%
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
O	EC300-33 LEAK DETECTION HEATER CONTROL
I	EC300-35 SPEED CONTROL SWITCHES SIGNAL GROUND: GROUND
SS	EC300-36 SPEED CONTROL SWITCH REQUEST: STEPPED RESISTANCE
I	EC300-40 BRAKE CANCEL SWITCH: NORMALLY CLOSED / GROUND WHEN ACTIVATED
I	EC300-43 ASL MASTER SWITCH
O	EC300-48 LEAK DETECTION VALVE CONTROL
O	EC300-49 COOLING FAN MODULE CONTROL: PWM, 140 Hz, POSITIVE DUTY CYCLE RANGE 7% – 95%
I	EC300-52 ASL LED
O	PI300-54 IGNITION COIL ACTIVATE – CYLINDER 8: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-55 IGNITION COIL ACTIVATE – CYLINDER 7: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-56 IGNITION COIL ACTIVATE – CYLINDER 6: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-57 IGNITION COIL ACTIVATE – CYLINDER 5: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-58 IGNITION COIL ACTIVATE – CYLINDER 4: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-59 IGNITION COIL ACTIVATE – CYLINDER 3: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-60 IGNITION COIL ACTIVATE – CYLINDER 2: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-61 IGNITION COIL ACTIVATE – CYLINDER 1: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	PI300-62 IGNITION MONITOR BAND 1: PULSED SIGNAL, 3 PULSES PER ENGINE CYCLE
I	PI300-64 IGNITION MONITOR BAND 2: PULSED SIGNAL, 3 PULSES PER ENGINE CYCLE
O	PI300-78 FUEL INJECTOR DRIVE – CYLINDER 1: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-79 FUEL INJECTOR DRIVE – CYLINDER 2: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-80 FUEL INJECTOR DRIVE – CYLINDER 3: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-81 FUEL INJECTOR DRIVE – CYLINDER 4: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-82 FUEL INJECTOR DRIVE – CYLINDER 5: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-83 FUEL INJECTOR DRIVE – CYLINDER 6: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-84 FUEL INJECTOR DRIVE – CYLINDER 7: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-85 FUEL INJECTOR DRIVE – CYLINDER 8: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND

## Rear Electronic Module

Pin	Description and Characteristic
B+	CR4-3 BATTERY POWER SUPPLY (LOGIC): B+
I	CR11-19 FUEL PUMP (1) DRIVE SIGNAL: PWM, 150 Hz, NORMAL POSITIVE DUTY CYCLE RANGE = 4% – 51%
B+	CR12-8 IGNITION SWITCHED POWER SUPPLY (II) (FUEL PUMP CONTROL): B+
S	CR13-1 SCP NETWORK +
S	CR13-2 SCP NETWORK –
B+	CR73-1 FUEL PUMP POWER SUPPLY: B+ WHEN FUEL PUMP RELAY ACTIVATED
PG	CR73-2 POWER GROUND (FUEL PUMP): GROUND
O	CR73-3 FUEL PUMP GROUND: GROUND, PWM
O	CR73-4 FUEL PUMP B+: B+

Fig. 03.4

## COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING PRESSURE SENSOR	EC11	4-WAY / BLACK	ADJACENT TO RADIATOR / LH SIDE
ASL SWITCH	CL1	8-WAY / BLACK	CABIN, CENTRE CONSOLE
	CL2	8-WAY / BLACK	CABIN, CENTRE CONSOLE
BRAKE CANCEL SWITCH	CR77	2-WAY / BLACK	TOP OF BRAKE PEDAL
COOLING FAN MODULE AND MOTOR	EC20	2-WAY / GREY	RADIATOR COOLING FAN
	GC1	2-WAY / GREY	
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL INJECTOR 1	PI300	96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL INJECTOR 2	PI32	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 3	PI36	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 4	PI33	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 5	PI37	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 6	PI34	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 7	PI38	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 8	PI35	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL PUMP	PI39	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL PUMP RELAY	FP8	4-WAY / BLACK	FUEL TANK, RH SIDE
IGNITION CAPACITOR	—	—	REAR POWER DISTRIBUTION FUSE BOX – R6
IGNITION MODULE AND COIL 1	PI54	2-WAY / BLACK	LH CYLINDER HEAD, REAR
IGNITION MODULE AND COIL 2	PI2	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 3	PI6	4-WAY / BLACK	LH CYLINDER HEAD
IGNITION MODULE AND COIL 4	PI3	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 5	PI7	4-WAY / BLACK	LH CYLINDER HEAD
IGNITION MODULE AND COIL 6	PI4	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 7	PI8	4-WAY / BLACK	LH CYLINDER HEAD
IGNITION MODULE AND COIL 8	PI5	4-WAY / BLACK	RH CYLINDER HEAD
LEAK DETECTION UNIT	CV9	4-WAY / BLACK	ABOVE FUEL TANK
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK, RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR5	4-WAY / BLACK	TRUNK
STEERING WHEEL SPEED CONTROL SWITCHES	CR82	12-WAY / BLACK	
	—	—	STEERING WHEEL

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
CV1	8-WAY / GREY / FUEL PUMP LINK HARNESS TO PARKING BRAKE MOTOR HARNESS	REAR OF FUEL TANK / RH SIDE
CV5	12-WAY / GREY / FUEL PUMP LINK HARNESS TO EVAP CANISTER CLOSE VALVE LINK HARNESS	ABOVE REAR AXLE / CENTER
EC17	—	ENGINE COMPARTMENT / REAR RH SIDE
EC21	2-WAY / BLACK / ENGINE HARNESS TO COOLING FAN MODULE	ENGINE COMPARTMENT / ADJACENT TO RADIATOR / RH SIDE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
FP2	6-WAY / GREY / CABIN HARNESS TO FUEL PUMP HARNESS	CABIN / BELOW REAR SEAT CUSHION / RH SIDE
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST

## GROUNDS

Ground	Location
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION BOX
G9	CABIN / UPPER LH 'A' POST
G10	CABIN / RH A POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
PI51	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

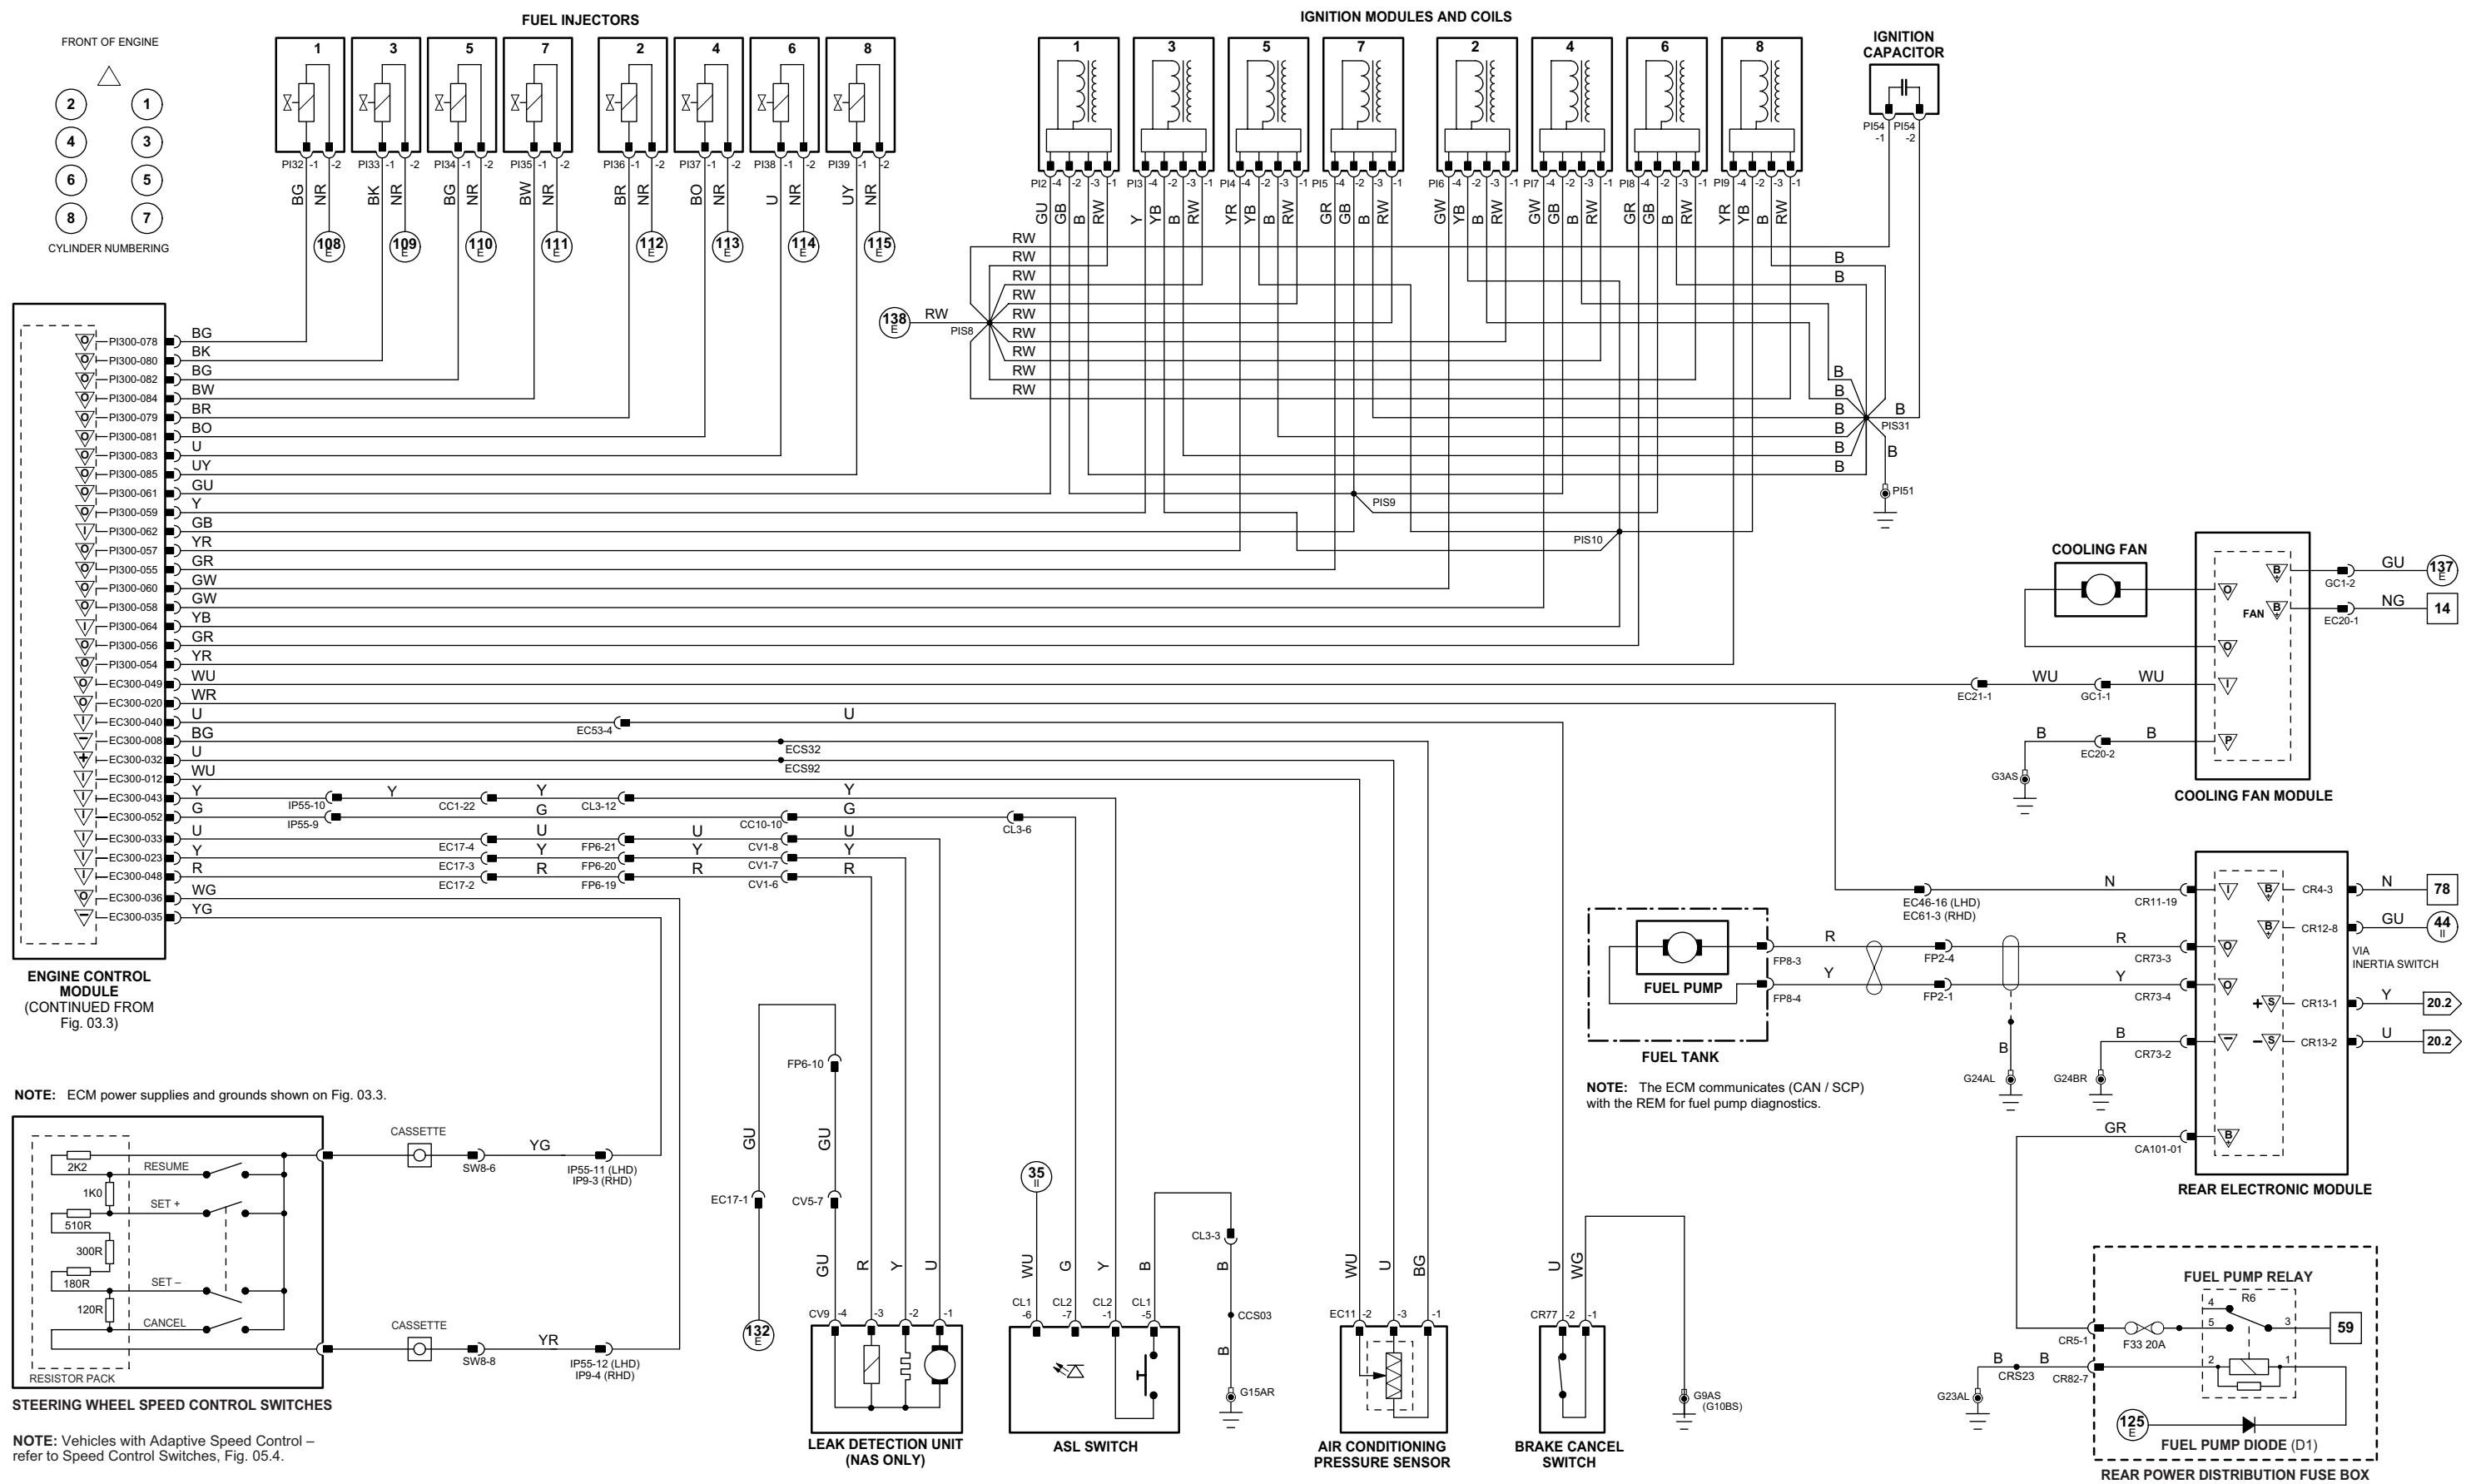

**Engine Control Module**

Pin	Description and Characteristic
SG	EC300-01 SMALL SIGNAL GROUND 1: GROUND
PG	EC300-02 POWER GROUND 1: GROUND
PG	EC300-03 POWER GROUND 2: GROUND
B+	EC300-04 EMS SWITCHED POWER SUPPLY 1: B+
PG	EC300-05 POWER GROUND 3: GROUND
B+	EC300-06 EMS SWITCHED POWER SUPPLY 2: B+
SG	EC300-07 SENSOR GROUND 1: GROUND
SG	EC300-08 SENSOR GROUND 2: GROUND
I	EC300-15 AUTOMATIC – PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED MANUAL, ROW – PARK / NEUTRAL SIGNAL: B+ WHEN IGNITION CRANK (III)
O	EC300-16 EMS CONTROL RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	EC300-17 ENGINE CRANK: B+
SS	EC300-19 SENSOR POWER SUPPLY 2: NOMINAL 5 V
I	EC300-24 ACCELERATOR PEDAL POSITION SENSOR 1 SIGNAL: FOOT OFF = 0.75 V; FULLY DEPRESSED = 3.40 V (AUTO) 3.20 V (MAN)
I	EC300-30 IGNITION ON: B+
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
I	EC300-38 ACCELERATOR PEDAL POSITION SENSOR 2 SIGNAL: FOOT OFF = 3.38 V; FULLY DEPRESSED = 2.05 V (AUTO) 2.14 V (MAN)
I	EC300-41 BRAKE ON / OFF SWITCH: NORMALLY OPEN / B+ WHEN ACTIVATED
I	EC300-42 INERTIA SWITCH: NORMALLY CLOSED / OPEN CIRCUIT WHEN ACTIVATED
O	EC300-51 STARTER RELAY DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
B+	EC300-54 BATTERY POWER SUPPLY: B+
C	PI300-01 CAN +
C	PI300-02 CAN -
SG	PI300-06 CRANKSHAFT SENSOR SIGNAL GROUND: GROUND
SG	PI300-07 BANK 1 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-08 BANK 2 CAMSHAFT SENSOR GROUND: GROUND
SG	PI300-10 SENSOR GROUND: GROUND
SG	PI300-11 THROTTLE POSITION SENSOR GROUND: GROUND
SG	PI300-12 SENSOR GROUND: GROUND
SG	PI300-15 SENSOR GROUND: GROUND
I	PI300-16 GENERATOR FAULT: CHARGE WARNING
SG	PI300-18 MASS AIR FLOW SENSOR GROUND: GROUND
SG	PI300-19 BANK 1 KNOCK SENSOR GROUND: GROUND
SG	PI300-20 BANK 2 KNOCK SENSOR GROUND: GROUND
SG	PI300-22 HO2 SENSORS 1/2 SHIELD: GROUND
I	PI300-23 ENGINE OIL TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-24 SENSOR POWER SUPPLY: NOMINAL 5 V
I	PI300-26 HO2 SENSOR 2/1 SIGNAL: VARIABLE CURRENT
I	PI300-27 HO2 SENSOR 2/2 SIGNAL: CONSTANT CURRENT
I	PI300-28 HO2 SENSOR 1/1 SIGNAL: VARIABLE CURRENT
I	PI300-29 HO2 SENSOR 1/2 SIGNAL: CONSTANT CURRENT
I	PI300-30 CRANKSHAFT SENSOR SIGNAL: PULSED SIGNAL, 70 PULSES PER ENGINE CYCLE
I	PI300-33 BANK 2 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-34 BANK 1 CAMSHAFT SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
I	PI300-38 THROTTLE BODY (THR) SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS PRESSURE INCREASES
I	PI300-39 TMAP SENSOR TEMPERATURE SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-40 HO2 SENSOR 1/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-41 HO2 SENSOR 2/2 SIGNAL, NOMINAL 1 V SWING: 0.1 – 0.9 V SWING
I	PI300-42 BANK 1 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
I	PI300-43 BANK 2 KNOCK SENSOR SIGNAL: VARIABLE VOLTAGE DEPENDENT ON ENGINE VIBRATION
SG	PI300-45 HO2 SENSORS 2/2 SHIELD: GROUND
I	PI300-46 ENGINE FUEL TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS	PI300-47 SENSOR POWER SUPPLY: NOMINAL 5 V
O	PI300-50 EGR DRIVE 4: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-51 EGR DRIVE 3: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-52 EGR DRIVE 2: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
O	PI300-53 EGR DRIVE 1: B+: EGR DRIVE 1, 2, 3, 4 ARE OPERATED IN TURN
I	PI300-65 THROTTLE POSITION SENSOR 1 SIGNAL: IDLE = 0.60 V; FULL THROTTLE = 4.30 V
I	PI300-66 INTAKE AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-67 THROTTLE POSITION SENSOR 2 SIGNAL: IDLE = 1.48 V; FULL THROTTLE = 4.40 V
I	PI300-68 ENGINE COOLANT TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I	PI300-69 MAP SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS MANIFOLD ABSOLUTE PRESSURE INCREASES
I	PI300-70 MASS AIR FLOW SENSOR SIGNAL, NOMINAL 0 – 5 V BY ENGINE OPERATING CONDITION
SS	PI300-71 INJECTION PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: POTENTIOMETER – VOLTAGE INCREASES AS PRESSURE INCREASES
SS	PI300-72 THROTTLE POSITION SENSOR POWER SUPPLY: NOMINAL 5 V
O	PI300-74 THROTTLE MOTOR GROUND: GROUND
O	PI300-75 THROTTLE MOTOR DRIVE: B+ TO ACTIVATE MOTOR
O	PI300-76 HO2 SENSOR HEATER CONTROL – 1/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-77 HO2 SENSOR HEATER CONTROL – 2/1: PWM, 1 CYCLE PER 128 mS, VARIABLE DUTY CYCLE
O	PI300-86 BANK 1 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-87 BANK 2 VVT SOLENOID VALVE: PWM, 300 Hz, POSITIVE DUTY CYCLE RANGE 0% – 100%
O	PI300-88 HO2 SENSOR HEATER CONTROL – 1/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-89 HO2 SENSOR HEATER CONTROL – 2/2: PWM, 1 CYCLE PER 256 mS, POSITIVE DUTY CYCLE RANGE 0 mS = 0%, 77 mS = 30%, 256 mS = 100%
O	PI300-90 EVAP CANISTER PURGE VALVE DRIVE: PWM, 10 Hz, POSITIVE DUTY CYCLE RANGE 7% – 100%
O	PI300-94 INTERCOOLER PUMP RELAY DRIVE

**Fig. 03.5**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
APP SENSOR	CR14	6-WAY / BLACK	TOP OF ACCELERATOR PEDAL
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
CKP SENSOR	PI21	2-WAY / BLACK	ENGINE UNDER SIDE, FORWARD OF BELL HOUSING
CMP SENSOR 1	PI23	2-WAY / BLACK	BANK 1 (RH) CAMSHAFT COVER, FRONT
CMP SENSOR 2	PI22	2-WAY / BLACK	BANK 2 (LH) CAMSHAFT COVER, FRONT
ECT SENSOR	PI25	2-WAY / BLACK	ENGINE VEE, COOLANT OUTLET CASTING
EFT SENSOR	PI27	2-WAY / BLACK	FUEL RAIL, RH REAR
EGR VALVE	PI15	6-WAY / BLACK	INTAKE MANIFOLD, REAR
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
EOT SENSOR	PI24	2-WAY / BLACK	ADJACENT TO OIL FILTER
EVAP CANISTER PURGE VALVE	FH111	2-WAY / BLACK	ENGINE COMPARTMENT, LH SIDE, ADJACENT TO SUSPENSION TURRET
H02 SENSOR DOWNSTREAM 1/2	PI11	4-WAY / BLACK	RH EXHAUST, CATALYST CENTER
H02 SENSOR DOWNSTREAM 2/2	PI13	4-WAY / BLACK	LH EXHAUST, CATALYST CENTER
H02 SENSOR UPSTREAM 1/1	PI10	4-WAY / BLACK	RH EXHAUST, TOP OF CATALYST
H02 SENSOR UPSTREAM 2/1	PI12	4-WAY / BLACK	LH EXHAUST, TOP OF CATALYST
IP SENSOR	PI28	3-WAY / BLACK	FUEL RAIL, LH REAR
KNOCK SENSORS	PI19	4-WAY / BLACK	ENGINE VEE
MAF SENSOR	PI14	5-WAY / BLACK	ENGINE AIR INTAKE, ADJACENT TO AIR CLEANER
THR SENSOR	PI301	4-WAY / BLACK	ENGINE, RH REAR
THROTTLE BODY	PI26	6-WAY / BLACK	ENGINE AIR INTAKE, REAR
THROTTLE MOTOR	—	—	THROTTLE BODY
TMAP SENSOR	PI310	4-WAY / BLACK	INTAKE MANIFOLD, REAR, BELOW THROTTLE ASSEMBLY
TP SENSOR	—	—	THROTTLE BODY, THROTTLE SHAFT
VVT SOLENOID VALVE 1	PI16	2-WAY / BLACK	RH CYLINDER HEAD, FRONT
VVT SOLENOID VALVE 2	PI17	2-WAY / BLACK	LH CYLINDER HEAD, FRONT

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

**GROUNDS**

Ground	Location
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

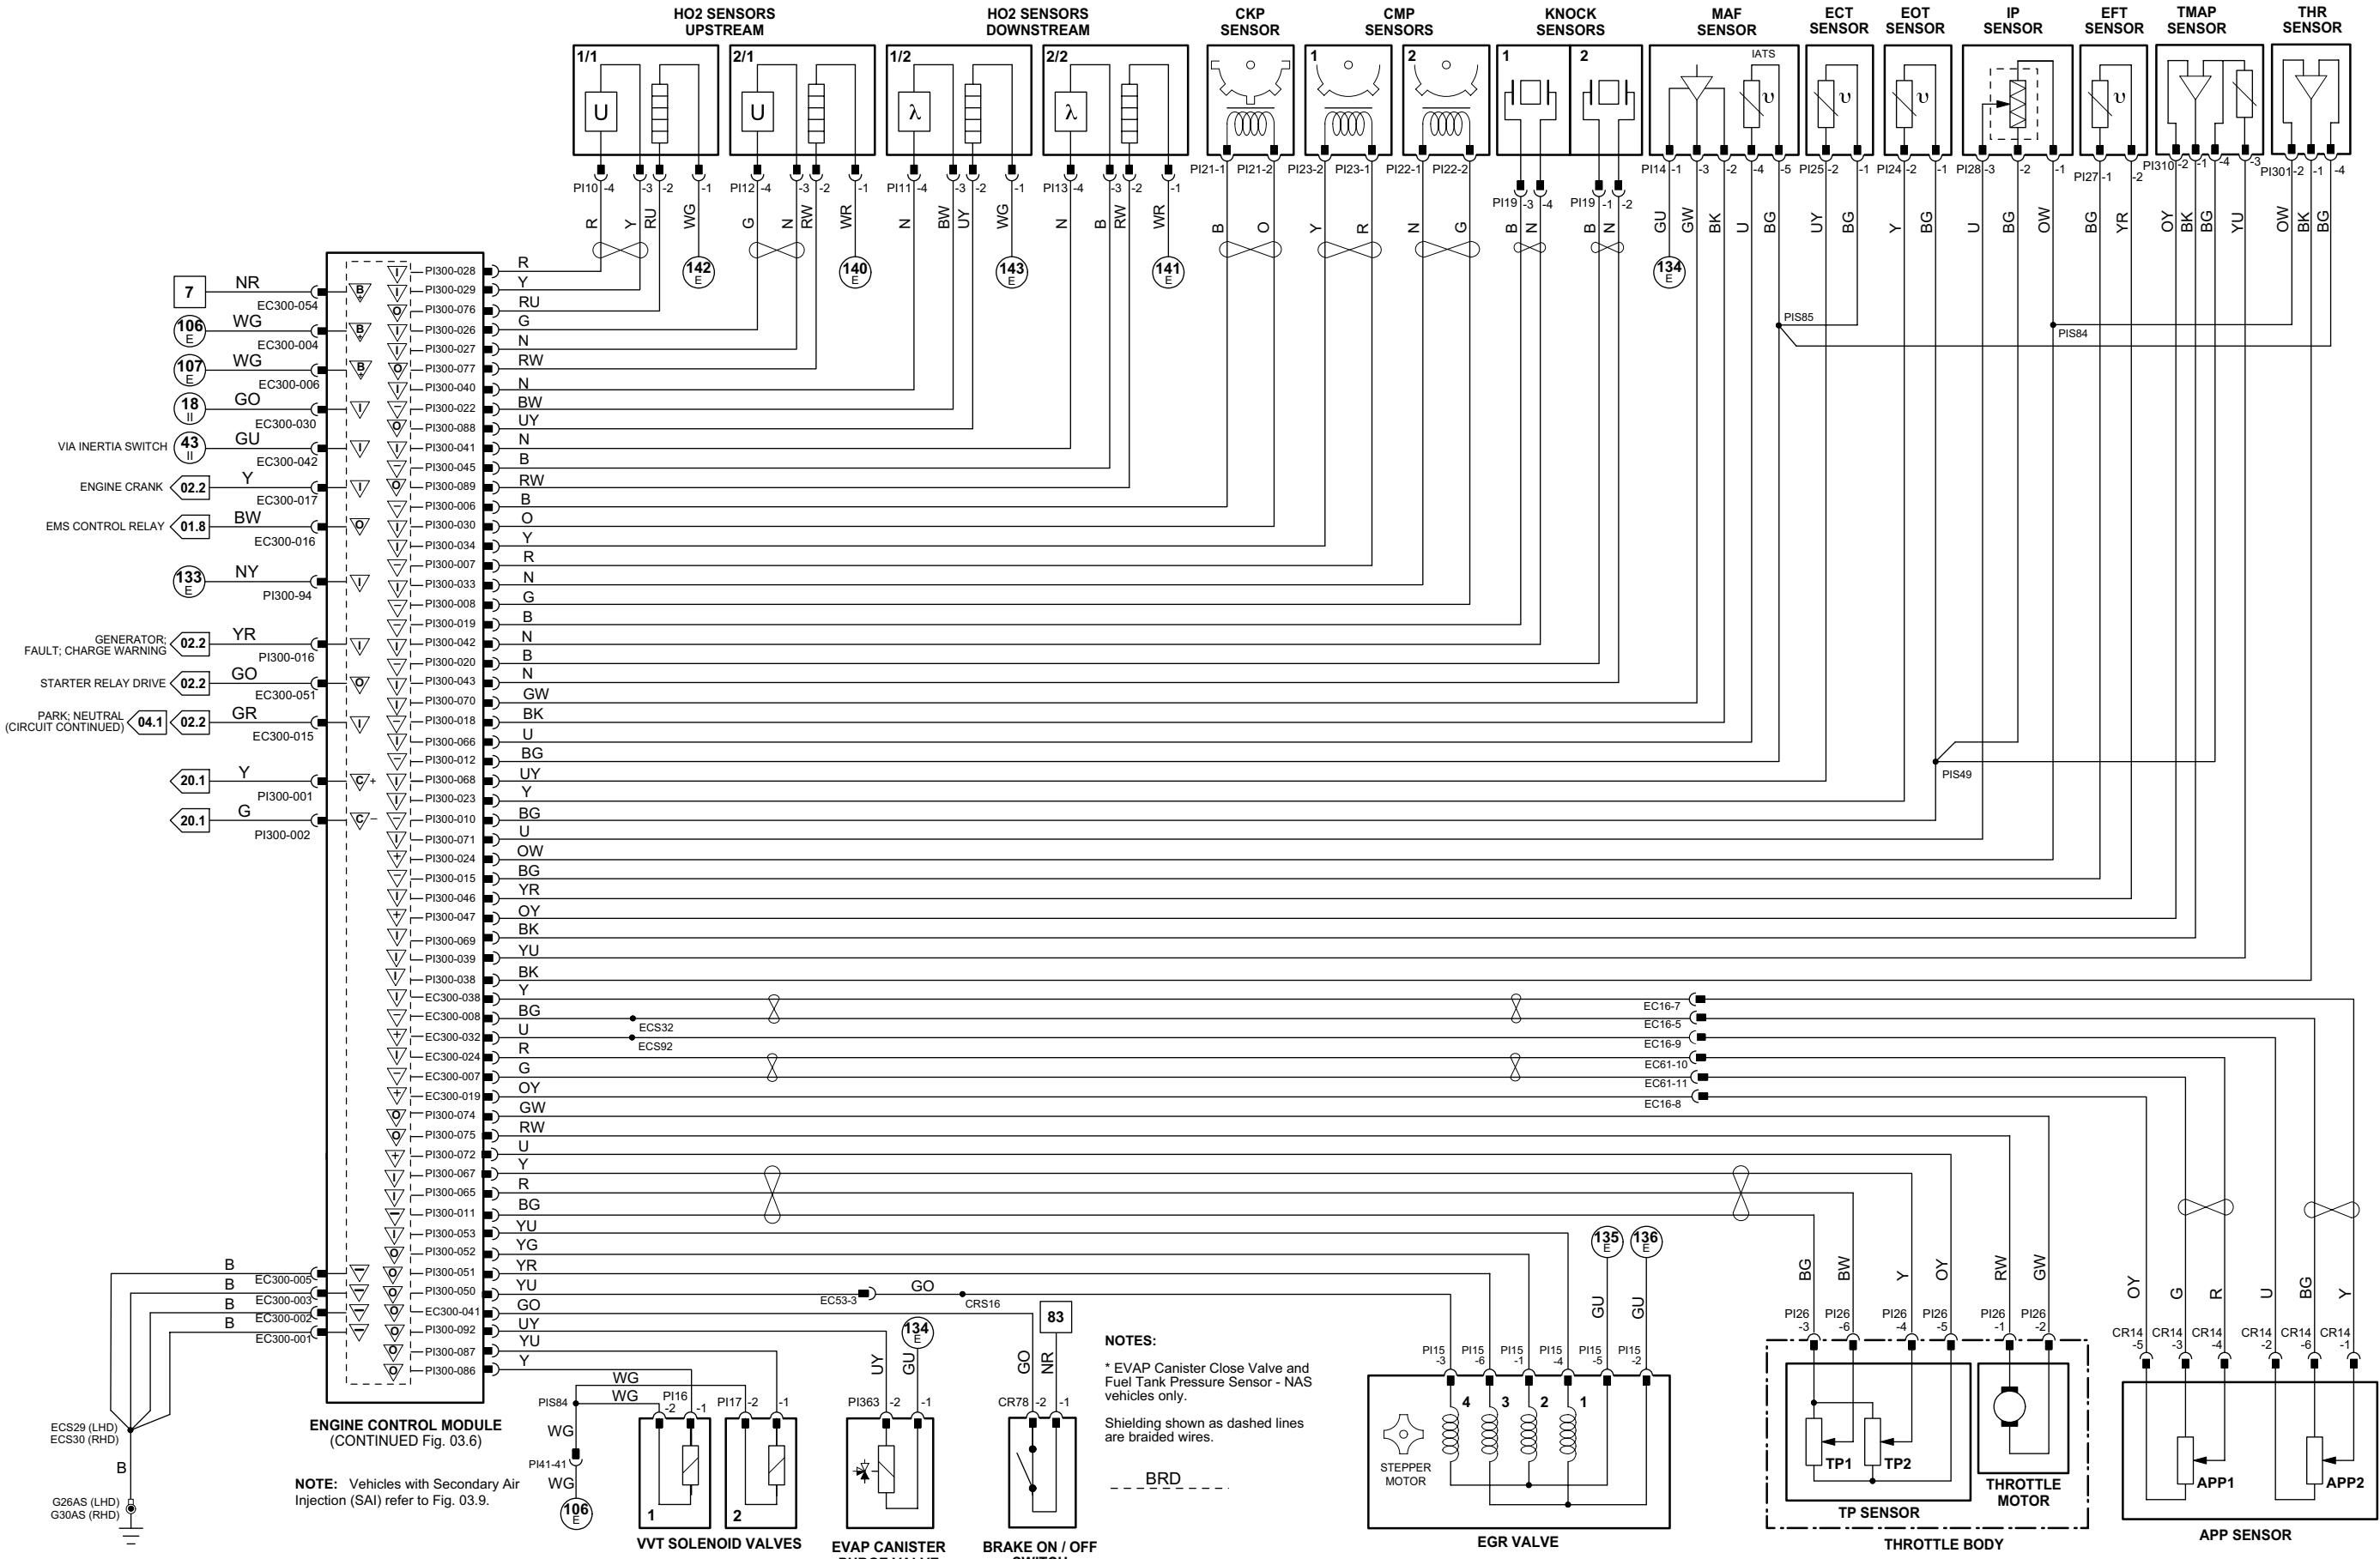

**Fig. 03.6**

**Engine Control Module**

Pin	Description and Characteristic
SG	EC300-08 SENSOR GROUND 1: GROUND
I	EC300-12 AIR CONDITIONING PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: TRANSDUCER – VOLTAGE INCREASES AS PRESSURE INCREASES
O	EC300-20 FUEL PUMP DRIVE SIGNAL (TO REM): PWM, 150 Hz, NORMAL POSITIVE DUTY CYCLE RANGE = 4% – 51%
I	EC300-21 FUEL PUMP MONITOR
O	EC300-23 LEAK DETECTION HEATER CONTROL
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
O	EC300-33 LEAK DETECTION PUMP CONTROL
I	EC300-35 SPEED CONTROL SWITCHES SIGNAL GROUND: GROUND
SS	EC300-36 SPEED CONTROL SWITCH REQUEST: STEPPED RESISTANCE
I	EC300-40 BRAKE CANCEL SWITCH: NORMALLY CLOSED / GROUND WHEN ACTIVATED
I	EC300-43 ASL MASTER SWITCH
O	EC300-48 LEAK DETECTION VALVE CONTROL
O	EC300-49 COOLING FAN MODULE CONTROL: PWM, 140 Hz, POSITIVE DUTY CYCLE RANGE 7% – 95%
I	EC300-52 ASL LED
O	PI300-49 AIR CLEANER SOLENOID VALVE DRIVE: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-54 IGNITION COIL ACTIVATE – CYLINDER 8: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-55 IGNITION COIL ACTIVATE – CYLINDER 7: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-56 IGNITION COIL ACTIVATE – CYLINDER 6: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-57 IGNITION COIL ACTIVATE – CYLINDER 5: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-58 IGNITION COIL ACTIVATE – CYLINDER 4: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-59 IGNITION COIL ACTIVATE – CYLINDER 3: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-60 IGNITION COIL ACTIVATE – CYLINDER 2: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-61 IGNITION COIL ACTIVATE – CYLINDER 1: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
I	PI300-62 IGNITION MONITOR BANK 1: PULSED SIGNAL, 3 PULSES PER ENGINE CYCLE
I	PI300-64 IGNITION MONITOR BANK 2: PULSED SIGNAL, 3 PULSES PER ENGINE CYCLE
O	PI300-78 FUEL INJECTOR DRIVE – CYLINDER 1: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-79 FUEL INJECTOR DRIVE – CYLINDER 2: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-80 FUEL INJECTOR DRIVE – CYLINDER 3: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-81 FUEL INJECTOR DRIVE – CYLINDER 4: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-82 FUEL INJECTOR DRIVE – CYLINDER 5: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-83 FUEL INJECTOR DRIVE – CYLINDER 6: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-84 FUEL INJECTOR DRIVE – CYLINDER 7: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND
O	PI300-85 FUEL INJECTOR DRIVE – CYLINDER 8: TO ACTIVATE, ECM SWITCHES CIRCUIT TO GROUND

**Rear Electronic Module**

Pin	Description and Characteristic
B+	CR4-3 BATTERY POWER SUPPLY (LOGIC): B+
B+	CR12-8 IGNITION SWITCHED POWER SUPPLY (II) (FUEL PUMP CONTROL): B+
S	CR13-1 SCP NETWORK +
S	CR13-2 SCP NETWORK –
B+	CR73-1 FUEL PUMP POWER SUPPLY: B+ WHEN FUEL PUMP RELAY ACTIVATED
PG	CR73-2 POWER GROUND (FUEL PUMP): GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AIR CLEANER SOLENOID VALVE	EC37	2-WAY / BLACK	AIR CLEANER HOUSING
AIR CONDITIONING PRESSURE SENSOR	EC11	3-WAY / BLACK	ADJACENT TO RADIATOR / LH SIDE
ASL SWITCH	CL1	8-WAY / BLACK	CABIN, CENTRE CONSOLE
BRAKE CANCEL SWITCH	CL2	8-WAY / BLACK	CABIN, CENTRE CONSOLE
COOLING FAN MODULE AND MOTOR	CR77	2-WAY / BLACK	TOP OF BRAKE PEDAL
ENGINE CONTROL MODULE	EC20	2-WAY / GREY	RADIATOR COOLING FAN
ENGINE CONTROL MODULE	GC1	2-WAY / GREY	
FUEL INJECTOR 1 (V8 SC)	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL INJECTOR 2 (V8 SC)	PI300	96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL INJECTOR 3 (V8 SC)	IS1	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 4 (V8 SC)	IS7	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 5 (V8 SC)	IS2	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 6 (V8 SC)	IS8	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 7 (V8 SC)	IS3	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL INJECTOR 8 (V8 SC)	IS9	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL PUMP	IS4	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL PUMP MODULE	IS10	2-WAY / BLACK	FUEL RAIL / INTAKE MANIFOLD
FUEL PUMP RELAY	FP8	4-WAY / BLACK	FUEL TANK, RH SIDE
IGNITION CAPACITOR	FP28	6-WAY / BLACK	ABOVE FUEL TANK
IGNITION MODULE AND COIL 1	PI54	2-WAY / BLACK	LH CYLINDER HEAD, REAR
IGNITION MODULE AND COIL 2	P12	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 3	P16	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 4	P13	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 5	P17	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 6	P14	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 7	P18	4-WAY / BLACK	RH CYLINDER HEAD
IGNITION MODULE AND COIL 8	P15	4-WAY / BLACK	RH CYLINDER HEAD
INTERCOOLER PUMP	P19	4-WAY / BLACK	LH CYLINDER HEAD
LEAK DETECTION UNIT	CP2	2-WAY / BLACK	ENGINE COMPARTMENT, RH SIDE, ADJACENT TO RADIATOR
REAR ELECTRONIC MODULE	CV9	4-WAY / BLACK	ABOVE FUEL TANK
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR12	12-WAY / BLACK	
REAR ELECTRONIC MODULE	CR13	22-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR73	4-WAY / BLACK	TRUNK / RH REAR
REAR POWER DISTRIBUTION FUSE BOX	CR5	4-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR68	8-WAY / BLACK	
REAR POWER DISTRIBUTION FUSE BOX	CR82	12-WAY / BLACK	
STEERING WHEEL SPEED CONTROL SWITCHES	—	—	STEERING WHEEL

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC10	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
CP1	10-WAY / BLACK / INTERCOOLER PUMP LINK LEAD	ENGINE COMPARTMENT, RH FRONT, ADJACENT TO RADIATOR
CV1	8-WAY / GREY / FUEL PUMP LINK HARNESS TO PARKING BRAKE MOTOR HARNESS	REAR OF FUEL TANK / RH SIDE
CV5	12-WAY / GREY / FUEL PUMP LINK HARNESS TO EVAP CANISTER CLOSE VALVE LINK HARNESS	ABOVE REAR AXLE / CENTER
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC17	8-WAY / GREY / ENGINE COMPARTMENT TO CABIN HARNESS	ENGINE COMPARTMENT / REAR RH SIDE
EC21	2-WAY / BLACK / ENGINE HARNESS TO COOLING FAN MODULE	ENGINE COMPARTMENT / ADJACENT TO RADIATOR / RH SIDE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
FP2	6-WAY / GREY / CABIN HARNESS TO FUEL PUMP HARNESS	CABIN / BELOW REAR SEAT CUSHION / RH SIDE
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IS5	6-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTOR LINK	ENGINE, LH REAR
PI41	42-WAY / BLACK / ENGINE HARNESS TO VEHICLE HARNESS	ENGINE COMPARTMENT, BULKHEAD, PASSENGER SIDE

**GROUNDS**

Ground	Location
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION BOX
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
PI51	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER

FOR CONTROL MODULE PIN-OUT INFORMATION AND GROUNDS, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

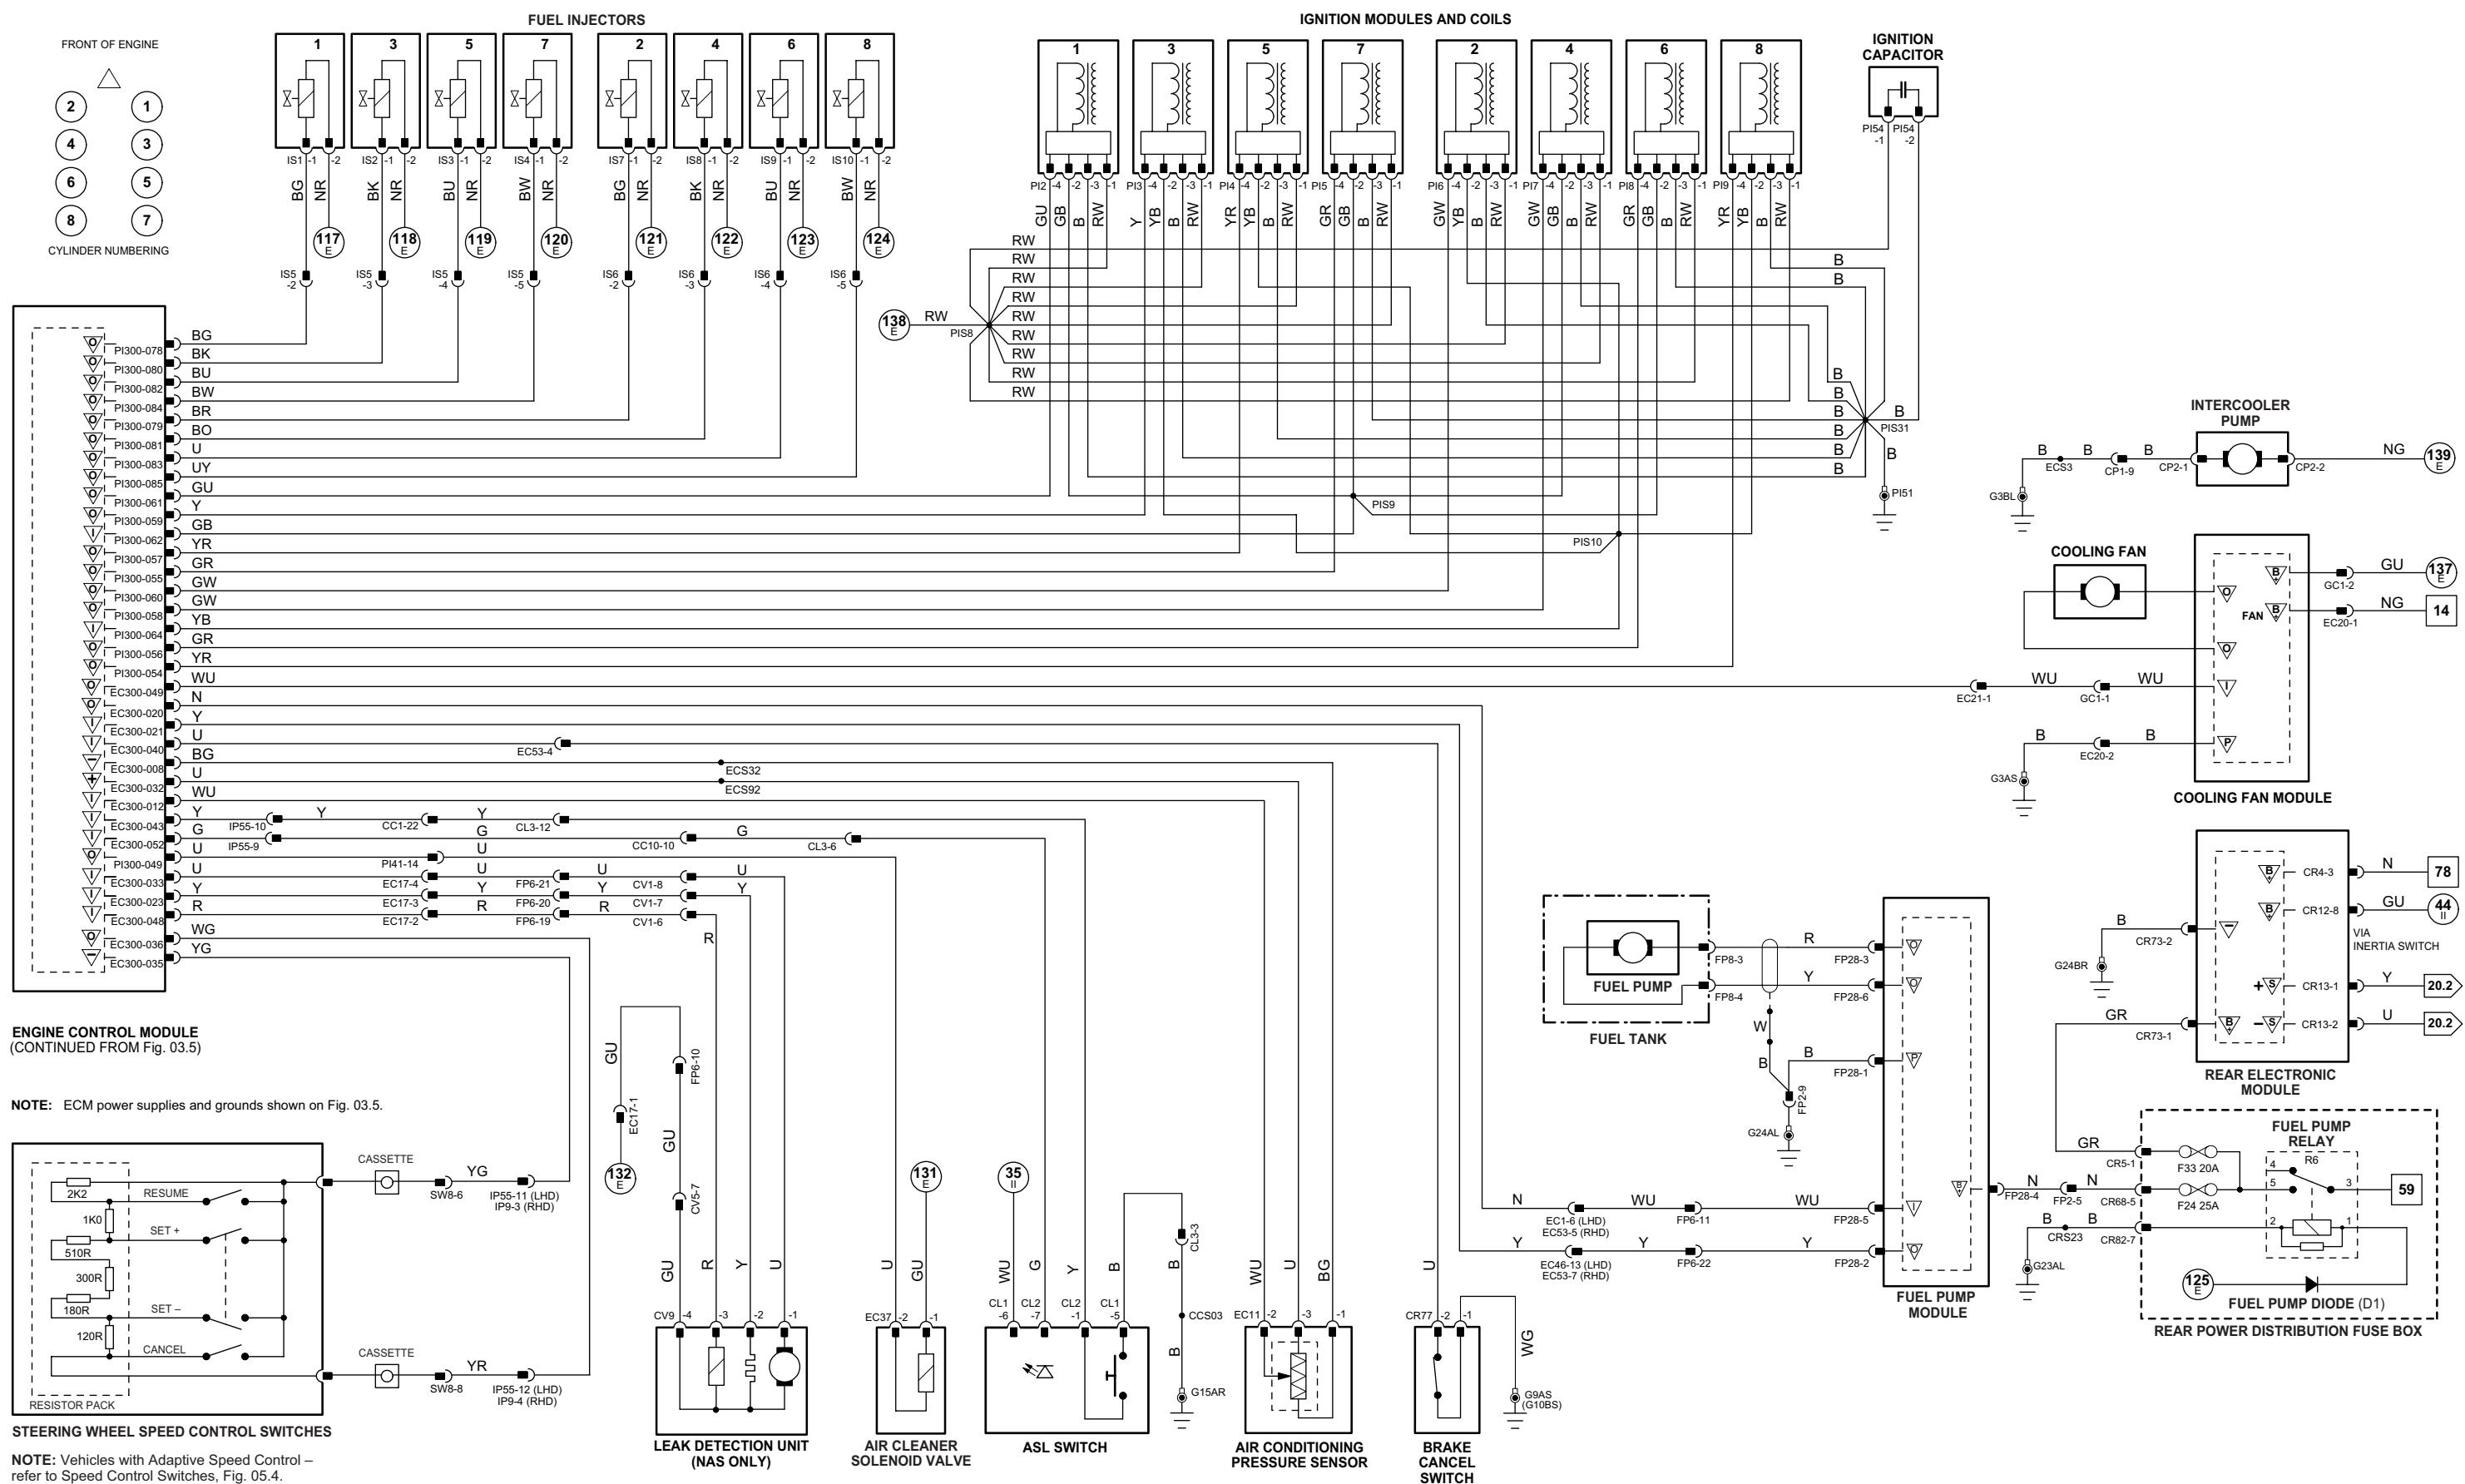

**Fig. 03.7**

**Engine Control Module**

Pin	Description and Characteristic
I C98-A1	EOT SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
C C98-A3	CAN
C C98-A4	CAN +
I C98-C4	KNOCK SENSOR 2 SIGNAL: DIFFERENTIAL –ve. VOLTAGE DEPENDENT ON ENGINE VIBRATION
SS C98-D1	FRP SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS PRESSURE INCREASES
I C98-D3	KNOCK SENSOR 2 SIGNAL: DIFFERENTIAL +ve. VOLTAGE DEPENDENT ON ENGINE VIBRATION
I C98-D4	KNOCK SENSOR 1 SIGNAL: DIFFERENTIAL –ve. VOLTAGE DEPENDENT ON ENGINE VIBRATION
I C98-E1	EGR THROTTLE POSITION SENSOR SIGNAL: NOMINAL 0 – 5 V
SG C98-E2	FRP SENSOR GROUND: GROUND
I C98-E4	KNOCK SENSOR 1 SIGNAL: DIFFERENTIAL +ve. VOLTAGE DEPENDENT ON ENGINE VIBRATION
SS C98-F1	EGR THROTTLE POSITION SENSOR POWER SUPPLY: NOMINAL 5 V
SG C98-F2	EGR THROTTLE POSITION SENSOR GROUND: GROUND
I C98-F3	INERTIA SWITCH: NORMALLY CLOSED / OPEN CIRCUIT WHEN ACTIVATED
SG C98-K1	EOT SENSOR GROUND (EGR VALVE POSITION SENSOR 1): GROUND
O C98-K4	INLET PORT DEACTIVATION SOLENOID: PWM, 250 Hz
I C99-A2	EGR VALVE POSITION SENSOR 2: NOMINAL 0 – 5 V
I C99-A3	EGR VALVE POSITION SENSOR 1: NOMINAL 0 – 5 V
I C99-B1	ACT SENSOR SIGNAL: NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I C99-B2	EFT SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
O C99-B4	ROTARY ELECTRONIC ACTUATOR 2:
I C99-C1	MAP SENSOR SIGNAL, NOMINAL 0 – 5 V: VOLTAGE INCREASES AS MANIFOLD ABSOLUTE PRESSURE INCREASES
I C99-C2	ECT SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS C99-C3	EGR VALVE POSITION SENSORS POWER SUPPLY: NOMINAL 5 V
O C99-C4	ROTARY ELECTRONIC ACTUATOR 1:
SS C99-D1	MAP SENSOR / ACTUATORS POWER SUPPLY: NOMINAL 5 V
SG C99-D2	EGR VALVE POSITION SENSOR 1 / ACTUATOR 2 GROUND: GROUND
C99-D3	DPF PRESSURE SENSOR SIGNAL
SG* C99-E2	ECT SENSOR GROUND (MAP SENSOR): GROUND
SG* C99-E2	MAP SENSOR GROUND (ECT SENSOR): GROUND
I C99-F1	CKP SENSOR SIGNAL: PULSED SIGNAL, 70 PULSES PER ENGINE CYCLE
SS C99-G1	CKP SENSOR POWER SUPPLY: NOMINAL 5 V
SG C99-G2	CKP SENSOR SIGNAL GROUND: GROUND
SG* C99-G3	ACT SENSOR GROUND (EGR VALVE 2, EFT SENSOR, ACTUATOR 1): GROUND
SG* C99-G3	EGR VALVE POSITION SENSOR 2 GROUND (ACT SENSOR, EFT SENSOR, ACTUATOR 1): GROUND
SG* C99-G3	EFT SENSOR GROUND (ACT SENSOR, EGR VALVE POSITION SENSOR 2, ACTUATOR 1): GROUND
SG* C99-G3	ACTUATOR 1 GROUND (ACT SENSOR, EGR VALVE POSITION SENSOR 2, EFT SENSOR): GROUND
I C99-G4	CMP SENSOR SIGNAL: PULSED SIGNAL, 4 PULSES PER ENGINE CYCLE
O C99-H1	EGR VALVE 1: +ve PWM
O C99-H2	EGR VALVE 1: –ve PWM
SG C99-H3	CMP SENSOR GROUND: GROUND
SS C99-H4	CMP SENSOR POWER SUPPLY: NOMINAL 5 V
O C99-J1	EGR VALVE 2: +ve PWM
O C99-J2	ROTARY ELECTRONIC ACTUATOR 1:
O C99-J3	ROTARY ELECTRONIC ACTUATOR 2:
O C99-J4	EGR THROTTLE MOTOR DRIVE: +ve PWM
O C99-K1	EGR VALVE 2: –ve PWM
O C99-K2	ROTARY ELECTRONIC ACTUATOR 1:
O C99-K3	ROTARY ELECTRONIC ACTUATOR 2:
O C99-K4	EGR THROTTLE MOTOR DRIVE: –ve PWM
SG EC66-A2	APP SENSOR SHIELD: GROUND
O EC66-B1	STARTER RELAY DRIVE: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
SG EC66-B2	APP SENSOR 2 GROUND: GROUND
SG EC66-C1	APP SENSOR 1 GROUND: GROUND
I EC66-C2	APP SENSOR 2 SIGNAL: NEGATIVE-GOING VOLTAGE SLOPE, TYPICAL IDLE VOLTAGE = 3.445V TO 3.305V; TYPICAL FULL PEDAL VOLTAGE = 2.05 V
I EC66-D1	APP SENSOR 1 SIGNAL: POSITIVE-GOING VOLTAGE SLOPE, TYPICAL IDLE VOLTAGE = 0.61V TO 0.89V; TYPICAL FULL PEDAL VOLTAGE = 3.4 V
SS EC66-D2	APP SENSOR 2 POWER SUPPLY: NOMINAL 5 V
I EC66-D4	AUTOMATIC – PARK / NEUTRAL SIGNAL: B+ WHEN ACTIVATED
SS EC66-E1	APP SENSOR 1 POWER SUPPLY: NOMINAL 5 V
I EC66-F1	IAT SENSOR (INTEGRAL TO MAF SENSOR) SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I EC66-F3	ENGINE CRANK: B+
I EC66-F4	MAF SENSOR 1 SIGNAL: TIME PERIOD (FREQUENCY) SIGNAL, PROPORTIONAL TO AIR FLOW
I EC66-G2	BRAKE ON / OFF SWITCH: NORMALLY OPEN / B+ WHEN ACTIVATED
I EC66-G4	MAF SENSOR 2 SIGNAL: TIME PERIOD (FREQUENCY) SIGNAL, PROPORTIONAL TO AIR FLOW
O EC66-J3	EMS CONTROL RELAY DRIVE: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
B+ EC66-K3	IGNITION SWITCHED POWER (RUN): PJB, F4, 5A
B+ EC66-K4	BATTERY POWER SUPPLY: B+
B+ EC66-L1	EMS SWITCHED POWER SUPPLY 1: FPDB, F20, 30A
B+ EC66-L2	EMS SWITCHED POWER SUPPLY 2: FPDB, F20, 30A
B+ EC66-L3	EMS SWITCHED POWER SUPPLY 3: FPDB, F20, 30A
SG EC66-L4	MAF (INTEGRAL IAT) SENSORS GROUND: GROUND
PG EC66-M1	POWER GROUND: GROUND
PG EC66-M2	POWER GROUND: GROUND
PG EC66-M3	POWER GROUND: GROUND
PG EC66-M4	POWER GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
ACT SENSOR	C69	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
APP SENSOR	CR14	6-WAY / BLACK	TOP OF ACCELERATOR PEDAL
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
CKP SENSOR	C77	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
CMP SENSOR	C25	3-WAY / GREY	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
DPF PRESSURE SENSOR	EC65		
ECT SENSOR	C34	2-WAY / GREY	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
EFT SENSOR	C35	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
EGR THROTTLE BODY	C39	6-WAY / GREY	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
EGR VALVE 1	C70	6-WAY / GREY	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
EGR VALVE 2	C71	6-WAY / GREY	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
EOT SENSOR	C28	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FRP SENSOR	C30	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
INLET PORT DEACTIVATION SOLENOID	C36	4-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
KNOCK SENSOR 1	C87	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
KNOCK SENSOR 2	C88	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
MAF SENSOR 1	EC67	4-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
MAF SENSOR 2	EC68	4-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
MAP SENSOR	C31	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
POWERTRAIN CONTROL MODULE	C98	48-WAY / BROWN	FRONT BULKHEAD, PASSENGER SIDE
	C99	48-WAY / GREY	
ROTARY ELECTRONIC ACTUATOR 1	EC66	48-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
ROTARY ELECTRONIC ACTUATOR 2	C40	5-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
	C41	5-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

**GROUNDS**

Ground	Location
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER

**FOR CONTROL MODULE PIN-OUT, UNFOLD PAGE TO THE LEFT**


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

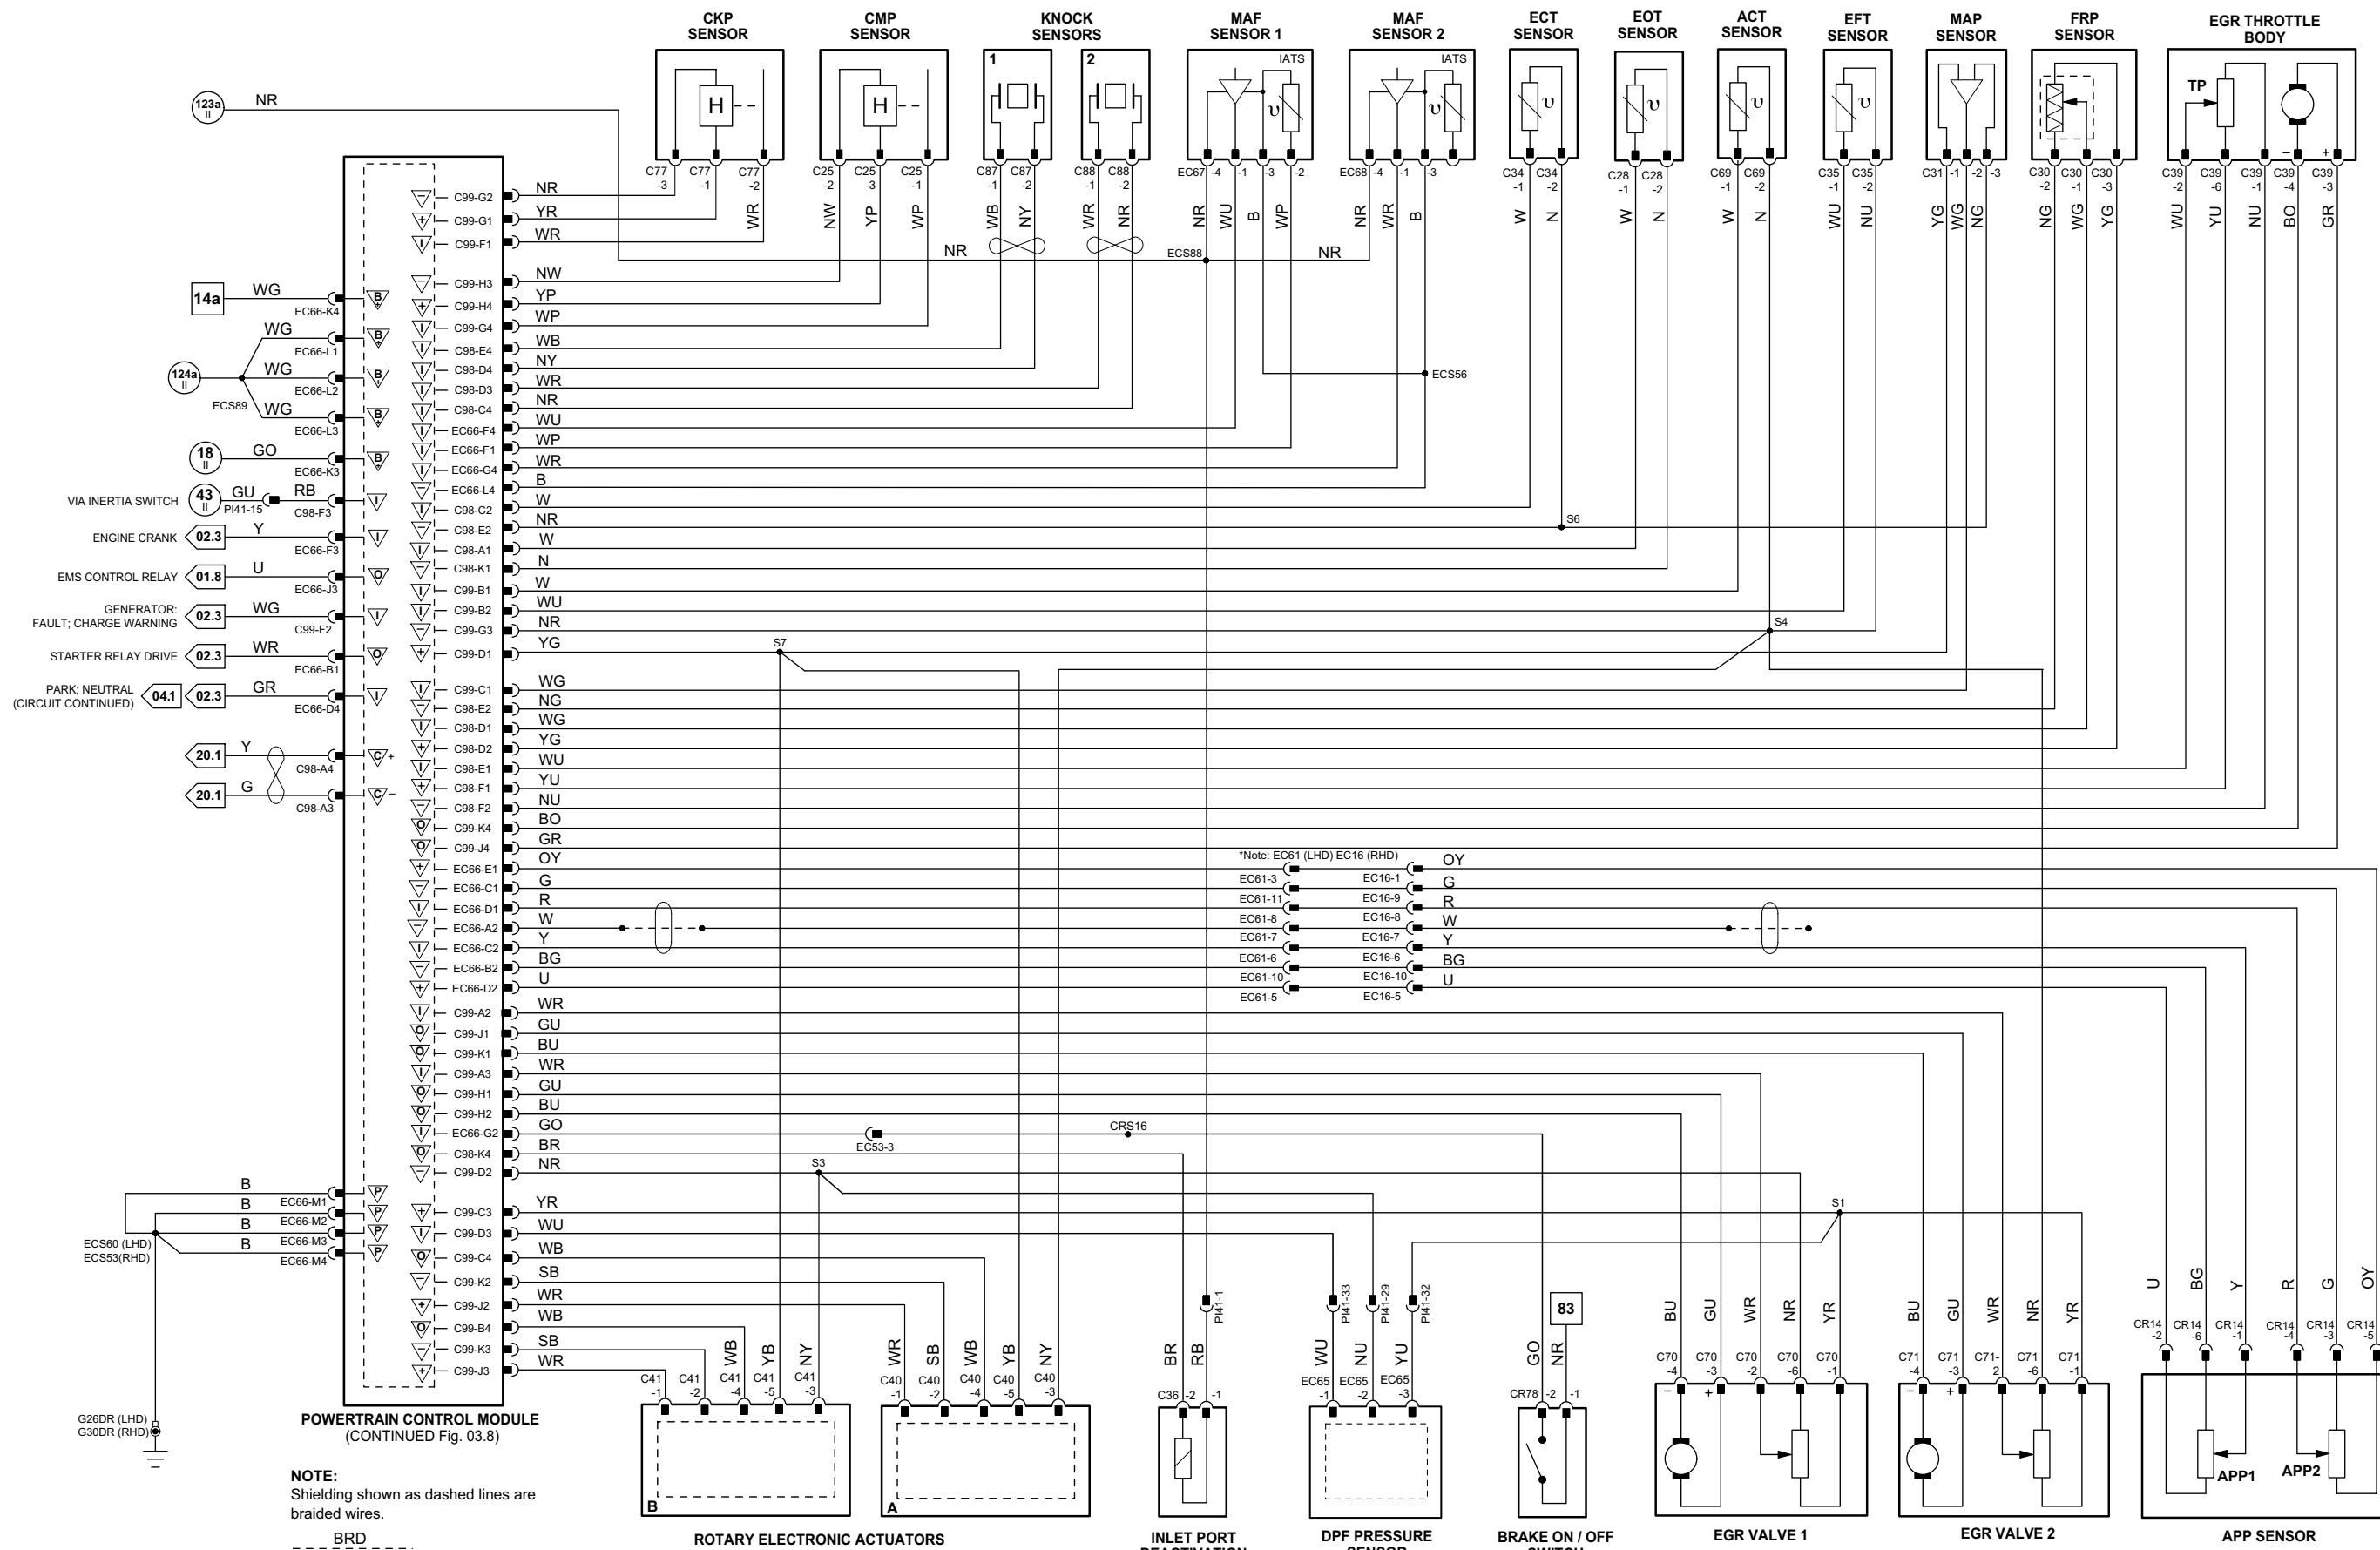

**Engine Control Module**

Pin	Description and Characteristic
SS	C98-B1 CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 1 UPSTREAM SIGNAL: GLOW PLUG CONTROL MODULE LOGIC MONITOR
I	C98-E3 GLOW PLUG CONTROL MODULE DRIVE: PWM, 100% = ON, 0% = OFF
O	C98-G3 FUEL PUMP, VOLUMETRIC CONTROL VALVE: PWM, 200 Hz
O	C98-K3 FUEL PUMP, PRESSURE CONTROL VALVE: PWM, 350 Hz
O	C98-L1 FUEL INJECTOR DRIVE - CYLINDER 4: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
+	C98-L2 FUEL INJECTOR POWER SUPPLY - CYLINDER 4:
+	C98-L3 FUEL INJECTOR POWER SUPPLY - CYLINDER 5:
O	C98-M1 FUEL INJECTOR DRIVE - CYLINDER 5: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
O	C98-M2 FUEL INJECTOR DRIVE - CYLINDER 6: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
+	C98-M3 FUEL INJECTOR POWER SUPPLY - CYLINDER 6:
SS	C99-A4 CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 2 UPSTREAM SIGNAL: DPF TEMPERATURE SENSOR SIGNAL:
SS	C99-D4 CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 1 DOWNSTREAM SIGNAL:
SS	C99-E3 CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 2 DOWNSTREAM SIGNAL:
SG	C99-F3 SIGNAL GROUND FOR CATALYTIC CONVERTER TEMPERATURE SENSORS - BANK 2 AND DPF SENSOR: GROUND
SG	C99-F4 SIGNAL GROUND FOR CATALYTIC CONVERTER TEMPERATURE SENSORS - BANK 1: GROUND
+	C99-L2 FUEL INJECTOR POWER SUPPLY - CYLINDER 2:
+	C99-L3 FUEL INJECTOR POWER SUPPLY - CYLINDER 1:
+	C99-L4 FUEL INJECTOR POWER SUPPLY - CYLINDER 3:
O	C99-M2 FUEL INJECTOR DRIVE - CYLINDER 2: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
O	C99-M3 FUEL INJECTOR DRIVE - CYLINDER 1: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
O	C99-M4 FUEL INJECTOR DRIVE - CYLINDER 3: TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
SG	EC66-B3 AIR CONDITIONING PRESSURE SENSOR GROUND
SG	EC66-B4 SPEED CONTROL SWITCHES SIGNAL GROUND: GROUND
I	EC66-C4 SPEED CONTROL SWITCH REQUEST: STEPPED RESISTANCE
SS	EC66-D3 AIR CONDITIONING PRESSURE SENSOR POWER SUPPLY: NOMINAL 5 V
I	EC66-E3 BRAKE CANCEL SWITCH: NORMALLY CLOSED / GROUND WHEN ACTIVATED
I	EC66-E4 ASL MASTER SWITCH
I	EC66-F2 AIR CONDITIONING PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: TRANSDUCER – VOLTAGE INCREASES AS PRESSURE INCREASES
O	EC66-H1 ACTIVE ENGINE MOUNT
I	EC66-H4 ASL LED
O	EC66-J4 FUEL LIFT PUMP DRIVE SIGNAL (TO FUEL LIFT PUMP RELAY): TO ACTIVATE, PCM SWITCHES CIRCUIT TO GROUND
O	EC66-K2 COOLING FAN MODULE CONTROL: PWM, 140 Hz, POSITIVE DUTY CYCLE RANGE 7% – 95%

**Fig. 03.8**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
ACTIVE ENGINE MOUNT 1	C74		
ACTIVE ENGINE MOUNT 3	C75		
AIR CONDITIONING PRESSURE SENSOR	EC101	3-WAY / BLACK	ENGINE COMPARTMENT, LH SIDE, HIGH PRESSURE REFRIGERANT LINE, BETWEEN COMPRESSOR AND CONDENSER
ASL SWITCH	CL1		
BRAKE CANCEL SWITCH	CL2		
CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 1 DOWNSTREAM	CR77	2-WAY / GREY	TOP OF BRAKE PEDAL
CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 1 UPSTREAM	GB7		RH CATALYTIC CONVERTER
CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 2 DOWNSTREAM	GB9		RH CATALYTIC CONVERTER
CATALYTIC CONVERTER TEMPERATURE SENSOR - BANK 2 UPSTREAM	GB6		LH CATALYTIC CONVERTER
COOLING FAN MODULE	GB8		LH CATALYTIC CONVERTER
DOSING PUMP	EC72	4-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT, REARWARD OF RADIATOR
DPF TEMPERATURE SENSOR	FP27	2-WAY / BLACK	FUEL TANK, RH SIDE, ABOVE FUEL FILLER HOSE
FUEL INJECTOR 1	GB10		DPF INLET
FUEL INJECTOR 2	C44	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL INJECTOR 3	C46	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL INJECTOR 4	C48	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL INJECTOR 5	C45	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL INJECTOR 6	C47	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL LIFT PUMP	C49	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
FUEL LIFT PUMP RELAY	—	—	FUEL TANK
FUEL TANK CONNECTOR	FP13	6-WAY / BLACK	REAR POWER DISTRIBUTION FUSE BOX – R15
FUEL-FIRED AUXILIARY HEATER MODULE	FF1	8-WAY / BLACK	FUEL TANK, RH SIDE
FF2	—	2-WAY / BLACK	BELOW LH HEADLAMP ASSEMBLY
FF3	—	—	
GLOW PLUG CONTROL MODULE	EC69	5-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT, BRACKET, DSC MODULE
EYELET	EC73		
6-WAY	EC74		
GLOW PLUGS (BANK 1)	EC76	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
GLOW PLUGS (BANK 2)	EC77	3-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
POWERTRAIN CONTROL MODULE	C98	48-WAY / BROWN	FRONT BULKHEAD, PASSENGER SIDE
C99	—	48-WAY / GREY	
EC66	—	48-WAY / BLACK	
PRESSURE CONTROL VALVE (FUEL PUMP)	C43	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36
REAR ELECTRONIC MODULE	—	—	LUGGAGE COMPARTMENT, RH REAR
REAR POWER DISTRIBUTION FUSE BOX	—	—	LUGGAGE COMPARTMENT
STEERING WHEEL SPEED CONTROL SWITCHES	SQ2	6-WAY / BLACK	STEERING WHEEL
VOLUMETRIC CONTROL VALVE (FUEL PUMP)	C42	2-WAY / BLACK	REFER TO SENSORS AND ACTUATORS, PAGE 35 OR 36

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC130	8-WAY / GREY / CABIN HARNESS TO FUEL FIRED HEATER LINK HARNESS	LOWER FRONT RIGHT
FH3	16-WAY / BLUE / CABIN HARNESS TO FRONT HARNESS	LH 'A' POST
FP2	6-WAY / GREY / CABIN HARNESS TO FUEL PUMP HARNESS	CABIN / BELOW REAR SEAT CUSHION / RH SIDE
GB11	12-WAY / GREY / ENGINE HARNESS TO GEARBOX HARNESS	ENGINE, REAR
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
PI41	42-WAY / BLACK / ENGINE HARNESS TO VEHICLE HARNESS	ENGINE COMPARTMENT, BULKHEAD, PASSENGER SIDE

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION BOX
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION BOX
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER

The following abbreviations are used to represent values for Control Module Pin-Out data


I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

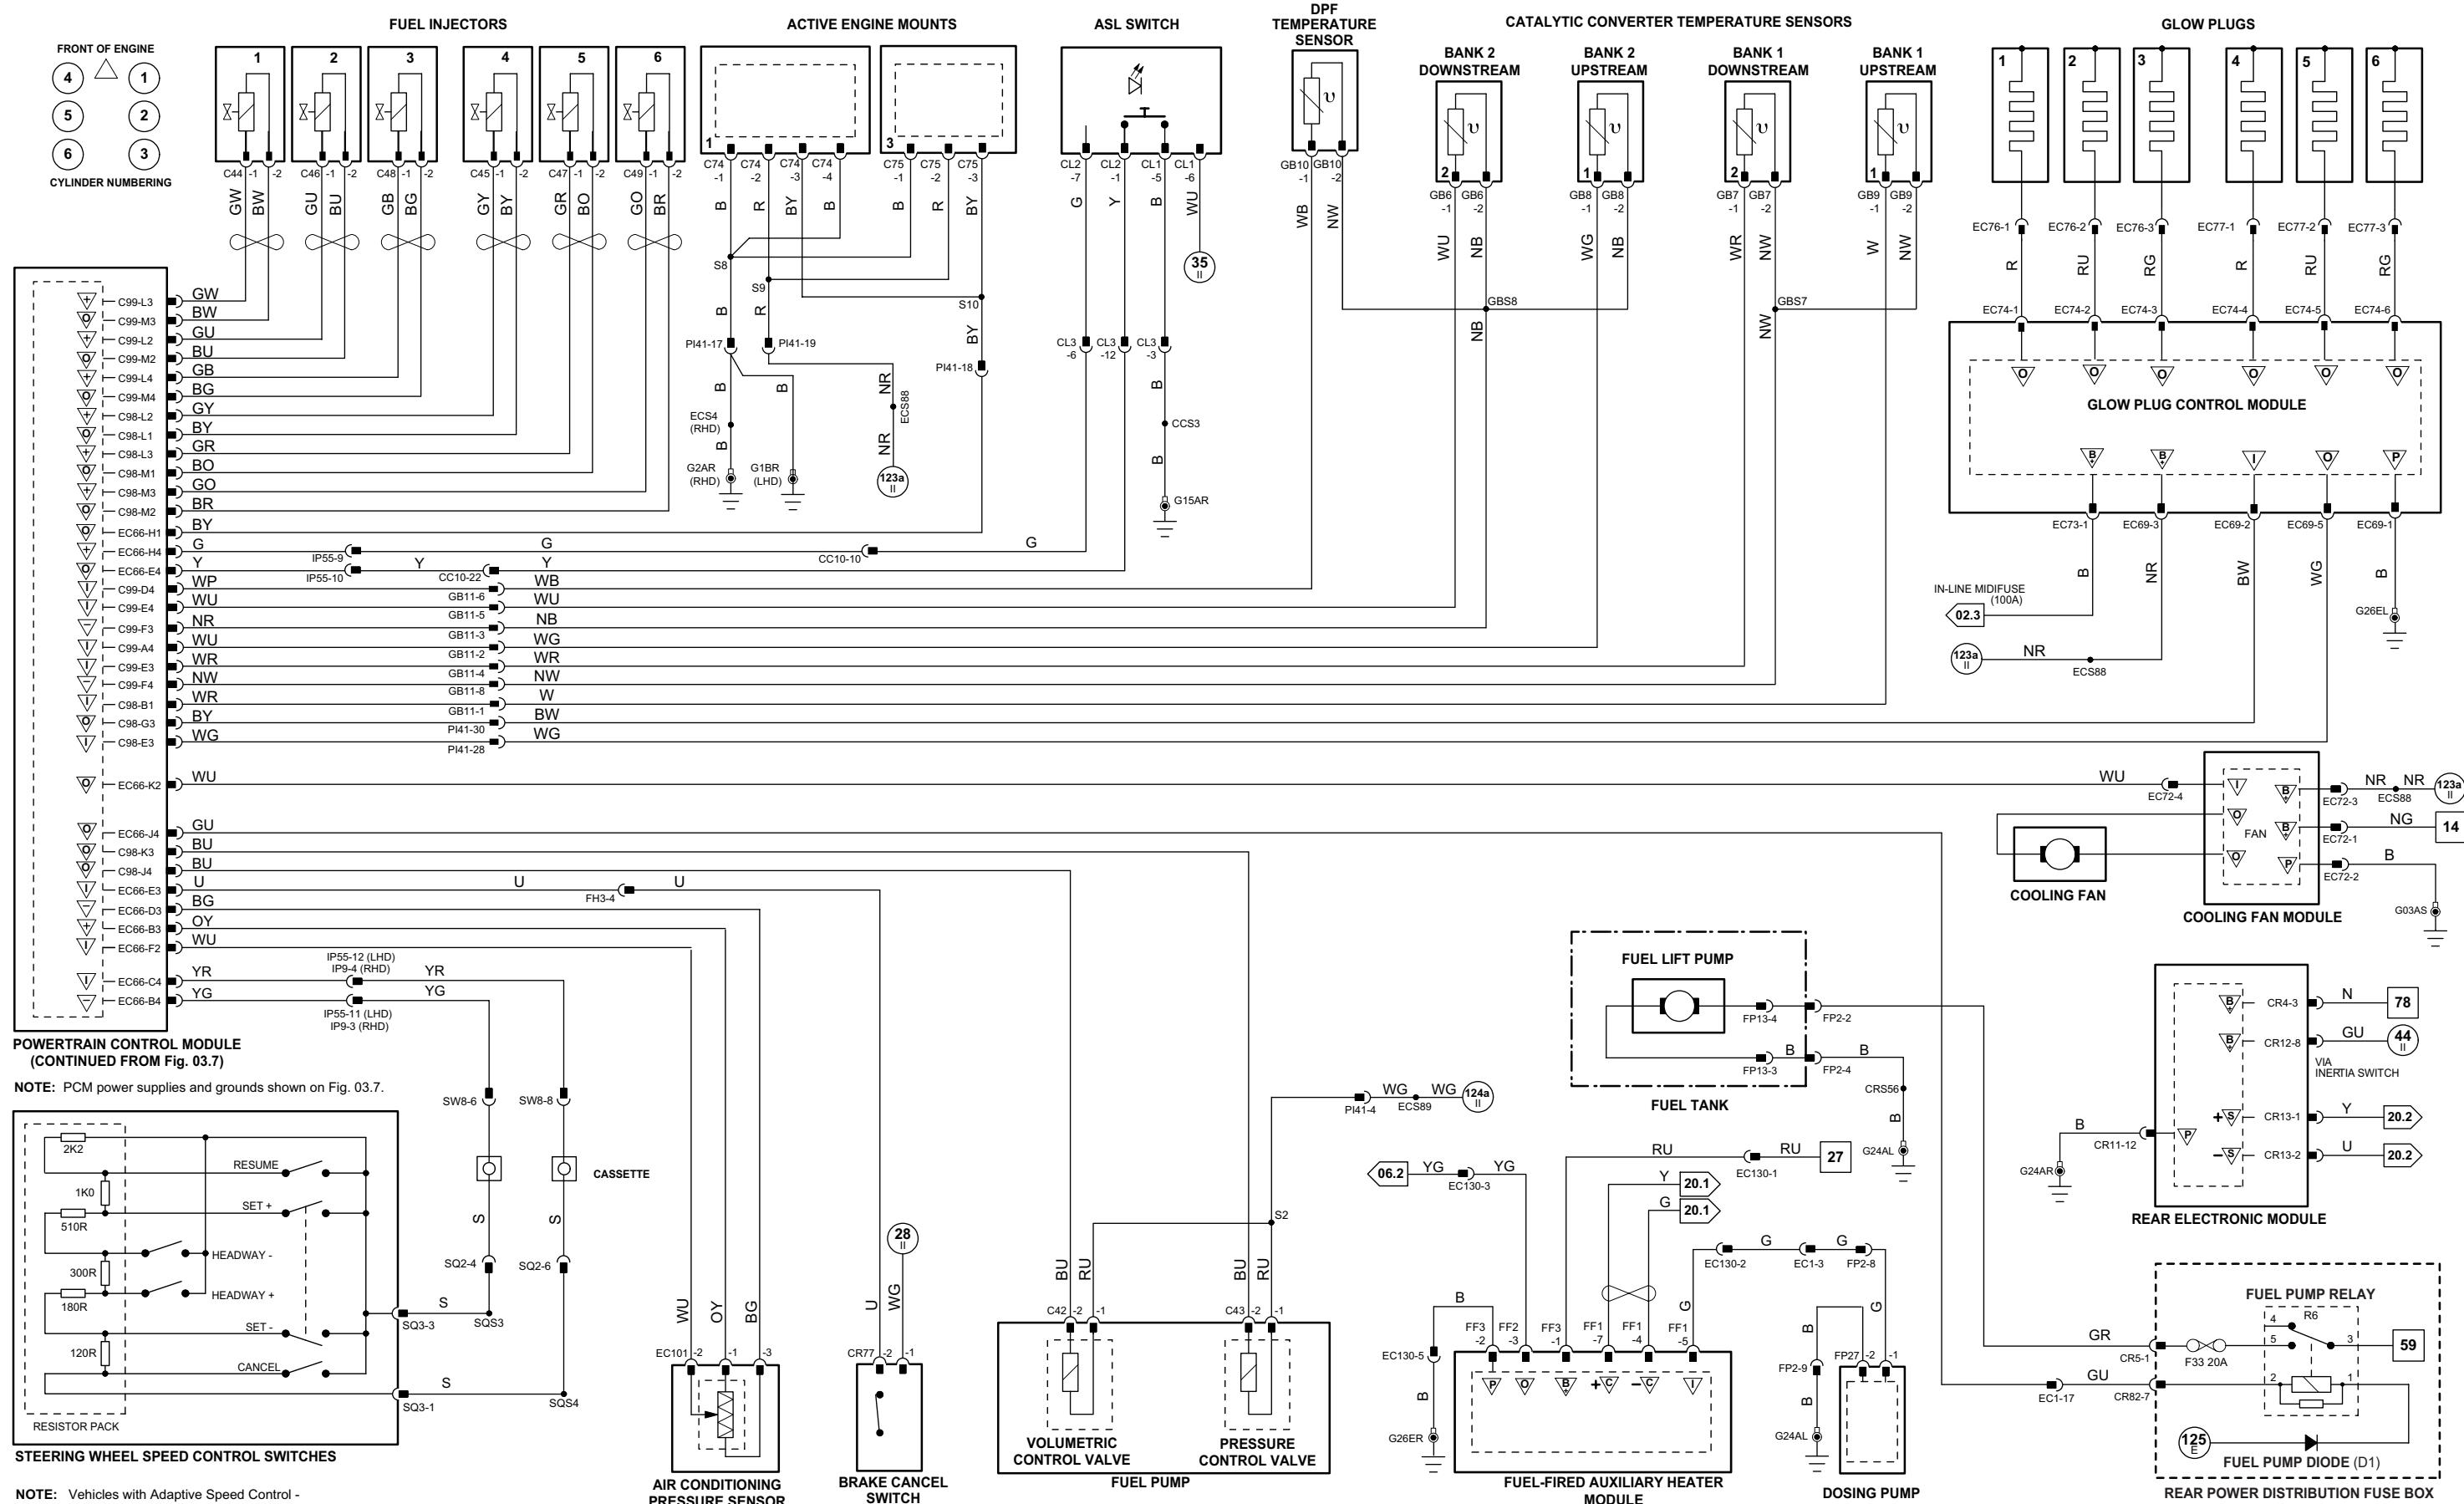

1 → 6 Fig. 01.1

72 → 97 Fig. 01.3

16 → 53 Fig. 01.5

78 → 105 Fig. 01.7

106 → 143 Fig. 01.8

7 → 71 Fig. 01.2

1 → 15 Fig. 01.4

53 → 77 Fig. 01.6

106 → 143 Fig. 01.8

Input

Output

Battery Voltage

Power Ground

Sensor/Signal Supply V

Sensor/Signal Ground

ACP

SCP

CAN

Serial and Encoded Data

VARIANT: Diesel 2.7V6

VIN RANGE: All

DATE OF ISSUE: May 2007

**Engine Control Module**

<b>Pin</b>	<b>Description and Characteristic</b>
SG	EC300-07 SENSOR GROUND 1: GROUND
SG	EC300-08 SENSOR GROUND 2: GROUND
I	EC300-13 SAI MAP SENSOR SIGNAL
SS	EC300-19 SENSOR POWER SUPPLY 2: NOMINAL 5 V
I	EC300-24 ACCELERATOR PEDAL POSITION SENSOR 1 SIGNAL: FOOT OFF = 0.75 V; FULLY DEPRESSED = 3.40 V (AUTO) 3.20 V (MAN)
SS	EC300-32 SENSOR POWER SUPPLY 1: NOMINAL 5 V
I	EC300-38 ACCELERATOR PEDAL POSITION SENSOR 2 SIGNAL: FOOT OFF = 3.38 V; FULLY DEPRESSED = 2.05 V (AUTO) 2.14 V (MAN)
O	EC300-50 SAI RELAY DRIVE
O	EC300-55 SAI VACUUM SOLENOID DRIVE

**Fig. 03.9**
**COMPONENTS**

<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
APP SENSOR	CR14	6-WAY / BLACK	TOP OF ACCELERATOR PEDAL
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
	PI300	96-WAY / BLACK	
FRONT POWER DISTRIBUTION FUSE BOX	—	—	ENGINE COMPARTMENT, RH SIDE
IN-LINE FUSE	EC306	MIDIFUSE ASSEMBLY	ENGINE COMPARTMENT, FRONT RH SIDE
SAI MAP SENSOR	EC120	3-WAY / BLACK	TO BE CONFIRMED
SAI PUMP	EC93	2-WAY / GREY	BEHIND RH SIDE OF FRONT BUMPER COVER
SAI RELAY	EC305	9-WAY / BLACK	ENGINE COMPARTMENT, LOWER FRONT RH SIDE
VACUUM SOLENOID	P190	2-WAY / BLACK	ENGINE REAR

**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

**GROUNDS**

<b>Ground</b>	<b>Location</b>
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER

**FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.**


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

**CAUTION:** The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

**NOTE:** The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

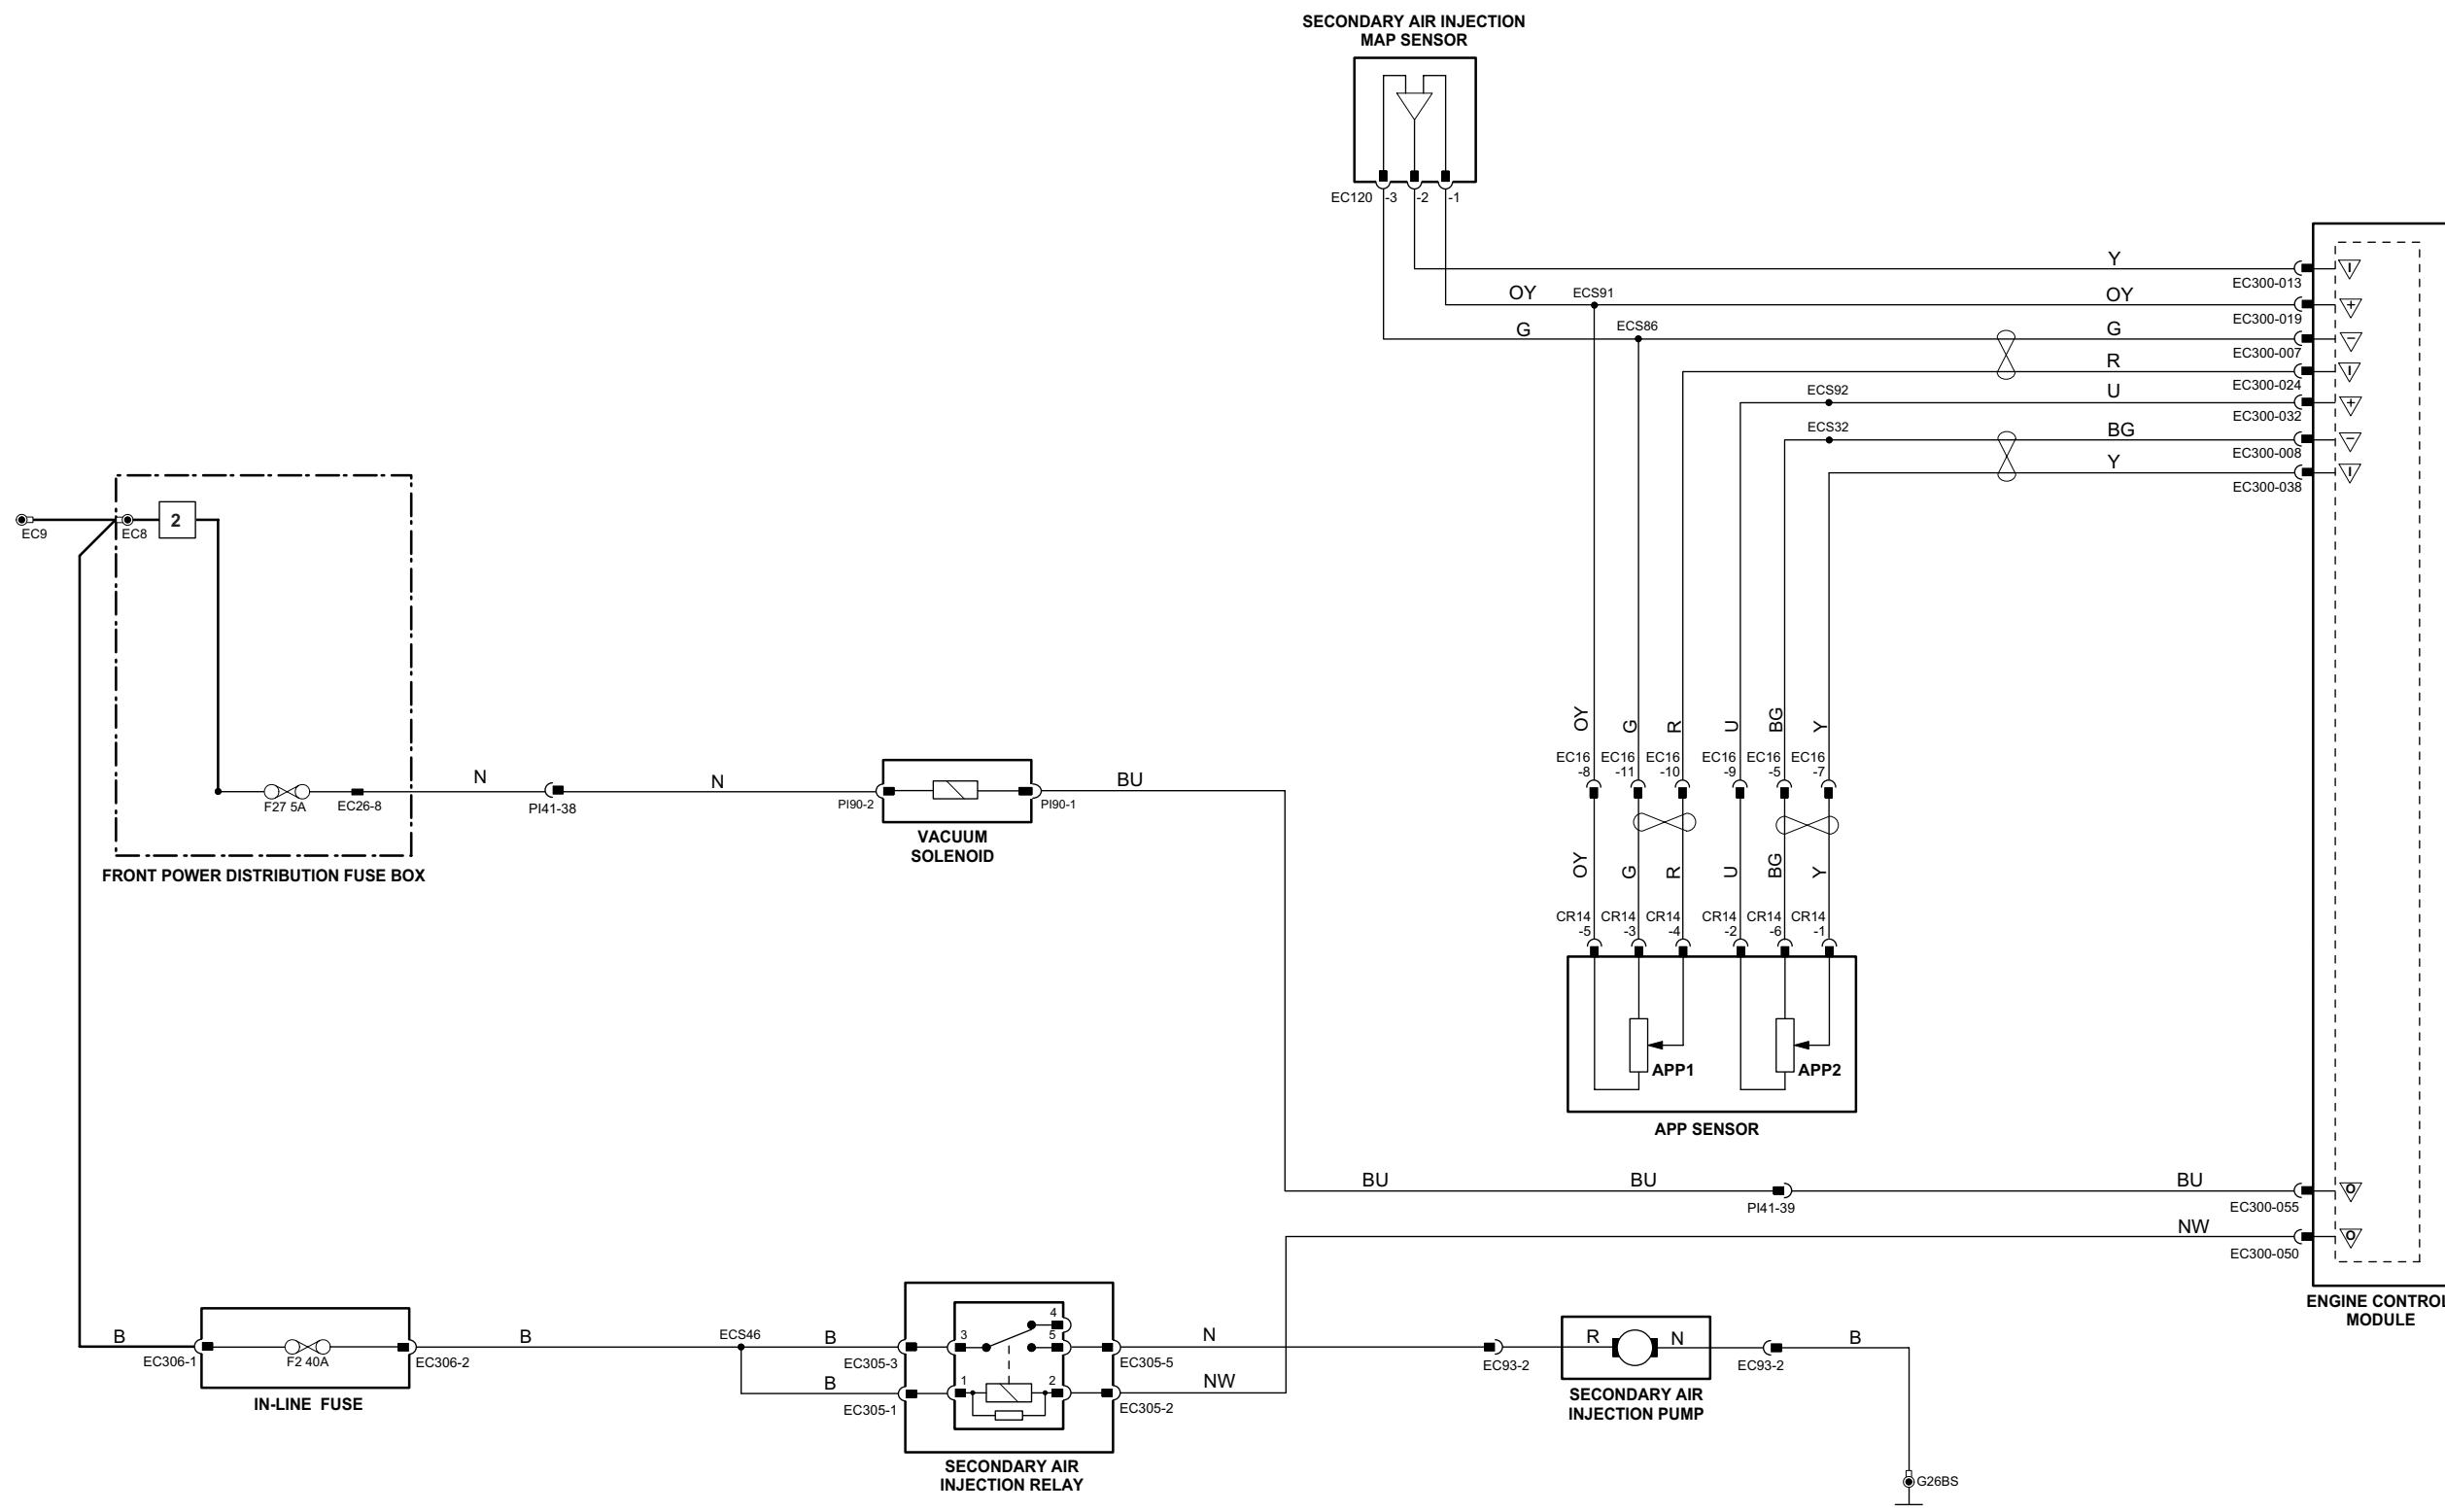

### Transmission Control Module

Pin	Description and Characteristic
C	GB2-2 CAN -
C	GB2-6 CAN +
B+	GB2-9 IGNITION SWITCHED POWER SUPPLY (II): B+
O	GB2-10 PARK / NEUTRAL SIGNAL: GROUND WHEN ACTIVATED
PG	GB2-13 POWER GROUND: GROUND
B+	GB2-14 BATTERY POWER SUPPLY: B+
PG	GB2-16 POWER GROUND: GROUND

Fig. 04.1

### COMPONENTS

Component	Connector(s)	Connector Description	Location
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN COWLING
J-GATE MODULE	IP32	16-WAY / BLACK	J-GATE ASSEMBLY
TCM CAPACITOR (Diesel)	GB17	2-WAY / BLACK	ENGINE COMPARTMENT, BULKHEAD
TCM CAPACITOR (Gasoline)	P159	2-WAY / BLACK	ENGINE COMPARTMENT, BULKHEAD
TRANSMISSION CONTROL MODULE	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE ASSEMBLY

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
GB1	16-WAY / GREY / ENGINE HARNESS TO TRANSMISSION HARNESS	ADJACENT TO TRANSMISSION BELL HOUSING

### GROUNDS

Ground	Location
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER
G32	CABIN / BEHIND INSTRUMENT CLUSTER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

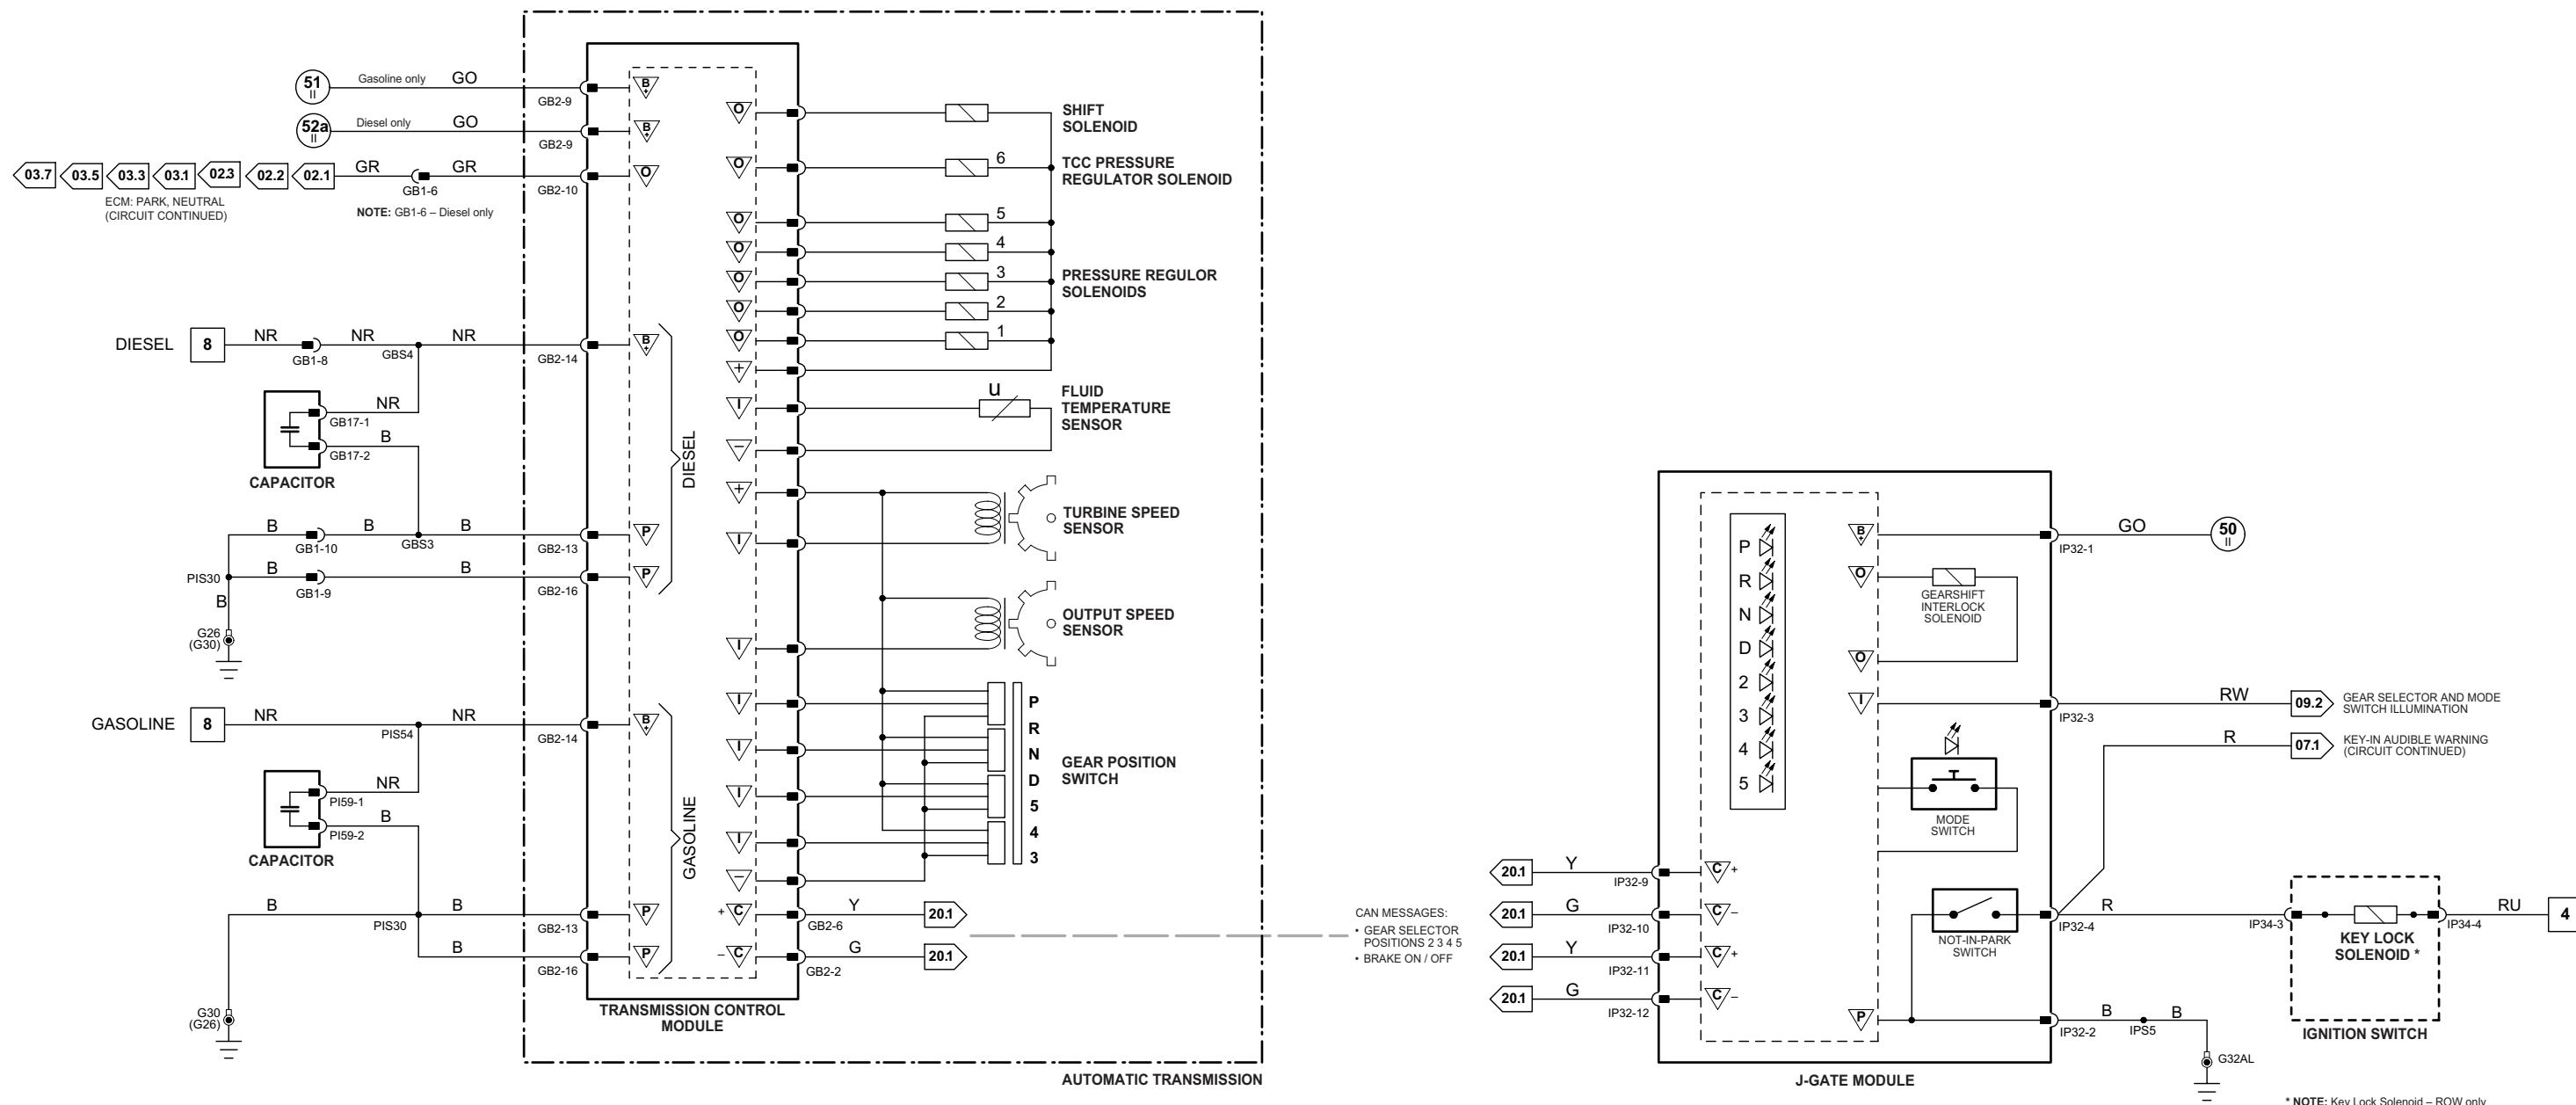

## Dynamic Stability Control Module

Pin	Description and Characteristic
B+	EC30-1 BATTERY POWER SUPPLY – PUMP: B+
B+	EC30-2 BATTERY POWER SUPPLY – ECU: B+
SS	EC30-5 STEERING ANGLE SENSORS SUPPLY VOLTAGE: B+
I	EC30-6 BRAKE FLUID LEVEL SENSOR SIGNAL: BRAKE FLUID LEVEL LOW = GROUND
SG	EC30-7 BRAKE FLUID LEVEL SENSOR SIGNAL GROUND: GROUND
B+	EC30-8 IGNITION SWITCHED POWER SUPPLY (II): B+
I	EC30-9 STEERING ANGLE SENSOR SIGNAL (B): PULSED SIGNAL
O	EC30-10 K-LINE DATA
C	EC30-11 CAN +
C	EC30-12 CAN +
C	EC30-13 CAN -
C	EC30-14 CAN -
PG	EC30-16 POWER GROUND – VALVES: GROUND
C	EC30-18 CAN + (LOCAL)
C	EC30-19 CAN - (LOCAL)
SS	EC30-22 YAW RATE SENSOR CLUSTER SUPPLY VOLTAGE: B+
SS	EC30-26 VACUUM SENSORS SUPPLY VOLTAGE: B+
SG	EC30-27 VACUUM SENSOR GROUND: GROUND
SG	EC30-29 YAW RATE SENSOR CLUSTER GROUND: GROUND
I	EC30-30 VACUUM SENSOR SIGNAL 2:
B+	EC30-32 BATTERY POWER SUPPLY – VALVES: B+
I	EC30-33 RH FRONT WHEEL SPEED SENSOR SIGNAL: 46 PULSES PER WHEEL REVOLUTION
SG	EC30-34 RH FRONT WHEEL SPEED SENSOR SIGNAL GROUND: GROUND
O	EC30-35 VEHICLE SPEED SIGNAL (SLIDING ROOF THRESHOLD): < 62 KM/H (38.5 MPH) = GROUND; > 62 KM/H (38.5 MPH) = B+
I	EC30-36 LH REAR WHEEL SPEED SENSOR SIGNAL: 46 PULSES PER WHEEL REVOLUTION
SG	EC30-37 LH REAR WHEEL SPEED SENSOR SIGNAL GROUND: GROUND
I	EC30-38 VACUUM SENSOR SIGNAL 1:
SG	EC30-40 SENSOR GROUND – STEERING ANGLE SENSORS: GROUND
—	EC30-41 STEERING ANGLE SENSOR SIGNAL (A): PULSED SIGNAL
SG	EC30-42 RH REAR WHEEL SPEED SENSOR SIGNAL GROUND: GROUND
I	EC30-43 RH REAR WHEEL SPEED SENSOR SIGNAL: 46 PULSES PER WHEEL REVOLUTION
SG	EC30-45 LH FRONT WHEEL SPEED SENSOR SIGNAL GROUND: GROUND
I	EC30-46 LH FRONT WHEEL SPEED SENSOR SIGNAL: 46 PULSES PER WHEEL REVOLUTION
PG	EC30-47 POWER GROUND – PUMP: GROUND

Fig. 05.1

## COMPONENTS

Component	Connector(s)	Connector Description	Location
BRAKE FLUID RESERVOIR	EC52	2-WAY / BLACK	BRAKE BOOSTER
DYNAMIC STABILITY CONTROL MODULE	EC30	47-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
J-GATE MODULE	IP32	16-WAY / BLACK	J-GATE ASSEMBLY
STEERING ANGLE SENSOR	IP37	4-WAY / GREY	STEERING COLUMN
WHEEL SPEED SENSOR – LH FRONT	EC44	2-WAY / BLACK	LH FRONT WHEEL HUB
WHEEL SPEED SENSOR – LH REAR	CV6	2-WAY / BLACK	LH REAR WHEEL HUB
WHEEL SPEED SENSOR – RH FRONT	EC15	2-WAY / BLACK	RH FRONT WHEEL HUB
WHEEL SPEED SENSOR – RH REAR	CV8	2-WAY / BLACK	RH REAR WHEEL HUB
VACUUM SENSOR	EC95	4-WAY / BLACK	ENGINE COMPARTMENT, VACUUM BRAKE BOOSTER
YAW RATE AND LATERAL ACCELERATION SENSORS CLUSTER	IP23	6-WAY / BLACK	CENTER CONSOLE / REARWARD OF J-GATE

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CV5	12-WAY / GREY / FUEL PUMP LINK HARNESS TO EVAP CANISTER CLOSE VALVE LINK HARNESS	ABOVE REAR AXLE / CENTER
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST

## GROUNDS

Ground	Location
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G32	CABIN / BEHIND INSTRUMENT CLUSTER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

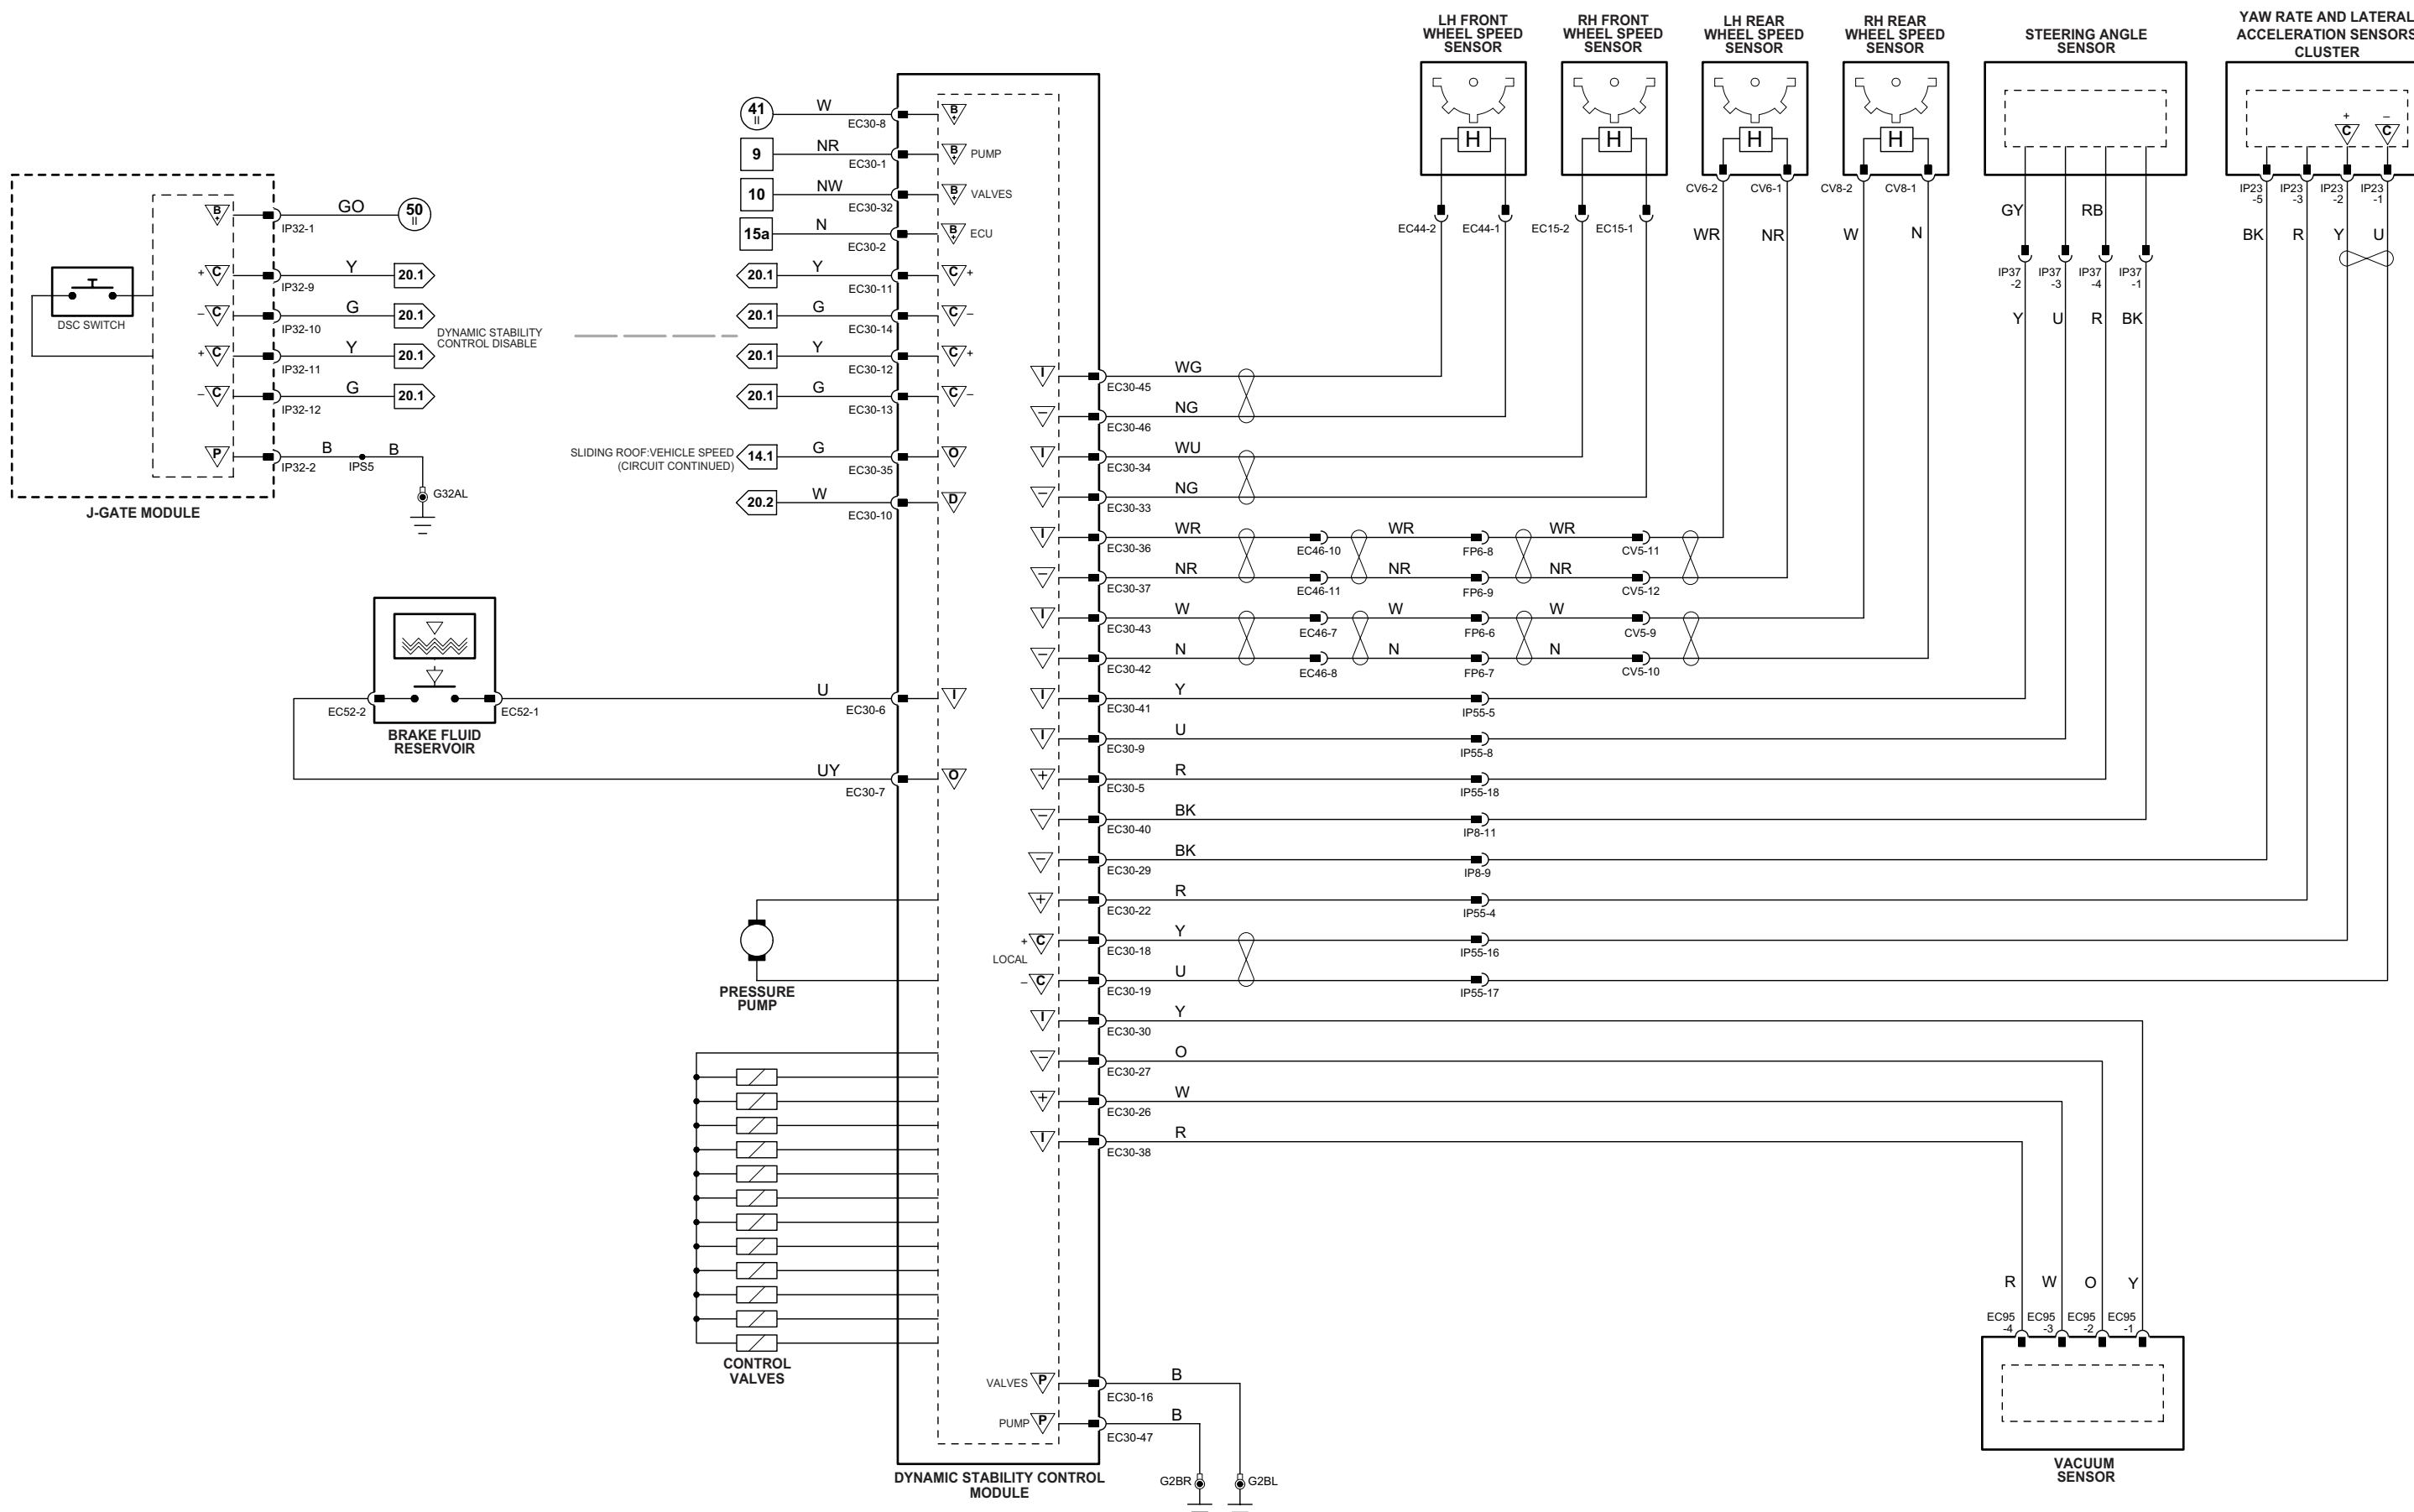

### Instrument Cluster

Pin	Description and Characteristic
PG	IP6-2 POWER GROUND: GROUND
S	IP6-10 SCP –
O	IP6-15 VAPS + DRIVE
B+	IP6-16 IGNITION SWITCHED POWER SUPPLY (VAPS): B+
S	IP6-17 SCP +
IP6-20	

### Parking Brake Module

Pin	Description and Characteristic
B+	CR32-1 BATTERY POWER SUPPLY: B+
I	CR32-2 EPB SECONDARY APPLY SWITCH
C	CR32-4 CAN –
C	CR32-5 CAN +
SG	CR32-6 EPB SWITCH GROUND
I	CR32-7 BRAKE SWITCH INPUT
B+	CR32-9 IGNITION SUPPLY
SS	CR32-10 PARKING BRAKE MOTOR POSITION SENSOR FEEDBACK SIGNAL: VARIABLE VOLTAGE
SS	CR32-11 LOGIC BATTERY POSITIVE INPUT
PG	CR32-13 POWER GROUND: GROUND
I	CR32-14 EPB SECONDARY RELEASE SWITCH
I	CR32-20 PRIMARY KEY SWITCH
O	CR50-7 PARKING BRAKE MOTOR ENGAGE: ACTIVATE = B+
I	CR50-10 PARKING BRAKE SWITCH – APPLY: CHANGE IN RESISTANCE
I	CR50-11 PARKING BRAKE SWITCH – RELEASE: CHANGE IN RESISTANCE
SS	CR50-12 SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
SG	CR50-13 SIGNAL GROUND: GROUND
O	CR50-14 PARKING BRAKE MOTOR DISENGAGE: ACTIVATE = B+

Fig. 05.2

### COMPONENTS

Component	Connector(s)	Connector Description	Location
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
PARKING BRAKE MODULE	CR32	12-WAY / GREY	LUGGAGE COMPARTMENT, RH REAR
	CR50	4-WAY / BLACK	
PARKING BRAKE MOTOR	CV7	6-WAY / BLACK	REAR SUSPENSION SUB FRAME
PARKING BRAKE SWITCH	TL82	8-WAY / BLACK	CENTER CONSOLE / REARWARD OF J-GATE
VARIABLE ASSIST STEERING ACTUATOR	EC33	2-WAY / BLACK	STEERING RACK PINION HOUSING

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CV1	6-WAY / GREY / FUEL PUMP LINK HARNESS TO PARKING BRAKE MOTOR HARNESS	REAR OF FUEL TANK / RH SIDE
FP2	6-WAY / GREY / CABIN HARNESS TO FUEL PUMP HARNESS	CABIN / BELOW REAR SEAT CUSHION / RH SIDE
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
TL35	22-WAY / GREY / TELEMATICS HARNESS TO CABIN HARNESS	TRUNK, LH REAR

### GROUNDS

Ground	Location
G18	CABIN / BELOW REAR SEAT / LH SIDE
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

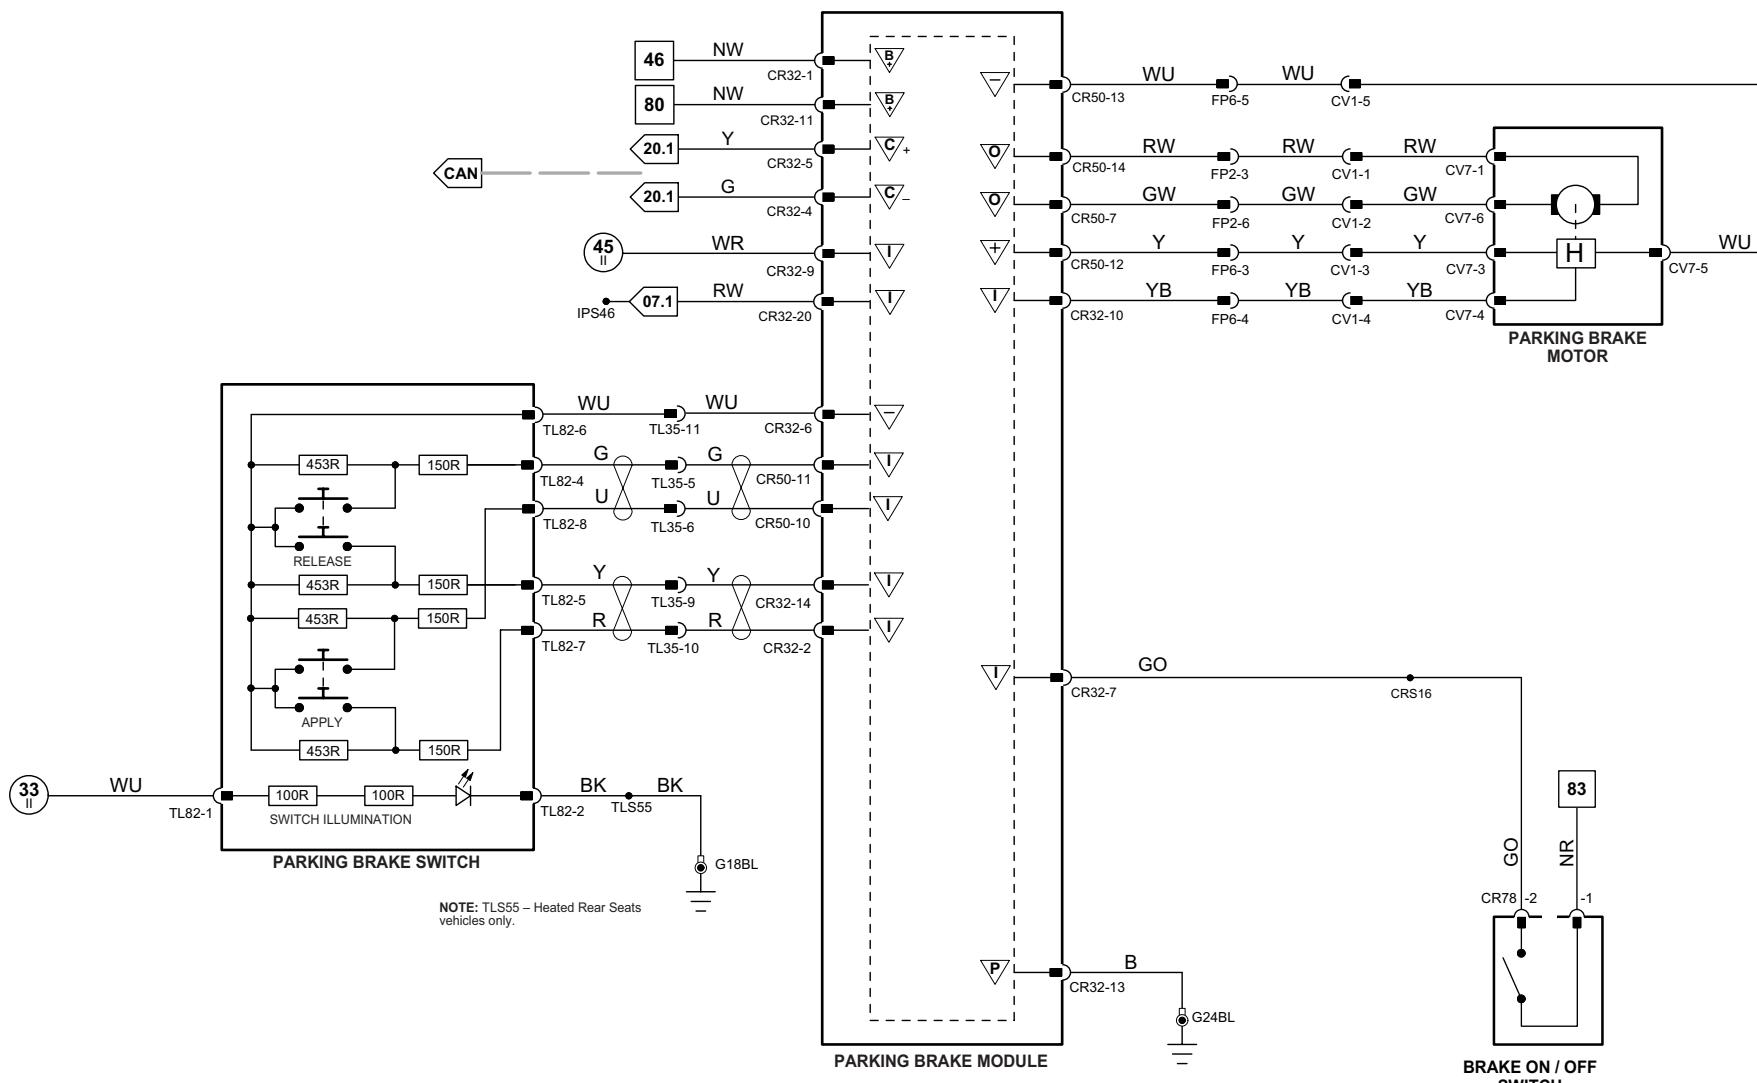**ELECTRONIC PARKING BRAKE****VARIABLE ASSIST POWER STEERING**

f05\_2\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	G Power Ground	Sensor/Signal Ground	C CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

## Dynamic Stability Control Module

Pin	Description and Characteristic
B+	CR88-1 BATTERY POWER SUPPLY: B+
B+	CR88-2 SWITCHED SYSTEM POWER SUPPLY (WAKE UP): B+
PG	CR88-3 POWER GROUND: GROUND
C	CR88-7 CAN +
C	CR88-8 CAN -
O	CR89-1 LH FRONT DAMPER ACTUATOR DRIVE -: PWM -
O	CR89-2 LH REAR DAMPER ACTUATOR DRIVE -: PWM -
O	CR89-3 HEADLAMP LEVELING SENSOR: PWM
O	CR89-4 LH FRONT DAMPER ACTUATOR DRIVE +: PWM +
O	CR89-5 RH FRONT DAMPER ACTUATOR DRIVE +: PWM +
O	CR89-7 LH REAR DAMPER ACTUATOR DRIVE +: PWM +
O	CR89-8 RH REAR DAMPER ACTUATOR DRIVE +: PWM +
O	CR89-10 RH FRONT DAMPER ACTUATOR DRIVE -: PWM -
O	CR89-11 RH REAR DAMPER ACTUATOR DRIVE -: PWM -
SS	CR90-1 LH FRONT HEIGHT SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
I	CR90-2 LH FRONT HEIGHT SENSOR SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SG	CR90-3 LH FRONT HEIGHT SENSOR SIGNAL GROUND: GROUND
SS	CR90-7 LH REAR HEIGHT SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
I	CR90-8 LH REAR HEIGHT SENSOR SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SG	CR90-9 LH REAR HEIGHT SENSOR SIGNAL GROUND: GROUND
SS	CR90-10 RH REAR HEIGHT SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
I	CR90-11 RH REAR HEIGHT SENSOR SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SG	CR90-12 RH REAR HEIGHT SENSOR SIGNAL GROUND: GROUND
SS	CR90-13 PRESSURE SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
I	CR90-14 PRESSURE SENSOR SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SG	CR90-15 PRESSURE SENSOR SIGNAL GROUND: GROUND
B+	CR91-1 AIR SPRING SOLENOID VALVES POWER SUPPLY: PWM +
O	CR91-2 LH FRONT AIR SPRING SOLENOID VALVE DRIVE: PWM -
O	CR91-3 RH FRONT AIR SPRING SOLENOID VALVE DRIVE: PWM -
O	CR91-5 LH REAR AIR SPRING SOLENOID VALVE DRIVE: PWM -
O	CR91-6 RH REAR AIR SPRING SOLENOID VALVE DRIVE: PWM -
O	CR91-8 RESERVOIR SOLENOID VALVE DRIVE: PWM -
B+	CR91-10 COMPRESSOR VENT VALVE POWER SUPPLY: PWM +
O	CR91-11 COMPRESSOR VENT VALVE DRIVE: PWM -
O	CR91-12 AIR SUSPENSION RELAY ACTIVATE: PWM -
I	CR91-14 REAR VERTICAL ACCELEROMETER SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SS	CR91-16 ACCELEROMETER SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
I	CR91-17 FRONT VERTICAL ACCELEROMETER SIGNAL: VARIABLE VOLTAGE 0 – 5 V
SG	CR91-18 ACCELEROMETER SIGNAL GROUND: GROUND

## Instrument Cluster

Pin	Description and Characteristic
S	IP6-10 SCP -
C	IP6-18 CAN +
C	IP6-19 CAN -
S	IP6-20 SCP +

Fig. 05.3

## COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR SUSPENSION COMPRESSOR	EC60	2-WAY / BLACK	LH FRONT OF VEHICLE / REARWARD OF FRONT BUMPER BEAM
AIR SUSPENSION MODULE	CR88	9-WAY / BLACK	CABIN REAR BULKHEAD / BEHIND REAR SEAT BACK / RH SIDE
	CR89	12-WAY / BLACK	
	CR90	15-WAY / BLACK	
AIR SUSPENSION PRESSURE SENSOR	CR91	18-WAY / BLACK	
AIR SUSPENSION RELAY	CR92	3-WAY / BLACK	TRUNK / UNDER SPARE WHEEL / AIR SUSPENSION VALVE BLOCK
AIR SUSPENSION VALVE BLOCK	—	—	FRONT POWER DISTRIBUTION FUSE BOX - R1
AIR SUSPENSION VENT SOLENOID	CR22	6-WAY / BLACK	TRUNK / UNDER SPARE WHEEL
DAMPER ACTUATOR – LH FRONT	EC62	2-WAY / BLACK	AIR SUSPENSION COMPRESSOR ASSEMBLY
DAMPER ACTUATOR – LH REAR	EC47	2-WAY / BLACK	LH FRONT DAMPER / TOP
DAMPER ACTUATOR – RH FRONT	TL33	2-WAY / BLACK	LH REAR DAMPER / TOP
DAMPER ACTUATOR – RH REAR	EC12	2-WAY / BLACK	RH FRONT DAMPER / TOP
DAMPER ACTUATOR – RH REAR	CR23	2-WAY / BLACK	RH REAR DAMPER / TOP
FRONT POWER DISTRIBUTION FUSE BOX	EC4	4-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
	EC5	4-WAY / BLACK	
	EC19	8-WAY / BLACK	
	EC22	4-WAY / BLACK	
	EC26	8-WAY / BLACK	
	EC28	12-WAY / BLACK	
	EC32	4-WAY / BLACK	
	EC35	8-WAY / BLACK	
	EC40	8-WAY / BLACK	
	EC41	10-WAY / BLACK	
HEIGHT SENSOR – LH FRONT	EC45	6-WAY / BLACK	FRONT SUSPENSION SUB FRAME / LH SIDE
HEIGHT SENSOR – LH REAR	CV3	6-WAY / BLACK	REAR SUSPENSION SUB FRAME / LH SIDE
HEIGHT SENSOR – RH REAR	CV4	6-WAY / BLACK	REAR SUSPENSION SUB FRAME / RH SIDE
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
VERTICAL ACCELEROMETER – FRONT	EC13	3-WAY / GREY	RH FRONT WHEEL ARCH
VERTICAL ACCELEROMETER – REAR	TL34	3-WAY / GREY	TRUNK / RH SIDE / FORWARD OF CONTROL MODULES

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CV5	12-WAY / GREY / FUEL PUMP LINK HARNESS TO EVAP CANISTER CLOSE VALVE LINK HARNESS	ABOVE REAR AXLE / CENTER
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

## GROUNDS

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G17	CABIN / BELOW REAR SEAT / RH SIDE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

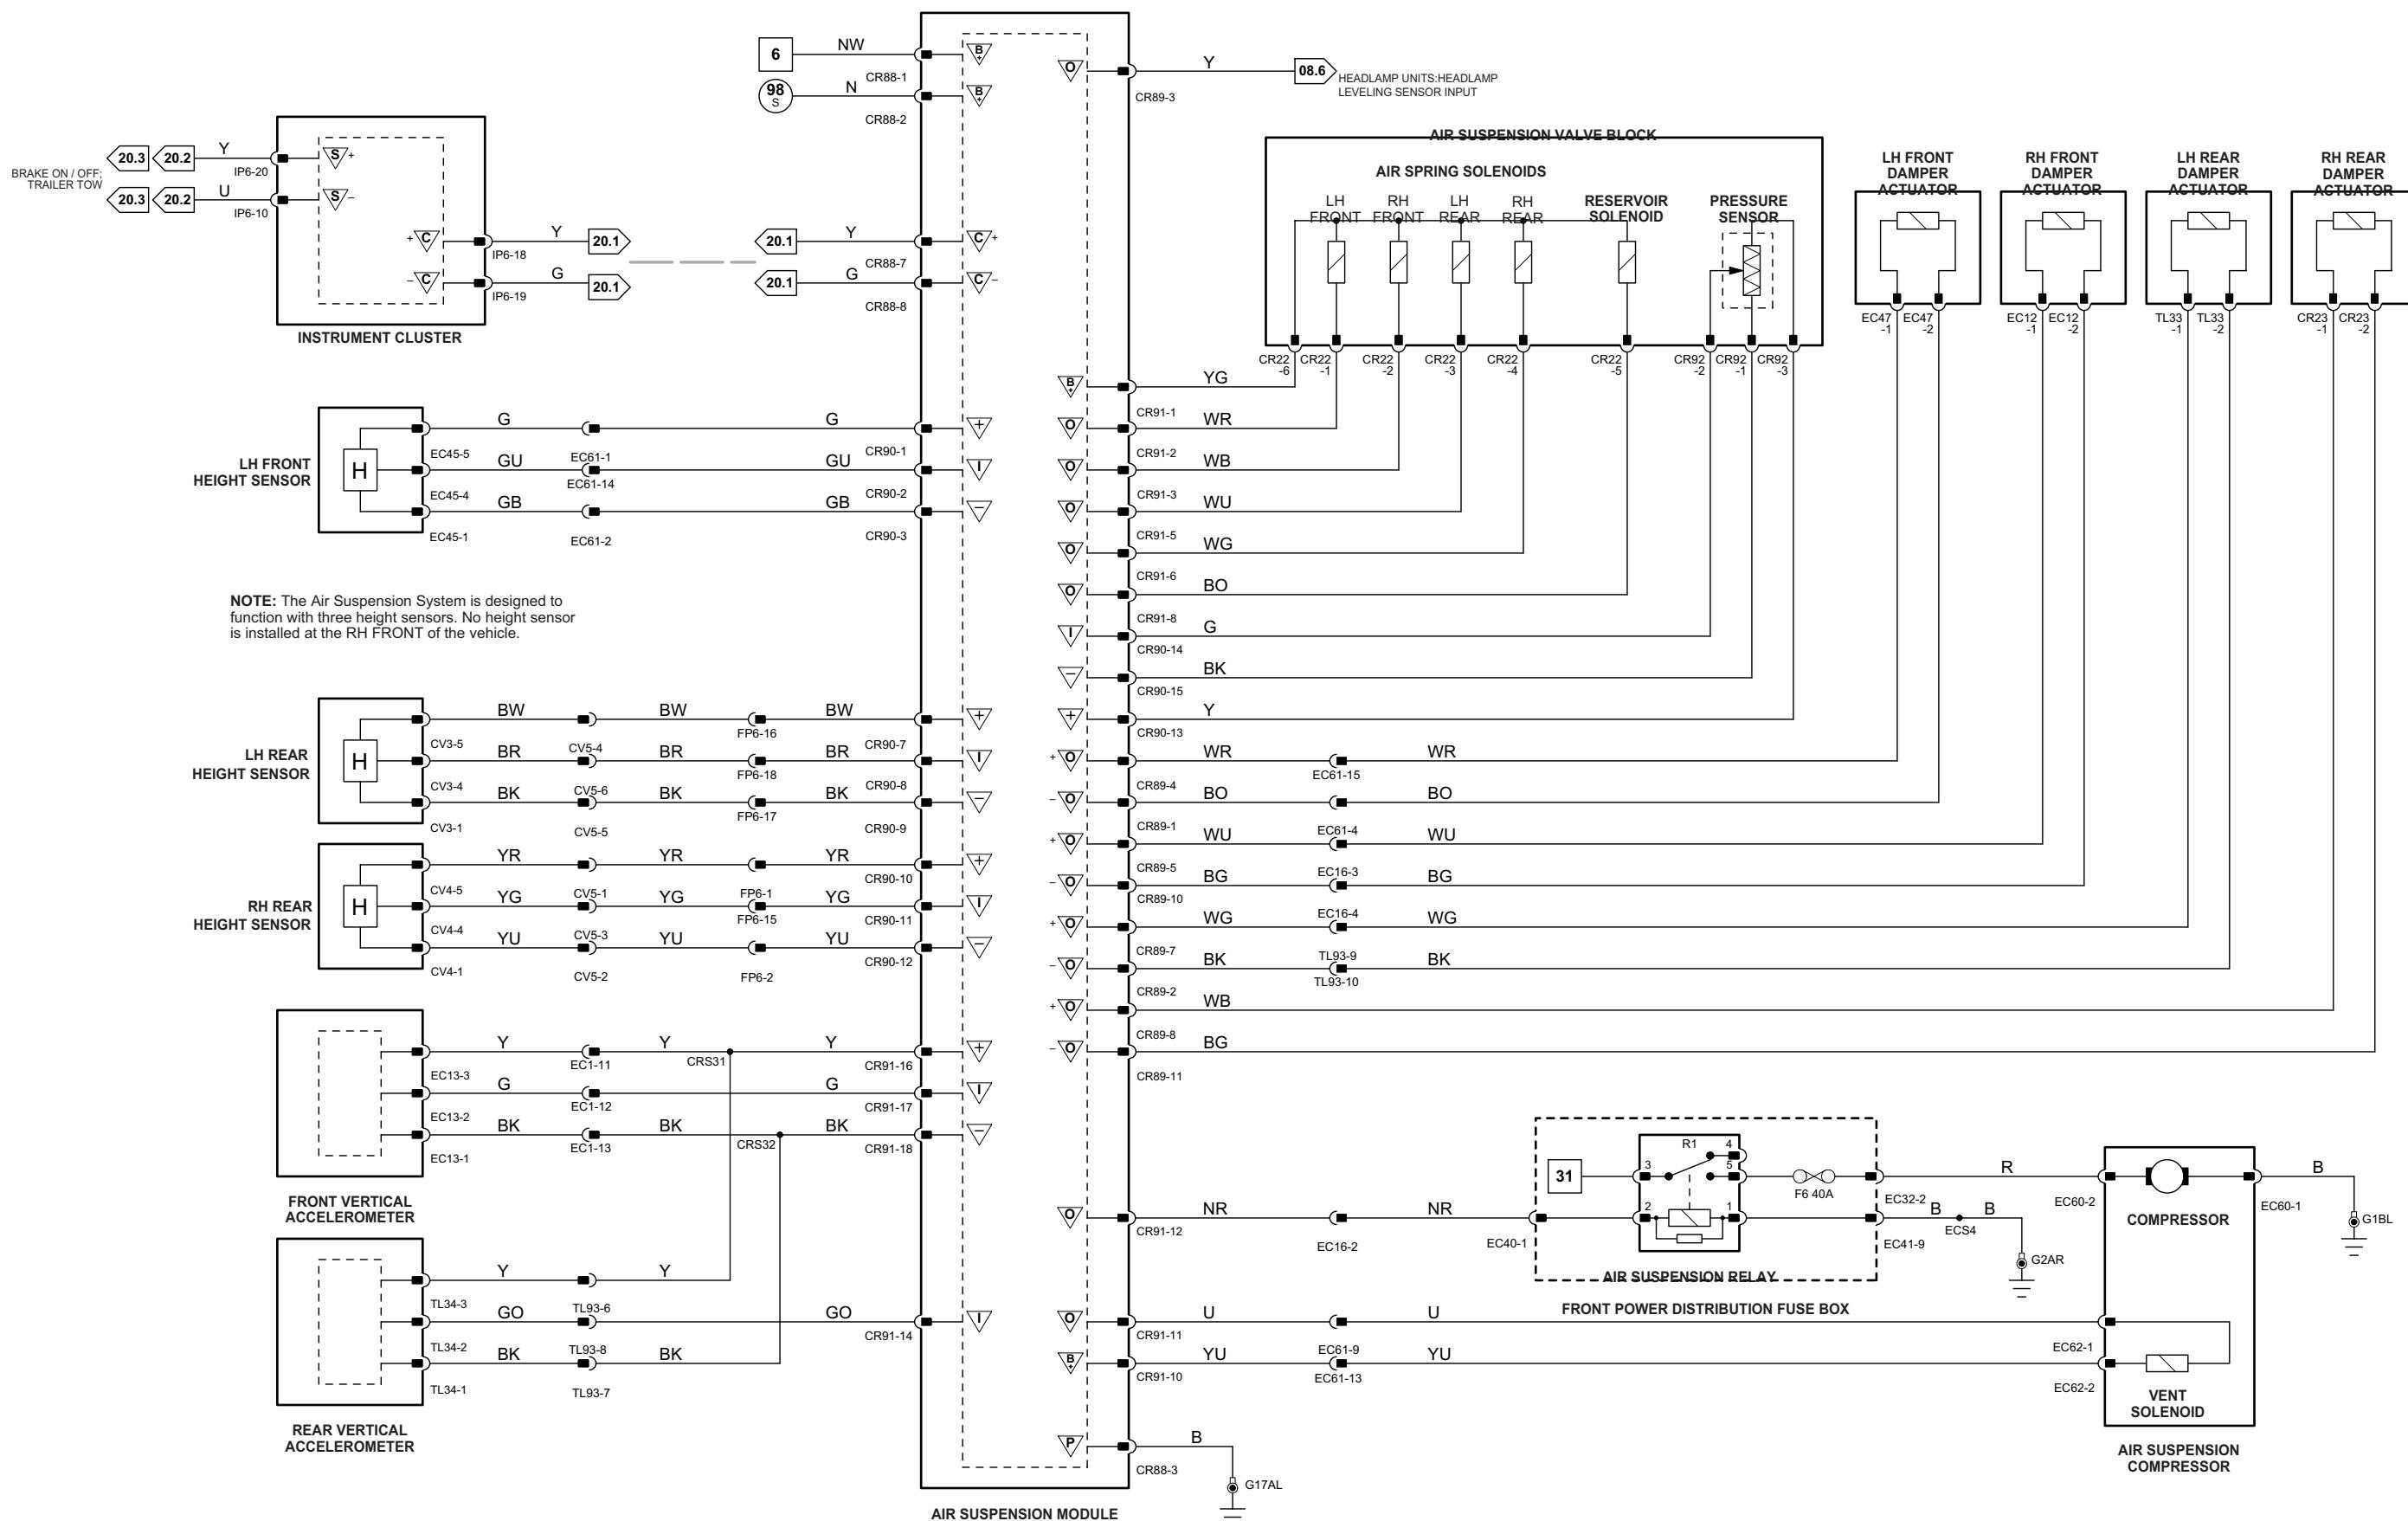

f05\_3\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	Sensor/Signal Ground	CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

**Fig. 05.4**

**Dynamic Stability Control Module**

Pin	Description and Characteristic
C	EC30-11 CAN +
C	EC30-12 CAN +
C	EC30-13 CAN -
C	EC30-14 CAN -

**Engine Control Module**

Pin	Description and Characteristic
SS	EC300-30 SPEED CONTROL SWITCH REQUEST: STEPPED RESISTANCE
I	EC300-35 SPEED CONTROL SWITCHES SIGNAL GROUND: GROUND

**Instrument Cluster**

Pin	Description and Characteristic
C	IP6-8 CAN +
C	IP6-9 CAN -
C	IP6-18 CAN +
C	IP6-19 CAN -

**Powertrain Control Module**

Pin	Description and Characteristic
C	C98-A3 CAN -
C	C98-A4 CAN +

I	EC66-B4 SPEED CONTROL SWITCHES SIGNAL GROUND: GROUND
SS	EC66-C4 SPEED CONTROL SWITCH REQUEST: STEPPED RESISTANCE

**Transmission Control Module**

Pin	Description and Characteristic
C	GB2-2 CAN -
C	GB2-6 CAN +

**Speed Control Module**

Pin	Description and Characteristic
C	IP78-2 CAN - (LOCAL)
C	IP78-3 CAN + (LOCAL)
O	IP78-5 FORWARD ALERT INDICATOR DRIVE
O	IP78-6 CHIME MODULE DRIVE: CHIME ACTIVATE
C	IP78-8 CAN -
C	IP78-9 CAN +
PG	IP78-12 POWER GROUND: GROUND
B+	IP78-14 IGNITION SWITCHED POWER SUPPLY (II): B+
B+	IP78-15 SWITCHED SYSTEM POWER SUPPLY: B+
I	IP78-20 FORWARD ALERT SWITCH

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUXILIARY LIGHTING SWITCH	IP50	10-WAY / GREY	INSTRUMENT PANEL / OUTBOARD OF STEERING COLUMN
DYNAMIC STABILITY CONTROL MODULE	EC30	47-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
INSTRUMENT CLUSTER	P1300	96-WAY / BLAVK	FRONT BULKHEAD, PASSENGER SIDE
POWERTRAIN CONTROL MODULE	C98	48-WAY / BROWN	FRONT BULKHEAD, PASSENGER SIDE
SPEED CONTROL CHIME MODULE	C99	48-WAY / GREY	
SPEED CONTROL MODULE	EC66	48-WAY / BLACK	INSTRUMENT PANEL, LH SIDE
SPEED CONTROL SENSOR	IP11	4-WAY / BLACK	INSTRUMENT PANEL, DRIVER SIDE
STEERING WHEEL SPEED CONTROL SWITCHES	IP78	30-WAY / YELLOW	
TRANSMISSION CONTROL MODULE	EC23	5-WAY / BLACK	BELOW LH FRONT BUMPER
	—	—	STEERING WHEEL
	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE ASSEMBLY

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

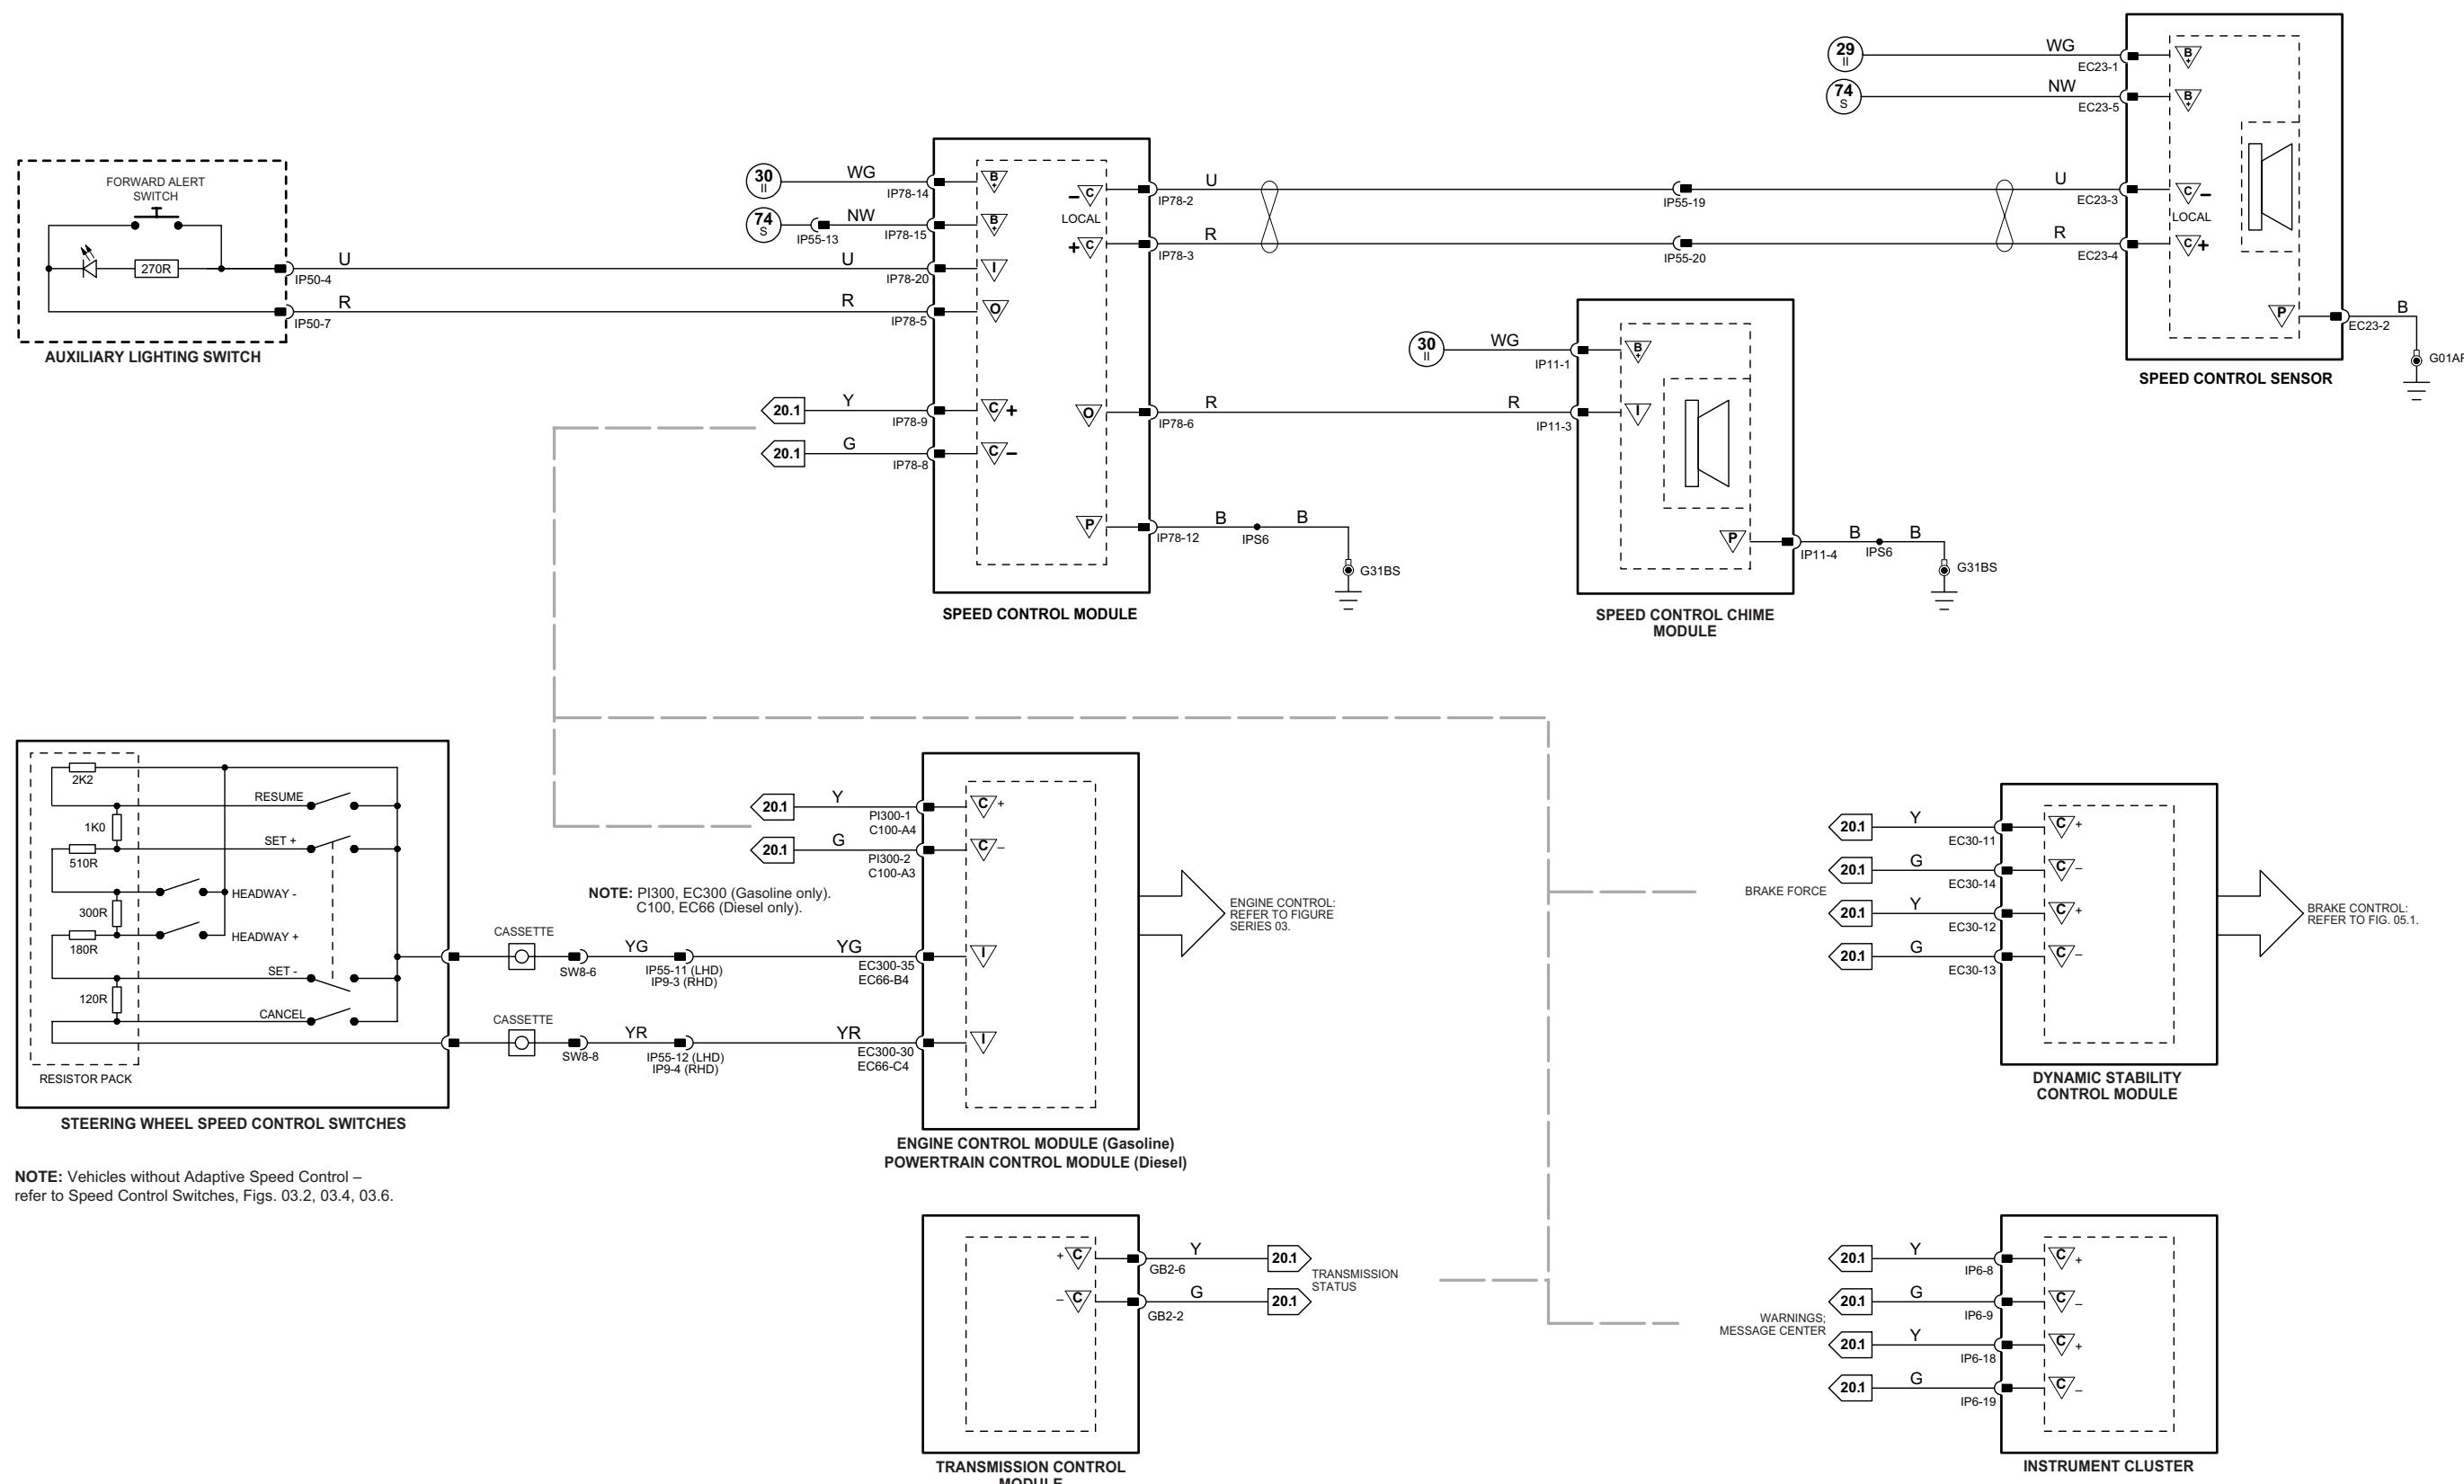

### Tire Pressure Monitoring System Module

Pin	Description and Characteristic
C	CR93-2 CAN –
C	CR93-3 CAN +
B+	CR93-8 IGNITION SWITCHED POWER SUPPLY (II): B+
PG	CR93-12 POWER GROUND: GROUND
B+	CR93-16 BATTERY POWER SUPPLY: B+
O	CR94-5 REAR LH TPMS INITIATOR: RF 125kHz +
O	CR94-6 REAR LH TPMS INITIATOR: RF 125kHz –
O	CR94-7 REAR RH TPMS INITIATOR: RF 125kHz +
O	CR94-8 REAR RH TPMS INITIATOR: RF 125kHz –
O	CR94-13 FRONT LH TPMS INITIATOR: RF 125kHz +
O	CR94-14 FRONT LH TPMS INITIATOR: RF 125kHz –
O	CR94-15 FRONT RH TPMS INITIATOR: RF 125kHz +
O	CR94-16 FRONT RH TPMS INITIATOR: RF 125kHz –
I	CR96-1 TPMS ANTENNA SIGNAL
I	CR96-2 TPMS ANTENNA GROUND SHIELD: GROUND

Fig. 05.5

### COMPONENTS

Component	Connector(s)	Connector Description	Location
FRONT LH TIRE PRESSURE SENSOR			FRONT LH WHEEL
FRONT LH TPMS INITIATOR	EC83	2-WAY / GREY	FRONT LH WHEEL ARCH
FRONT RH TIRE PRESSURE SENSOR			FRONT RH WHEEL
FRONT RH TPMS INITIATOR	EC84	2-WAY / GREY	FRONT RH WHEEL ARCH
REAR LH TIRE PRESSURE SENSOR			REAR LH WHEEL
REAR LH TPMS INITIATOR	BR8	2-WAY / GREY	REAR LH WHEEL ARCH
REAR RH TIRE PRESSURE SENSOR			REAR RH WHEEL
REAR RH TPMS INITIATOR	BR9	2-WAY / GREY	REAR RH WHEEL ARCH
SPARE TIRE PRESSURE SENSOR			SPARE WHEEL
TIRE PRESSURE MONITORING SYSTEM ANTENNA			
TIRE PRESSURE MONITORING SYSTEM MODULE	CR93 CR94 CR96	16-WAY / GREY 16-WAY / BLUE SMB RF COAX CONNECTOR	LUGGAGE COMPARTMENT, RH REAR

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
EC17		ADJACENT TO FRONT RH WHEEL ARCH
CR99		HEADLINER, CLOSE TO ROOF CONSOLE
BR1	10-WAY / SLATE / CABIN HARNESS TO REAR BUMPER HARNESS	ADJACENT TO REAR LH WHEEL ARCH

### GROUNDS

Ground	Location
G29	BEHIND REAR SEAT BACK, RH SIDE


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

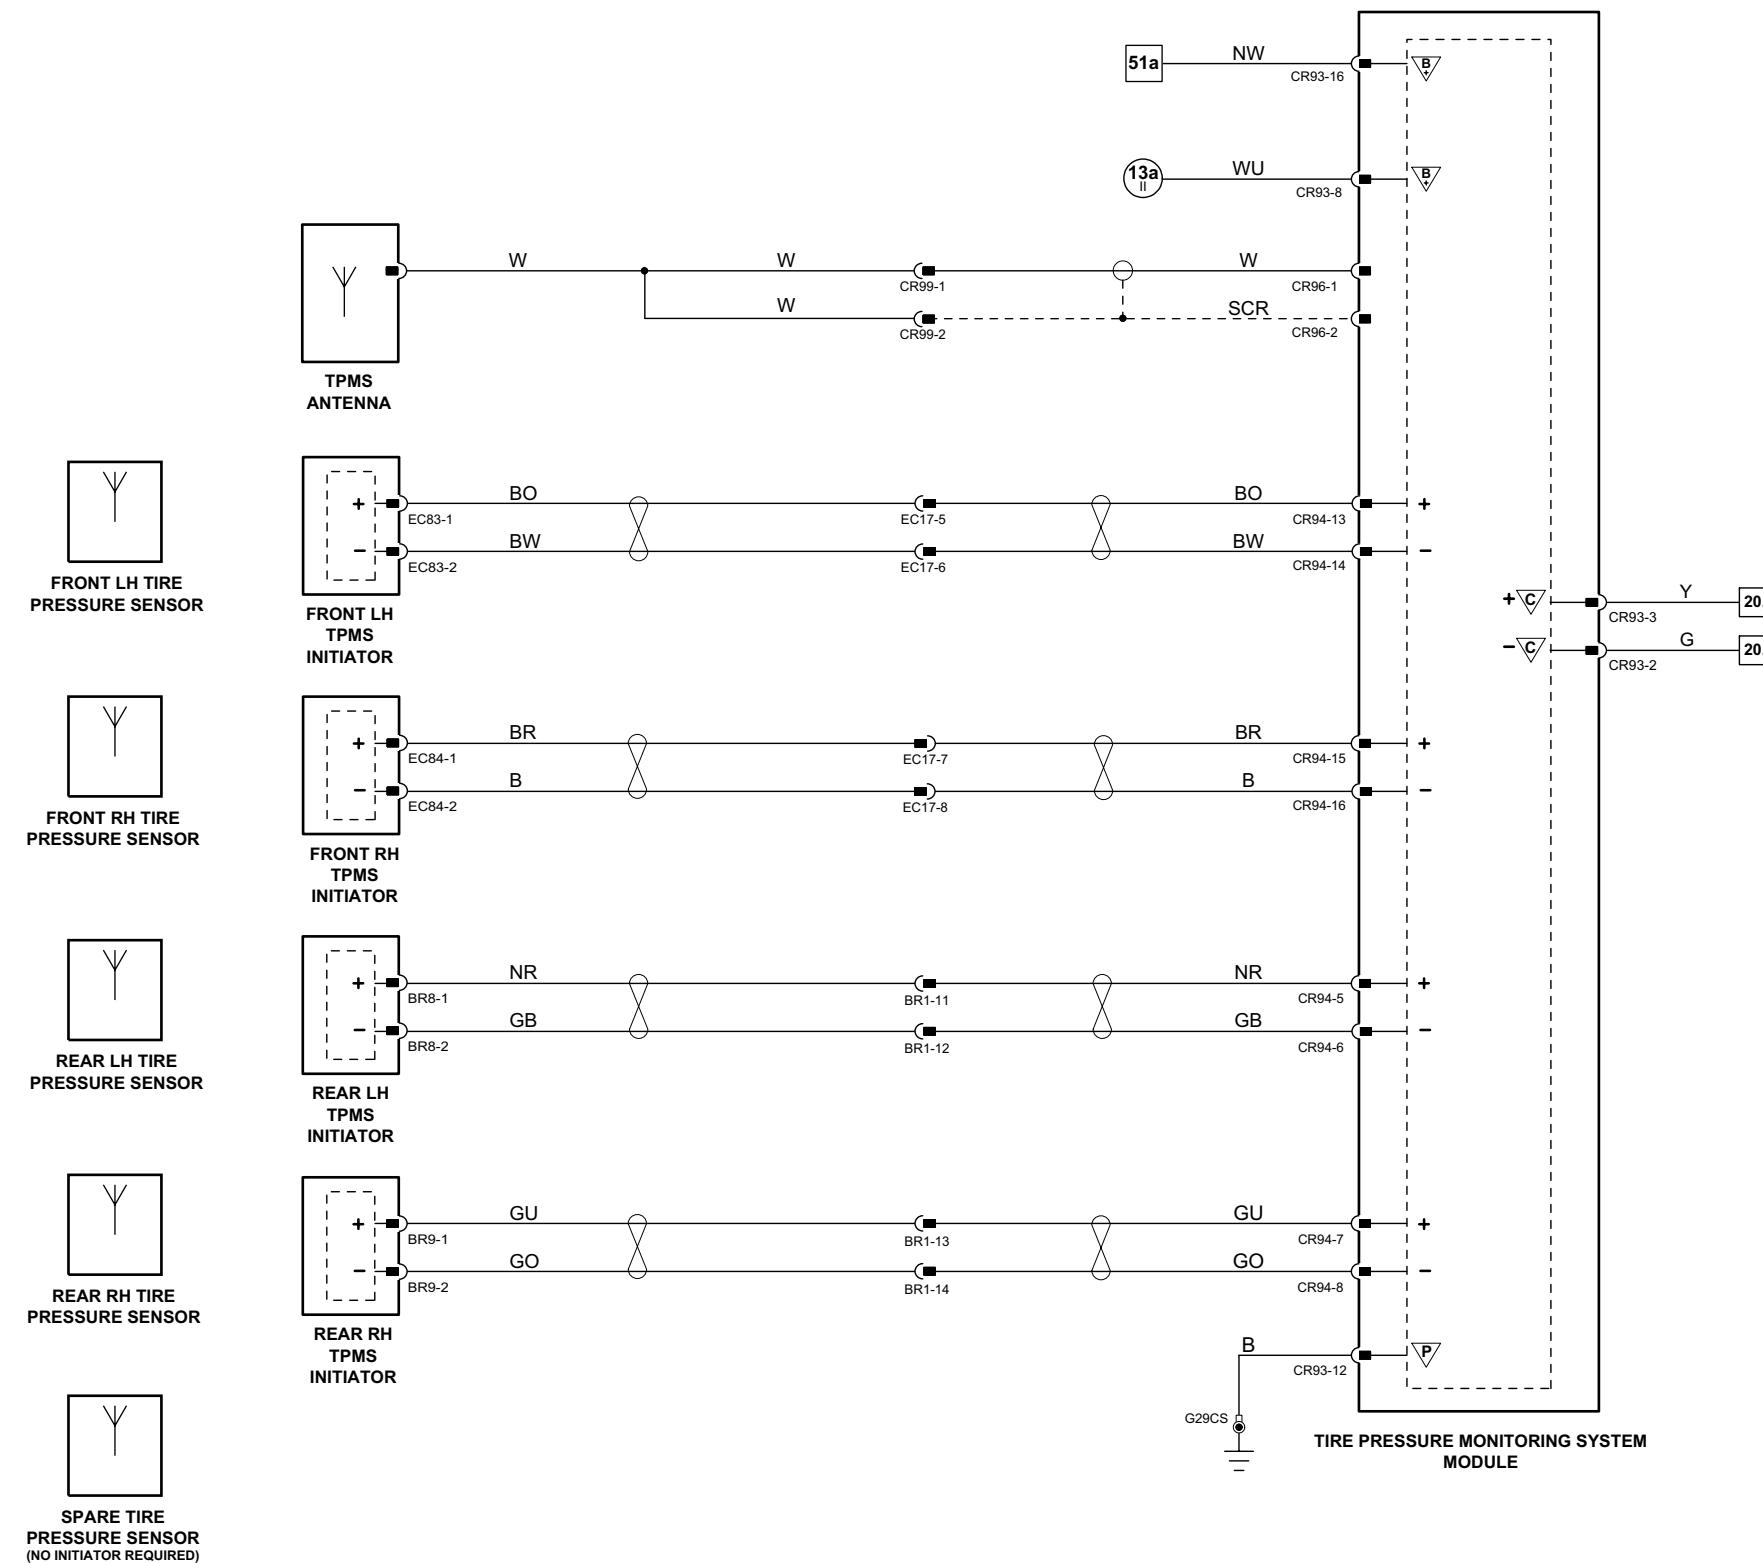

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	S Sensor/Signal Supply V	ACP ACP	VARIANT: Tire Pressure Monitoring Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	G Power Ground	P Sensor/Signal Ground	SCP SCP	VIN RANGE: All
							CAN CAN	DATE OF ISSUE: May 2007
							D Serial and Encoded Data	

**Fig. 06.1**

#### Climate Control Module

Pin	Description and Characteristic
I AC100-1	IN-CAR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I AC100-2	EVAPORATOR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I AC100-3	DUAL SOLAR SENSOR SIGNAL – LH: VOLTAGE DECREASES AS LIGHT INCREASES
I AC100-4	DUAL SOLAR SENSOR SIGNAL – RH: VOLTAGE DECREASES AS LIGHT INCREASES
I AC100-5	RH AIR MIX SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I AC100-6	RH MODE SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I AC100-7	RH COOL AIR BYPASS / DEFROST SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
SS AC100-8	SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
O AC100-9	PANEL ILLUMINATION SIGNAL FROM RCCM TO PANEL FOR ILLUMINATION REQUIREMENTS
I AC100-10	LH OUTLET AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I AC100-11	RH OUTLET AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I AC100-12	AIR INTAKE SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I AC100-13	LH AIR MIX SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I AC100-14	LH MODE SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
SG AC100-15	LH COOL AIR BYPASS / DEFROST SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V: CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
SG AC100-16	SENSOR SIGNAL GROUND: GROUND
O AC101-2	PANEL COMMUNICATION CLOCK: SYNCHRONIZATION PULSES: 1 KHZ, 50% DUTY
D AC101-3	PANEL COMMUNICATION SWITCH DATA: INDICATES SWITCH BEING PRESSED
I AC101-4	PANEL COMMUNICATION BLANK: INDICATES TO CCM TO MAKE PANEL BLANK DURING CRANK
I AC101-6	PANEL BUZZER: INDICATES TO CCM TO MAKE AUDI BEEP
O AC101-7	RH AIR MIX SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-8	LH AIR MIX SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-9	AIR INTAKE SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-10	RH MODE SERVO DRIVE +: B+ WHEN ACTIVATED
O AC101-11	LH MODE SERVO DRIVE +: B+ WHEN ACTIVATED
O AC101-12	RH COOL AIR BYPASS / DEFROST SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-13	LH COOL AIR BYPASS / DEFROST SERVO DRIVE -: B+ WHEN ACTIVATED
I AC101-14	HUMIDITY SENSOR SIGNAL: 0.7 VOLTS = 10% HUMIDITY (DRY); 2.5 VOLTS = 60% HUMIDITY (TYPICAL); 3.0 VOLTS = 90% HUMIDITY (DAMP)
D AC101-16	PANEL COMMUNICATION DATA: INDICATES TO PANEL WHICH LCD SEGMENTS OR LEDs ARE TO BE ILLUMINATED
O AC101-17	PANEL COMMUNICATION STX: SYNCHRONIZATION PULSES: 30 Hz, 3% DUTY
SG AC101-18	PANEL SHIELD: GROUND
O AC101-19	PANEL BACK LIGHTING: CCM INDICATES TO PANEL TO BACKLIGHT LCD
O AC101-20	RH AIR MIX SERVO DRIVE +: B+ WHEN ACTIVATED
O AC101-21	LH AIR MIX SERVO DRIVE +: B+ WHEN ACTIVATED
O AC101-22	AIR INTAKE SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-23	RH MODE SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-24	LH MODE SERVO DRIVE -: B+ WHEN ACTIVATED
O AC101-25	RH COOL AIR BYPASS / DEFROST SERVO DRIVE +: B+ WHEN ACTIVATED
O AC101-26	LH COOL AIR BYPASS / DEFROST SERVO DRIVE +: B+ WHEN ACTIVATED
B+ CR119-2	SWITCHED SYSTEM POWER SUPPLY: B+
B+ CR119-3	IGNITION SWITCHED POWER SUPPLY (II): B+
O CR119-4	COMPRESSOR CLUTCH DRIVE +: B+ WHEN ACTIVATED
O CR119-5	COMPRESSOR CLUTCH DRIVE -: GROUND WHEN ACTIVATED
C CR119-6	CAN +
C CR119-7	CAN –
I CR119-8	SMOG SENSOR HC SIGNAL: RESISTANCE TO SENSOR GROUND (CR119-18) VARIES WITH HYDROCARBON / CO CONCENTRATION
I CR119-11	DIMMER CONTROLLED ILLUMINATION: PWM, 80Hz, GROUND = 0% DUTY CYCLE, B+ = 100% DUTY CYCLE
C CR119-16	CAN +
C CR119-17	CAN –
SG CR119-18	AMBIENT AIR; SMOG SENSOR SIGNAL GROUND: GROUND
I CR119-19	AMBIENT AIR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
I CR119-20	SMOG SENSOR NOX SIGNAL: RESISTANCE TO SENSOR GROUND (CR119-18) VARIES WITH NOX CONCENTRATION
PG CR119-22	POWER GROUND: GROUND

#### Engine Control Module

Pin	Description and Characteristic
SG EC300-8	SENSOR GROUND 1: GROUND
I EC300-12	AIR CONDITIONING PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: TRANSDUCER – VOLTAGE INCREASES AS PRESSURE INCREASES
SS EC300-32	SENSOR POWER SUPPLY 1: NOMINAL 5 V
C PI300-1	CAN +
C PI300-2	CAN –

#### Instrument Cluster

Pin	Description and Characteristic
C IP6-8	CAN +
C IP6-9	CAN –
S IP6-10	SCP –
S IP6-20	SCP +

#### Powertrain Control Module

Pin	Description and Characteristic
C C98-A3	CAN –
C C98-A4	CAN +
SS EC66-B3	SENSOR POWER SUPPLY 1: NOMINAL 5 V
SG EC66-D3	SENSOR GROUND 1: GROUND
I EC66-F2	AIR CONDITIONING PRESSURE SENSOR SIGNAL, NOMINAL 0 – 5 V: TRANSDUCER – VOLTAGE INCREASES AS PRESSURE INCREASES

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

#### COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING COMPRESSOR CLUTCH	P149	2-WAY / BLACK	LOWER LH SIDE OF ENGINE
AIR CONDITIONING PRESSURE SENSOR (GASOLINE)	EC11	3-WAY / BLACK	ADJACENT TO RADIATOR / LH SIDE
AIR CONDITIONING PRESSURE SENSOR (DIESEL 2.7V6)	EC101	3-WAY / BLACK	ADJACENT TO RADIATOR / LH SIDE
AIR INTAKE SERVO	AC103	7-WAY / BLACK	CLIMATE CONTROL UNIT AIR INTAKE
AIR MIX SERVO – LH	AC8	7-WAY / BLACK	CLIMATE CONTROL UNIT / LH SIDE
AIR MIX SERVO – RH	AC9	7-WAY / BLACK	CLIMATE CONTROL UNIT / RH SIDE
AMBIENT TEMPERATURE SENSOR	EC48	2-WAY / BLACK	BEHIND FRONT BUMPER / CENTER RIGHT
CLIMATE CONTROL MODULE	AC100	16-WAY / BLACK	CLIMATE CONTROL UNIT / DRIVER SIDE
	AC101	26-WAY / BLACK	
	CR119	22-WAY / BLACK	
CLIMATE CONTROL PANEL	CC20	12-WAY / BLACK	CENTER CONSOLE
COOL AIR BYPASS / DEFROST SERVO – LH	AC4	7-WAY / BLACK	CLIMATE CONTROL UNIT / LH SIDE
COOL AIR BYPASS / DEFROST SERVO – RH	AC5	7-WAY / BLACK	CLIMATE CONTROL UNIT / RH SIDE
DUAL SOLAR SENSOR	IP45	3-WAY / NATURAL	INSTRUMENT PANEL / FRONT CENTER
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
	PI300	96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
EVAPORATOR TEMPERATURE SENSOR	AC1	2-WAY / BLACK	CLIMATE CONTROL UNIT / EVAPORATOR
HUMIDITY SENSOR	IP48	4-WAY / NATURAL	CLIMATE CONTROL UNIT / DRIVER SIDE
IN-CAR TEMPERATURE SENSOR	IP48	4-WAY / NATURAL	CLIMATE CONTROL UNIT / DRIVER SIDE
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
MODE SERVO – LH	AC6	7-WAY / BLACK	CLIMATE CONTROL UNIT / LH SIDE
MODE SERVO – RH	AC7	7-WAY / BLACK	CLIMATE CONTROL UNIT / RH SIDE
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
	TL2	20-WAY / BLACK	
	TL29	26-WAY / BLACK	
	TL30	12-WAY / BLACK	
	TL37	2-WAY / BLACK	
OUTLET AIR TEMPERATURE SENSOR – LH	AC2	2-WAY / BLACK	CLIMATE CONTROL UNIT / LH OUTLET
OUTLET AIR TEMPERATURE SENSOR – RH	AC3	2-WAY / BLACK	CLIMATE CONTROL UNIT / RH OUTLET
POWERTRAIN CONTROL MODULE	C98	48-WAY / BROWN	FRONT BULKHEAD, PASSENGER SIDE
	C99	48-WAY / GREY	
SMOG SENSOR	EC66	48-WAY / BLACK	
	EC42	6-WAY / GREY	ENGINE COMPARTMENT / FORWARD OF COOLING PACK / CENTER

#### HARNESS IN-LINE CONNECTORS


Connector	Connector Description / Location	Location
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC16	12-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
IP20	16-WAY / BLUE / AIR CONDITIONING HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / LH SIDE TO CLIMATE CONTROL UNIT
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

#### GROUNDS

Ground	Location
G7	CABIN / LH SIDE OF TRANSMISSION TUNNEL
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

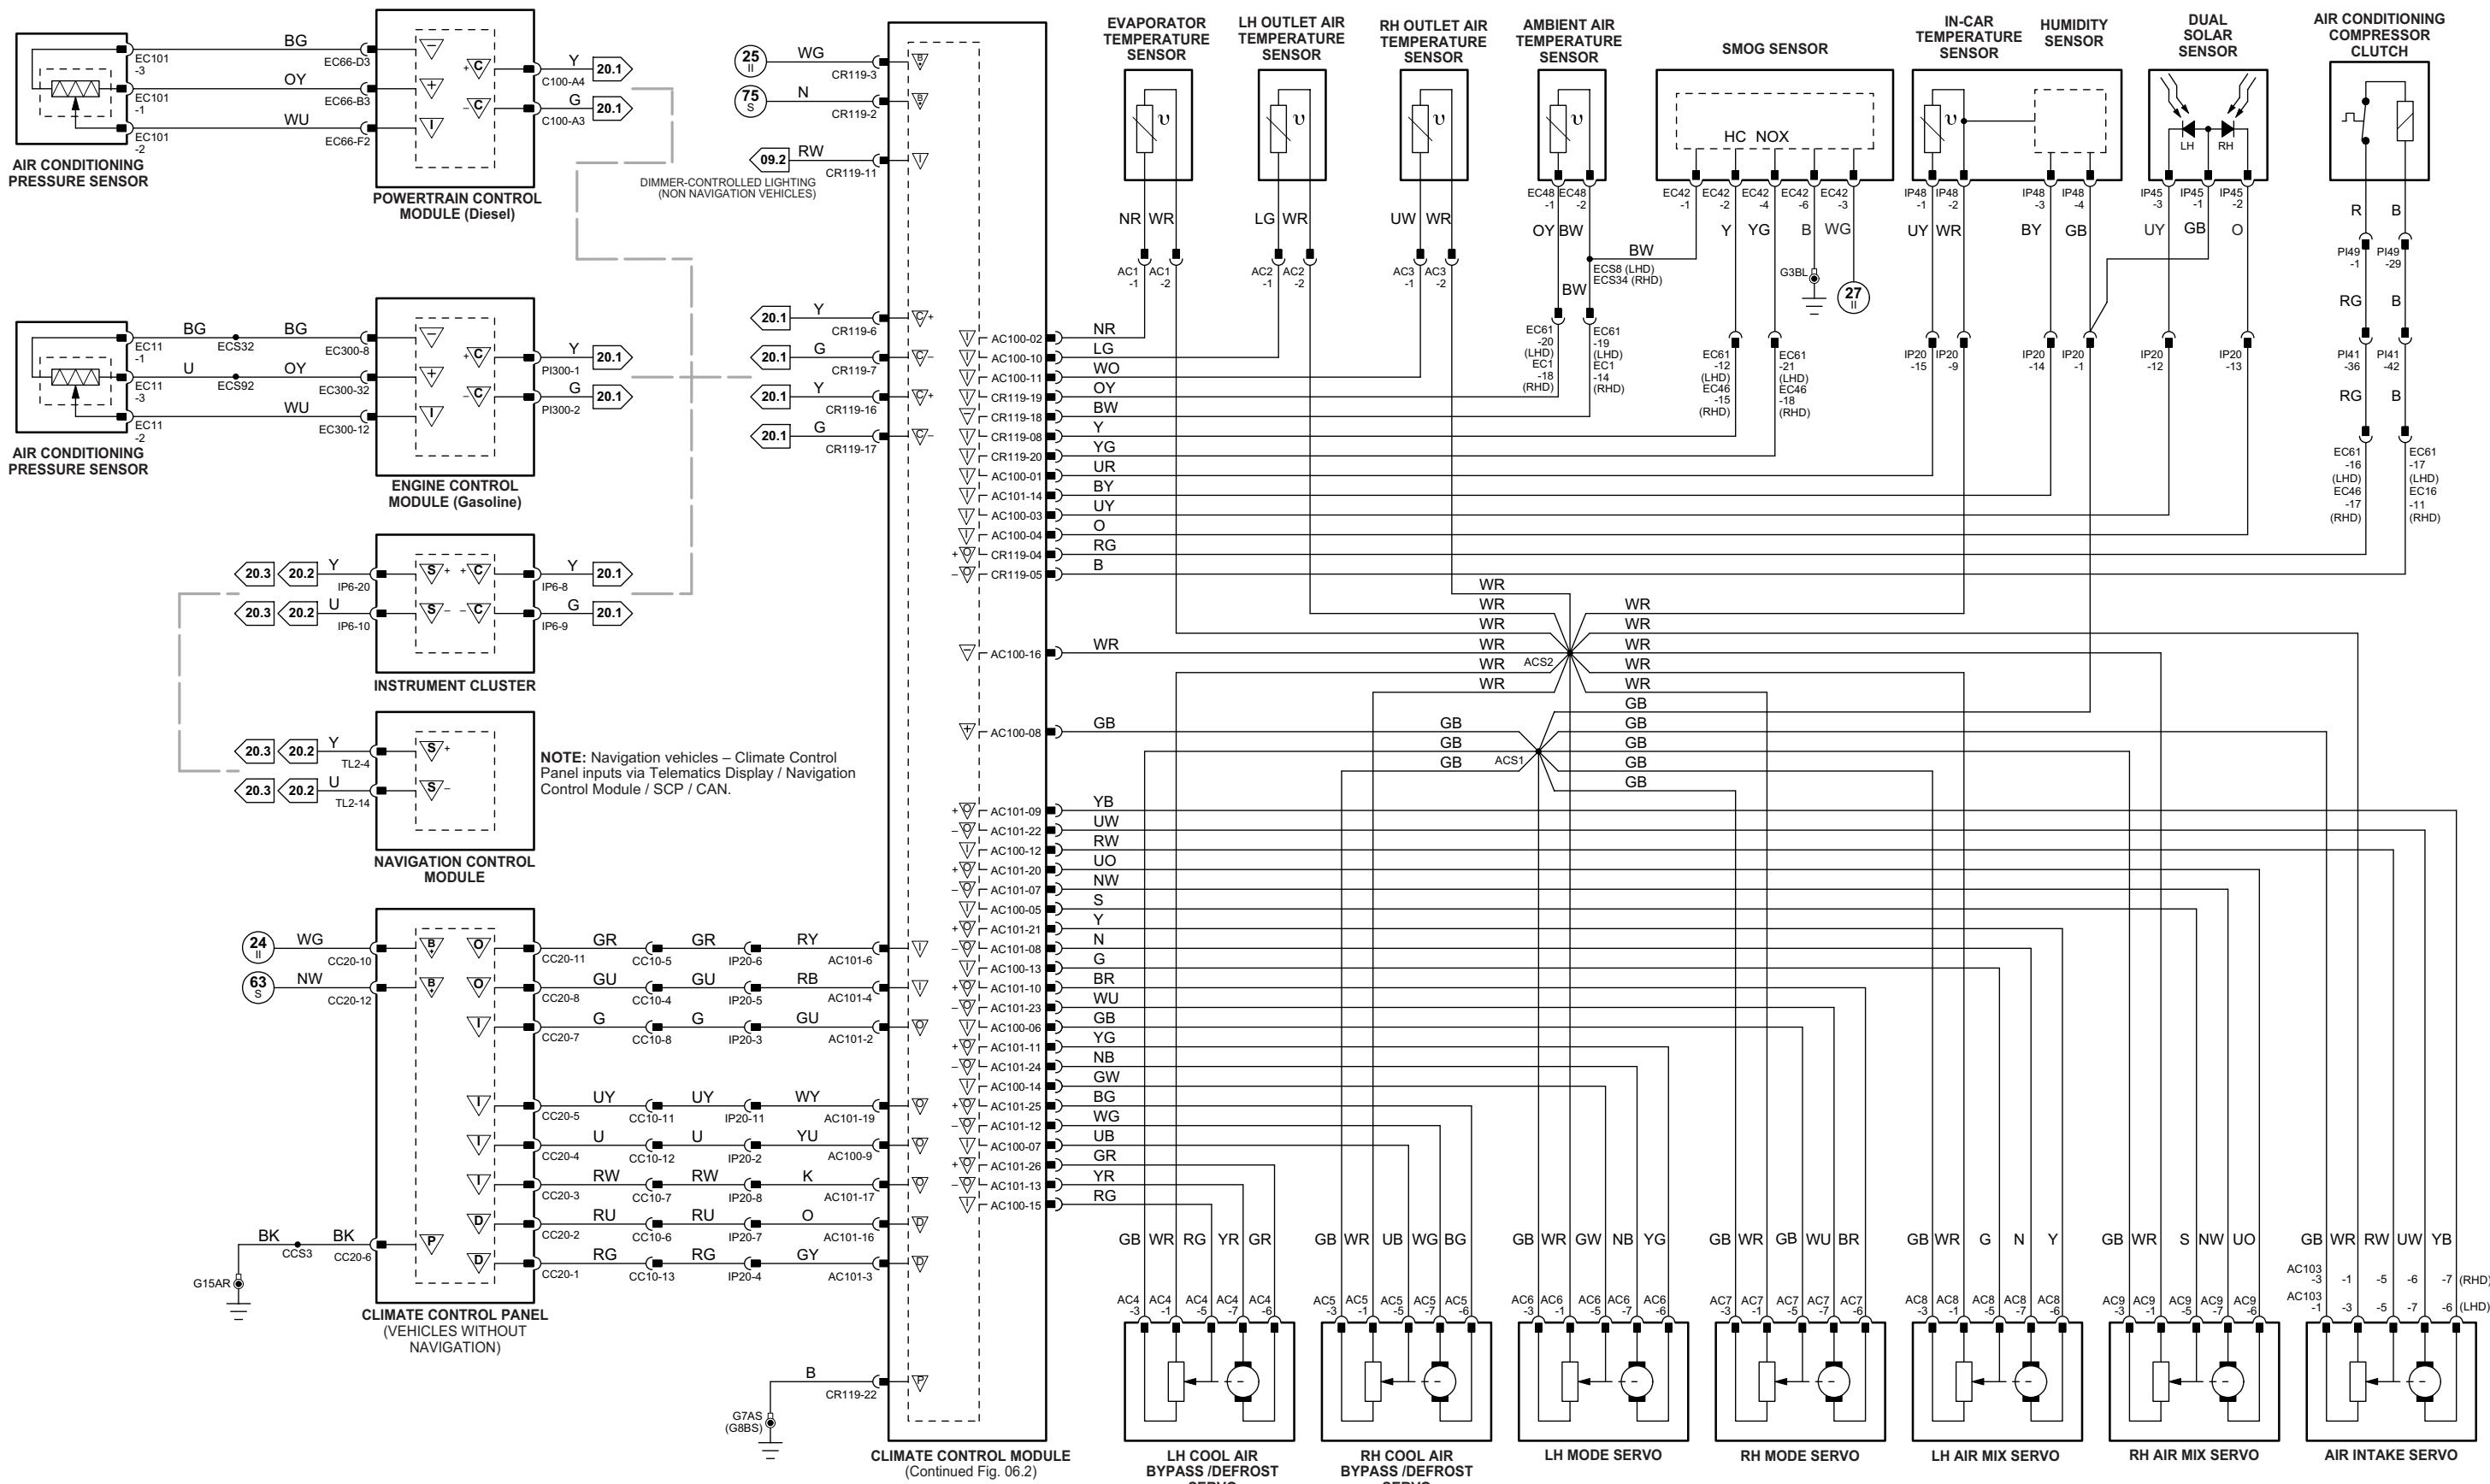

## Climate Control Module

Pin	Description and Characteristic
O AC101-1	LOWER MOTOR DRIVE SIGNAL: HIGH BLOWER = HIGH VOLTAGE; LOW BLOWER = LOW VOLTAGE
I AC101-15	BLOWER MOTOR SPEED SIGNAL: 0 VOLTS WHEN RELAY IS OPEN; WHEN RELAY CLOSED LOWER VOLTAGE INDICATES MORE BLOWER VOLTAGE
O CR119-9	HEATED WIPER PARK; HEATED WINDSHIELD RELAY(S) ACTIVATE: TO ACTIVATE, CCM SWITCHES CIRCUIT TO GROUND
O CR119-10	BLOWER RELAY ACTIVATE: TO ACTIVATE, CCM SWITCHES CIRCUIT TO GROUND
O CR119-21	HEATED REAR WINDOW RELAY ACTIVATE: TO ACTIVATE, CCM SWITCHES CIRCUIT TO GROUND

Fig. 06.2

### COMPONENTS

Component	Connector(s)	Connector Description	Location
AUXILIARY COOLANT PUMP (Gasoline)	CP4	2-WAY / BLACK	ENGINE COMPARTMENT / RH SIDE / REARWARD OF COOLING PACK
AUXILIARY COOLANT PUMP (Diesel)	CP5	2-WAY / BLACK	ENGINE COMPARTMENT / RH SIDE / REARWARD OF COOLING PACK
AUXILIARY COOLANT PUMP RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R12a
BLOWER	AC105	2-WAY / BLACK	CLIMATE CONTROL UNIT / BETWEEN AIR INTAKE AND MAIN UNIT
BLOWER CONTROLLER	AC104	4-WAY / BLACK	CLIMATE CONTROL UNIT / BETWEEN AIR INTAKE AND MAIN UNIT / TOP
BLOWER RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R1
CLIMATE CONTROL MODULE	AC100	16-WAY / BLACK	CLIMATE CONTROL UNIT / DRIVER SIDE
	AC101	26-WAY / BLACK	
	CR119	22-WAY / BLACK	
FRONT POWER DISTRIBUTION FUSE BOX	—	—	ENGINE COMPARTMENT / RH FRONT
HEATED REAR VIEW MIRROR – DRIVER	DD9	22-WAY / DARK GREY	DRIVER DOOR
HEATED REAR VIEW MIRROR – PASSENGER	PD9	22-WAY / DARK GREY	PASSENGER DOOR
HEATED REAR WINDOW	HW1	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
	HW2	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
HEATED REAR WINDOW RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R5
HEATED WIPER PARK RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R13
REAR POWER DISTRIBUTION FUSE BOX	—	—	TRUNK / RH REAR
WINDSHIELD HEATED WIPER PARK	CR27	1-WAY / BLACK	CABIN / LH UPPER 'A' POST (CONNECTOR LOCATION)
	CR39	1-WAY / BLACK	CABIN / RH UPPER 'A' POST (CONNECTOR LOCATION)
WINDSHIELD HEATER – LH	CR20	1-WAY / BLACK	CABIN / LH UPPER 'A' POST (CONNECTOR LOCATION)
	CR27	1-WAY / BLACK	CABIN / LH UPPER 'A' POST (CONNECTOR LOCATION)
WINDSHIELD HEATER – RH	CR39	1-WAY / BLACK	CABIN / RH UPPER 'A' POST (CONNECTOR LOCATION)
	CR43	1-WAY / BLACK	CABIN / RH UPPER 'A' POST (CONNECTOR LOCATION)
WINDSHIELD HEATER RELAY – LH	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R3
WINDSHIELD HEATER RELAY – RH	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R13

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CP1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INTERCOOLER COOLANT PUMP HARNESS	ENGINE COMPARTMENT / ADJACENT TO RADIATOR RH SIDE
CP7	4-WAY / GREY / CABIN HARNESS TO AUXILIARY COOLING PUMP	FRONT RIGHT LOWER
CR24	2-WAY / BLACK / CABIN HARNESS TO HEATED REAR WINDOW HARNESS	CABIN / BEHIND REAR SEAT BACK / LH SIDE
CR25	2-WAY / NATURAL / CABIN HARNESS TO AIR CONDITIONING HARNESS	CABIN / ADJACENT TO BLOWER MOTOR
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC2	2-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC54	2-WAY / GREY / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST

### GROUNDS

Ground	Location
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G7	CABIN / LH SIDE OF TRANSMISSION TUNNEL
G8	CABIN / ABOVE RH SIDE OF TRANSMISSION TUNNEL
G9	CABIN / UPPER LH A POST
G10	CABIN / RH A POST

NOTE: FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

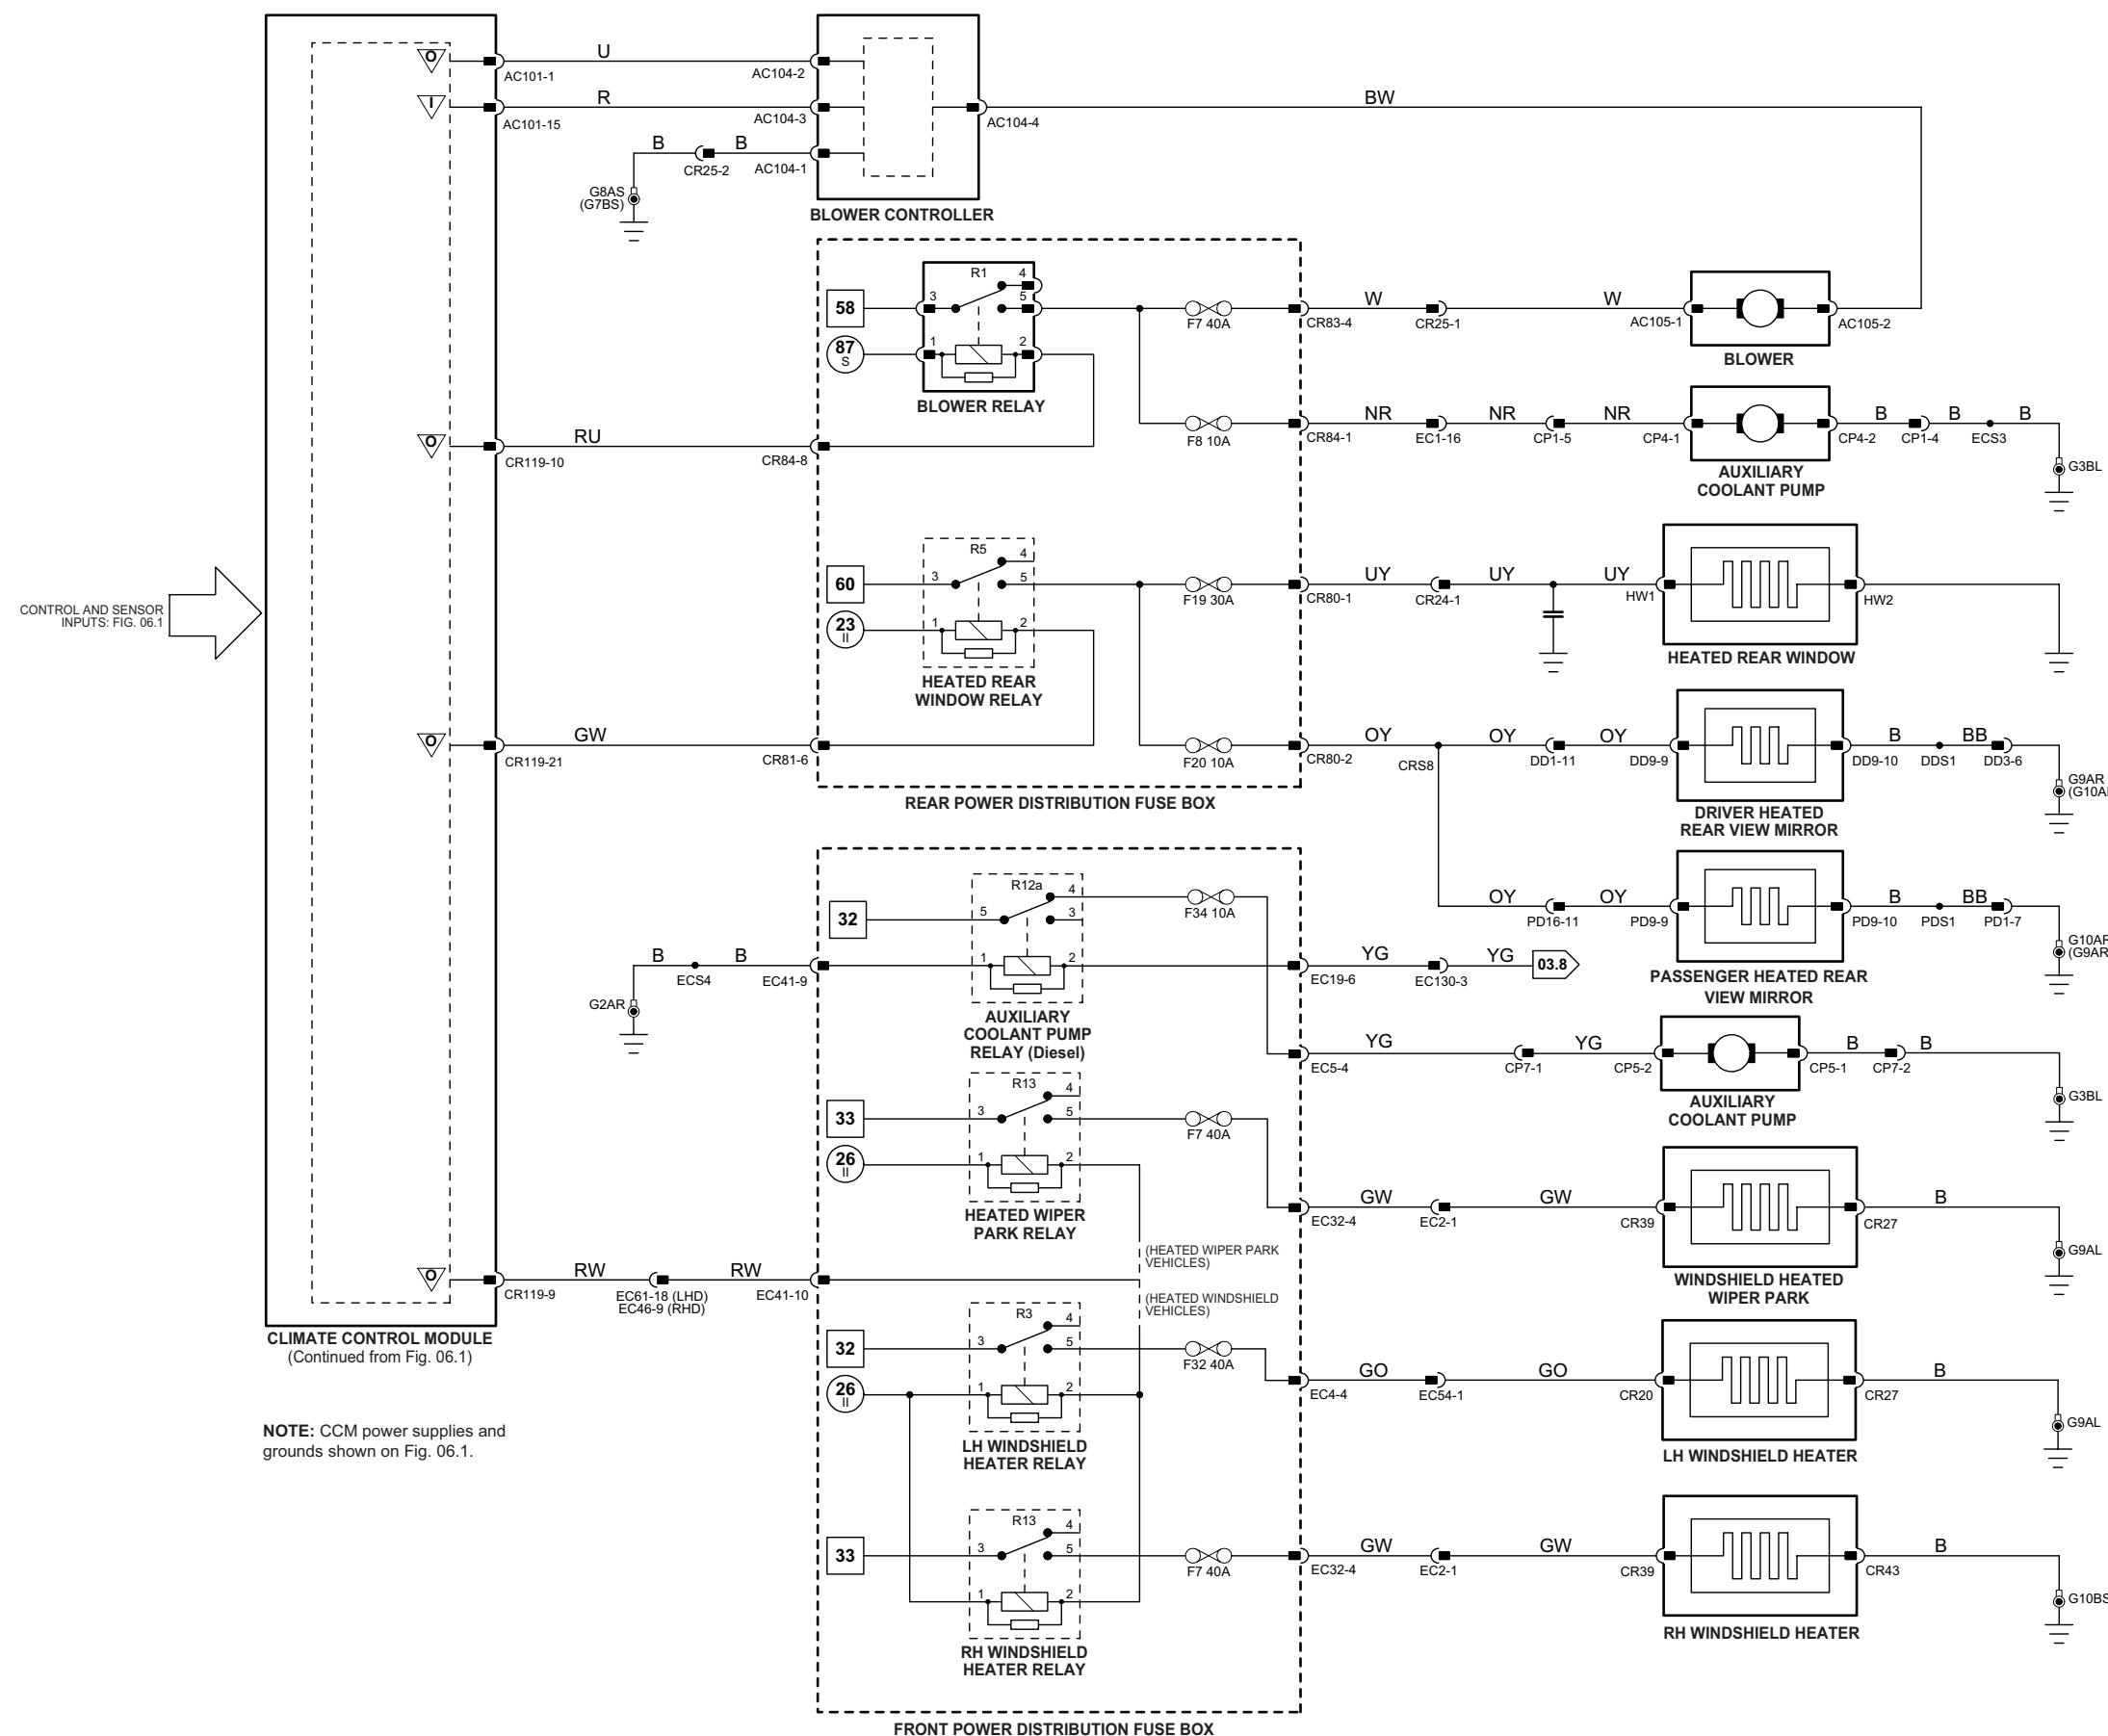

## Rear Climate Control Module

Pin	Description and Characteristic
I RA1-1	REAR MODE SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V; CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I RA1-2	LH REAR AIR MIX SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V; CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
I RA1-3	RH REAR AIR MIX SERVO POSITION SENSOR SIGNAL, NOMINAL 0 – 5 V; CLOSED DIRECTION = LOWER VOLTAGE; OPEN DIRECTION = HIGHER VOLTAGE
O RA1-6	MAGNETIC VALVE OUTPUT SIGNAL
C RA1-8	CAN +
I RA1-9	REAR EVAPORATOR TEMPERATURE SENSOR SIGNAL, NOMINAL 0 – 5 V: NTC SENSOR – VOLTAGE DECREASES AS TEMPERATURE INCREASES
SS RA1-11	SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V
SG RA1-12	SENSOR SIGNAL GROUND: GROUND
I RA1-13	BLOWER MOTOR SPEED SIGNAL: HIGH BLOWER = HIGH VOLTAGE; LOW BLOWER = LOW VOLTAGE
O RA1-14	BLOWER MOTOR DRIVE SIGNAL: 0 VOLTS WHEN RELAY IS OPEN; WHEN RELAY CLOSED, LOWER VOLTAGE INDICATES MORE BLOWER VOLTAGE
C RA1-16	CAN –
PG RA2-1	POWER GROUND: GROUND
I RA2-3	DIMMER CONTROLLED LIGHTING: B+ PWM
O RA2-4	REAR MODE SERVO DRIVE +: B+ WHEN ACTIVATED
O RA2-5	REAR MODE SERVO DRIVE -: B+ WHEN ACTIVATED
O RA2-6	LH REAR AIR MIX SERVO DRIVE +: B+ WHEN ACTIVATED
B+ RA2-7	IGNITION SWITCHED POWER SUPPLY (II): B+
B+ RA2-8	SWITCHED SYSTEM POWER SUPPLY: B+
O RA2-10	RH REAR AIR MIX SERVO DRIVE -: B+ WHEN ACTIVATED
O RA2-11	RH REAR AIR MIX SERVO DRIVE +: B+ WHEN ACTIVATED
O RA2-12	LH REAR AIR MIX SERVO DRIVE -: B+ WHEN ACTIVATED

Fig. 06.3

## COMPONENTS

Component	Connector(s)	Connector Description	Location
MAGNETIC VALVE	RA11	UNKNOWN	REAR CLIMATE CONTROL UNIT
REAR AIR MIX SERVO – LH	RA7	5-WAY / BLACK	REAR CLIMATE CONTROL UNIT / LH SIDE / TOP
REAR AIR MIX SERVO – RH	RA8	5-WAY / BLACK	REAR CLIMATE CONTROL UNIT / RH SIDE / TOP
REAR BLOWER	RA4	2-WAY / BLACK	REAR CLIMATE CONTROL UNIT / FRONT
REAR BLOWER CONTROLLER	RA3	4-WAY / BLACK	REAR CLIMATE CONTROL UNIT / LH SIDE / FRONT
REAR CLIMATE CONTROL MODULE	RA1	16-WAY / BLACK	REAR CENTER CONSOLE
REAR EVAPORATOR TEMPERATURE SENSOR	RA2	12-WAY / BLACK	REAR CLIMATE CONTROL UNIT / EVAPORATOR
REAR MODE SERVO	RA10	2-WAY / BLACK	REAR CLIMATE CONTROL UNIT / LH SIDE / BOTTOM
	RA9	5-WAY / BLACK	REAR CLIMATE CONTROL UNIT / LH SIDE / BOTTOM

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
IP66	14-WAY / GREY / INSTRUMENT PANEL HARNESS TO REAR AIR CONDITIONING HARNESS	CABIN / BELOW CENTER CONSOLE

## GROUNDS

Ground	Location
G32	CABIN / BEHIND INSTRUMENT CLUSTER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

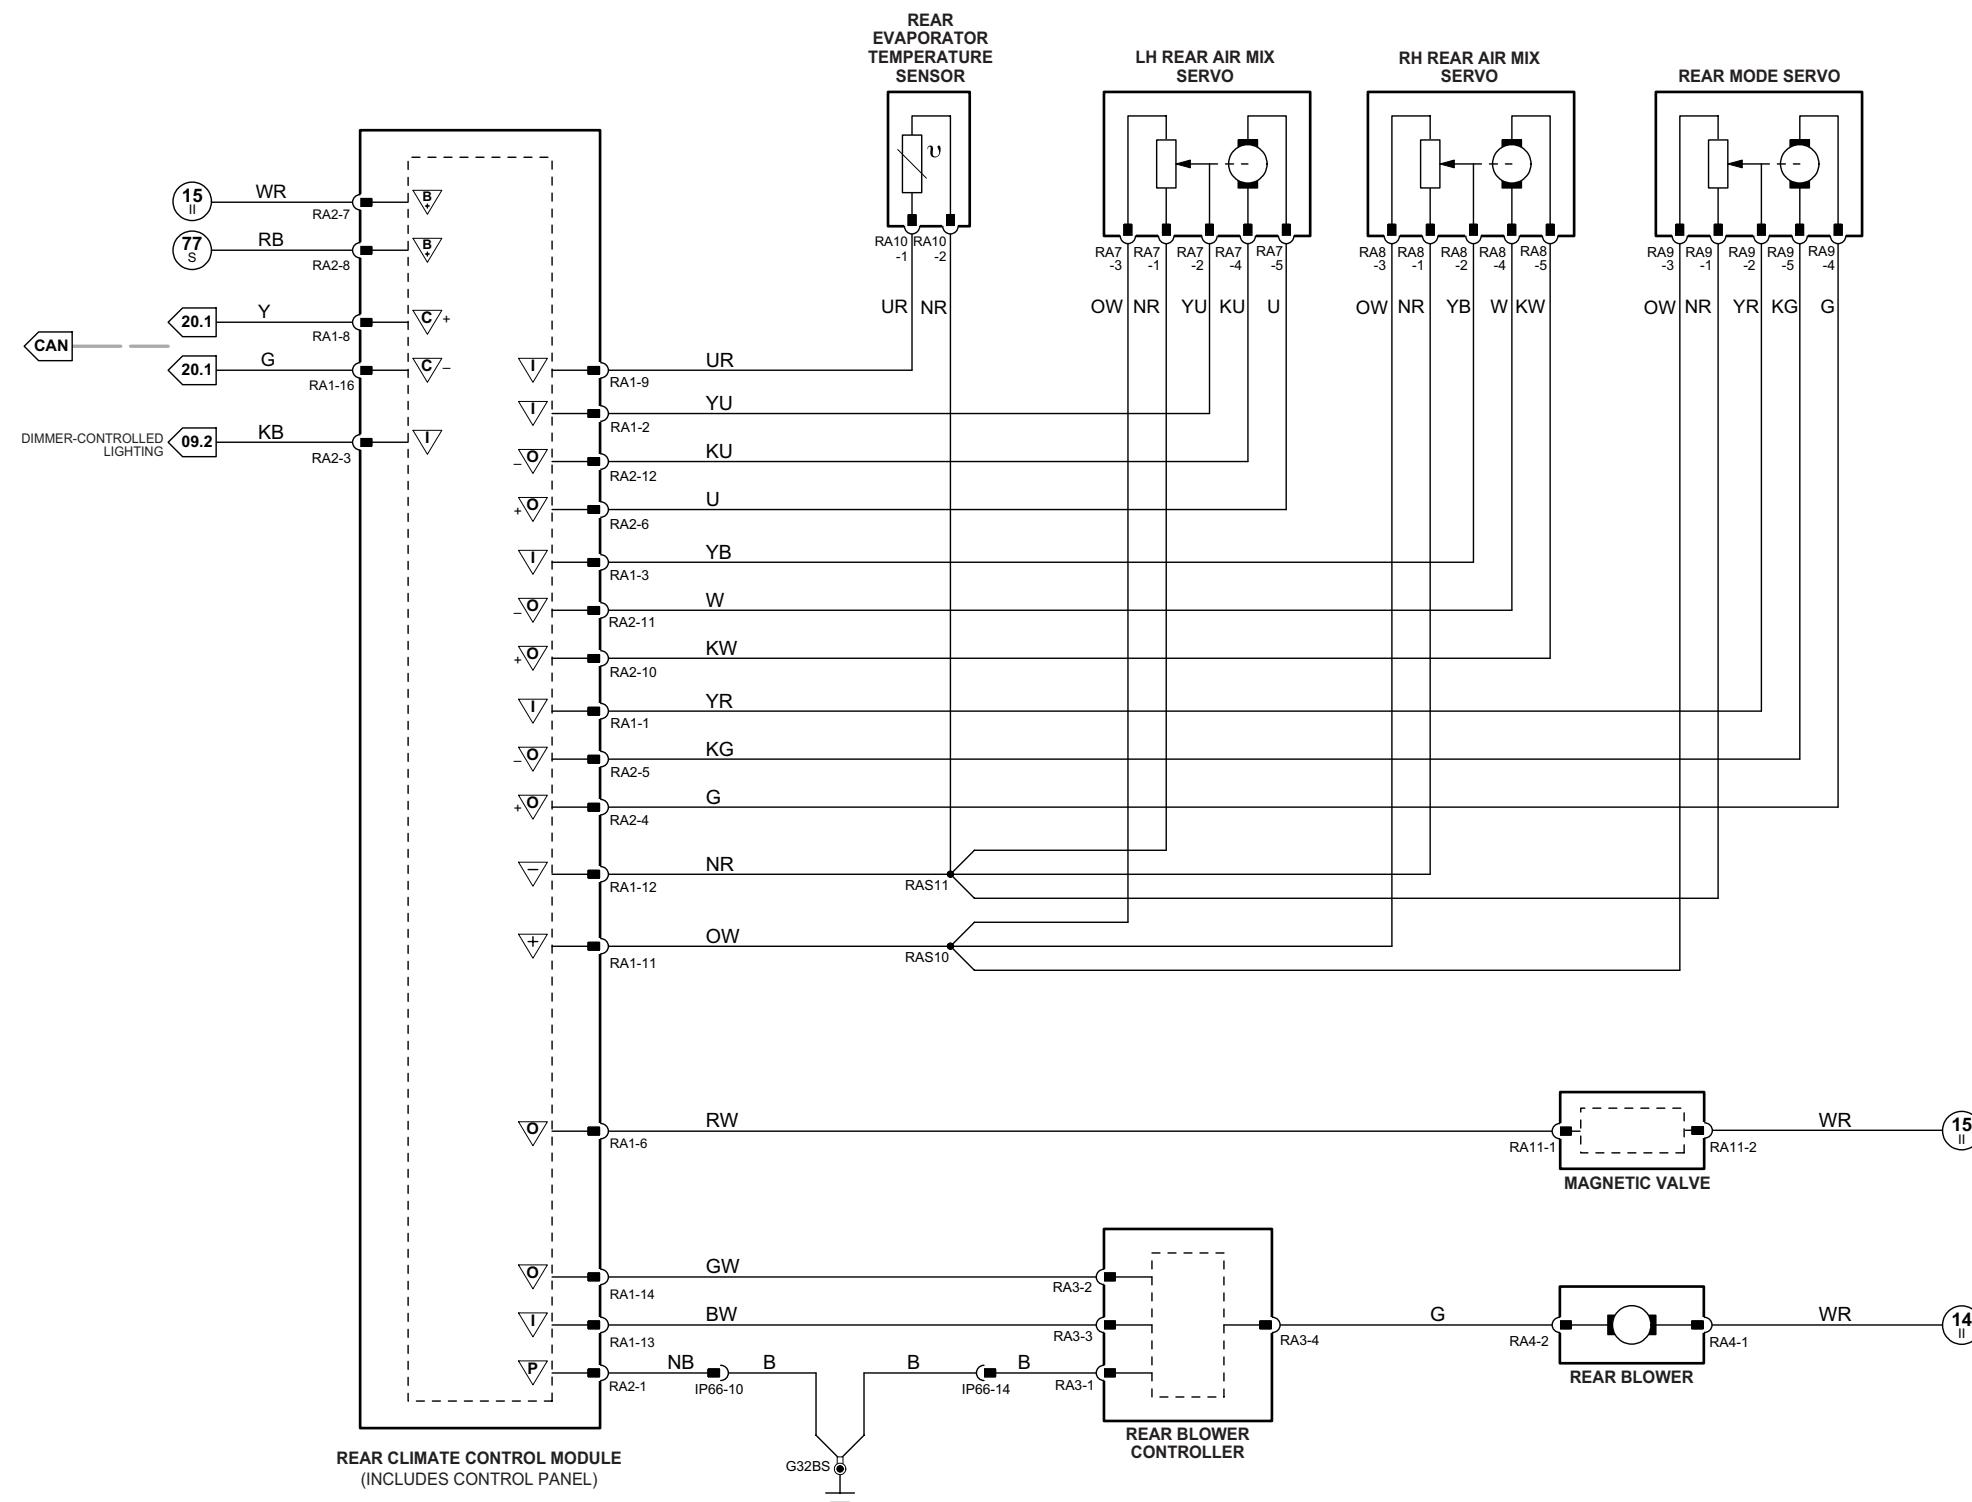

**Fig. 07.1**

**Instrument Cluster**

Pin	Description and Characteristic
I	IP5-1 AIR BAG WARNING: HARD WIRED TO AIR BAG INDICATOR
I	IP5-2 KEY-IN AUDIBLE WARNING: B+ WHEN KEY IN
B+	IP5-3 IGNITION SWITCHED POWER SUPPLY (II): B+
B+	IP5-4 IGNITION SWITCHED POWER SUPPLY (I): B+
I	IP5-5 LOW ENGINE COOLANT LEVEL WARNING: GROUND WHEN COOLANT LEVEL LOW
I	IP5-7 KEY-IN AUDIBLE WARNING (J-GATE): GROUND WHEN NOT-IN-PARK
I	IP5-8 SEAT BELT AUDIBLE WARNING REQUEST: AUDIBLE WARNING REQUEST ACTIVE = GROUND
B+	IP5-12 AIR BAG WARNING POWER SUPPLY
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
B+	IP6-3 BATTERY POWER SUPPLY (LOGIC): B+
C	IP6-8 CAN +
C	IP6-9 CAN -
S	IP6-10 SCP -
C	IP6-18 CAN +
C	IP6-19 CAN -
S	IP6-20 SCP +
SG	IP7-3 MAIN LIGHTING SWITCH SIGNAL GROUND: GROUND
I	IP7-4 TRIP COMPUTER – MESSAGE CENTER SIGNALS: VARIABLE RESISTANCE
I	IP7-11 ENGINE OIL PRESSURE SWITCH SIGNAL: GROUND WHEN ACTIVATED
I	IP7-14 TRIP CYCLE SWITCH – MESSAGE CENTER SIGNAL: VARIABLE RESISTANCE
SG	IP7-15 AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND

**Rear Electronic Module**

Pin	Description and Characteristic
B+	CR4-3 BATTERY POWER SUPPLY (LOGIC): B+
I	CR4-15 RH SIDE FUEL LEVEL SENSOR SIGNAL: VARIABLE RESISTANCE
I	CR4-16 LH SIDE FUEL LEVEL SENSOR SIGNAL: VARIABLE RESISTANCE
PG	CR11-11 POWER GROUND: GROUND
SG	CR11-23 FUEL LEVEL SENSORS SIGNAL GROUND: GROUND
SG	CR11-25 LOGIC GROUND: GROUND
S	CR13-1 SCP +
S	CR13-2 SCP -

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUXILIARY LIGHTING SWITCH	IP50	10-WAY / GREY	INSTRUMENT PANEL / OUTBOARD OF STEERING COLUMN
ENGINE COOLANT LEVEL SWITCH	CP3	2-WAY / BLACK	ENGINE COOLANT EXPANSION TANK / BOTTOM
ENGINE OIL PRESSURE SWITCH (Gasoline)	PI46	1-WAY / BLACK	ENGINE BLOCK / ADJACENT TO OIL FILTER
ENGINE OIL PRESSURE SWITCH (Diesel)	C29	1-WAY / BLACK	ENGINE BLOCK / ADJACENT TO OIL FILTER
FUEL LEVEL SENSOR - LH (NA)	FP7	4-WAY / BLACK	FUEL TANK / LH SIDE
FUEL LEVEL Sensor - LH (SC)	FP3	4-WAY / BLACK	FUEL TANK / LH SIDE
FUEL LEVEL SENSOR - RH	FP4	4-WAY / BLACK	FUEL TANK / RH SIDE
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR)	IP26	6-WAY / BLACK	STEERING COLUMN / LH SIDE
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CP1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INTERCOOLER COOLANT PUMP HARNESS	
CP7	4-WAY / GREY / CABIN HARNESS TO AUXILIARY COOLING PUMP	FRONT RIGHT LOWER
FP6	22-WAY / NATURAL / CABIN HARNESS TO FUEL PUMP HARNESS	TOP OF FUEL TANK / RH SIDE
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP17	16-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE

**GROUNDS**

Ground	Location
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

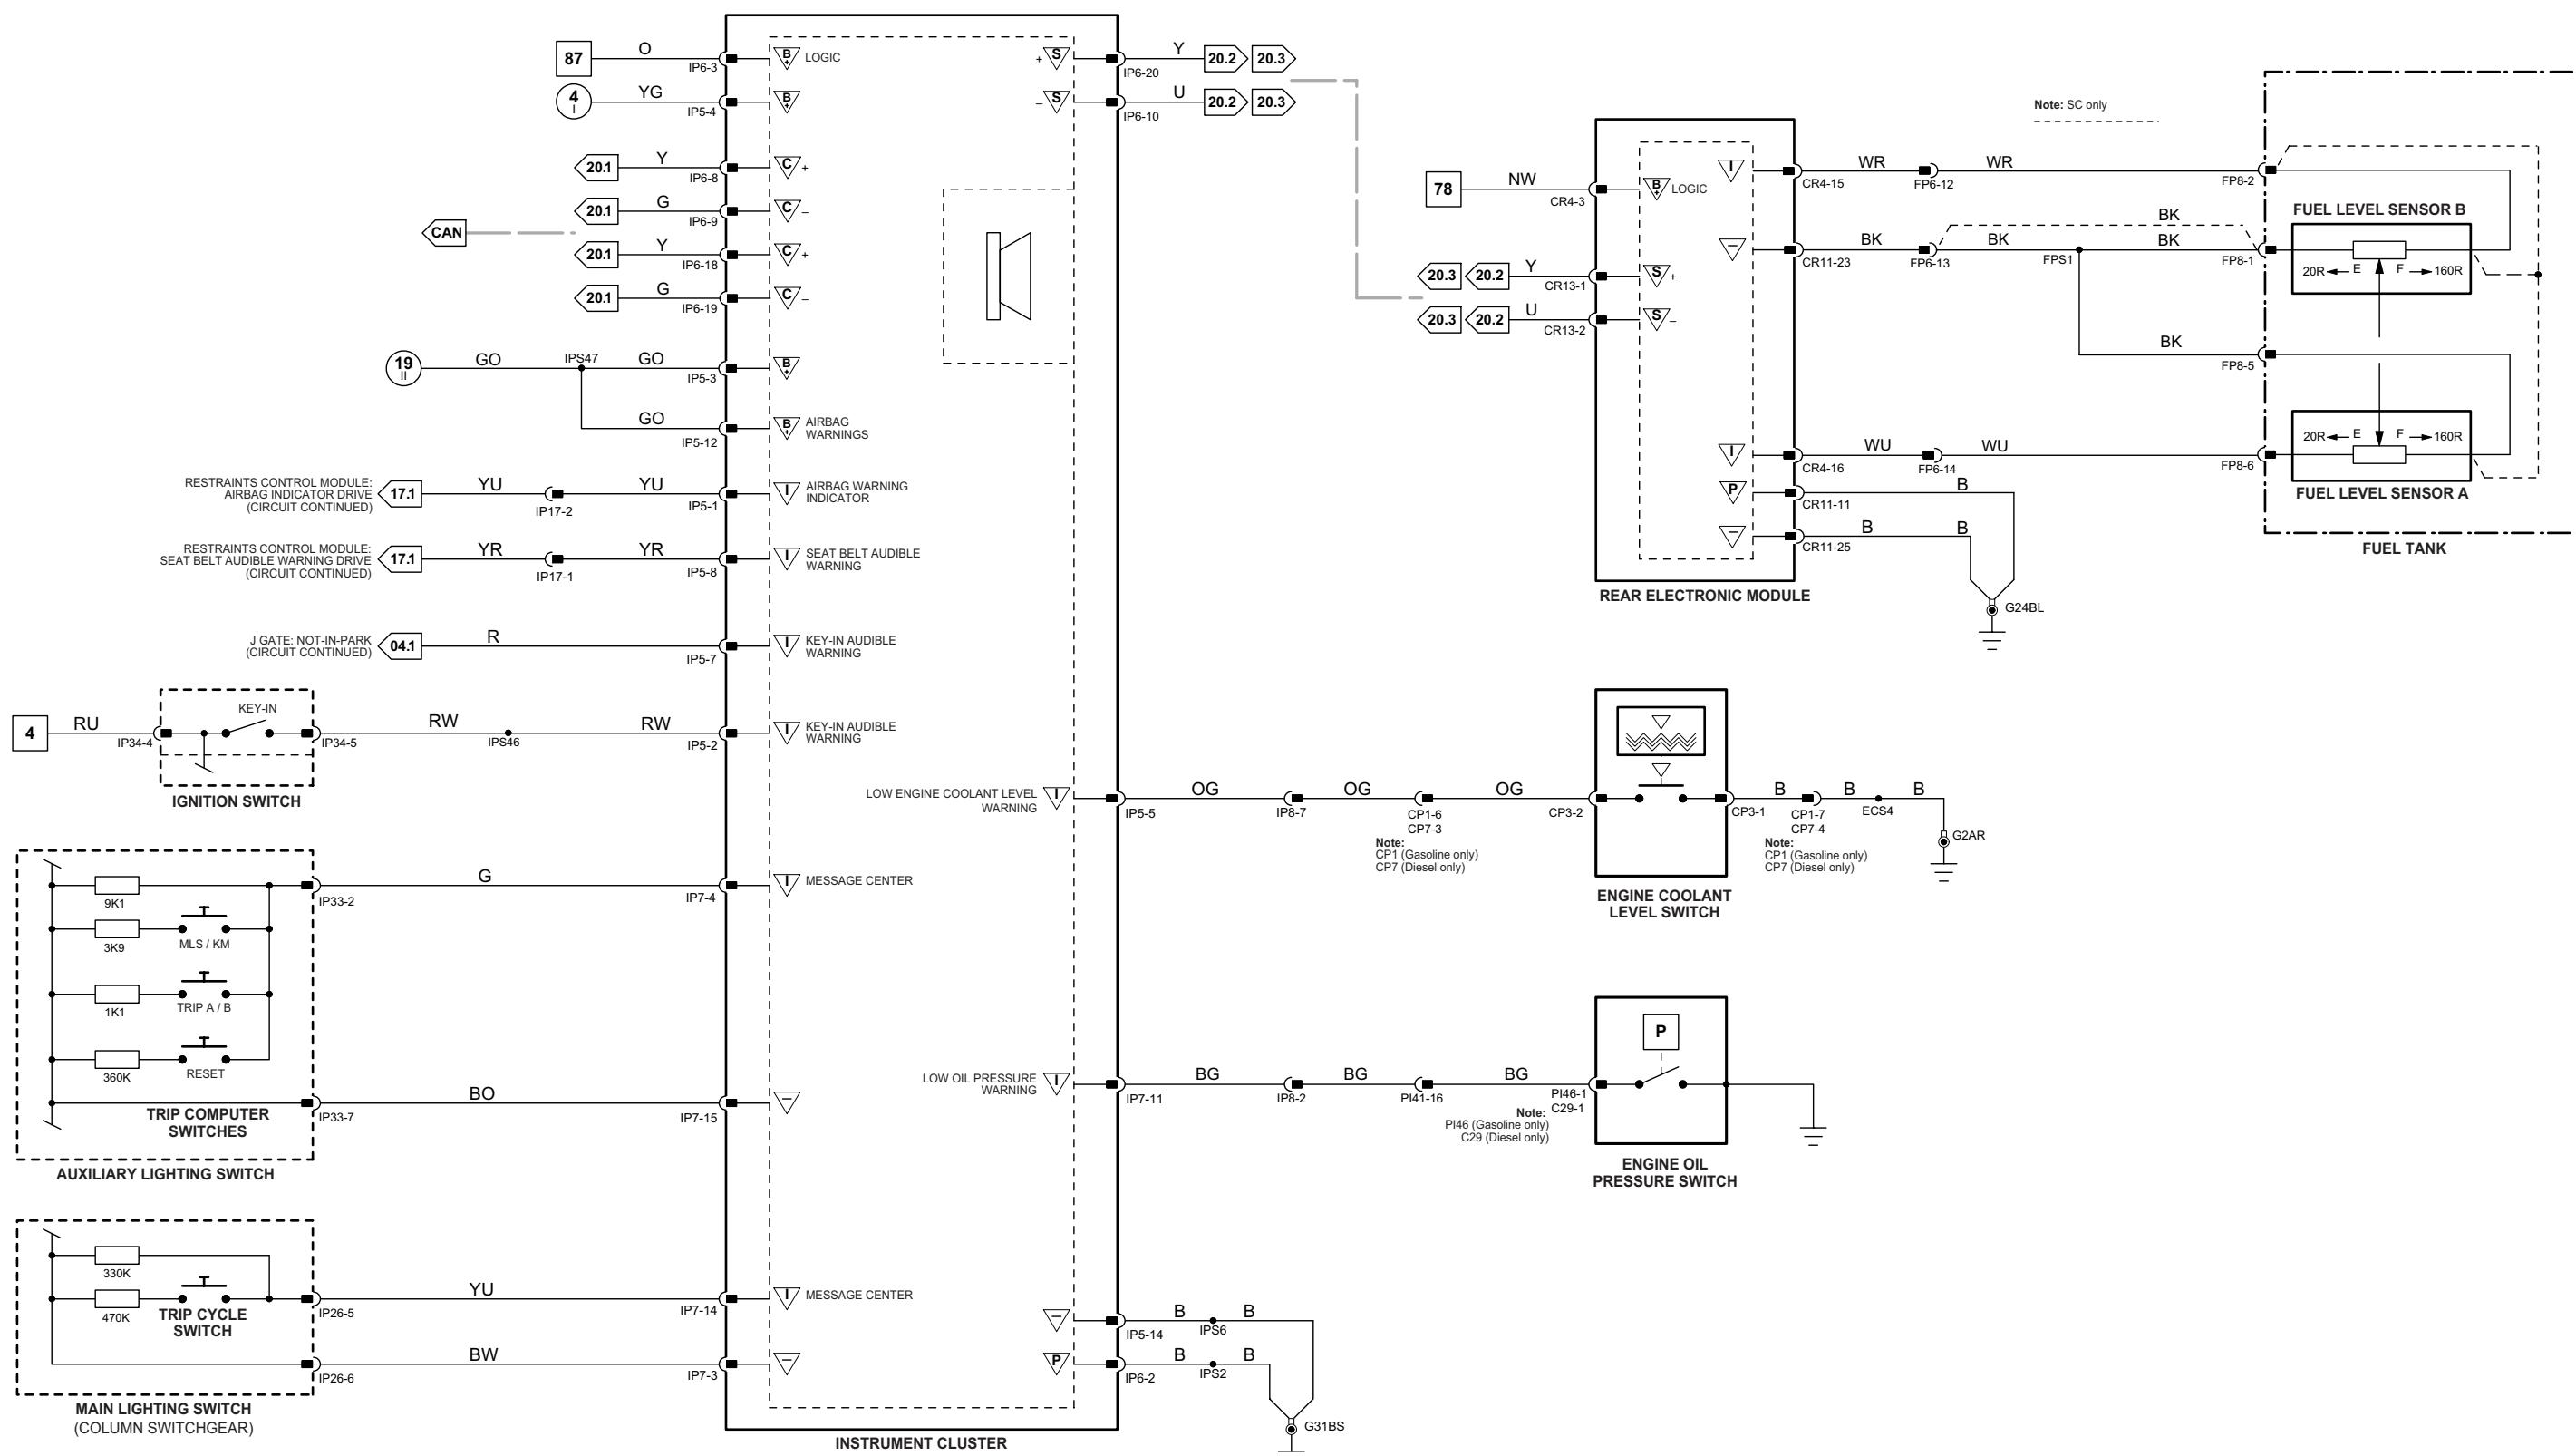

**Fig. 08.1**

**Front Electronic Module**

Pin	Description and Characteristic
PG	CR1-26 POWER GROUND: GROUND
S	CR9-1 SCP -
B+	CR9-6 BATTERY POWER SUPPLY: LOGIC: B+
S	CR9-7 SCP +
SG	CR9-12 LOGIC GROUND: GROUND
O	CR10-4 LH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	CR10-10 RH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
PG	CR10-11 POWER GROUND: GROUND
PG	CR10-13 POWER GROUND: GROUND
PG	CR10-14 POWER GROUND: GROUND
O	CR10-15 SIDE MARKER LAMPS ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
PG	CR85-2 POWER GROUND: GROUND
O	EC36-7 LH TURN SIGNAL REPEATER ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-13 LH SIDE LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-15 HEADLAMP DIP BEAM RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-18 FRONT FOG LAMP RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-19 RH TURN SIGNAL REPEATER ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-21 HEADLAMP MAIN BEAM RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-22 RH SIDE LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND

**Instrument Cluster**

Pin	Description and Characteristic
O	IP5-9 HAZARD INDICATOR: PULSED B+
I	IP5-11 AUTOLAMP SENSOR SIGNAL: VARIABLE RESISTANCE
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
B+	IP6-3 BATTERY POWER SUPPLY (LOGIC): B+
S	IP6-10 SCP -
S	IP6-20 SCP +
I	IP7-1 MAIN LIGHTING SWITCH SIGNALS: TURN SIGNALS; HAZARD WARNING: TURN = VARIABLE RESISTANCE; HAZARD = GROUND
I	IP7-2 MAIN LIGHTING SWITCH SIGNALS: EXIT DELAY: VARIABLE RESISTANCE
SG	IP7-3 MAIN LIGHTING SWITCH SIGNAL GROUND: GROUND
I	IP7-6 FOG LAMPS SWITCH SIGNAL: VARIABLE RESISTANCE
I	IP7-12 MAIN LIGHTING SWITCH SIGNALS: MAIN: FLASH: VARIABLE RESISTANCE
I	IP7-13 MAIN LIGHTING SWITCH SIGNALS: OFF; SIDE; DIP; AUTOLAMP: VARIABLE RESISTANCE
SG	IP7-15 AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUTO LAMP SENSOR	IP36	6-WAY / BLACK	INSTRUMENT PANEL / CENTER FRONT
AUXILIARY LIGHTING SWITCH	IP33	12-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
DIP BEAM RELAY	CL2	8-WAY / BLACK	
FRONT ELECTRONIC MODULE	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R5
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
CR9	12-WAY / BLACK		
CR10	17-WAY / BLACK		
CR85	20-WAY / BLACK		
FRONT FOG LAMP – LH	EC36	22-WAY / BLACK	
FRONT FOG LAMP – RH	BF9	2-WAY / BLACK	FRONT BUMPER / LH SIDE
FRONT FOG LAMP RELAY	BF8	2-WAY / BLACK	FRONT BUMPER / RH SIDE
FRONT POWER DISTRIBUTION FUSE BOX	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R6
FRONT POWER DISTRIBUTION FUSE BOX	EC4	4-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
EC5	4-WAY / BLACK		
EC19	8-WAY / BLACK		
EC22	4-WAY / BLACK		
EC26	8-WAY / BLACK		
EC28	12-WAY / BLACK		
EC32	4-WAY / BLACK		
EC35	8-WAY / BLACK		
EC40	8-WAY / BLACK		
EC41	10-WAY / BLACK		
FRONT SIDE MARKER LAMP – LH	BF7	2-WAY / BLACK	FRONT BUMPER / LH SIDE
FRONT SIDE MARKER LAMP – RH	BF6	2-WAY / BLACK	FRONT BUMPER / RH SIDE
HEADLAMP UNIT – LH	EC57	9-WAY / BLACK	ENGINE COMPARTMENT / LH FRONT
HEADLAMP UNIT – RH	EC6	9-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
IP6	20-WAY / BLACK		
IP7	22-WAY / BLACK		
MAIN BEAM RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R2
MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR)	IP26	6-WAY / BLACK	STEERING COLUMN / LH SIDE
TURN SIGNAL REPEATER – LH	DD9	22-WAY / DARK GREY	DRIVER DOOR MIRROR
TURN SIGNAL REPEATER – RH	PD9	22-WAY / DARK GREY	PASSENGER DOOR MIRROR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BF1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO FRONT BUMPER HARNESS	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G9	CABIN / UPPER LH 'A' POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

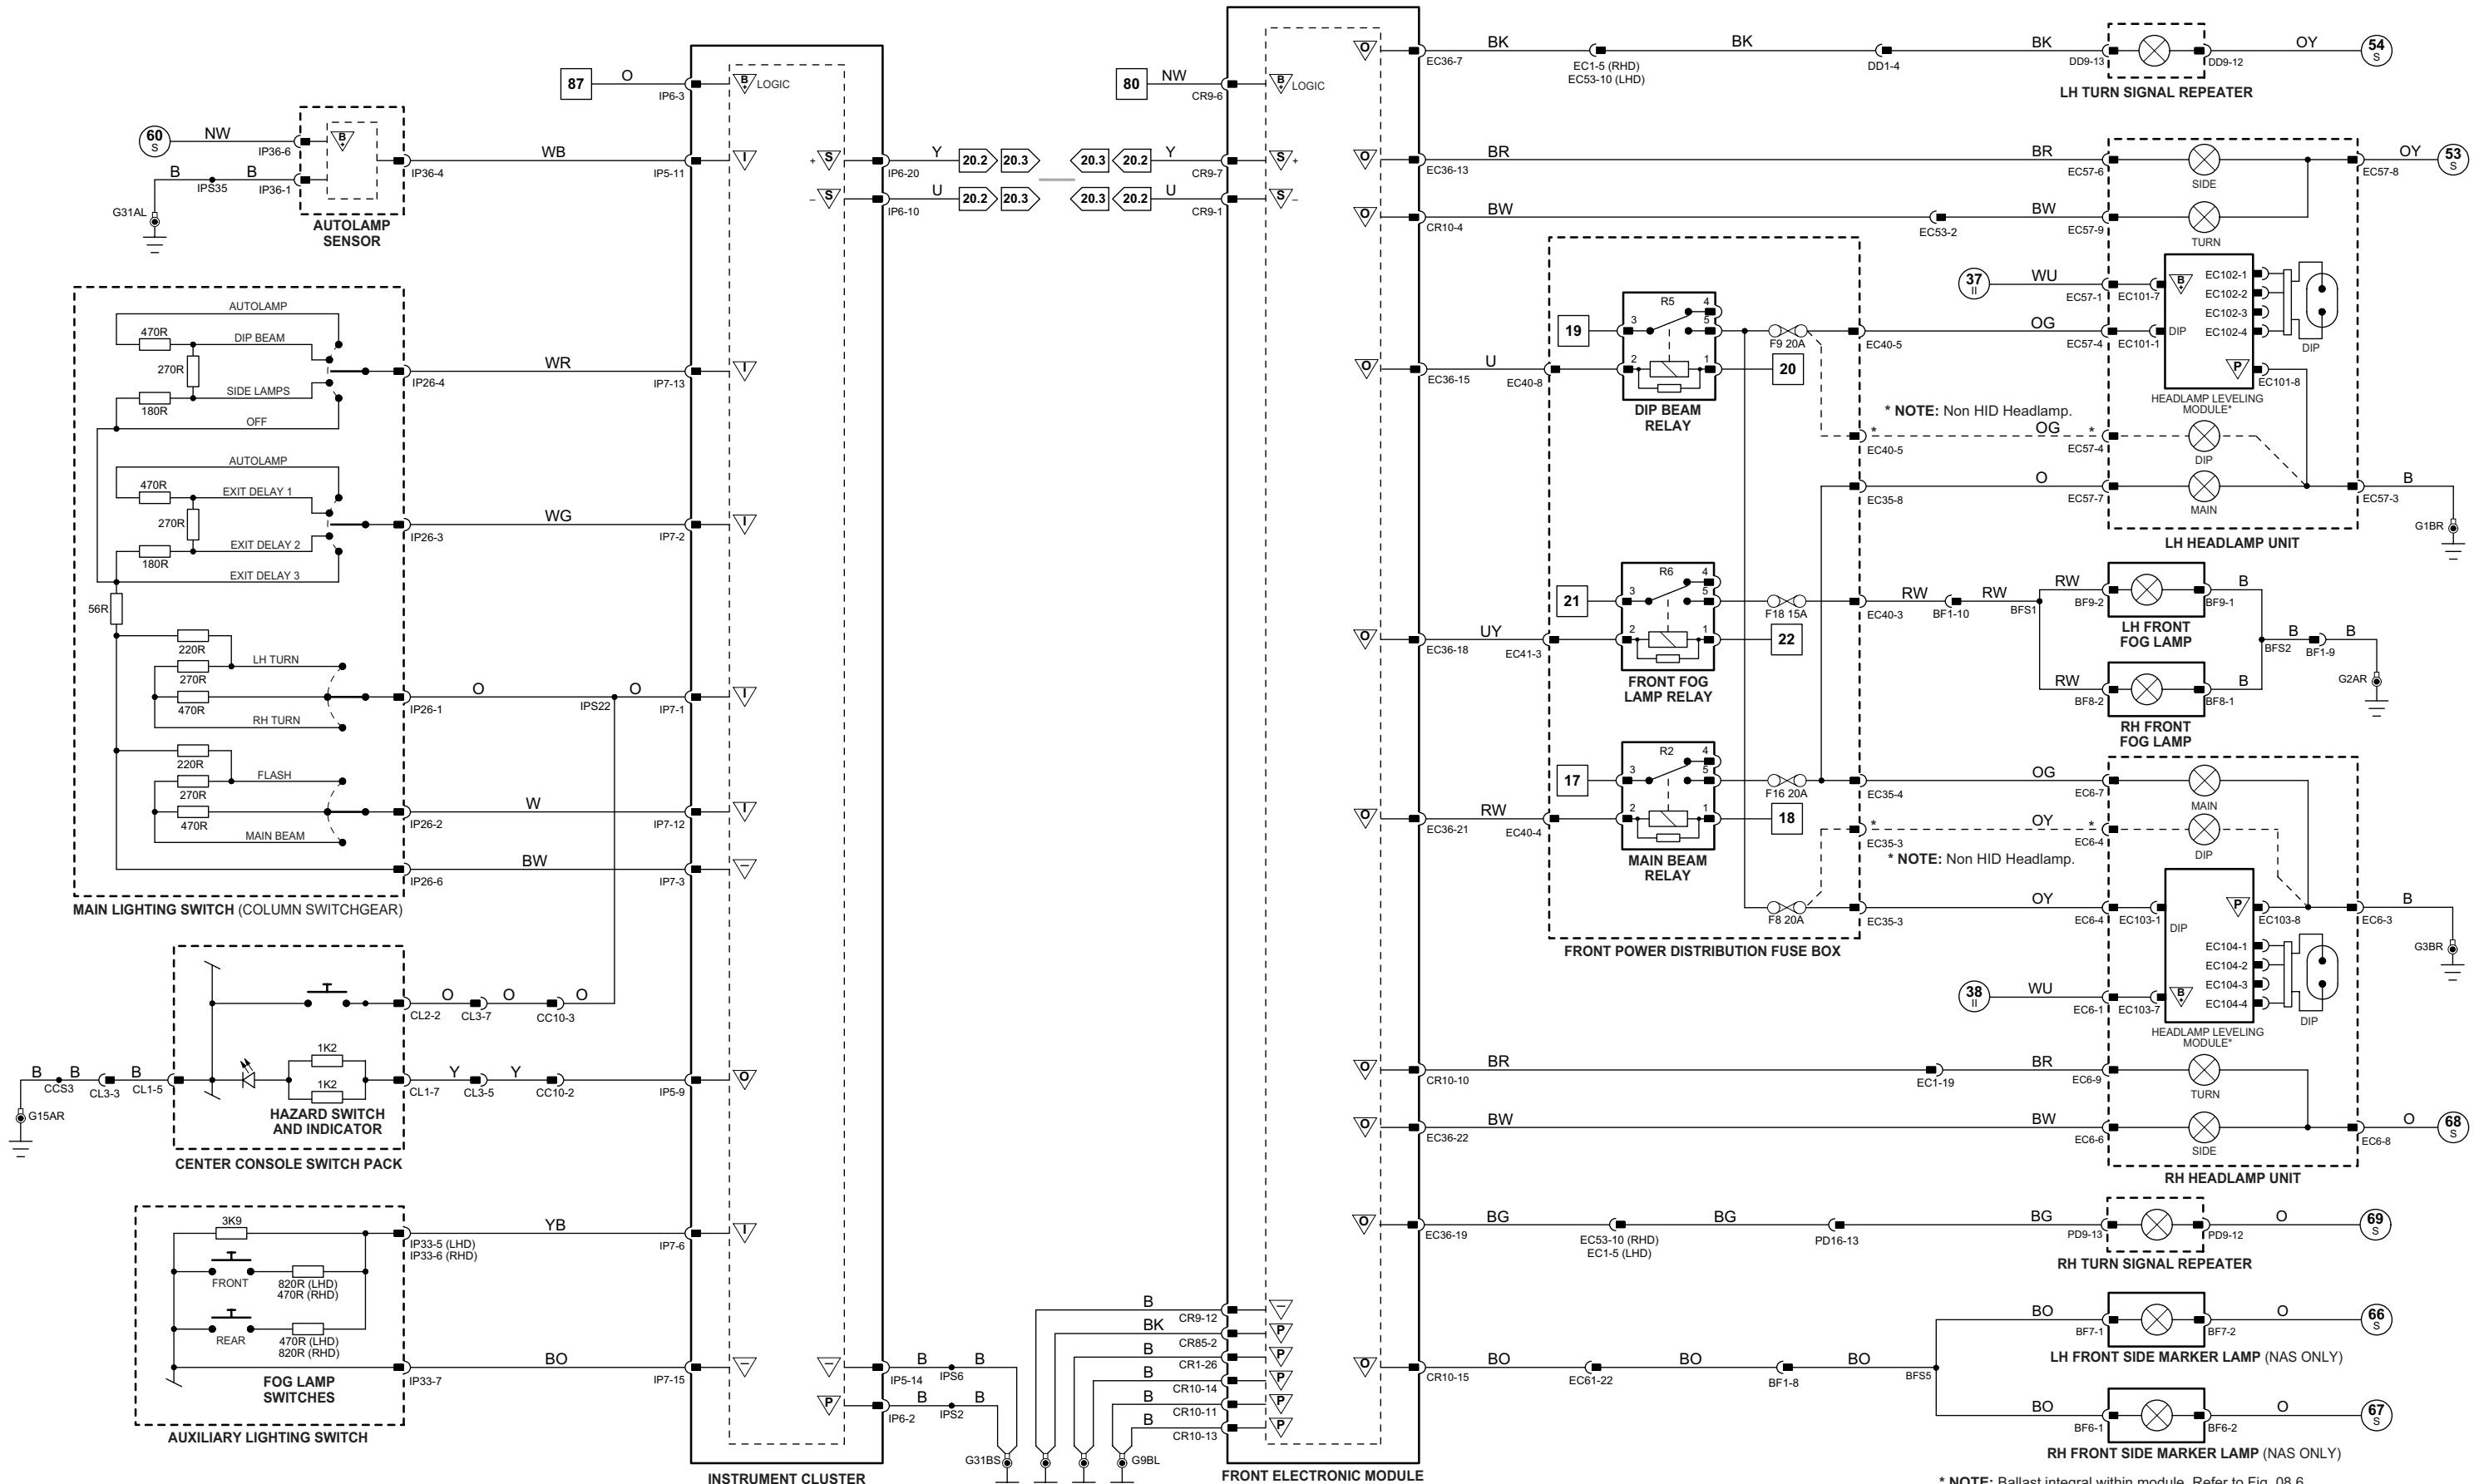

\* NOTE: Ballast integral within module. Refer to Fig. 08.6 for additional Headlamp Leveling Module details.

**Fig. 08.2**

**Front Electronic Module**

Pin	Description and Characteristic
PG	CR1-26 POWER GROUND: GROUND
S	CR9-1 SCP -
B+	CR9-6 BATTERY POWER SUPPLY: LOGIC: B+
S	CR9-7 SCP +
SG	CR9-12 LOGIC GROUND: GROUND
O	CR10-4 LH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	CR10-10 RH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
PG	CR10-11 POWER GROUND: GROUND
PG	CR10-13 POWER GROUND: GROUND
PG	CR10-14 POWER GROUND: GROUND
O	CR10-15 SIDE MARKER LAMPS ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
PG	CR85-2 POWER GROUND: GROUND
O	EC36-7 LH TURN SIGNAL REPEATER ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-13 LH SIDE LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-15 HEADLAMP DIP BEAM RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-18 FRONT FOG LAMP RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-19 RH TURN SIGNAL REPEATER ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-21 HEADLAMP MAIN BEAM RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-22 RH SIDE LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND

**Instrument Cluster**

Pin	Description and Characteristic
O	IP5-9 HAZARD INDICATOR: PULSED B+
I	IP5-11 AUTOLAMP SENSOR SIGNAL: VARIABLE RESISTANCE
SG	IP5-14 SIGNAL GROUND: GROUND
PG	IP6-2 POWER GROUND: GROUND
B+	IP6-3 BATTERY POWER SUPPLY (LOGIC): B+
S	IP6-10 SCP -
S	IP6-20 SCP +
I	IP7-1 MAIN LIGHTING SWITCH SIGNALS: TURN SIGNALS; HAZARD WARNING: TURN = VARIABLE RESISTANCE; HAZARD = GROUND
I	IP7-2 MAIN LIGHTING SWITCH SIGNALS: EXIT DELAY: VARIABLE RESISTANCE
SG	IP7-3 MAIN LIGHTING SWITCH SIGNAL GROUND: GROUND
I	IP7-6 FOG LAMPS SWITCH SIGNAL: VARIABLE RESISTANCE
I	IP7-12 MAIN LIGHTING SWITCH SIGNALS: MAIN: FLASH: VARIABLE RESISTANCE
I	IP7-13 MAIN LIGHTING SWITCH SIGNALS: OFF; SIDE; DIP; AUTOLAMP: VARIABLE RESISTANCE
SG	IP7-15 AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUTO LAMP SENSOR	IP36	6-WAY / BLACK	INSTRUMENT PANEL / CENTER FRONT
AUXILIARY LIGHTING SWITCH	IP33	12-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
DIP BEAM RELAY - LH	CL2	8-WAY / BLACK	
DIP BEAM RELAY - RH	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R11a
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
	CR9	12-WAY / BLACK	
	CR10	17-WAY / BLACK	
	CR85	20-WAY / BLACK	
	EC36	22-WAY / BLACK	
FRONT FOG LAMP - LH	BF9	2-WAY / BLACK	FRONT BUMPER / LH SIDE
FRONT FOG LAMP - RH	BF8	2-WAY / BLACK	FRONT BUMPER / RH SIDE
FRONT FOG LAMP RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R6
FRONT POWER DISTRIBUTION FUSE BOX	EC4	4-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
	EC5	4-WAY / BLACK	
	EC19	8-WAY / BLACK	
	EC22	4-WAY / BLACK	
	EC26	8-WAY / BLACK	
	EC28	12-WAY / BLACK	
	EC32	4-WAY / BLACK	
	EC35	8-WAY / BLACK	
	EC40	8-WAY / BLACK	
	EC41	10-WAY / BLACK	
FRONT SIDE MARKER LAMP - LH	BF7	2-WAY / BLACK	FRONT BUMPER / LH SIDE
FRONT SIDE MARKER LAMP - RH	BF6	2-WAY / BLACK	FRONT BUMPER / RH SIDE
HEADLAMP UNIT - LH	EC57	9-WAY / BLACK	ENGINE COMPARTMENT / LH FRONT
HEADLAMP UNIT - RH	EC6	9-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
MAIN BEAM RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R2
MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR)	IP26	6-WAY / BLACK	STEERING COLUMN / LH SIDE
TURN SIGNAL REPEATER - LH	DD9	22-WAY / DARK GREY	DRIVER DOOR MIRROR
TURN SIGNAL REPEATER - RH	PD9	22-WAY / DARK GREY	PASSENGER DOOR MIRROR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BF1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO FRONT BUMPER HARNESS	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC61	22-WAY / NATURAL / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / LH UPPER 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G9	CABIN / UPPER LH 'A' POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

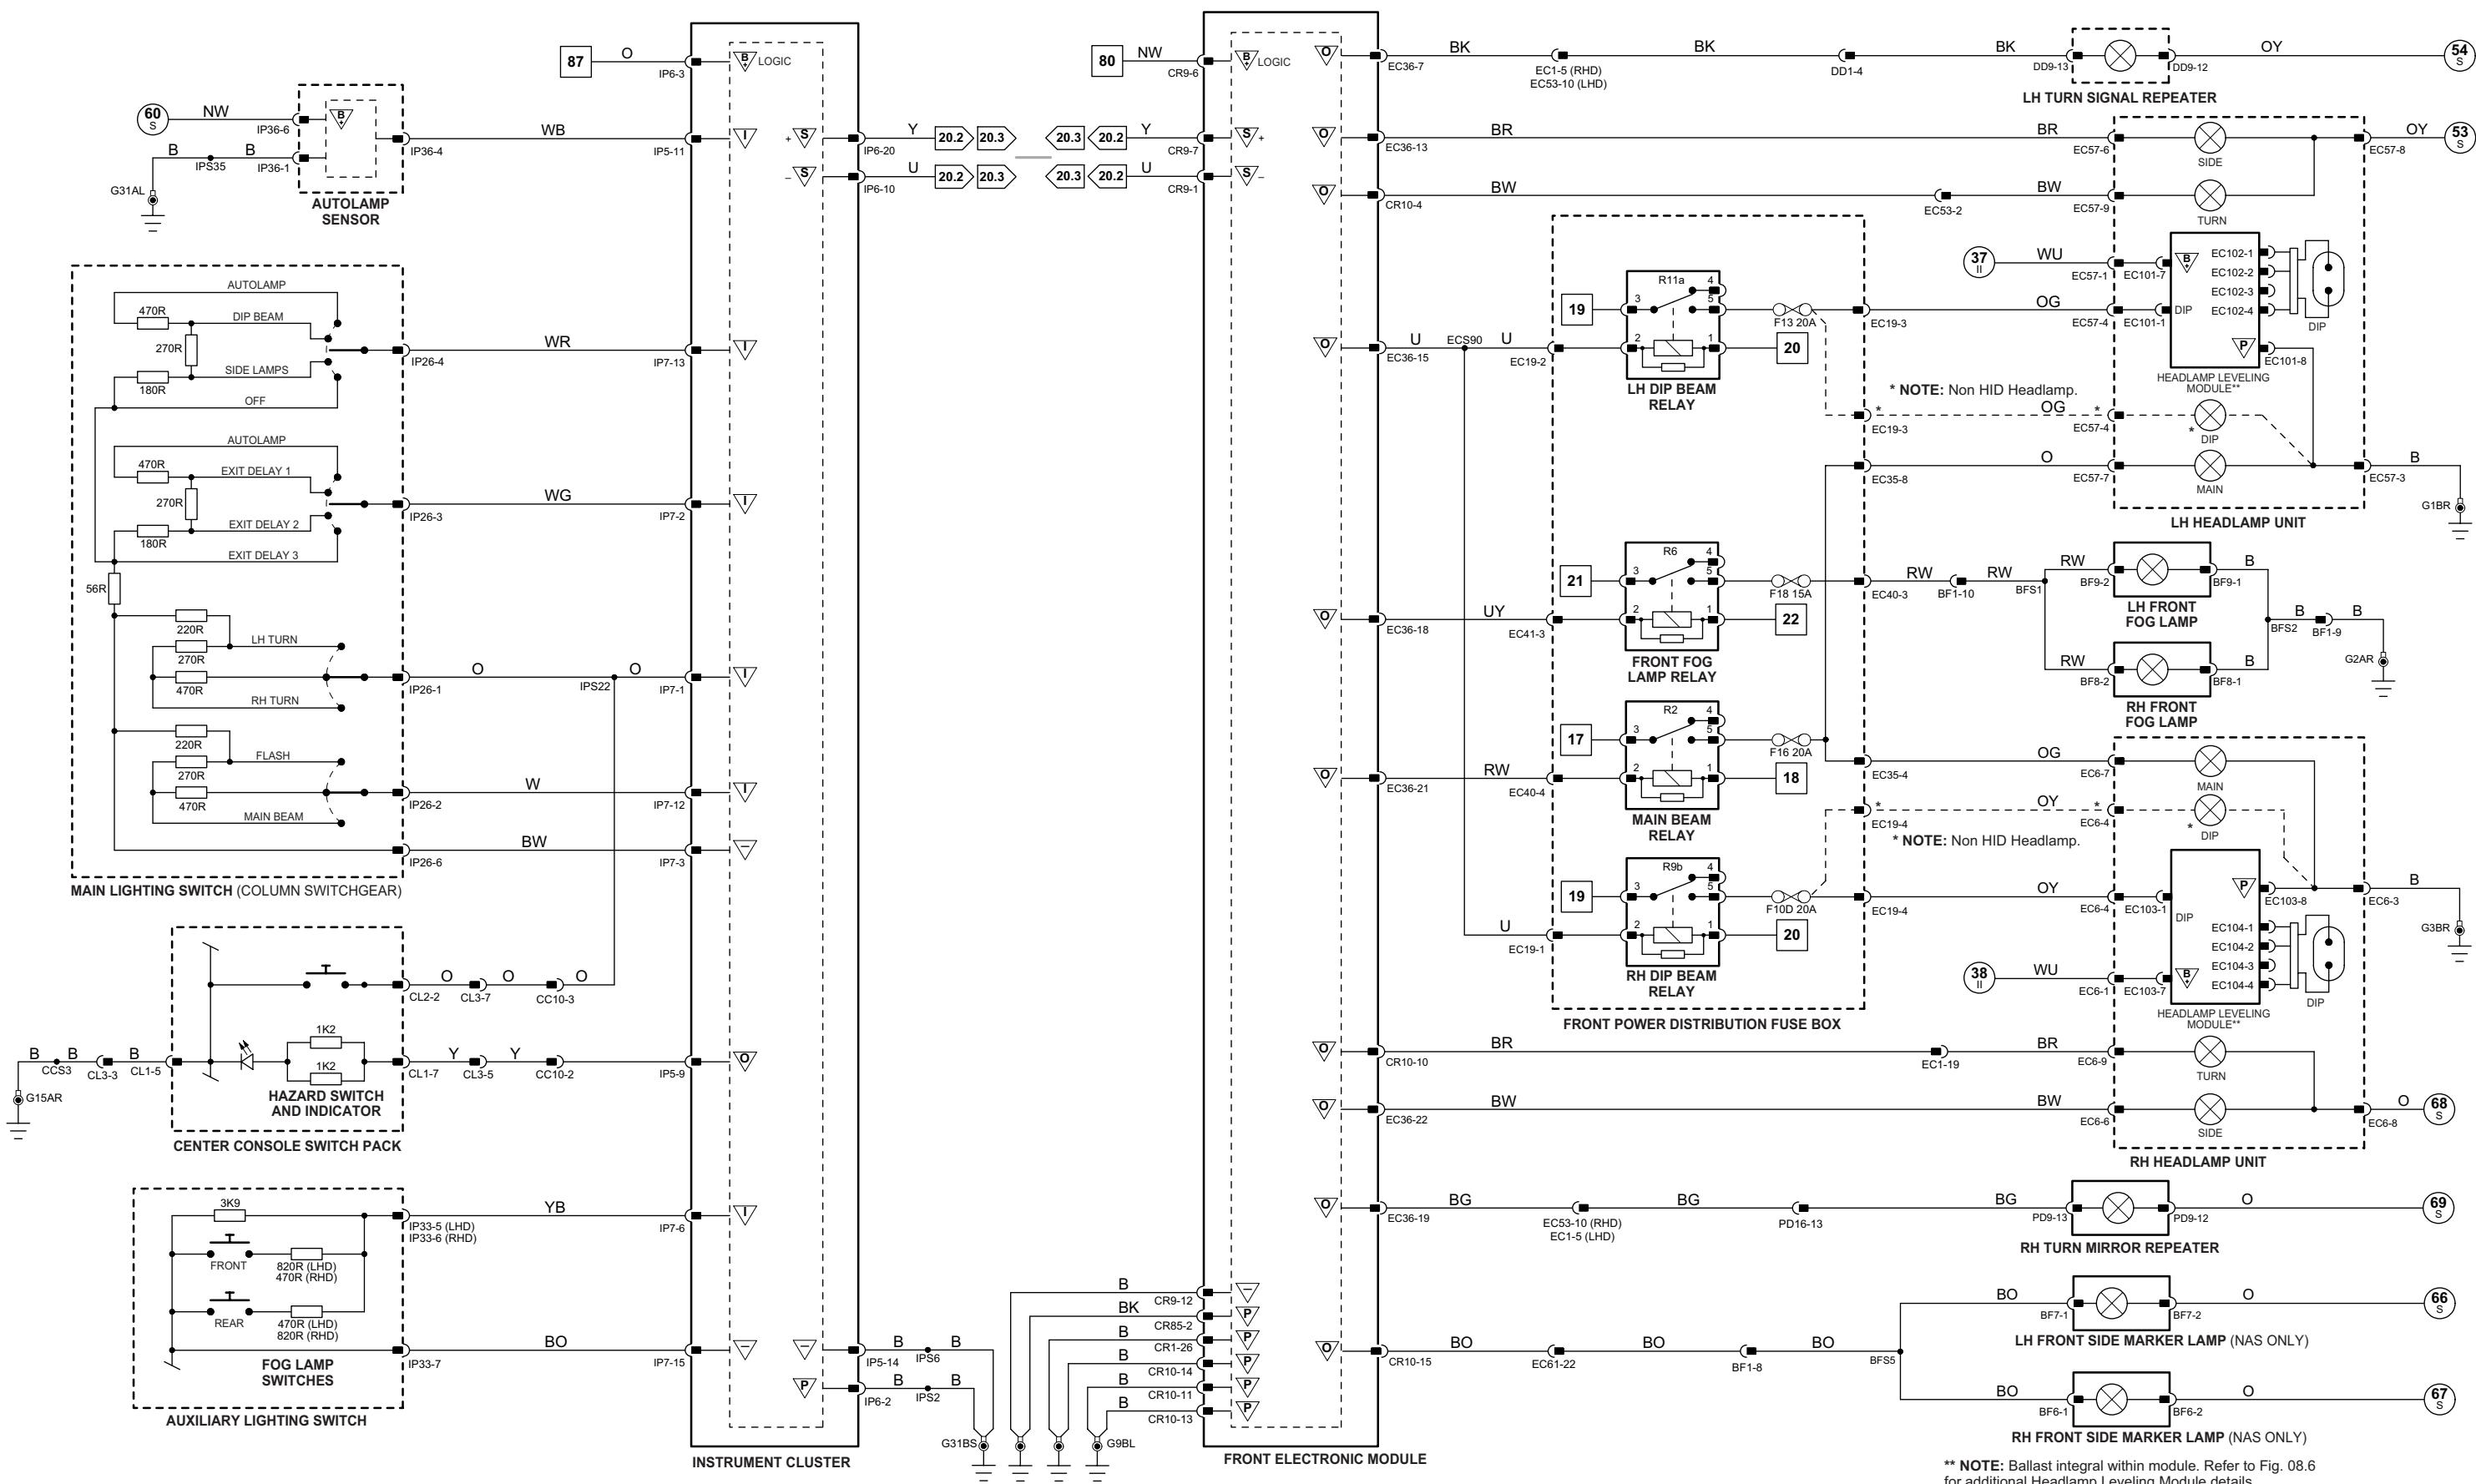

\*\* NOTE: Ballast integral within module. Refer to Fig. 08.6  
for additional Headlamp Leveling Module details.

f08\_2\_35008

1 → 6	Fig. 01.1	72 → 97	Fig. 01.3	16 → 53	Fig. 01.5	78 → 105	Fig. 01.7	Input	B	Sensor/Signal Supply V	A	ACP	S	SCP	VARIANT: Diesel Vehicles
7 → 71	Fig. 01.2	1 → 15	Fig. 01.4	53 → 77	Fig. 01.6	106 → 143	Fig. 01.8	Output	P	Power Ground	C	CAN	D	Serial and Encoded Data	VIN RANGE: All
														DATE OF ISSUE: May 2007	

**Fig. 08.3**

**Instrument Cluster**

Pin	Description and Characteristic
O IP5-9	HAZARD INDICATOR: PULSED B+
I IP5-11	AUTOLAMP SENSOR SIGNAL: VARIABLE RESISTANCE
SG IP5-14	SIGNAL GROUND: GROUND
PG IP6-2	POWER GROUND: GROUND
B+ IP6-3	BATTERY POWER SUPPLY (LOGIC): B+
S IP6-10	SCP -
S IP6-20	SCP +
I IP7-1	MAIN LIGHTING SWITCH SIGNALS: TURN SIGNALS; HAZARD WARNING: TURN = VARIABLE RESISTANCE; HAZARD = GROUND
I IP7-2	MAIN LIGHTING SWITCH SIGNALS: EXIT DELAY: VARIABLE RESISTANCE
SG IP7-3	MAIN LIGHTING SWITCH SIGNAL GROUND: GROUND
I IP7-6	FOG LAMPS SWITCH SIGNAL: VARIABLE RESISTANCE
I IP7-12	MAIN LIGHTING SWITCH SIGNALS: MAIN; FLASH: VARIABLE RESISTANCE
I IP7-13	MAIN LIGHTING SWITCH SIGNALS: OFF; SIDE; DIP; AUTOLAMP: VARIABLE RESISTANCE
SG IP7-15	AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND

**Rear Electronic Module**

Pin	Description and Characteristic
B+ CR4-3	BATTERY POWER SUPPLY (LOGIC): B+
PG CR11-11	POWER GROUND: GROUND
SG CR11-12	LOGIC GROUND: GROUND
SG CR11-25	LOGIC GROUND: GROUND
SG CR11-26	LOGIC GROUND: GROUND
O CR12-5	LICENSE PLATE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR12-6	LH REAR SIDE MARKER LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR12-12	RH REAR SIDE MARKER LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
S CR13-1	SCP +
S CR13-2	SCP -
I CR13-13	BRAKE ON / OFF SWITCH SIGNAL: B+ WHEN ACTIVATED
O CR71-3	LH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-4	RH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-5	RH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-6	LH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-9	REVERSE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-10	REAR FOG LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-11	RH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-12	LH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
SG CR71-15	LOGIC GROUND: GROUND
PG CR73-2	POWER GROUND (FUEL PUMP): GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUTO LAMP SENSOR	IP36	6-WAY / BLACK	INSTRUMENT PANEL / CENTER FRONT
AUXILIARY LIGHTING SWITCH	IP33	12-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
BRAKE ON / OFF SWITCH	CR78	2-WAY / BLACK	TOP OF BRAKE PEDAL
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
	CL2	8-WAY / BLACK	
HIGH-MOUNTED STOP LAMP	RF27	2-WAY / BLACK	PARCEL SHELF / CENTER
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
LICENSE PLATE LAMP - LH	BT7	2-WAY / BLACK	TRUNK LID
LICENSE PLATE LAMP - RH	BT6	2-WAY / BLACK	TRUNK LID
MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR)	IP26	6-WAY / BLACK	STEERING COLUMN / LH SIDE
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
REAR SIDE MARKER LAMP - LH	CR13	22-WAY / BLACK	
REAR SIDE MARKER LAMP - RH	CR71	17-WAY / BLACK	
TAIL LAMP UNIT - LH	CR73	4-WAY / BLACK	
TAIL LAMP UNIT - RH	BR7	2-WAY / BLACK	REAR BUMPER / LH SIDE
	BR6	2-WAY / BLACK	REAR BUMPER / RH SIDE
	CR8	7-WAY / BLACK	TRUNK / LH REAR
	CR7	7-WAY / BLACK	TRUNK / RH REAR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BR1	10-WAY / GREY / CABIN HARNESS TO REAR BUMPER HARNESS	TRUNK / RH SIDE / ADJACENT TO REAR ELECTRONIC MODULE
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST

**GROUNDS**

Ground	Location
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

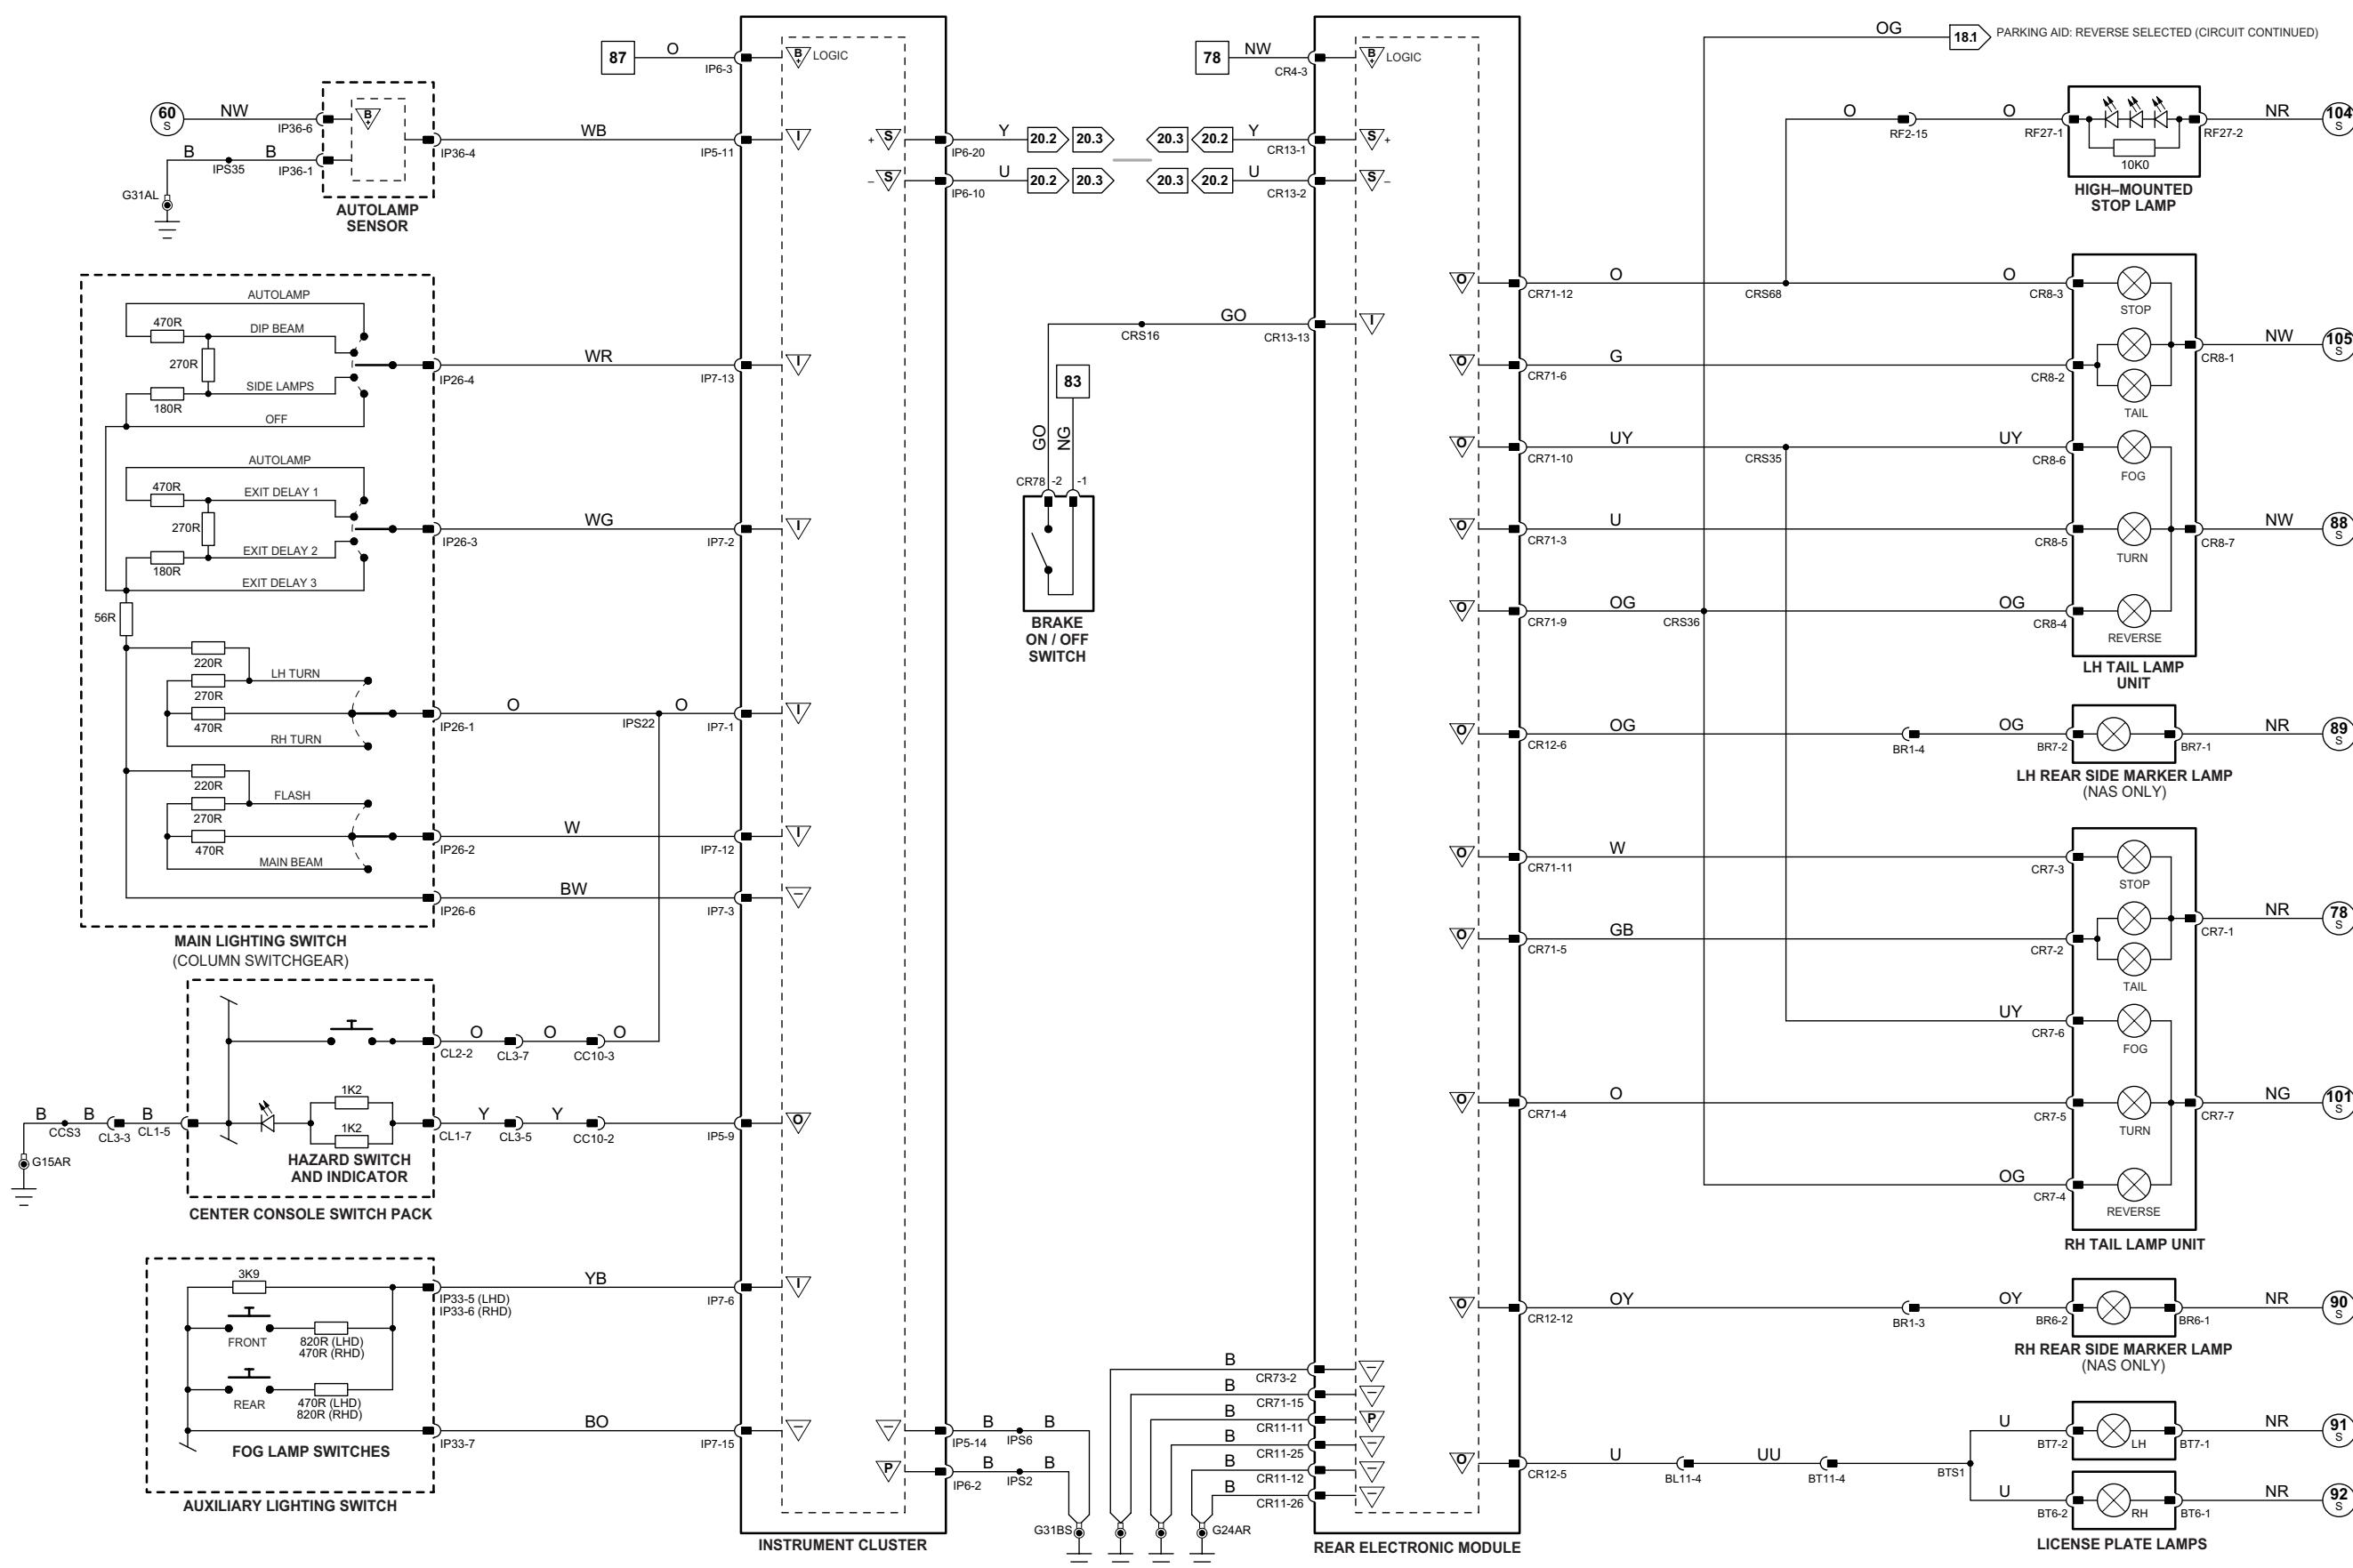

**Fig. 08.4**

**Rear Electronic Module**

Pin	Description and Characteristic
O CR4-20	TRAILER CONNECTED SIGNAL: GROUND = TRAILER CONNECTED
O CR12-5	LICENSE PLATE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-3	LH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-4	RH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-5	RH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-6	LH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-9	REVERSE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-10	REAR FOG LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-11	RH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-12	LH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	TRUNK / RH SIDE
HIGH-MOUNTED STOP LAMP	RF27	2-WAY / BLACK	PARCEL SHELF / CENTER
LICENSE PLATE LAMP - LH	BT7	2-WAY / BLACK	TRUNK LID
LICENSE PLATE LAMP - RH	BT6	2-WAY / BLACK	TRUNK LID
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
TAIL LAMP UNIT - LH	TT1	7-WAY / BLACK	TRUNK / LH REAR
TAIL LAMP UNIT - RH	TT2	7-WAY / BLACK	TRUNK / RH REAR
TRAILER TOWING CONNECTOR	TT8	DATA NOT AVAILABLE	
	TT18	DATA NOT AVAILABLE	
TRAILER TOWING JUNCTION FUSE BOX	TT22	DATA NOT AVAILABLE	
	TT23	DATA NOT AVAILABLE	
	TT24	DATA NOT AVAILABLE	
TRAILER TOWING MODULE	TT15	DATA NOT AVAILABLE	
	TT16	DATA NOT AVAILABLE	
	TT17	DATA NOT AVAILABLE	
TRAILER TOWING RELAY	TT9	DATA NOT AVAILABLE	

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
CR106	8-WAY / BLACK / TRAILER TOWING HARNESS	TRUNK / RH SIDE
CR107	8-WAY / BLACK / TRAILER TOWING HARNESS	TRUNK / RH SIDE
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
TT10	2-WAY / GREY / TRAILER TOWING HARNESS	TRUNK / SPARE WHEEL WELL

**GROUNDS**

Ground	Location
BC1	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC3	TRUNK / RH SIDE / ADJACENT TO BATTERY
G29	TRUNK / SPARE WHEEL WELL

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

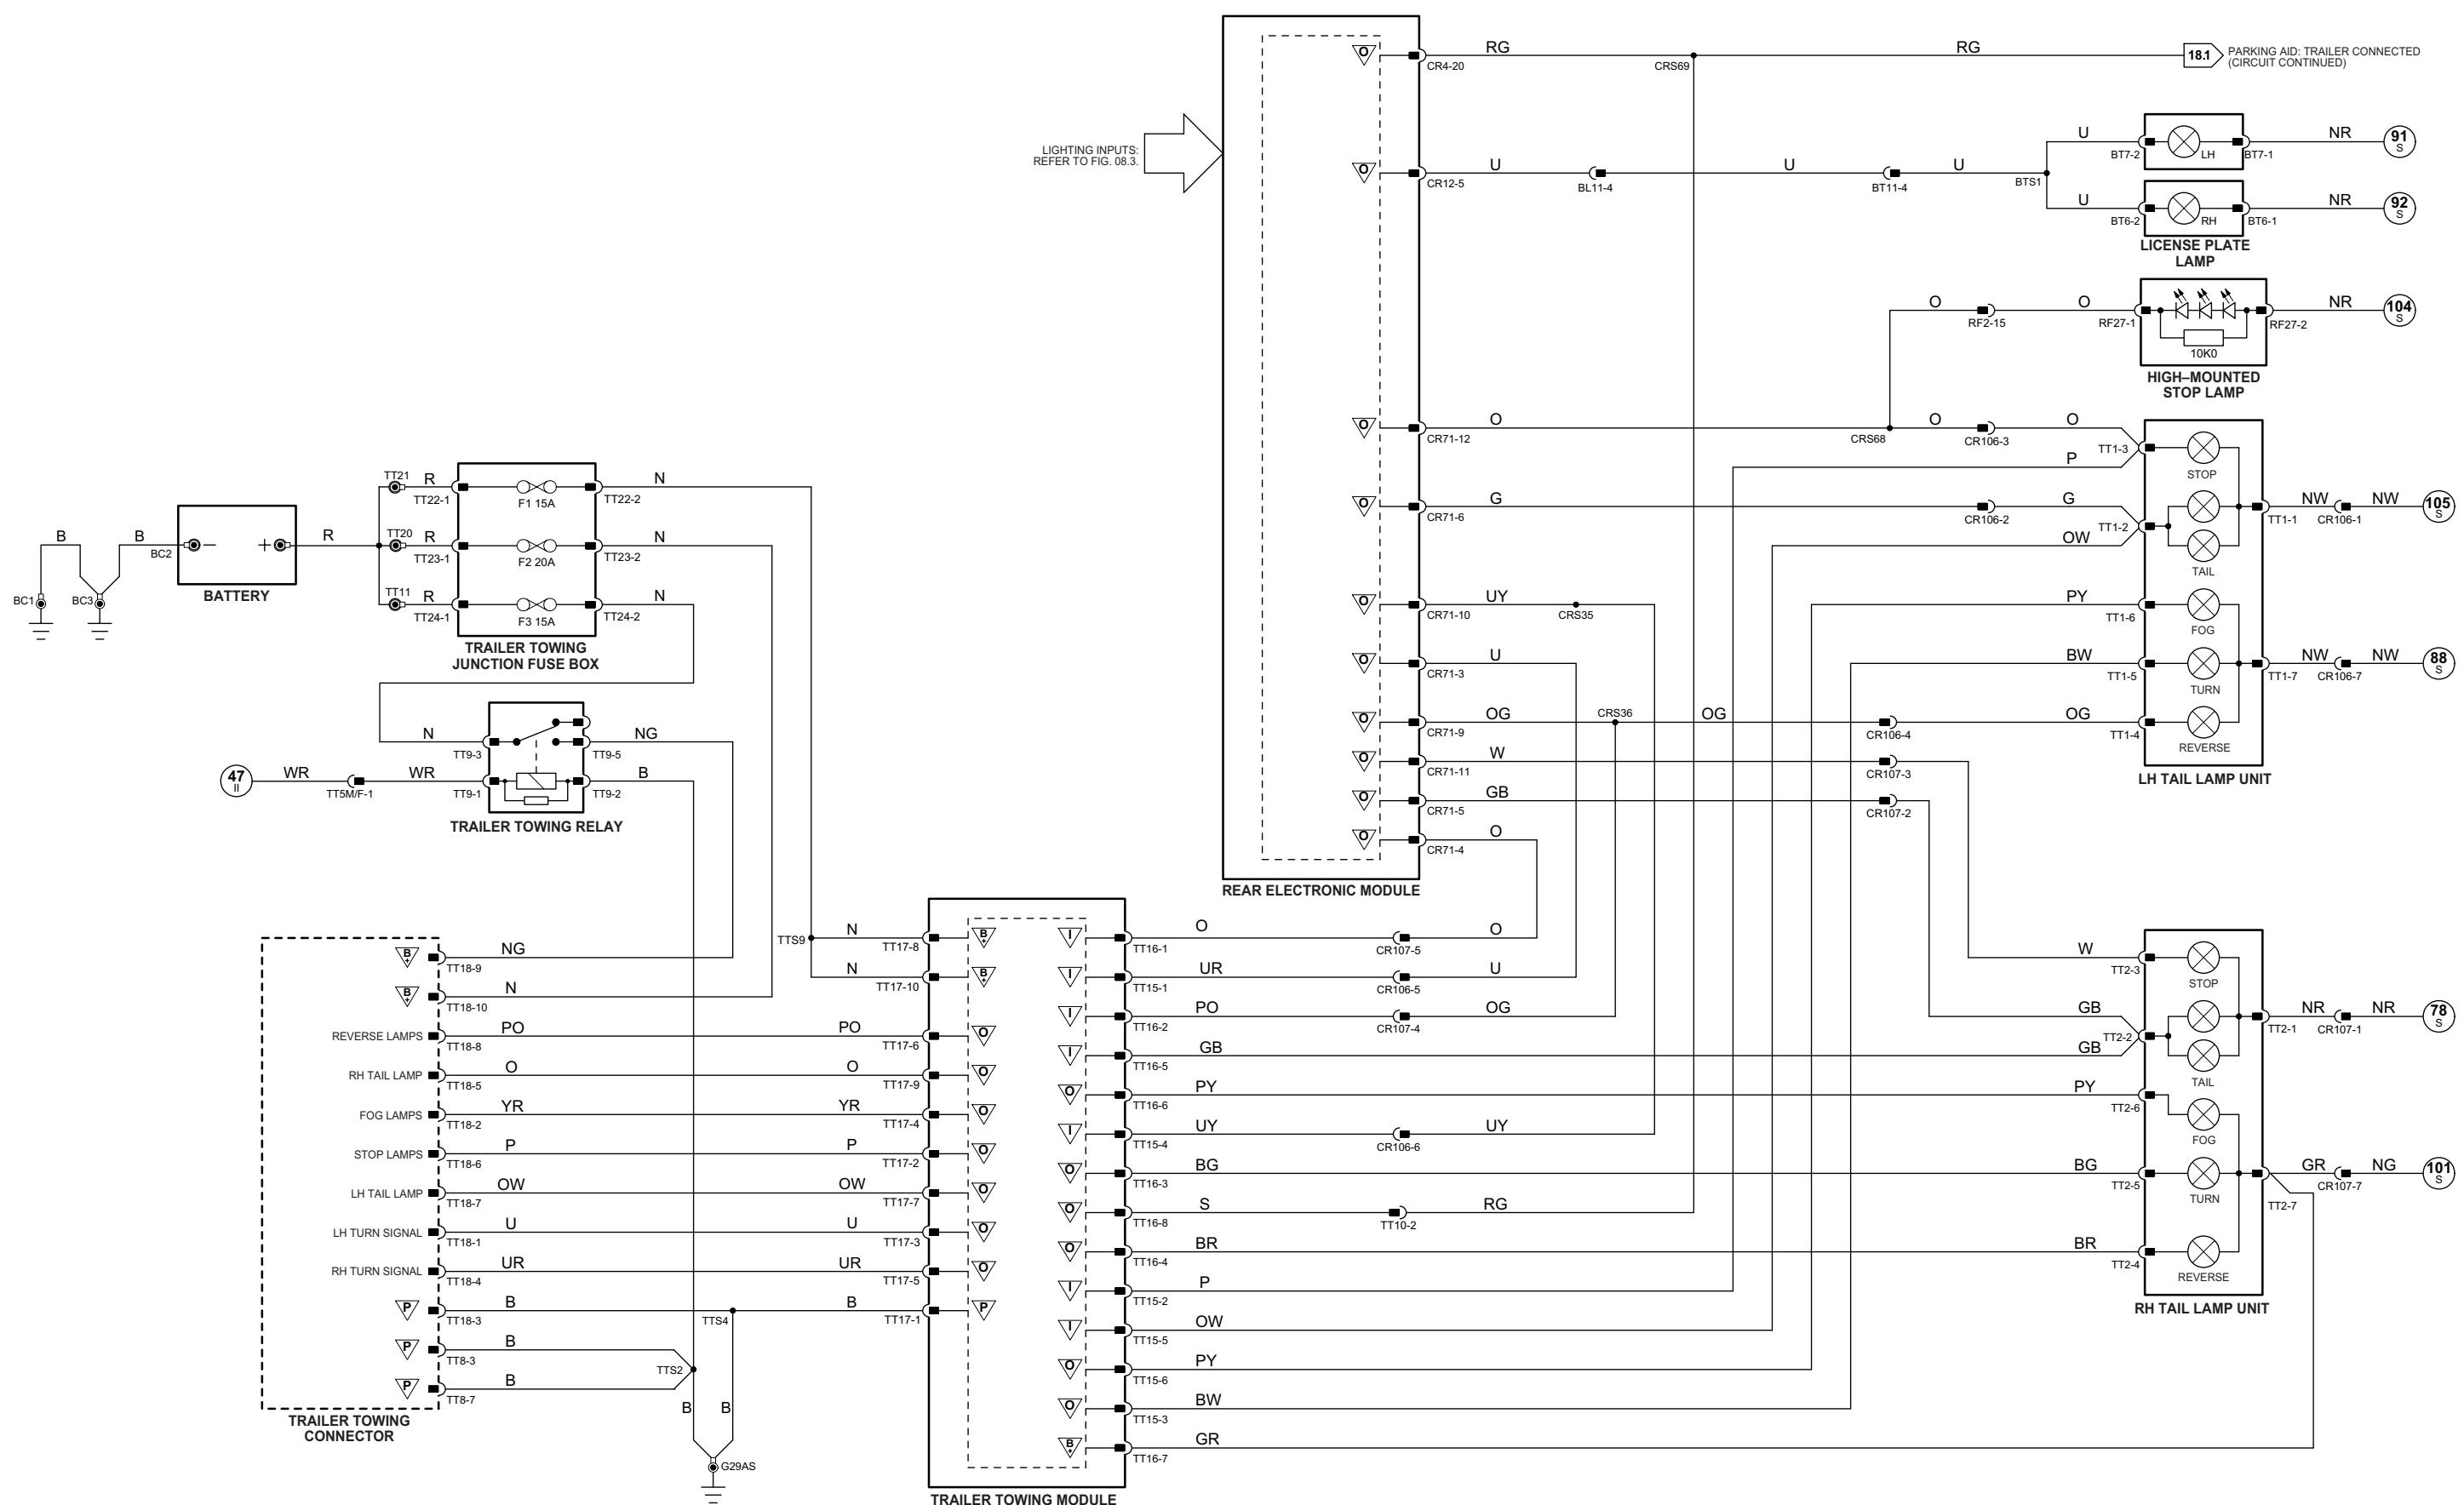

f08\_4\_35008

**Fig. 08.5**

**Rear Electronic Module**

Pin	Description and Characteristic
O CR4-20	TRAILER CONNECTED SIGNAL: GROUND = TRAILER CONNECTED
O CR12-5	LICENSE PLATE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-3	LH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-4	RH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-5	RH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-6	LH TAIL LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-9	REVERSE LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-10	REAR FOG LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-11	RH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-12	LH STOP LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
BATTERY	—	—	TRUNK / RH SIDE
HIGH-MOUNTED STOP LAMP	RF27	2-WAY / BLACK	PARCEL SHELF / CENTER
LICENSE PLATE LAMP - LH	BT7	2-WAY / BLACK	TRUNK LID
LICENSE PLATE LAMP - RH	BT6	2-WAY / BLACK	TRUNK LID
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
TAIL LAMP UNIT - LH	TT1	7-WAY / BLACK	TRUNK / LH REAR
TAIL LAMP UNIT - RH	TT2	7-WAY / BLACK	TRUNK / RH REAR
TRAILER TOWING CONNECTOR	TT7	DATA NOT AVAILABLE	
	TT8	DATA NOT AVAILABLE	
TRAILER TOWING JUNCTION FUSE BOX	TT22	DATA NOT AVAILABLE	
	TT23	DATA NOT AVAILABLE	
	TT24	DATA NOT AVAILABLE	
TRAILER TOWING MODULE	TT15	DATA NOT AVAILABLE	
	TT16	DATA NOT AVAILABLE	
	TT17	DATA NOT AVAILABLE	
TRAILER TOWING RELAY	TT9	DATA NOT AVAILABLE	

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
CR106	8-WAY / BLACK / TRAILER TOWING HARNESS	TRUNK / RH SIDE
CR107	8-WAY / BLACK / TRAILER TOWING HARNESS	TRUNK / RH SIDE
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
TT3	DATA NOT AVAILABLE	TRAILER TOWING HARNESS
TT10	2-WAY / GREY / TRAILER TOWING HARNESS	TRUNK / SPARE WHEEL WELL
TT20	DATA NOT AVAILABLE	TRAILER TOWING HARNESS

**GROUNDS**

Ground	Location
BC1	TRUNK / RH SIDE / ADJACENT TO BATTERY
BC3	TRUNK / RH SIDE / ADJACENT TO BATTERY
G29	TRUNK / SPARE WHEEL WELL

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

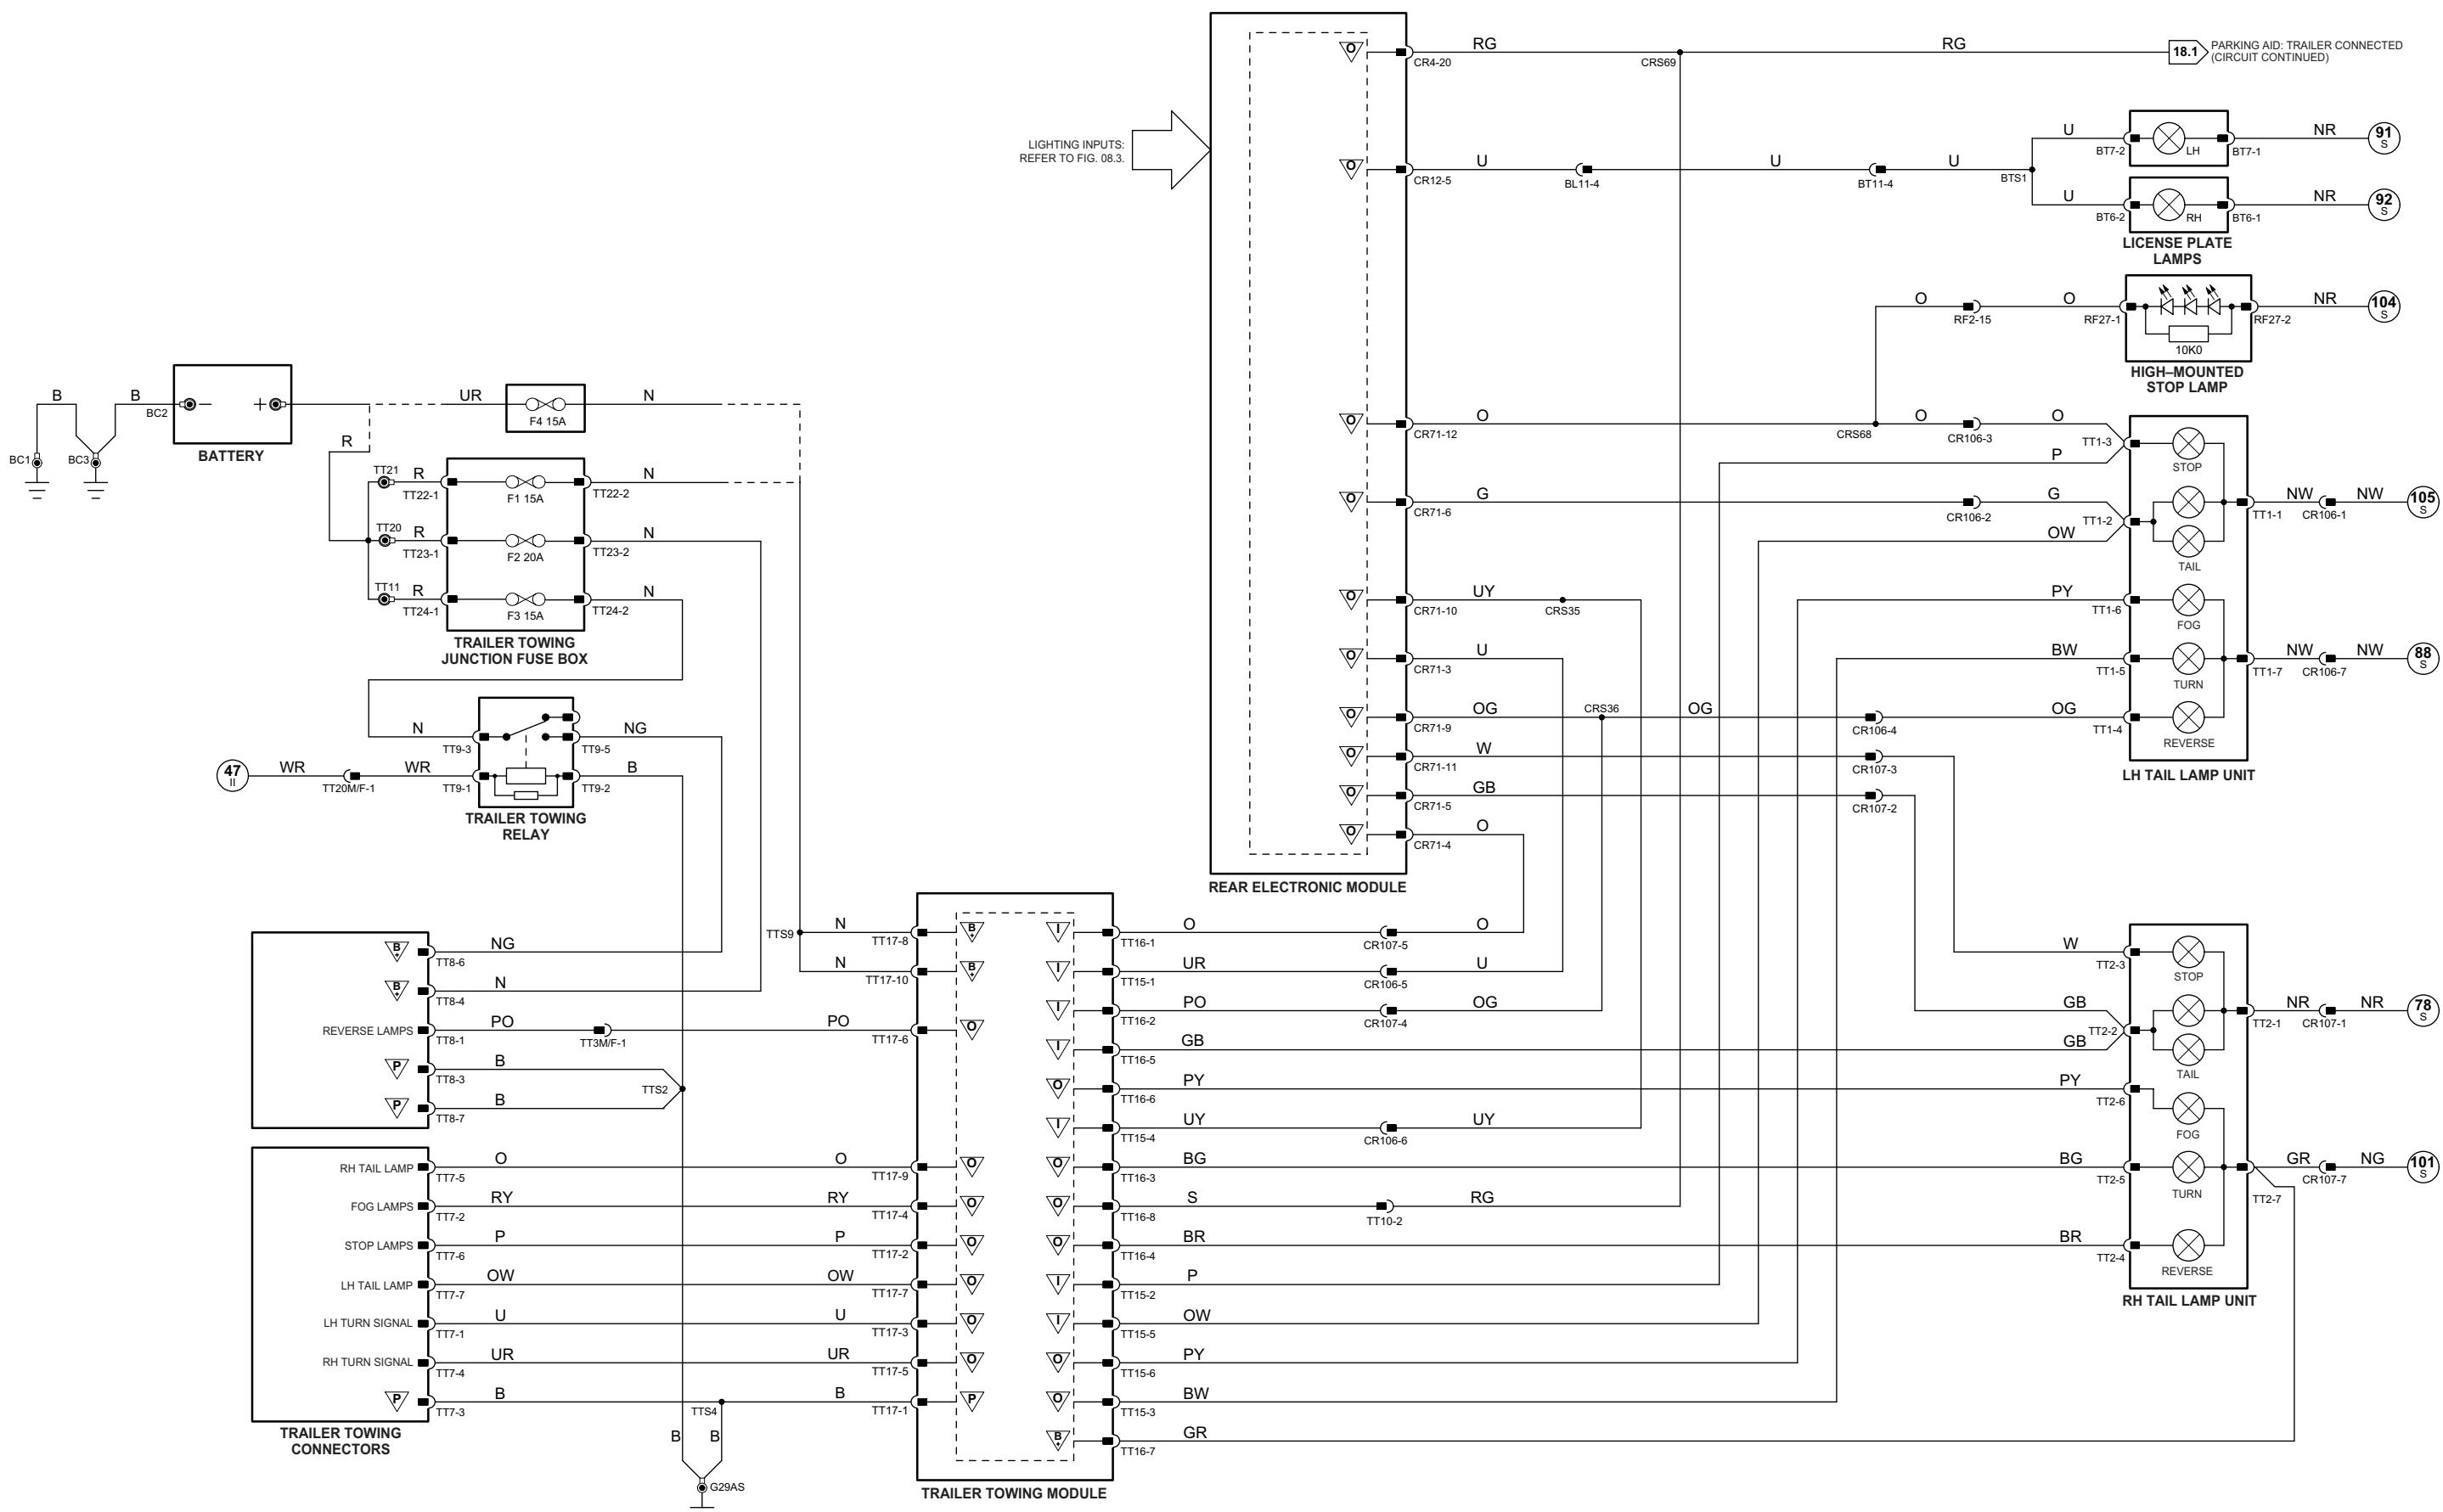

## Air Suspension Module

Pin	Description and Characteristic
B+	CR88-1 BATTERY POWER SUPPLY: B+
B+	CR88-2 SWITCHED SYSTEM POWER SUPPLY (WAKE UP): B+
PG	CR88-3 POWER GROUND: GROUND

O CR89-3 HEADLAMP LEVELING SENSOR: PWM

## Fig. 08.6

### COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR SUSPENSION MODULE	CR88	9-WAY / BLACK	CABIN REAR BULKHEAD / BEHIND REAR SEAT BACK / RH SIDE
	CR89	12-WAY / BLACK	
	CR90	15-WAY / BLACK	
	CR91	18-WAY / BLACK	
HID HEADLAMP UNIT – LH	EC57	9-WAY / BLACK	ENGINE COMPARTMENT / LH FRONT
HID HEADLAMP UNIT – RH	EC6	9-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST

### GROUNDS

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G3	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G17	CABIN / BELOW REAR SEAT / RH SIDE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

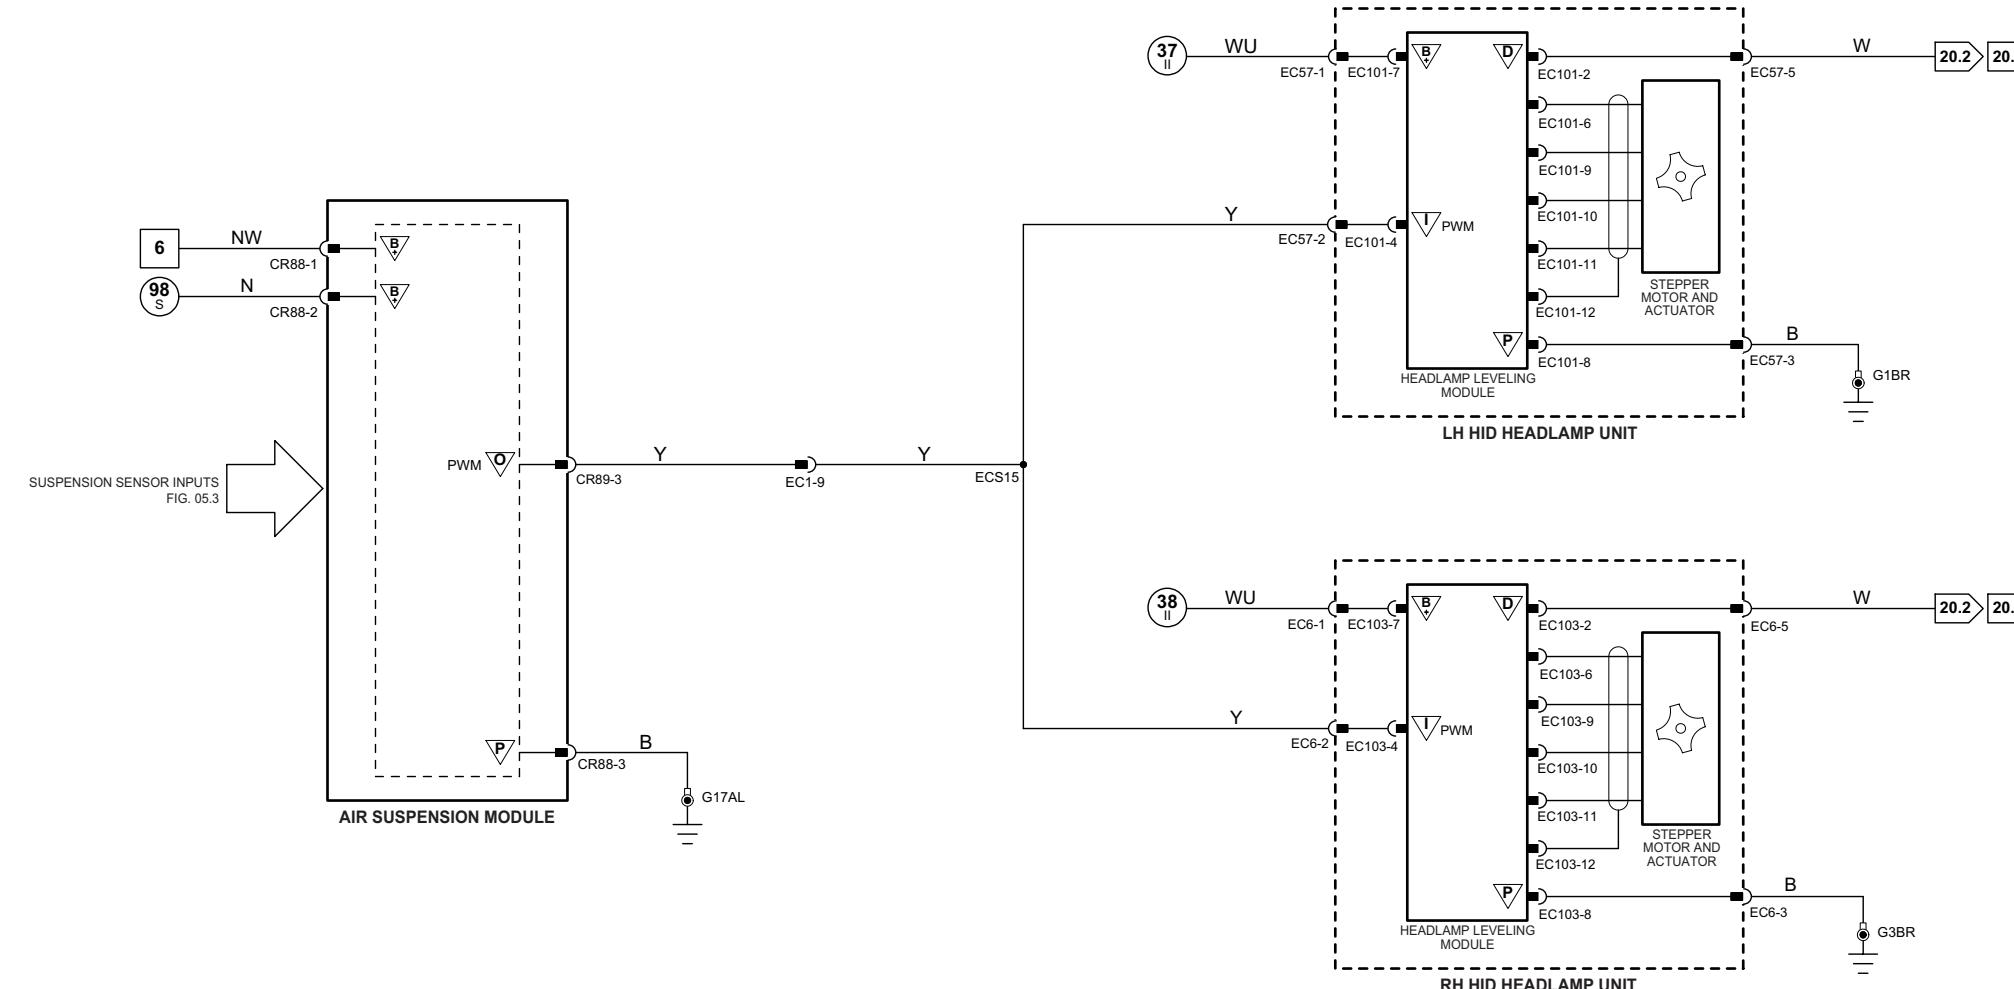

f08\_6\_35008

**Fig. 09.1**

**Driver Door Module**

Pin	Description and Characteristic
O DD12-13	DRIVER DOOR PUDDLE LAMP ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
O DD12-21	DRIVER APPROACH LAMP ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
I DD12-25	DRIVER DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR

**Front Electronic Module**

Pin	Description and Characteristic
I CR1-1	PASSENGER DOOR AJAR SWITCH SIGNAL: GROUND WHEN ACTIVATED
O CR1-2	PASSENGER DOOR PUDDLE LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
I CR1-3	MASTER LIGHTING SWITCH SIGNAL: GROUND WHEN ACTIVATED
O CR1-5	PASSENGER DOOR APPROACH LAMP ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
S CR9-1	SCP –
B+ CR9-6	BATTERY POWER SUPPLY (LOGIC): B+
S CR9-7	SCP +
SG CR9-12	LOGIC GROUND: GROUND
O CR10-6	FRONT FOOTWELL LAMPS ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
PG CR10-11	POWER GROUND: GROUND
PG CR10-13	POWER GROUND: GROUND
B+ CR85-1	SWITCHED SYSTEM POWER SUPPLY: B+

**Rear Electronic Module**

Pin	Description and Characteristic
B+ CR4-3	BATTERY POWER SUPPLY (LOGIC): B+
I CR4-17	RH REAR DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
SG CR11-10	TRUNK LATCH SIGNAL GROUND: GROUND
PG CR11-11	POWER GROUND: GROUND
I CR11-16	LH REAR DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
SG CR11-25	LOGIC GROUND: GROUND
O CR12-11	TRUNK LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
S CR13-1	SCP NETWORK +
S CR13-2	SCP NETWORK –
I CR13-14	TRUNK AJAR SWITCH SIGNAL: GROUND (SIGNAL) WHEN TRUNK IS AJAR
O CR13-20	LH REAR DOOR PUDDLE LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR13-22	RH REAR DOOR PUDDLE LAMP ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR71-1	REAR COURTESY LAMPS ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
APPROACH LAMP – DRIVER DOOR	DD9	22-WAY / DARK GREY	DRIVER DOOR MIRROR
APPROACH LAMP – PASSENGER DOOR	PD9	22-WAY / DARK GREY	PASSENGER DOOR MIRROR
COURTESY LAMP – LH REAR	RF21	3-WAY / BLACK	LH REAR ASSIST HANDLE
COURTESY LAMP – RH REAR	RF22	3-WAY / BLACK	RH REAR ASSIST HANDLE
DOOR AJAR SWITCH – DRIVER	DD7	2-WAY / BLACK	DRIVER DOOR
DOOR AJAR SWITCH – LH REAR	DD10	3-WAY / BLACK	DRIVER DOOR
DOOR AJAR SWITCH – PASSENGER	RL7	2-WAY / BLACK	LH REAR DOOR
DOOR AJAR SWITCH – RH REAR	RL10	3-WAY / BLACK	PASSENGER DOOR
FOOTWELL LAMP – LH FRONT	PD7	2-WAY / BLACK	PASSENGER DOOR
FOOTWELL LAMP – LH REAR	PD10	3-WAY / BLACK	PASSENGER DOOR
FOOTWELL LAMP – RH FRONT	RR7	2-WAY / BLACK	RH REAR DOOR
FOOTWELL LAMP – RH REAR	RR10	3-WAY / BLACK	RH REAR DOOR
FRONT ELECTRONIC MODULE	IP13	2-WAY / WHITE	INSTRUMENT PANEL / LH SIDE / UNDER
FRONT ELECTRONIC MODULE	SD23	2-WAY / WHITE	LH FRONT SEAT / LOWER REAR
FRONT ELECTRONIC MODULE	IP14	2-WAY / WHITE	INSTRUMENT PANEL / RH SIDE / UNDER
FRONT ELECTRONIC MODULE	SP23	2-WAY / WHITE	RH FRONT SEAT / LOWER REAR
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
FRONT ELECTRONIC MODULE	CR9	12-WAY / BLACK	CABIN / LH 'A' POST
FRONT ELECTRONIC MODULE	CR10	17-WAY / BLACK	CABIN / LH 'A' POST
FRONT ELECTRONIC MODULE	CR85	20-WAY / BLACK	CABIN / LH 'A' POST
FRONT ELECTRONIC MODULE	EC36	22-WAY / BLACK	CABIN / LH 'A' POST
GLOVE BOX LAMP	IP28	2-WAY / GREY	GLOVE BOX
GLOVE BOX LAMP SWITCH	IP29	2-WAY / GREY	GLOVE BOX
MAP LAMP – LH REAR	RF21	3-WAY / BLACK	LH REAR ASSIST HANDLE
MAP LAMP – RH REAR	RF22	3-WAY / BLACK	RH REAR ASSIST HANDLE
PUDGLE LAMP – DRIVER DOOR	DT2	2-WAY / WHITE	DRIVER DOOR TRIM
PUDGLE LAMP – LH REAR DOOR	LT2	2-WAY / WHITE	LH REAR DOOR TRIM
PUDGLE LAMP – PASSENGER DOOR	PT2	2-WAY / WHITE	PASSENGER DOOR TRIM
PUDGLE LAMP – RH REAR DOOR	RT2	2-WAY / WHITE	RH REAR DOOR TRIM
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR11	26-WAY / NATURAL	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR12	12-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR13	22-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR71	17-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR73	4-WAY / BLACK	TRUNK / RH REAR
ROOF CONSOLE	RF3	20-WAY / BLACK	CABIN ROOF
TRUNK LAMP	CR18	2-WAY / BLACK	TRUNK / CENTER FRONT
TRUNK LATCH	BT2	8-WAY / BLACK	TRUNK LID
TRUNK LID LAMP	BT3	2-WAY / BLACK	TRUNK LID
VANITY MIRROR LAMP – LH	RF4	2-WAY / BLACK	LH SUN VISOR
VANITY MIRROR LAMP – RH	RF5	2-WAY / BLACK	RH SUN VISOR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT6	16-WAY / BLUE / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PT1	12-WAY / GREY / PASSENGER DOOR HARNESS TO PASSENGER DOOR TRIM HARNESS	CABIN / BEHIND PASSENGER DOOR TRIM
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
RF25	8-WAY / BLACK / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER LH 'A' POST
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH A POST
G10	CABIN / RH A POST
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT
G17	CABIN / BELOW REAR SEAT / RH SIDE
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G32	CABIN / BEHIND INSTRUMENT CLUSTER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.



Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

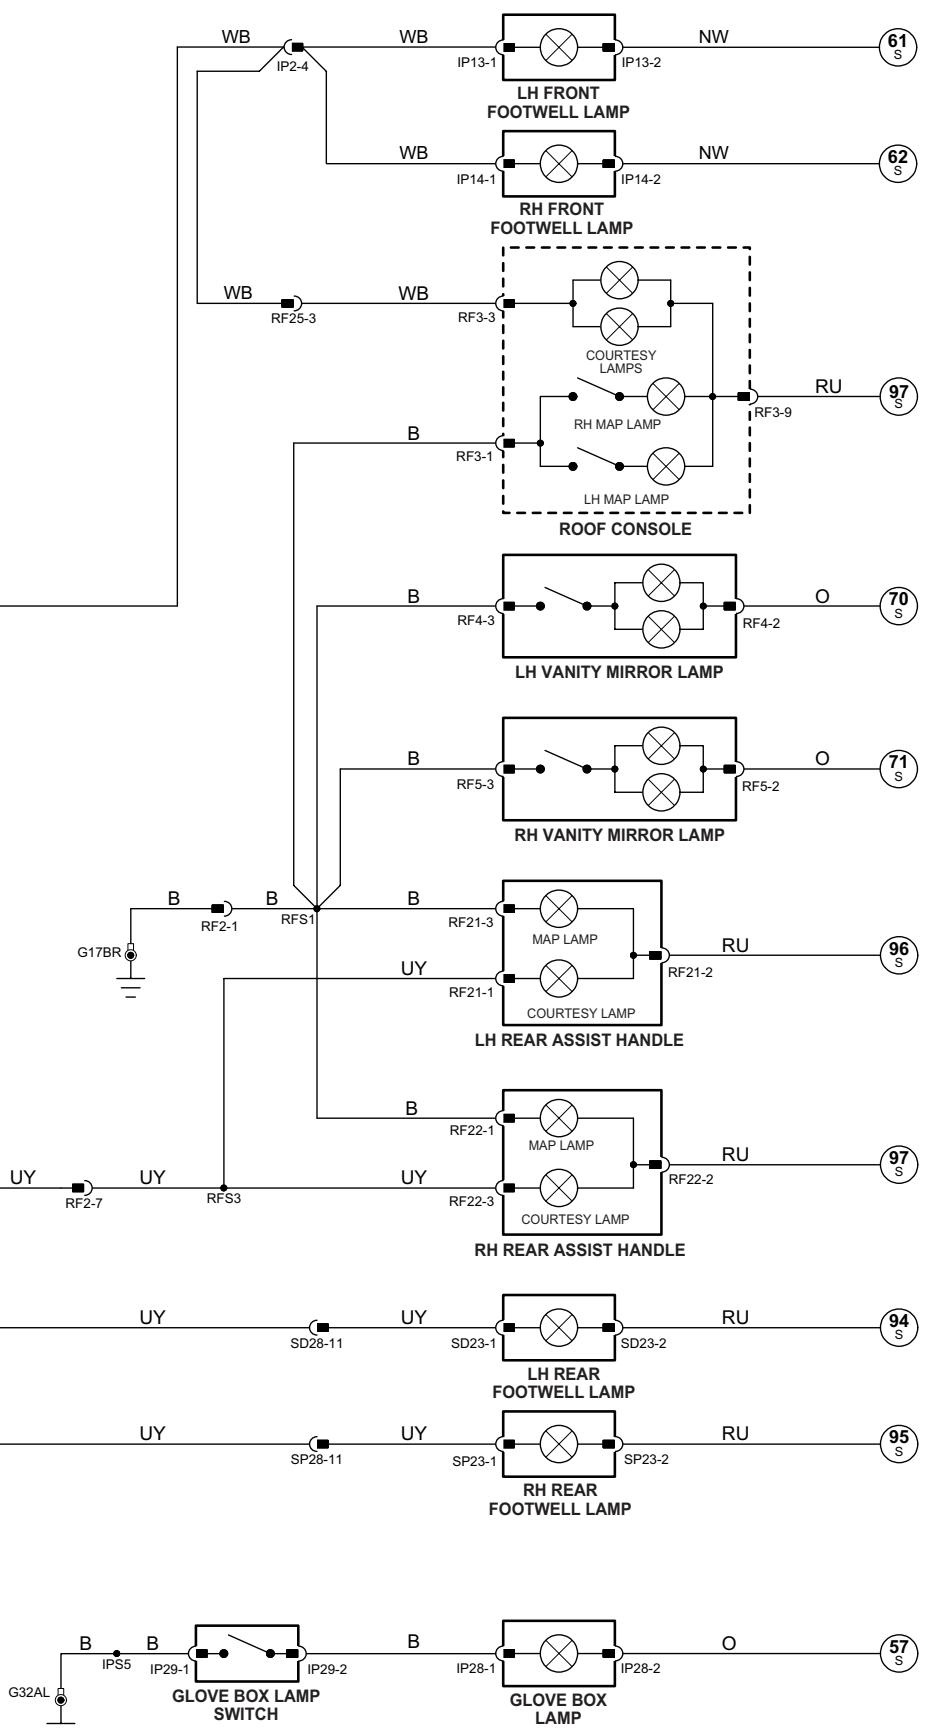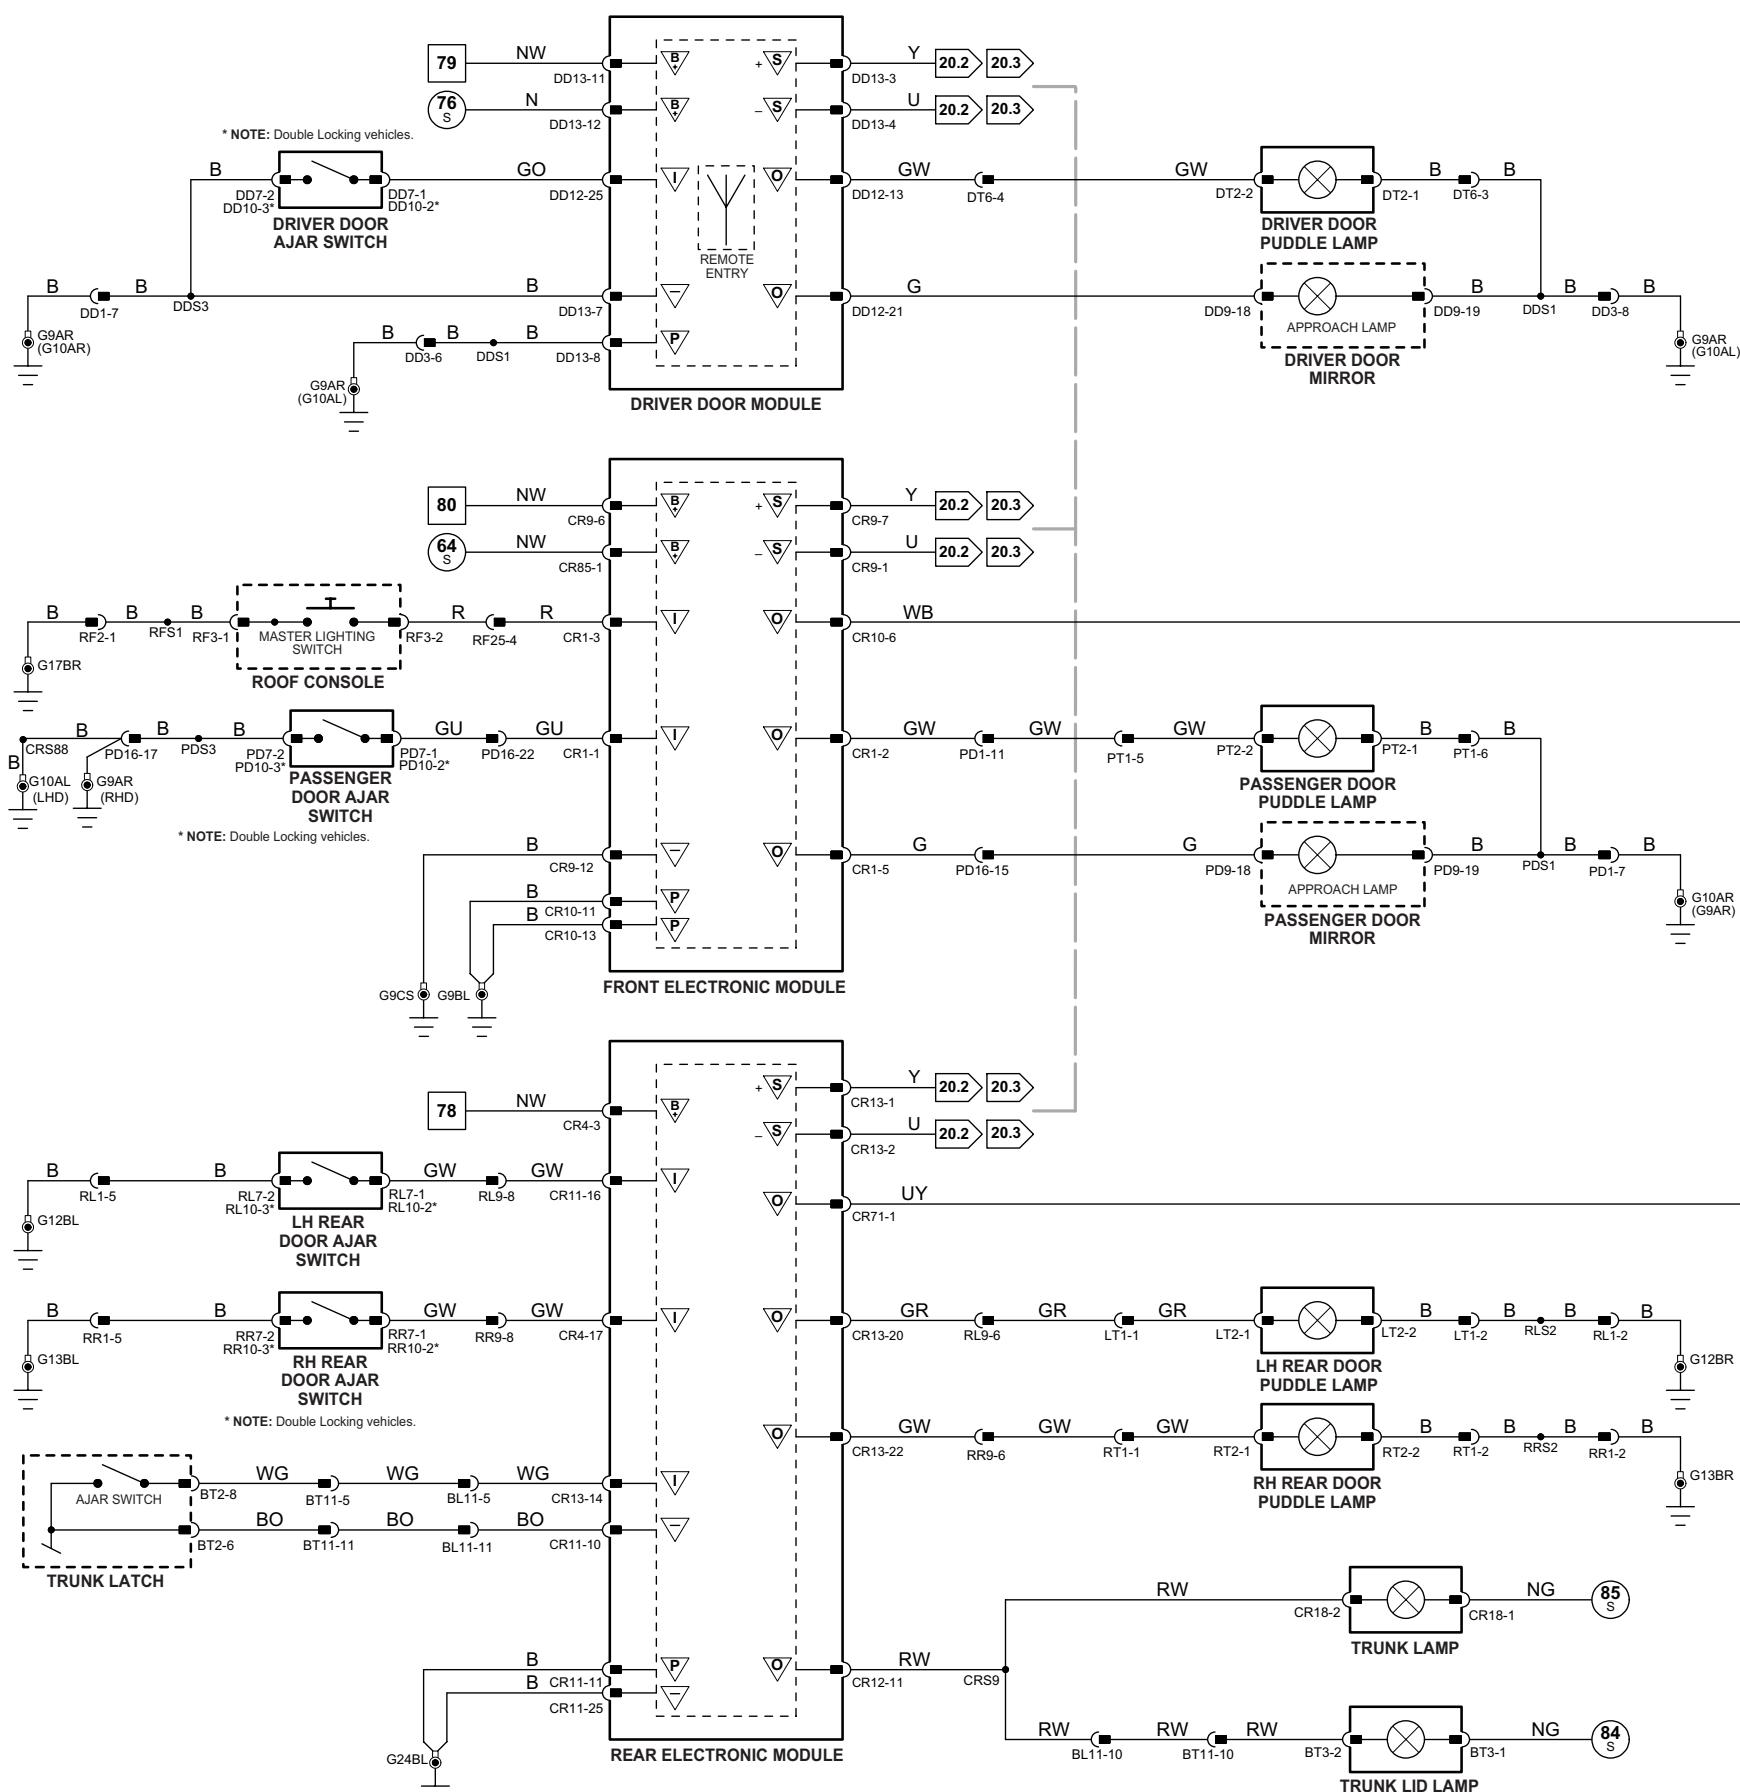

## Climate Control Module – Panel

Pin	Description and Characteristic
O AC101–19	PANEL BACK LIGHTING: CCM INDICATES TO PANEL TO BACKLIGHT LCD
I CR119–11	DIMMER CONTROLLED ILLUMINATION: PWM, 80Hz, GROUND = 0% DUTY CYCLE, B+ = 100% DUTY CYCLE

## Front Electronic Module

Pin	Description and Characteristic
S CR9–1	SCP –
S CR9–7	SCP +
SG CR9–12	LOGIC GROUND: GROUND
PG CR10–11	POWER GROUND: GROUND
PG CR10–13	POWER GROUND: GROUND
B+	SWITCHED SYSTEM POWER SUPPLY: B+
O CR85–11	BULB BACK LIGHTING ACTIVATE: B+ PWM
O CR85–12	LED BACK LIGHTING ACTIVATE: B+ PWM

## Instrument Cluster

Pin	Description and Characteristic
SG IP5–14	SIGNAL GROUND: GROUND
B+ IP6–3	BATTERY POWER SUPPLY (LOGIC): B+
S IP6–10	SCP –
S IP6–20	SCP +
I IP7–5	DIMMER SIGNAL: VARIABLE VOLTAGE
SG IP7–15	AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND
SS IP7–16	DIMMER SUPPLY VOLTAGE: B+

Fig. 09.2

## COMPONENTS

Component	Connector(s)	Connector Description	Location
AUDIO / VIDEO SELECTOR	TL20 TL85 TL86 TL87	20-WAY / BLACK 20-WAY / BLACK 20-WAY / BLACK 20-WAY / BLACK	CABIN REAR BULKHEAD / BEHIND REAR SEAT BACK / LH SIDE
AUDIO UNIT	CC8 CC9	20-WAY / BLACK 2-WAY / BLACK	CENTER CONSOLE
AUXILIARY LIGHTING SWITCH	CC21	FIBER OPTIC CONNECTOR	
CENTER CONSOLE SWITCH PACK	IP33 CL1	12-WAY / BLACK 8-WAY / BLACK	INSTRUMENT PANEL / LH SIDE CENTER CONSOLE
CIGAR LIGHTER – FRONT	CL2	8-WAY / BLACK	
CIGAR LIGHTER – REAR	TL69	3-WAY / BLACK	CENTER CONSOLE
CLIMATE CONTROL MODULE	TL70	3-WAY / BLACK	REAR CENTER CONSOLE
CLIMATE CONTROL PANEL	AC100 AC101 CR119	16-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK	CLIMATE CONTROL UNIT / DRIVER SIDE
CLOCK	CC20	12-WAY / BLACK	CENTER CONSOLE
FASCIA VENT – CENTER	IP19	6-WAY / BLACK	INSTRUMENT PANEL / CENTER VENT
FASCIA VENT – LH	IP57	2-WAY / BLACK	INSTRUMENT PANEL / CENTER
FASCIA VENT – RH	IP52	2-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
FRONT ELECTRONIC MODULE	IP54 CR1 CR9 CR10 CR85 EC36	2-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL / RH SIDE CABIN / LH 'A' POST
INSTRUMENT CLUSTER	IP5 IP6 IP7	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL
J-GATE MODULE	IP32	16-WAY / BLACK	J GATE ASSEMBLY
MULTIMEDIA CONTROL PANEL	RC1 RC3	8-WAY / BLACK 20-WAY / BLACK	REAR SEAT ARM REST OR REAR FLOOR CONSOLE
POWER POINT – FRONT	RC5	FIBER OPTIC CONNECTOR	
POWER POINT – REAR	IP21	3-WAY / BLACK	FRONT CENTER CONSOLE GLOVE BOX
REAR CENTER CONSOLE SWITCH PACK	TL72	3-WAY / BLACK	REAR CENTER CONSOLE
REAR CLIMATE CONTROL MODULE	TL89	8-WAY / BLACK	REAR CENTER CONSOLE
REAR VENTS	RA1 RA2	16-WAY / BLACK 12-WAY / BLACK	REAR CENTER CONSOLE
STEERING WHEEL LIGHTING	TL23	2-WAY / BLACK	BELOW CENTER CONSOLE
TELEMATICS DISPLAY	— CC12 CC13 CC14 CC15 CC16	— 22-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK	STEERING WHEEL CENTER CONSOLE
TRUNK AND FUEL FLAP RELEASE SWITCH PACK	IP50	10-WAY / BLACK	INSTRUMENT PANEL / OUTBOARD OF STEERING COLUMN

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP17	16-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP20	16-WAY / BLUE / AIR CONDITIONING HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / LH SIDE TO CLIMATE CONTROL UNIT
IP66	14-WAY / GREY / INSTRUMENT PANEL HARNESS TO REAR AIR CONDITIONING HARNESS	CABIN / BELOW CENTER CONSOLE
RC2	8-WAY / BLACK / TELEMATICS HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

## GROUNDS

Ground	Location
G9	CABIN / UPPER LH A POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G18	CABIN / BELOW REAR SEAT / LH SIDE
G31	CABIN / BEHIND PASSENGER AIR BAG
G32	CABIN / BEHIND INSTRUMENT CLUSTER

The following abbreviations are used to represent values for Control Module Pin-Out data


I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

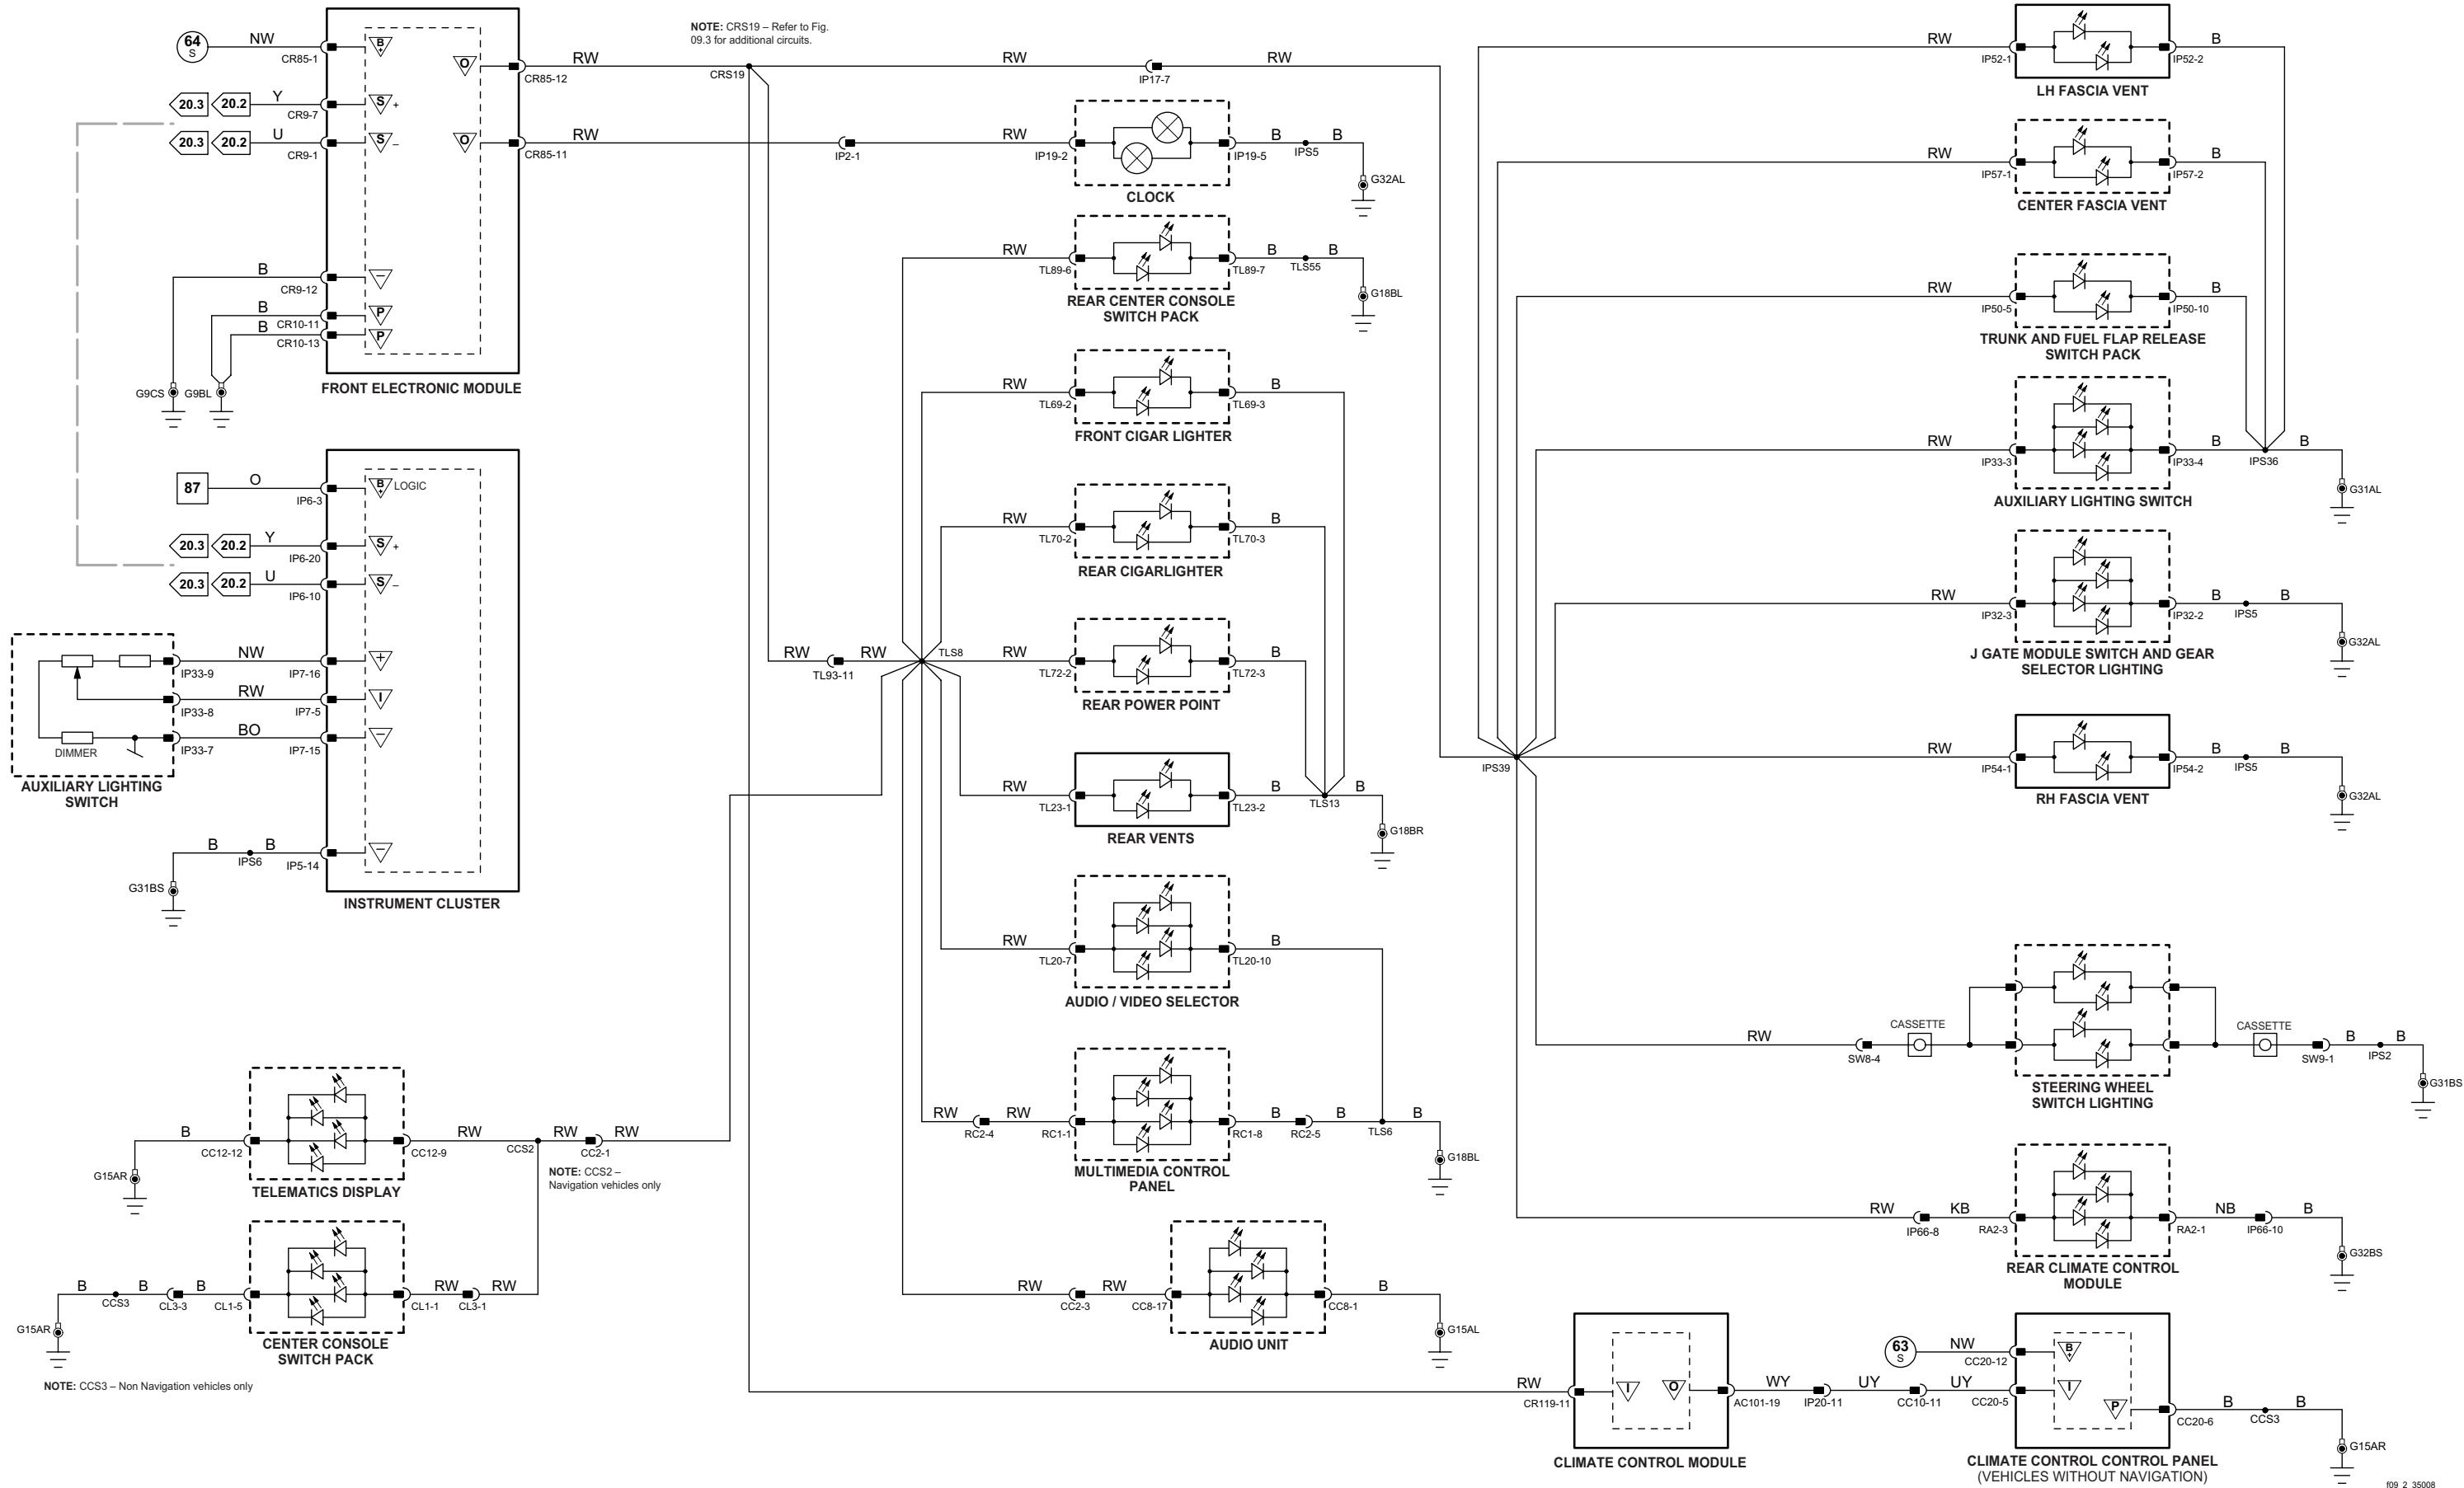

**Fig. 09.3**

**Front Electronic Module**

Pin	Description and Characteristic
S	CR9-1 SCP -
S	CR9-7 SCP +
SG	CR9-12 LOGIC GROUND: GROUND
PG	CR10-11 POWER GROUND: GROUND
PG	CR10-13 POWER GROUND: GROUND
B+	CR85-1 SWITCHED SYSTEM POWER SUPPLY: B+
O	CR85-12 LED BACK LIGHTING ACTIVATE: B+ PWM

**Instrument Cluster**

Pin	Description and Characteristic
SG	IP5-14 SIGNAL GROUND: GROUND
B+	IP6-3 BATTERY POWER SUPPLY (LOGIC): B+
S	IP6-10 SCP -
S	IP6-20 SCP +
I	IP7-5 DIMMER SIGNAL: VARIABLE VOLTAGE
SG	IP7-15 AUXILIARY LIGHTING SWITCH SIGNAL GROUND: GROUND
SS	IP7-16 DIMMER SUPPLY VOLTAGE: B+

**Rear Electronic Module**

Pin	Description and Characteristic
PG	CR11-11 POWER GROUND: GROUND
SG	CR11-25 LOGIC GROUND: GROUND
O	CR12-2 REAR WINDOW ISOLATE: TO ISOLATE, REM INTERRUPTS GROUND SUPPLY

**Rear Memory Module**

Pin	Description and Characteristic
SG	CR37-14 REAR SEAT MEMORY SWITCH PACK REFERENCE GROUND: GROUND
SG	CR37-15 REAR SEAT MEMORY SWITCH PACK REFERENCE GROUND: GROUND
SG	CR37-26 SIGNAL GROUND: GROUND

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUXILIARY LIGHTING SWITCH	IP50	10-WAY / GREY	INSTRUMENT PANEL / OUTBOARD OF STEERING COLUMN
DOOR SWITCH PACK – DRIVER	DT4	20-WAY / BLACK	DRIVER DOOR TRIM
DOOR SWITCH PACK – LH REAR	LT3	8-WAY / BLACK	LH REAR DOOR TRIM
DOOR SWITCH PACK – PASSENGER	PT4	8-WAY / BLACK	PASSENGER DOOR TRIM
DOOR SWITCH PACK – RH REAR	RT3	8-WAY / BLACK	RH REAR DOOR TRIM
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
	CR9	12-WAY / BLACK	
	CR10	17-WAY / BLACK	
	CR85	20-WAY / BLACK	
	EC36	22-WAY / BLACK	
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
	DT5	8-WAY / BLACK	DRIVER DOOR TRIM
	LT5	8-WAY / BLACK	LH REAR DOOR TRIM
	RT5	8-WAY / BLACK	RH REAR DOOR TRIM
	RF14	2-WAY / BLACK	CABIN ROOF / LH SIDE
	RF15	2-WAY / BLACK	CABIN ROOF / LH SIDE
	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR MEMORY MODULE	CR21	4-WAY / BLACK	REAR BULKHEAD / BEHIND REAR SEAT BACK
	CR37	26-WAY / BLACK	
	CR38	22-WAY / BLACK	
	CR41	6-WAY / BLACK	
	CR53	4-WAY / BLACK	
	CR59	6-WAY / BLACK	
ROOF CONSOLE	RF3	20-WAY / BLACK	CABIN ROOF

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
DD1	22-WAY / DARK GREY/ CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PT1	12-WAY / GREY / PASSENGER DOOR HARNESS TO PASSENGER DOOR TRIM HARNESS	CABIN / BEHIND PASSENGER DOOR TRIM
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
RF25	8-WAY / BLACK / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER LH 'A' POST
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G10	CABIN / RH 'A' POST
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / LH SIDE
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

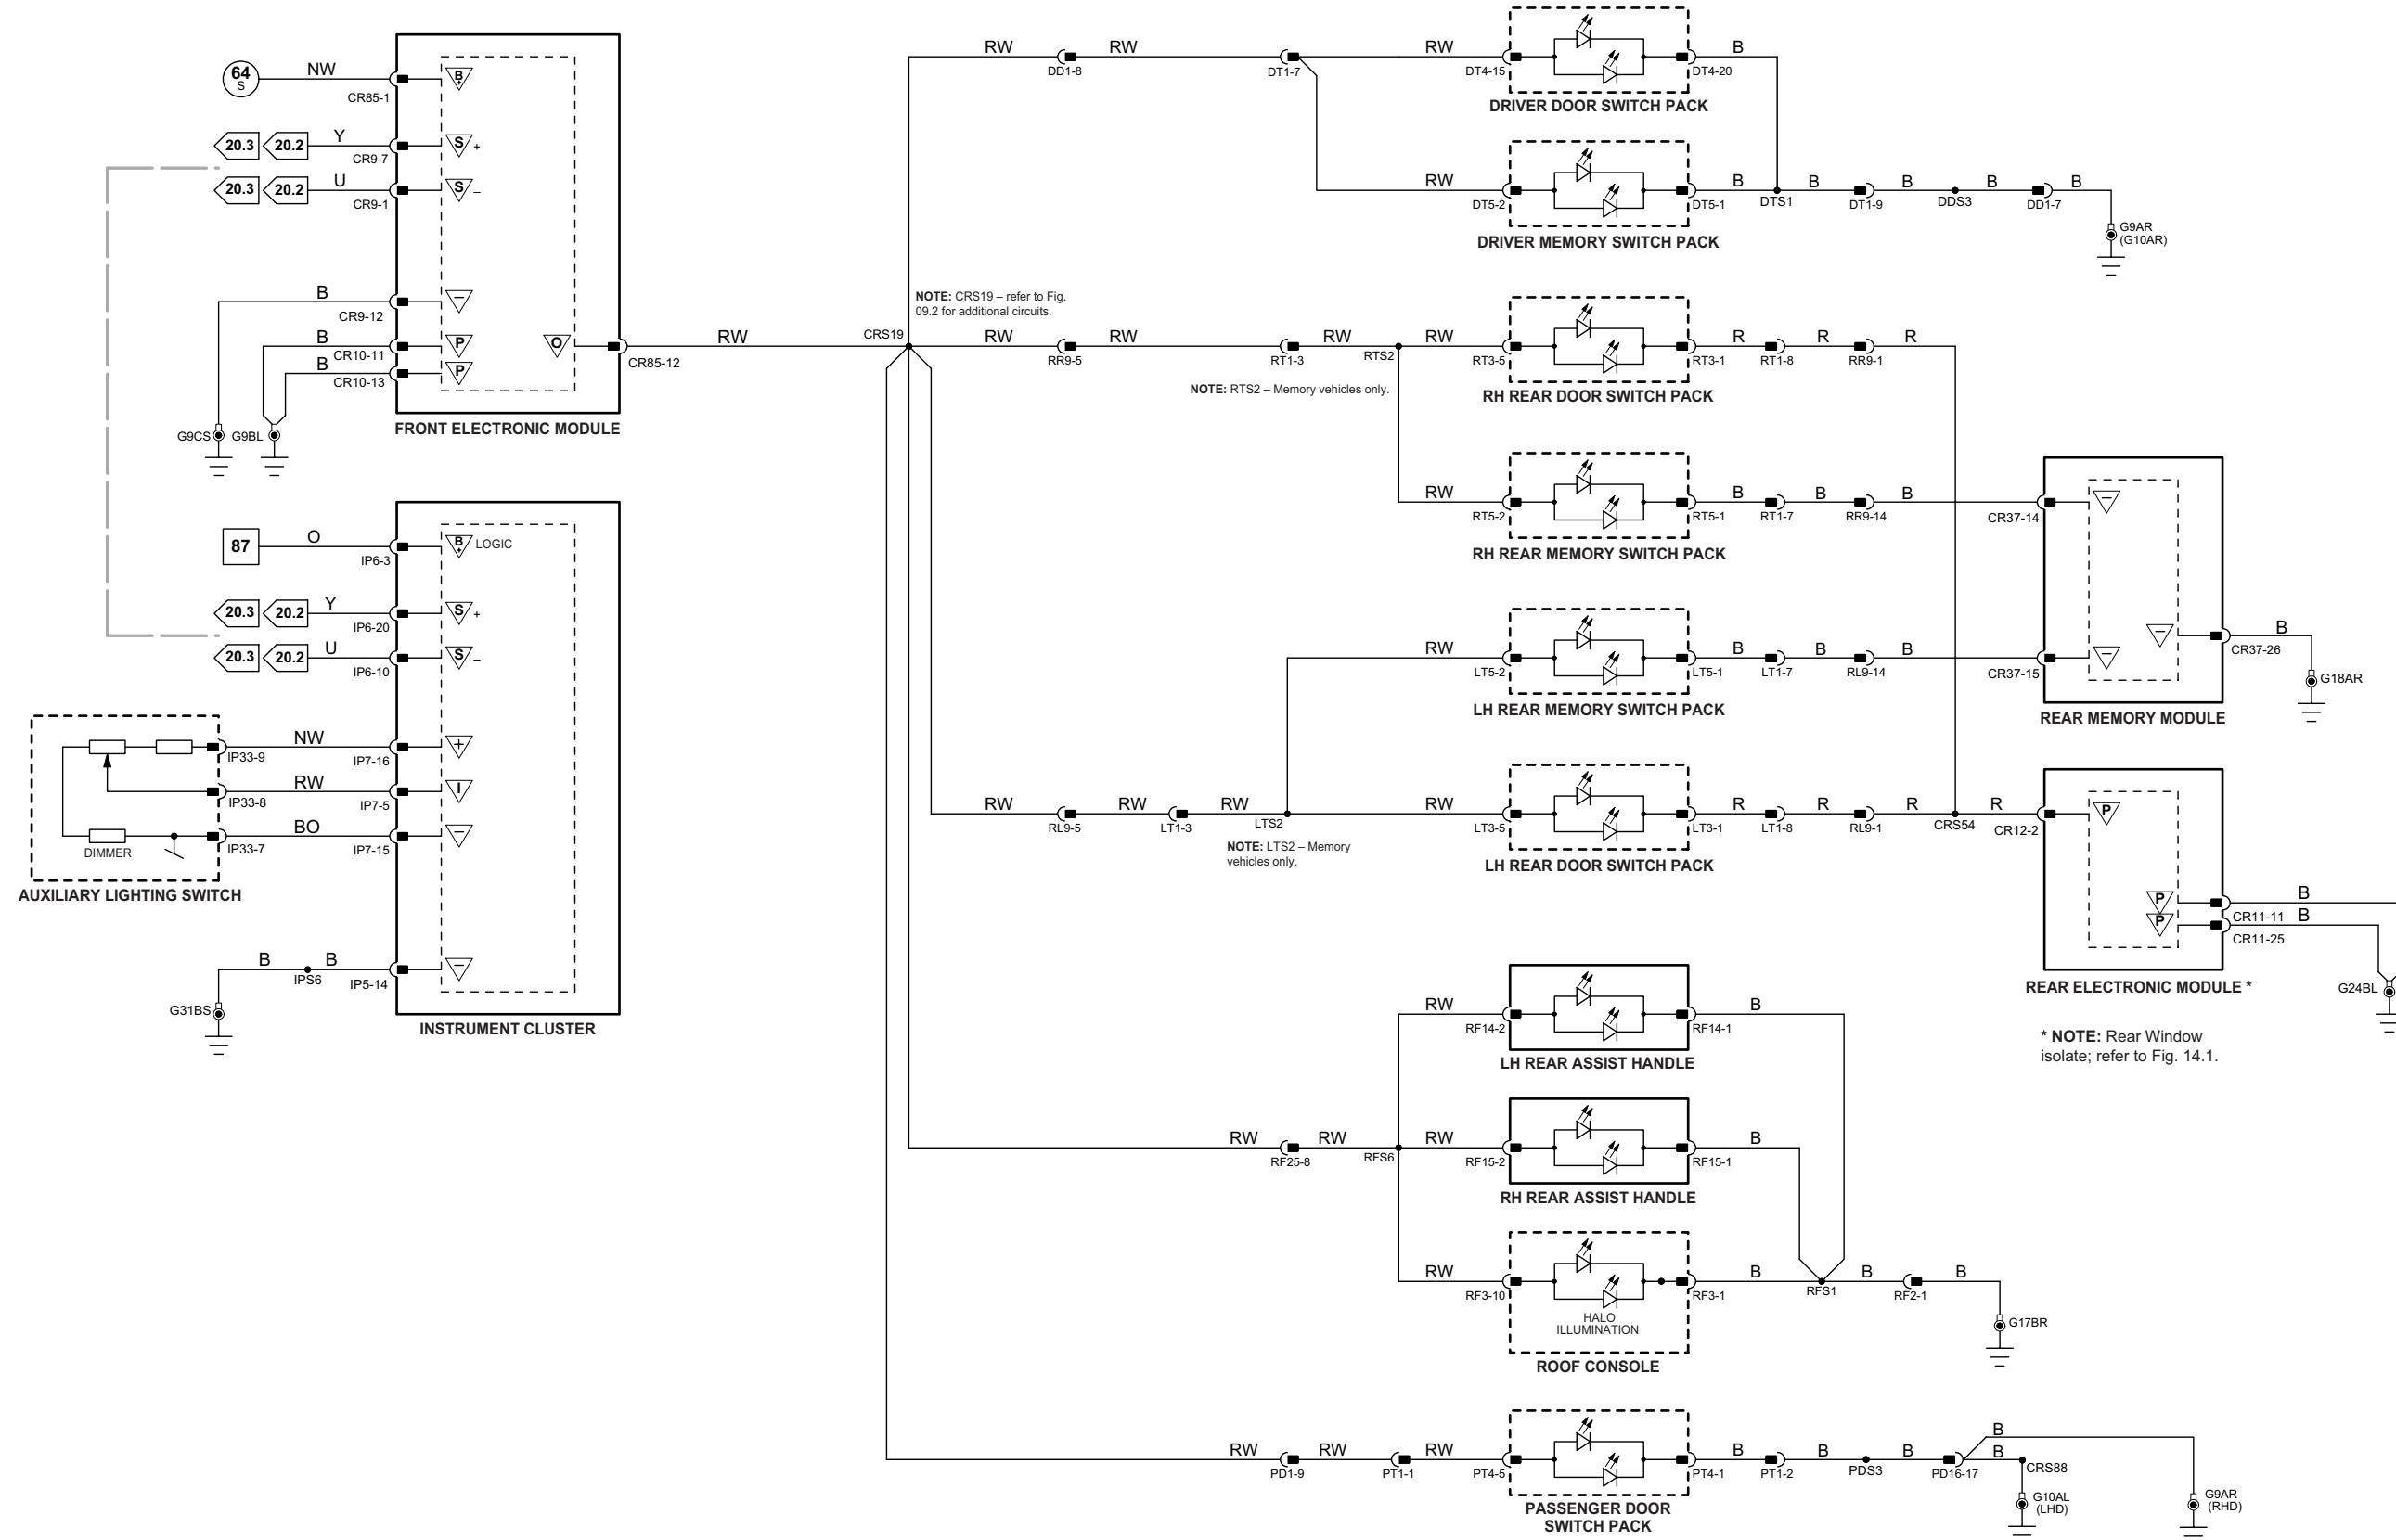

f09\_3\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	Sensor/Signal Ground	SCP	VIN RANGE: All
							C CAN	DATE OF ISSUE: May 2007
							D Serial and Encoded Data	

**Fig. 10.1**

**Driver Door Module**

Pin	Description and Characteristic
O DD12-7	MEMORY SET INDICATOR ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
I DD12-10	MEMORY 1, 2, 3, SET INPUT SIGNAL: VARIABLE RESISTANCE
I DD12-25	DRIVER DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR

**Front Electronic Module**

Pin	Description and Characteristic
I CR1-9	PEDAL ADJUST SWITCH OUT SIGNAL: GROUND WHEN ACTIVATED
I CR1-12	PEDAL ADJUST SWITCH IN SIGNAL: GROUND WHEN ACTIVATED
PG CR1-26	POWER GROUND: GROUND
S CR9-1	SCP -
S CR9-7	SCP +
SG CR9-11	PEDAL ADJUST MOTOR POSITION SENSOR SIGNAL: VARIABLE VOLTAGE 0 – 5 V
O CR10-2	PEDAL ADJUST MOTOR DRIVE – OUT: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
O CR10-9	PEDAL ADJUST MOTOR DRIVE – IN: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
PG CR10-11	POWER GROUND: GROUND
PG CR10-13	POWER GROUND: GROUND
PG CR10-14	POWER GROUND: GROUND
B+ CR85-1	SWITCHED SYSTEM POWER SUPPLY: B+
SG CR85-15	PEDAL ADJUST MOTOR POSITION SENSOR SIGNAL GROUND: GROUND
SS CR85-17	PEDAL ADJUST MOTOR POSITION SENSOR SIGNAL SUPPLY VOLTAGE: NOMINAL 5 V

**Instrument Cluster**

Pin	Description and Characteristic
SG IP5-14	SIGNAL GROUND: GROUND
B+ IP6-1	BATTERY POWER SUPPLY (COLUMN MOTOR): B+
PG IP6-2	POWER GROUND: GROUND
B+ IP6-3	BATTERY POWER SUPPLY (LOGIC): B+
S IP6-10	SCP -
O IP6-11	STEERING COLUMN MOTOR DRIVE – DOWN / OUT: B+ WHEN ACTIVATED
O IP6-12	STEERING COLUMN MOTOR DRIVE – UP / IN: B+ WHEN ACTIVATED
O IP6-13	STEERING COLUMN IN / OUT FUNCTION SOLENOID DRIVE: B+ WHEN ACTIVATED
O IP6-14	STEERING COLUMN UP / DOWN FUNCTION SOLENOID DRIVE: B+ WHEN ACTIVATED
S IP6-20	SCP +
I IP7-7	FUNCTION SELECT SIGNAL (KEY ON): COLUMN - 11.55V, AUTO - 0V, PEDALS - 2.0V
SG IP7-8	STEERING COLUMN POSITION FEEDBACK POTENTIOMETERS SIGNAL GROUND: GROUND
I IP7-9	STEERING COLUMN IN / OUT POSITION FEEDBACK POTENTIOMETER SIGNAL: 1.75V - 4.5V
I IP7-17	STEERING COLUMN MOVEMENT SWITCH SIGNAL: UP - 4.42V, DOWN - 5.54V, IN - 1.36V, OUT - 2.87V
SG IP7-18	STEERING COLUMN MOVEMENT / SELECT SIGNAL GROUND: GROUND
O IP7-19	STEERING COLUMN POSITION FEEDBACK POTENTIOMETERS SUPPLY VOLTAGE: 5V
I IP7-20	STEERING COLUMN UP / DOWN POSITION FEEDBACK POTENTIOMETER SIGNAL: 1.75V - 4.5V

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
COLUMN AND PEDAL ADJUST SWITCH	IP27	8-WAY / BLACK	STEERING COLUMN COWLING
DOOR AJAR SWITCH – DRIVER	DD7	2-WAY / BLACK	DRIVER DOOR
DRIVER DOOR MODULE	DD10	3-WAY / BLACK	
DRIVER DOOR MODULE	DD11	20-WAY / BLACK	DRIVER DOOR
DRIVER DOOR MODULE	DD12	26-WAY / NATURAL	
FRONT ELECTRONIC MODULE	DD13	12-WAY / BLACK	
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
FRONT ELECTRONIC MODULE	CR9	12-WAY / BLACK	
FRONT ELECTRONIC MODULE	CR10	17-WAY / BLACK	
INSTRUMENT CLUSTER	CR85	20-WAY / BLACK	
INSTRUMENT CLUSTER	EC36	22-WAY / BLACK	
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
INSTRUMENT CLUSTER	IP6	20-WAY / BLACK	
INSTRUMENT CLUSTER	IP7	22-WAY / BLACK	
MEMORY SWITCH PACK – DRIVER	DT5	8-WAY / BLACK	DRIVER DOOR TRIM
PEDAL ADJUST MOTOR	CR103	3-WAY / BLACK	DRIVER PEDAL ASSEMBLY
PEDAL ADJUST MOTOR	CR104	2-WAY / BLACK	
STEERING COLUMN MOVEMENT ASSEMBLY	IP10	10-WAY / BLACK	UPPER STEERING COLUMN

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
DD1	22-WAY / GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
DT6	16-WAY / BLUE / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G10	CABIN / RH 'A' POST
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

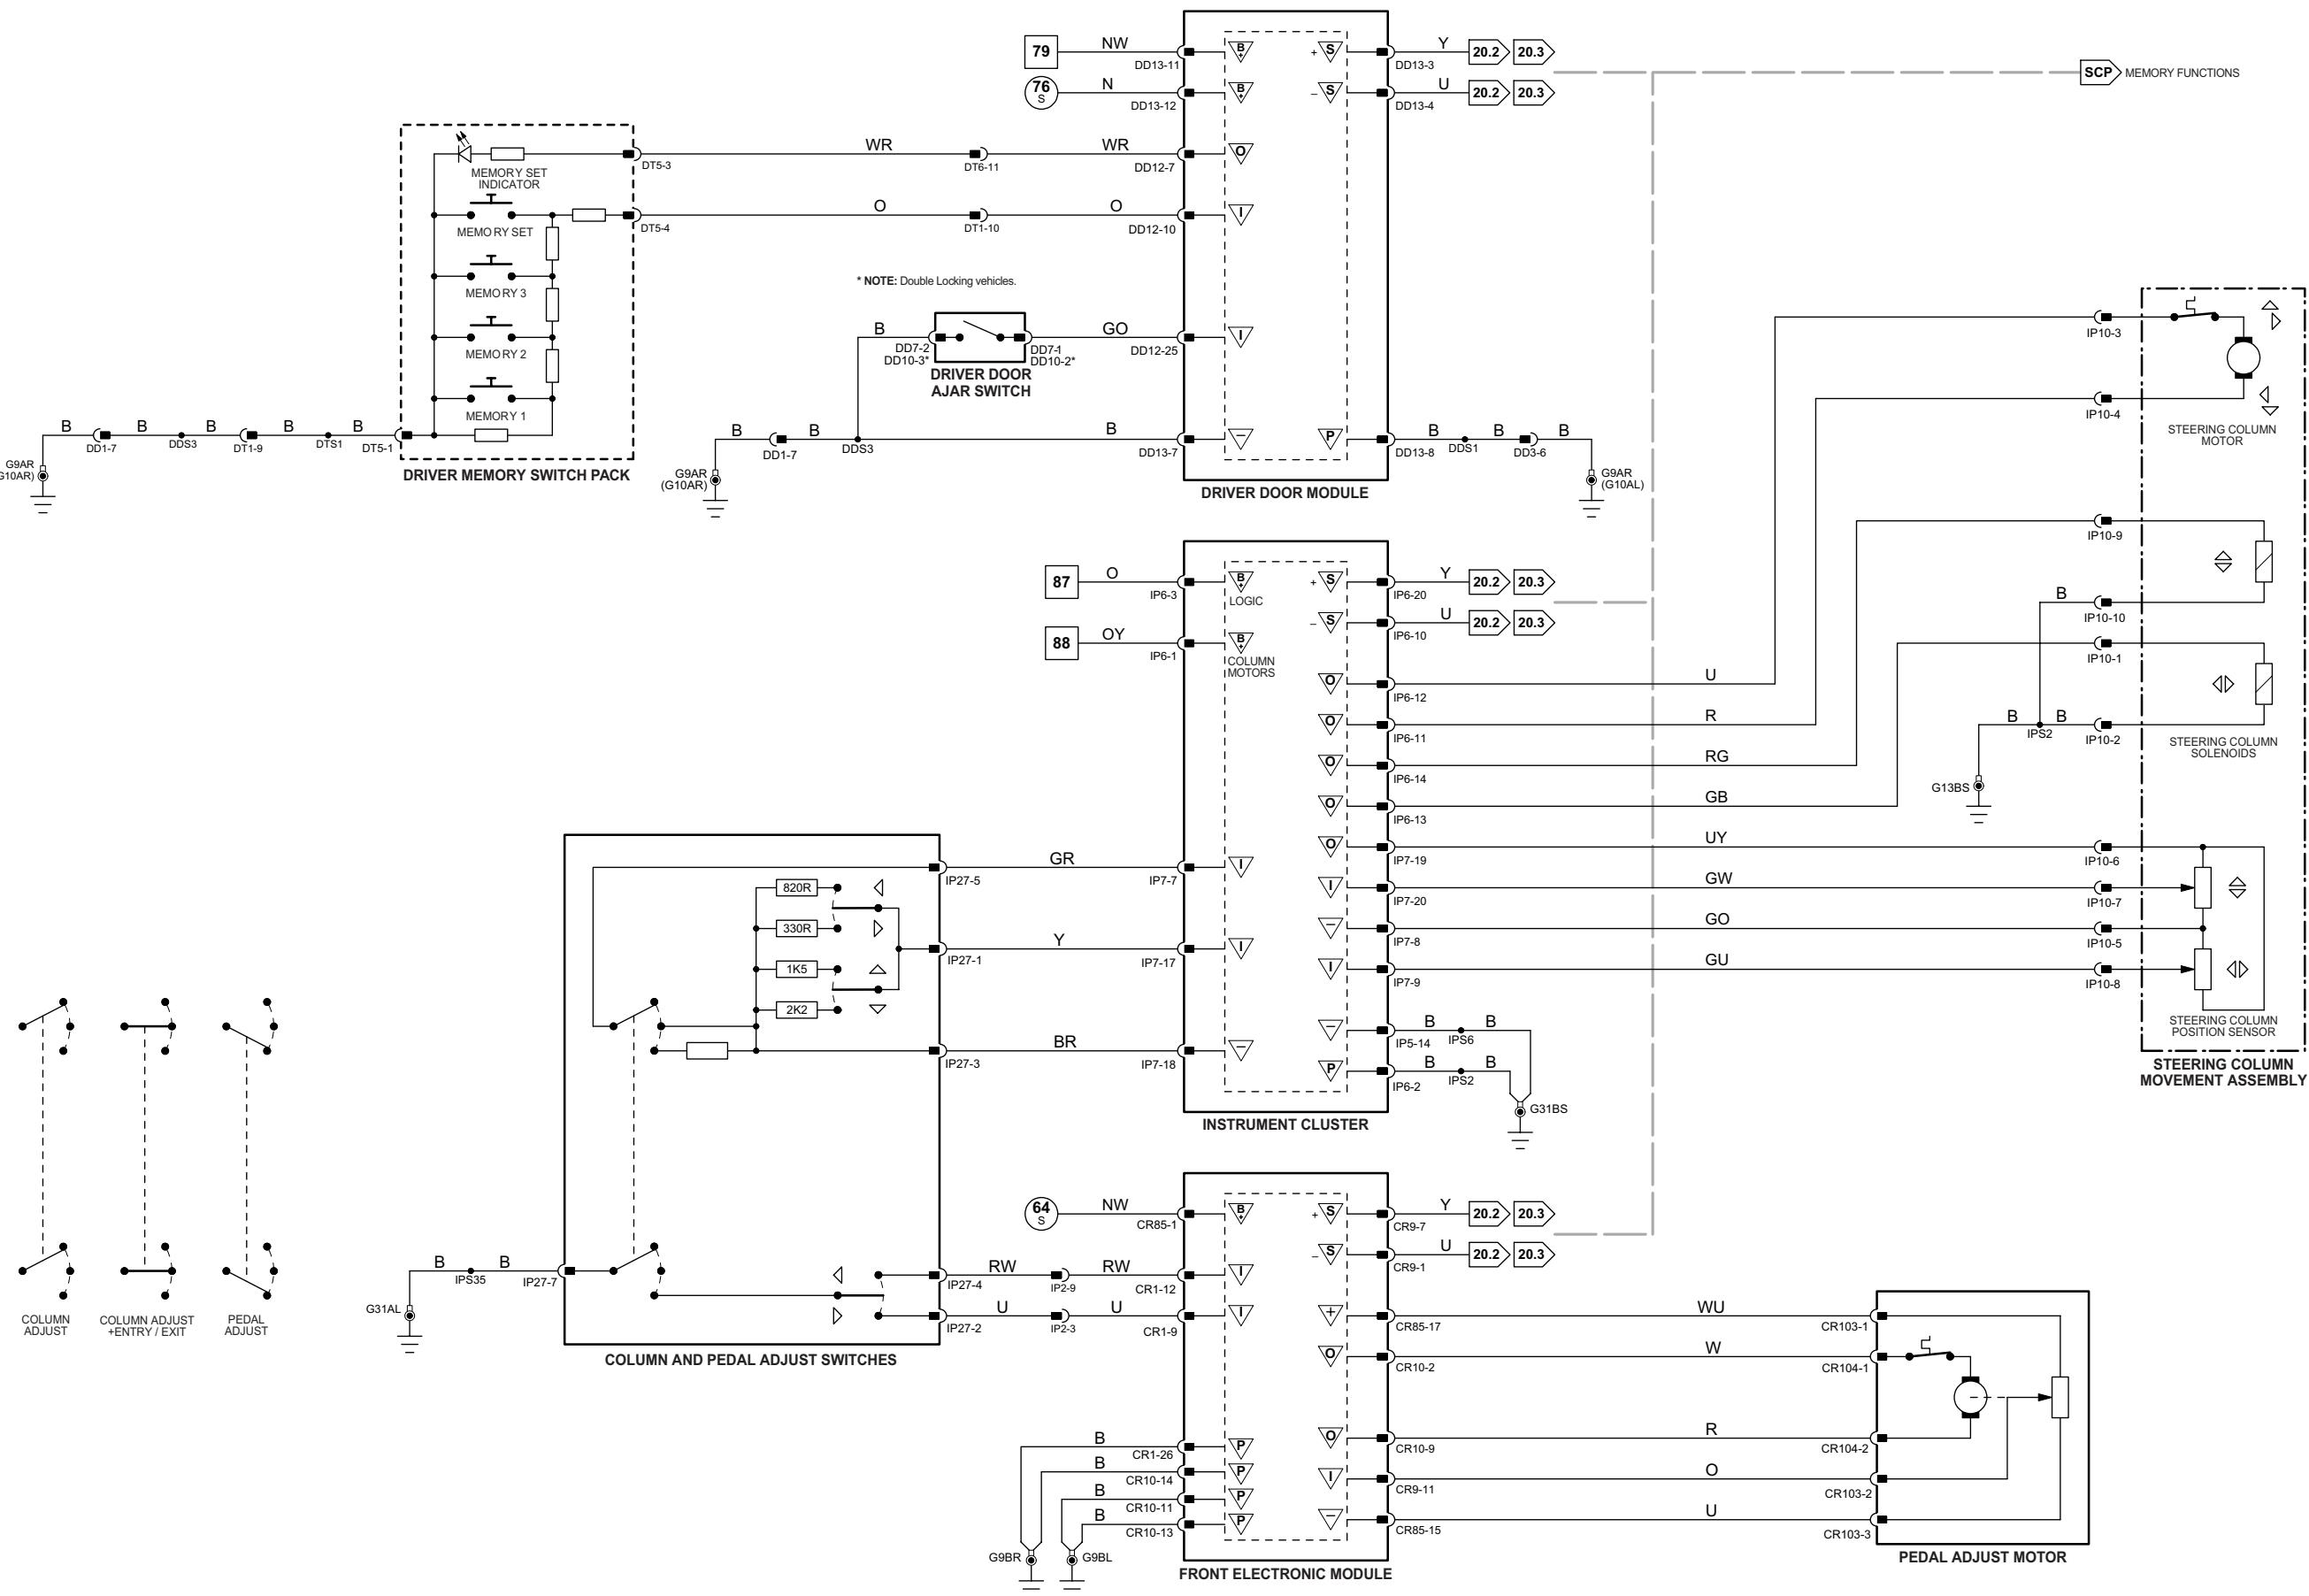

f10\_1\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	O Power Ground	Sensor/Signal Ground	C CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

## Driver Door Module

Pin	Description and Characteristic
O DD11-1	DRIVER DOOR MIRROR DRIVE – LEFT: TO ACTIVATE, DDCM SWITCHES CIRCUIT TO B+
O DD11-2	DRIVER DOOR MIRROR DRIVE – RIGHT: TO ACTIVATE, DDCM SWITCHES CIRCUIT TO B+
O DD11-3	DRIVER DOOR MIRROR DRIVE – UP: TO ACTIVATE, DDCM SWITCHES CIRCUIT TO B+
O DD11-4	DRIVER DOOR MIRROR DRIVE – DOWN: TO ACTIVATE, DDCM SWITCHES CIRCUIT TO B+
SS DD11-5	DRIVER DOOR MIRROR POSITION SENSORS SIGNAL SUPPLY VOLTAGE: B+
I DD11-14	DRIVER DOOR MIRROR LEFT / RIGHT POSITION FEEDBACK SIGNAL: VARIABLE VOLTAGE
I DD11-15	DRIVER DOOR MIRROR UP / DOWN POSITION FEEDBACK SIGNAL: VARIABLE VOLTAGE
SG DD11-19	DRIVER DOOR MIRROR POSITION SENSORS SIGNAL GROUND: GROUND
I DD12-2	RH MIRROR MOVEMENT SELECT SIGNAL: GROUND WHEN SELECTED
I DD12-3	LH MIRROR MOVEMENT SELECT SIGNAL: GROUND WHEN SELECTED
O DD12-7	MEMORY SET INDICATOR ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
I DD12-8	MIRROR FOLD FLAT SWITCH SIGNAL: GROUND WHEN SELECTED
I DD12-10	MEMORY 1, 2, 3, SET INPUT SIGNAL: VARIABLE RESISTANCE
I DD12-14	MIRROR UP SWITCH SIGNAL: GROUND WHEN SELECTED
I DD12-15	MIRROR DOWN SWITCH SIGNAL: GROUND WHEN SELECTED
I DD12-16	MIRROR LEFT SWITCH SIGNAL: GROUND WHEN SELECTED
I DD12-17	MIRROR RIGHT SWITCH SIGNAL: GROUND WHEN SELECTED
S DD13-3	SCP NETWORK +
S DD13-4	SCP NETWORK –
O DD13-5	DRIVER DOOR MIRROR FOLD FLAT: IN-TO-OUT: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
O DD13-6	DRIVER DOOR MIRROR FOLD FLAT: OUT-TO-IN: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
SG DD13-7	LOGIC GROUND: GROUND
PG DD13-8	POWER GROUND: GROUND
B+ DD13-11	BATTERY POWER SUPPLY: LOGIC: B+
B+ DD13-12	SWITCHED SYSTEM POWER SUPPLY: B+

## Front Electronic Module

Pin	Description and Characteristic
I CR1-7	PASSENGER DOOR MIRROR LEFT / RIGHT POSITION FEEDBACK SIGNAL: VARIABLE VOLTAGE
SS CR1-8	PASSENGER DOOR MIRROR POSITION SENSORS SIGNAL SUPPLY VOLTAGE: B+
I CR1-11	PASSENGER DOOR MIRROR UP / DOWN POSITION FEEDBACK SIGNAL: VARIABLE VOLTAGE
O CR1-20	PASSENGER DOOR MIRROR DRIVE – UP: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
O CR1-21	PASSENGER DOOR MIRROR DRIVE – DOWN: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
SG CR1-22	PASSENGER DOOR MIRROR POSITION SENSORS SIGNAL: GROUND
O CR1-23	PASSENGER DOOR MIRROR DRIVE – LEFT: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
O CR1-24	PASSENGER DOOR MIRROR DRIVE – RIGHT: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
PG CR1-26	POWER GROUND: GROUND
S CR9-1	SCP –
S CR9-7	SCP +
PG CR10-11	POWER GROUND: GROUND
PG CR10-13	POWER GROUND: GROUND
PG CR10-14	POWER GROUND: GROUND
B+ CR85-1	SWITCHED SYSTEM POWER SUPPLY: B+

## Rear Electronic Module

Pin	Description and Characteristic
B+ CR4-3	BATTERY POWER SUPPLY (LOGIC): B+
SG CR11-12	LOGIC GROUND: GROUND
O CR11-18	REVERSE GEAR SIGNAL (DIM REQUEST): TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
S CR13-1	SCP –
S CR13-2	SCP +

Fig. 10.2

## COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR MIRROR – DRIVER	DD9	22-WAY / DARK GREY	DRIVER DOOR
DOOR MIRROR – PASSENGER	PD9	22-WAY / DARK GREY	PASSENGER DOOR
DOOR SWITCH PACK – DRIVER	DT4	20-WAY / BLACK	DRIVER DOOR TRIM
DRIVER DOOR MODULE	DD11	20-WAY / BLACK	DRIVER DOOR
ELECTROCHROMIC REAR VIEW MIRROR AND COMPASS	DD12	26-WAY / NATURAL	FORWARD OF ROOF CONSOLE
FRONT ELECTRONIC MODULE	DD13	12-WAY / BLACK	CABIN / LH 'A' POST
MEMORY SWITCH PACK – DRIVER	RF7	8-WAY / BLACK	CABIN / RH 'A' POST
REAR ELECTRONIC MODULE	CR1	26-WAY / BLACK	TRUNK / RH REAR
	CR9	12-WAY / BLACK	
	CR10	17-WAY / BLACK	
	CR85	20-WAY / BLACK	
	EC36	22-WAY / BLACK	
	DT5	8-WAY / BLACK	DRIVER DOOR TRIM
	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
DT6	16-WAY / BLUE / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST

## GROUNDS

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G10	CABIN / RH 'A' POST
G17	CABIN / BELOW REAR SEAT / RH SIDE
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

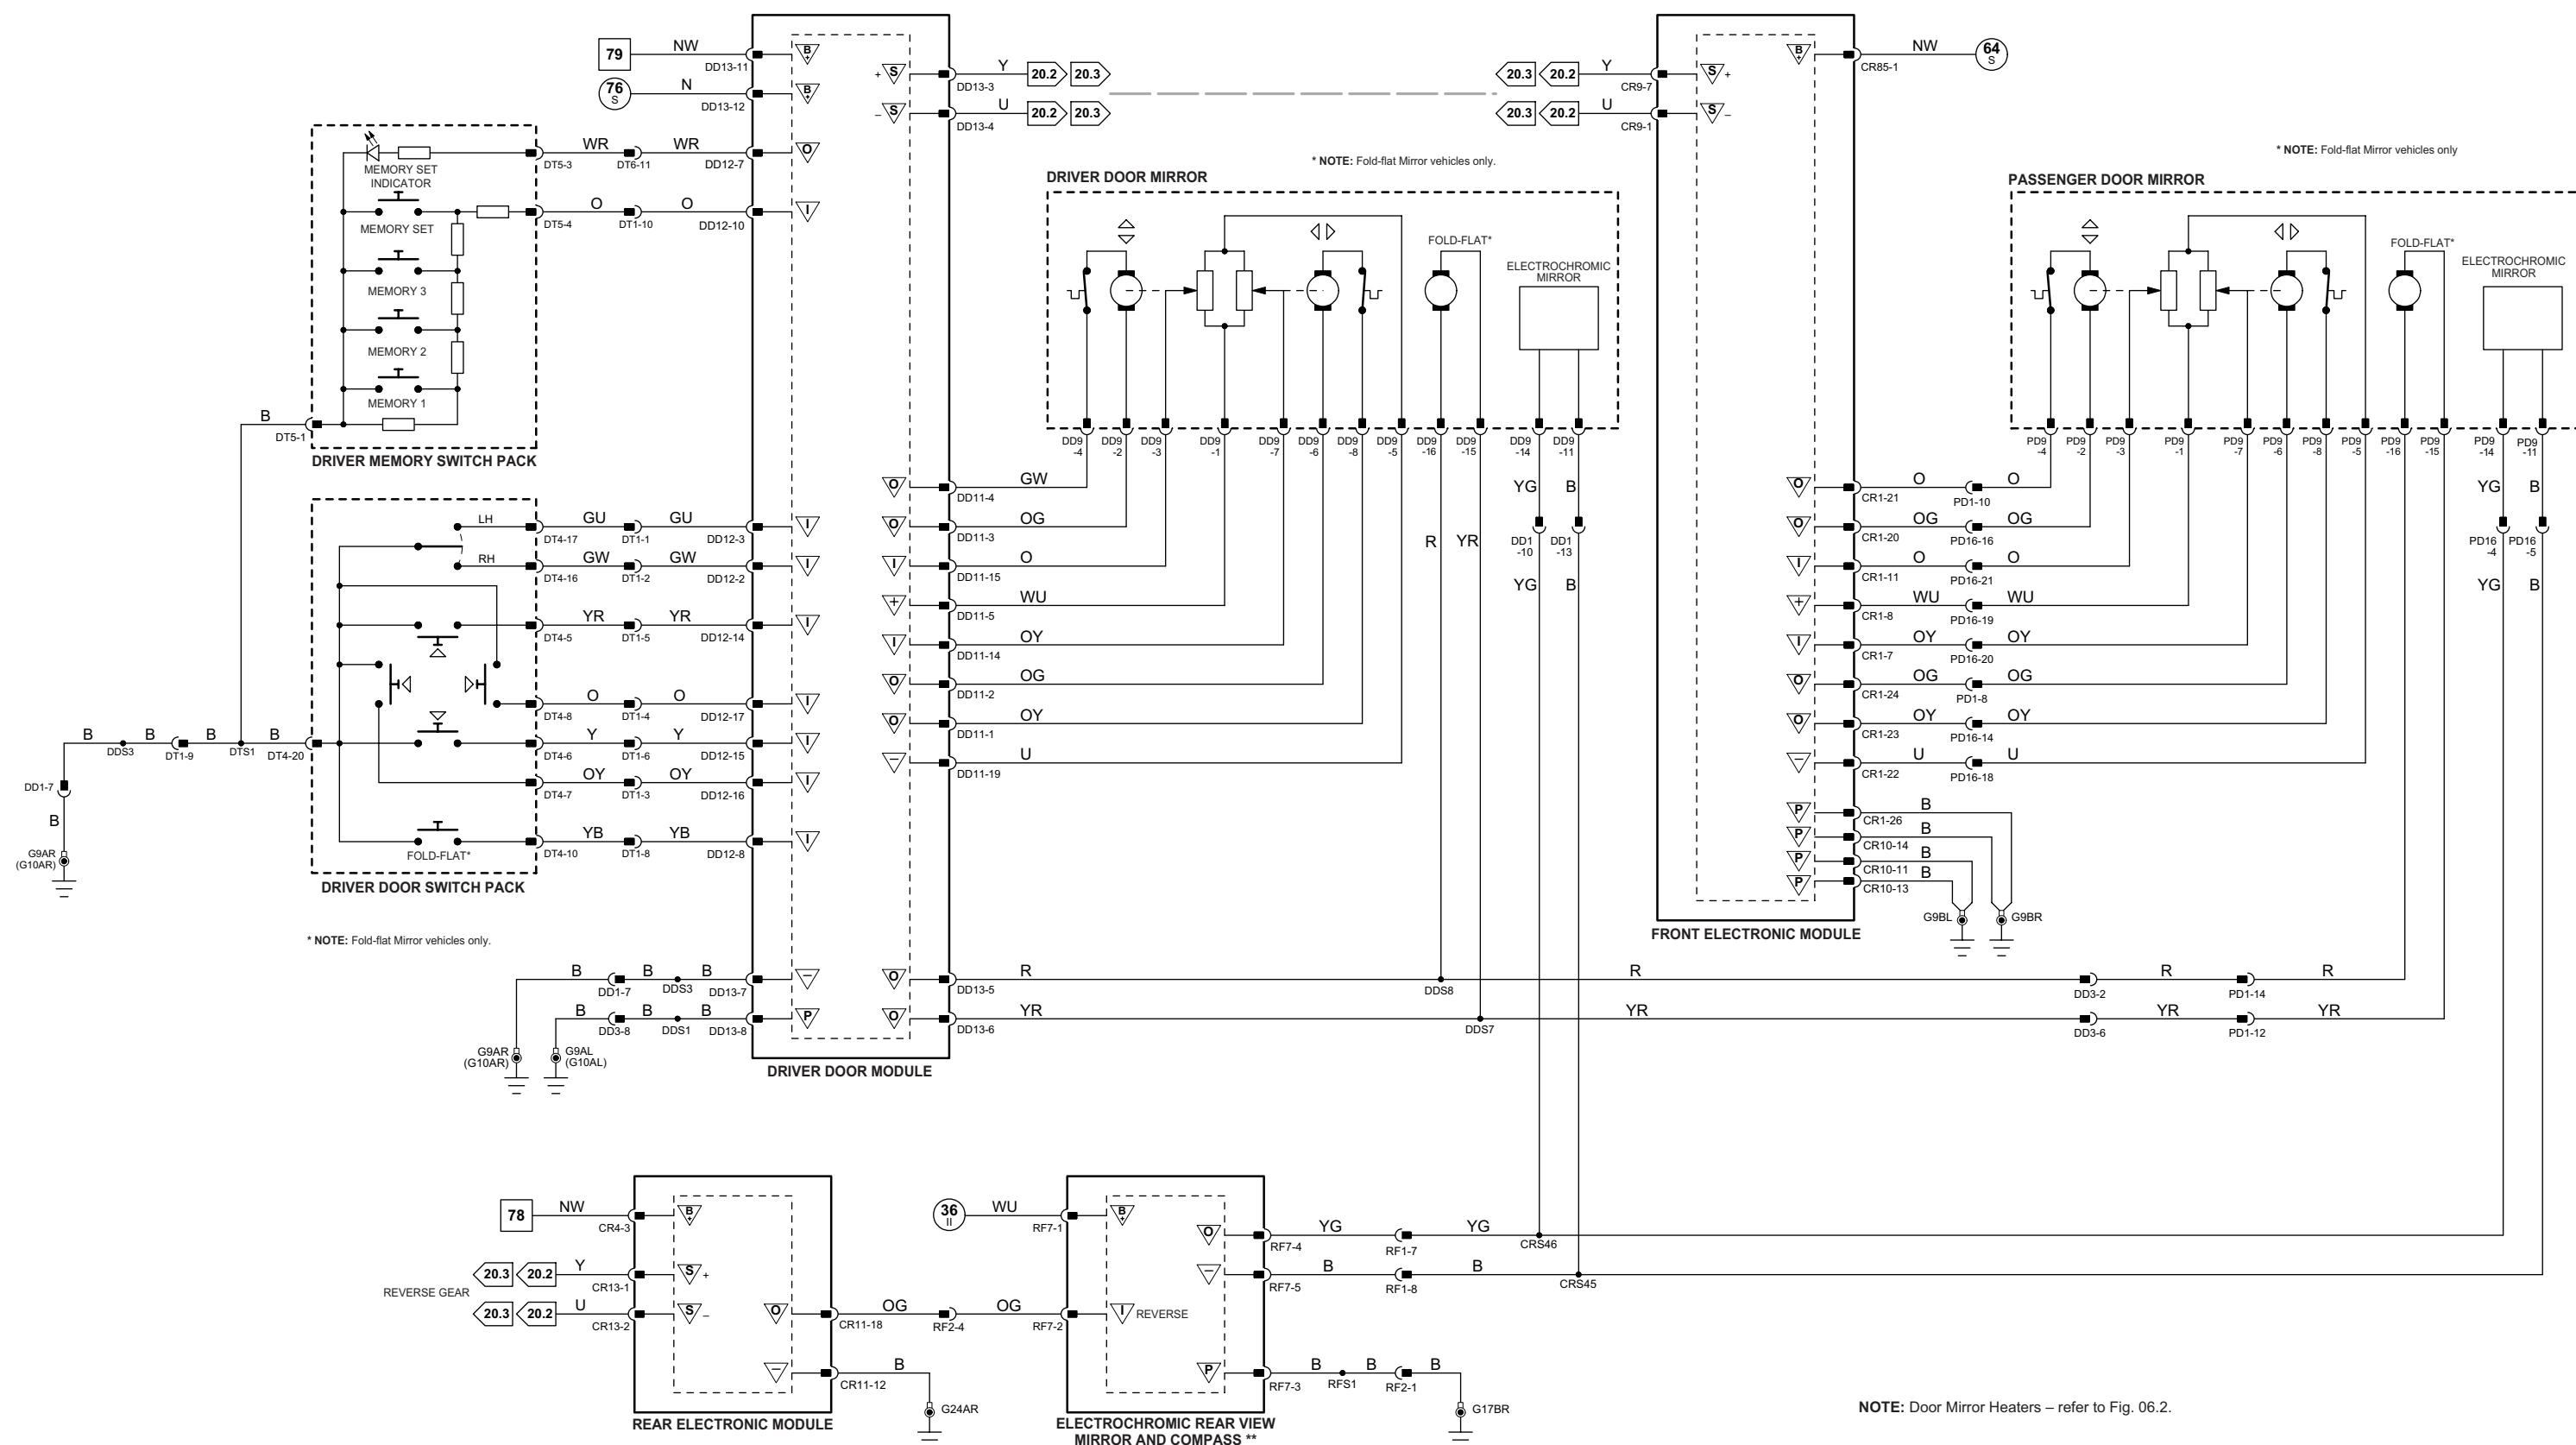

NOTE: Door Mirror Heaters – refer to Fig. 06.2.

f10\_2\_35008

1 → 6	Fig. 01.1	72 → 97	Fig. 01.3	16 → 53	Fig. 01.5	78 → 105	Fig. 01.7	Input	B	Battery Voltage	+	Sensor/Signal Supply V	A	ACP	S	SCP	VARIANT: All Vehicles
7 → 71	Fig. 01.2	1 → 15	Fig. 01.4	53 → 77	Fig. 01.6	106 → 143	Fig. 01.8	Output	○	Power Ground	▽	Sensor/Signal Ground	C	CAN	D	Serial and Encoded Data	VIN RANGE: All
												G	G17BR			DATE OF ISSUE: May 2007	

#### Driver Door Module

Pin	Description and Characteristic
O DD12-7	MEMORY SET INDICATOR ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
I DD12-10	MEMORY 1, 2, 3, SET INPUT SIGNAL: VARIABLE RESISTANCE
S DD13-3	SCP NETWORK +
S DD13-4	SCP NETWORK -
O DD13-8	POWER GROUND: GROUND
B+ DD13-11	BATTERY POWER SUPPLY: LOGIC: B+

#### Driver Seat Module

Pin	Description and Characteristic
S SD2-1	SCP+
I SD2-4	SEAT CUSHION FRONT RAISE REQUEST: ACTIVE = B+
I SD2-5	SEAT CUSHION FRONT LOWER REQUEST: ACTIVE = B+
I SD2-10	SEAT BACK RECLINE REARWARD REQUEST: ACTIVE = B+
I SD2-11	SEAT BACK RECLINE FORWARD REQUEST: ACTIVE = B+
S SD2-12	SCP-
I SD2-15	HEAD REST RAISE REQUEST: ACTIVE = B+
I SD2-16	HEADREST LOWER REQUEST: ACTIVE = B+
I SD2-17	SEAT RAISE REQUEST: ACTIVE = B+
I SD2-18	SEAT LOWER REQUEST: ACTIVE = B+
I SD2-19	SEAT FORWARD REQUEST: ACTIVE = B+
I SD2-20	SEAT REARWARD REQUEST: ACTIVE = B+
O SD3-1	SEAT HEIGHT MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD3-2	SEAT HEIGHT MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
PG SD3-5	POWER GROUND: GROUND
B+ SD3-6	BATTERY POWER SUPPLY: B+
I SD4-7	SEAT CUSHION FRONT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-8	SEAT HEIGHT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-9	HEADREST POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-10	SEAT BACK RECLINE POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
SG SD4-11	SIGNAL GROUND: GROUND
B+ SD4-13	BATTERY POWER SUPPLY – LOGIC: B+
I SD4-22	SEAT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
SG SD4-25	SIGNAL GROUND: GROUND
SG SD4-26	LOGIC GROUND: GROUND
O SD24-1	SEAT POSITION MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD24-2	SEAT POSITION MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD26-3	SEAT BACK RECLINE MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD26-4	SEAT BACK RECLINE MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
PG SD27-1	POWER GROUND: GROUND
B+ SD27-2	BATTERY POWER SUPPLY: B+
O SD27-3	HEADREST POSITION MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-4	HEADREST POSITION MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-5	SEAT CUSHION FRONT MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-6	SEAT CUSHION FRONT MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+

Fig. 11.1

#### COMPONENTS

Component	Connector(s)	Connector Description	Location
DRIVER DOOR MODULE	DD11 DD12 DD13	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK	DRIVER DOOR
DRIVER SEAT MODULE	SD2 SD3 SD4 SD24 SD26 SD27 DT5 SD6 SD12 SD8 SD9 SD13 SD34 SD5 SD29	22-WAY / BLACK 6-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK 8-WAY / BLACK 5-WAY / BLACK 5-WAY / BLACK 5-WAY / BLACK 3-WAY / BLACK 12-WAY / BLACK 14-WAY / BLACK	UNDER DRIVER SEAT DRIVER DOOR TRIM DRIVER SEAT CUSHION / UNDER DRIVER SEAT CUSHION / UNDER DRIVER SEAT CUSHION / UNDER DRIVER SEAT BACK / UPPER DRIVER SEAT BACK / LOWER DRIVER SEAT BACK / LOWER DRIVER SEAT / OUTBOARD
MEMORY SWITCH PACK – DRIVER	DT5	8-WAY / BLACK	DRIVER DOOR TRIM
SEAT CUSHION FRONT RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER	SD6	5-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT CUSHION REAR RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER	SD12	5-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT FORE / AFT MOTOR AND POSITION SENSOR – DRIVER	SD8	5-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT HEADREST MOTOR AND POSITION SENSOR – DRIVER	SD9	5-WAY / BLACK	DRIVER SEAT BACK / UPPER
SEAT INCLINE / RECLINE MOTOR AND POSITION SENSOR – DRIVER	SD13	5-WAY / BLACK	DRIVER SEAT BACK / LOWER
SEAT LUMBAR PUMP – 12-WAY SEAT – DRIVER	SD34	3-WAY / BLACK	DRIVER SEAT BACK / LOWER
SEAT SWITCH PACK – DRIVER	SD5	12-WAY / BLACK	DRIVER SEAT / OUTBOARD
	SD29	14-WAY / BLACK	

#### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
DD1	22-WAY / GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
DT6	16-WAY / BLUE / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT

#### GROUNDS

Ground	Location
G9	CABIN / UPPER LH A POST
G10	CABIN / RH 'A' POST
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

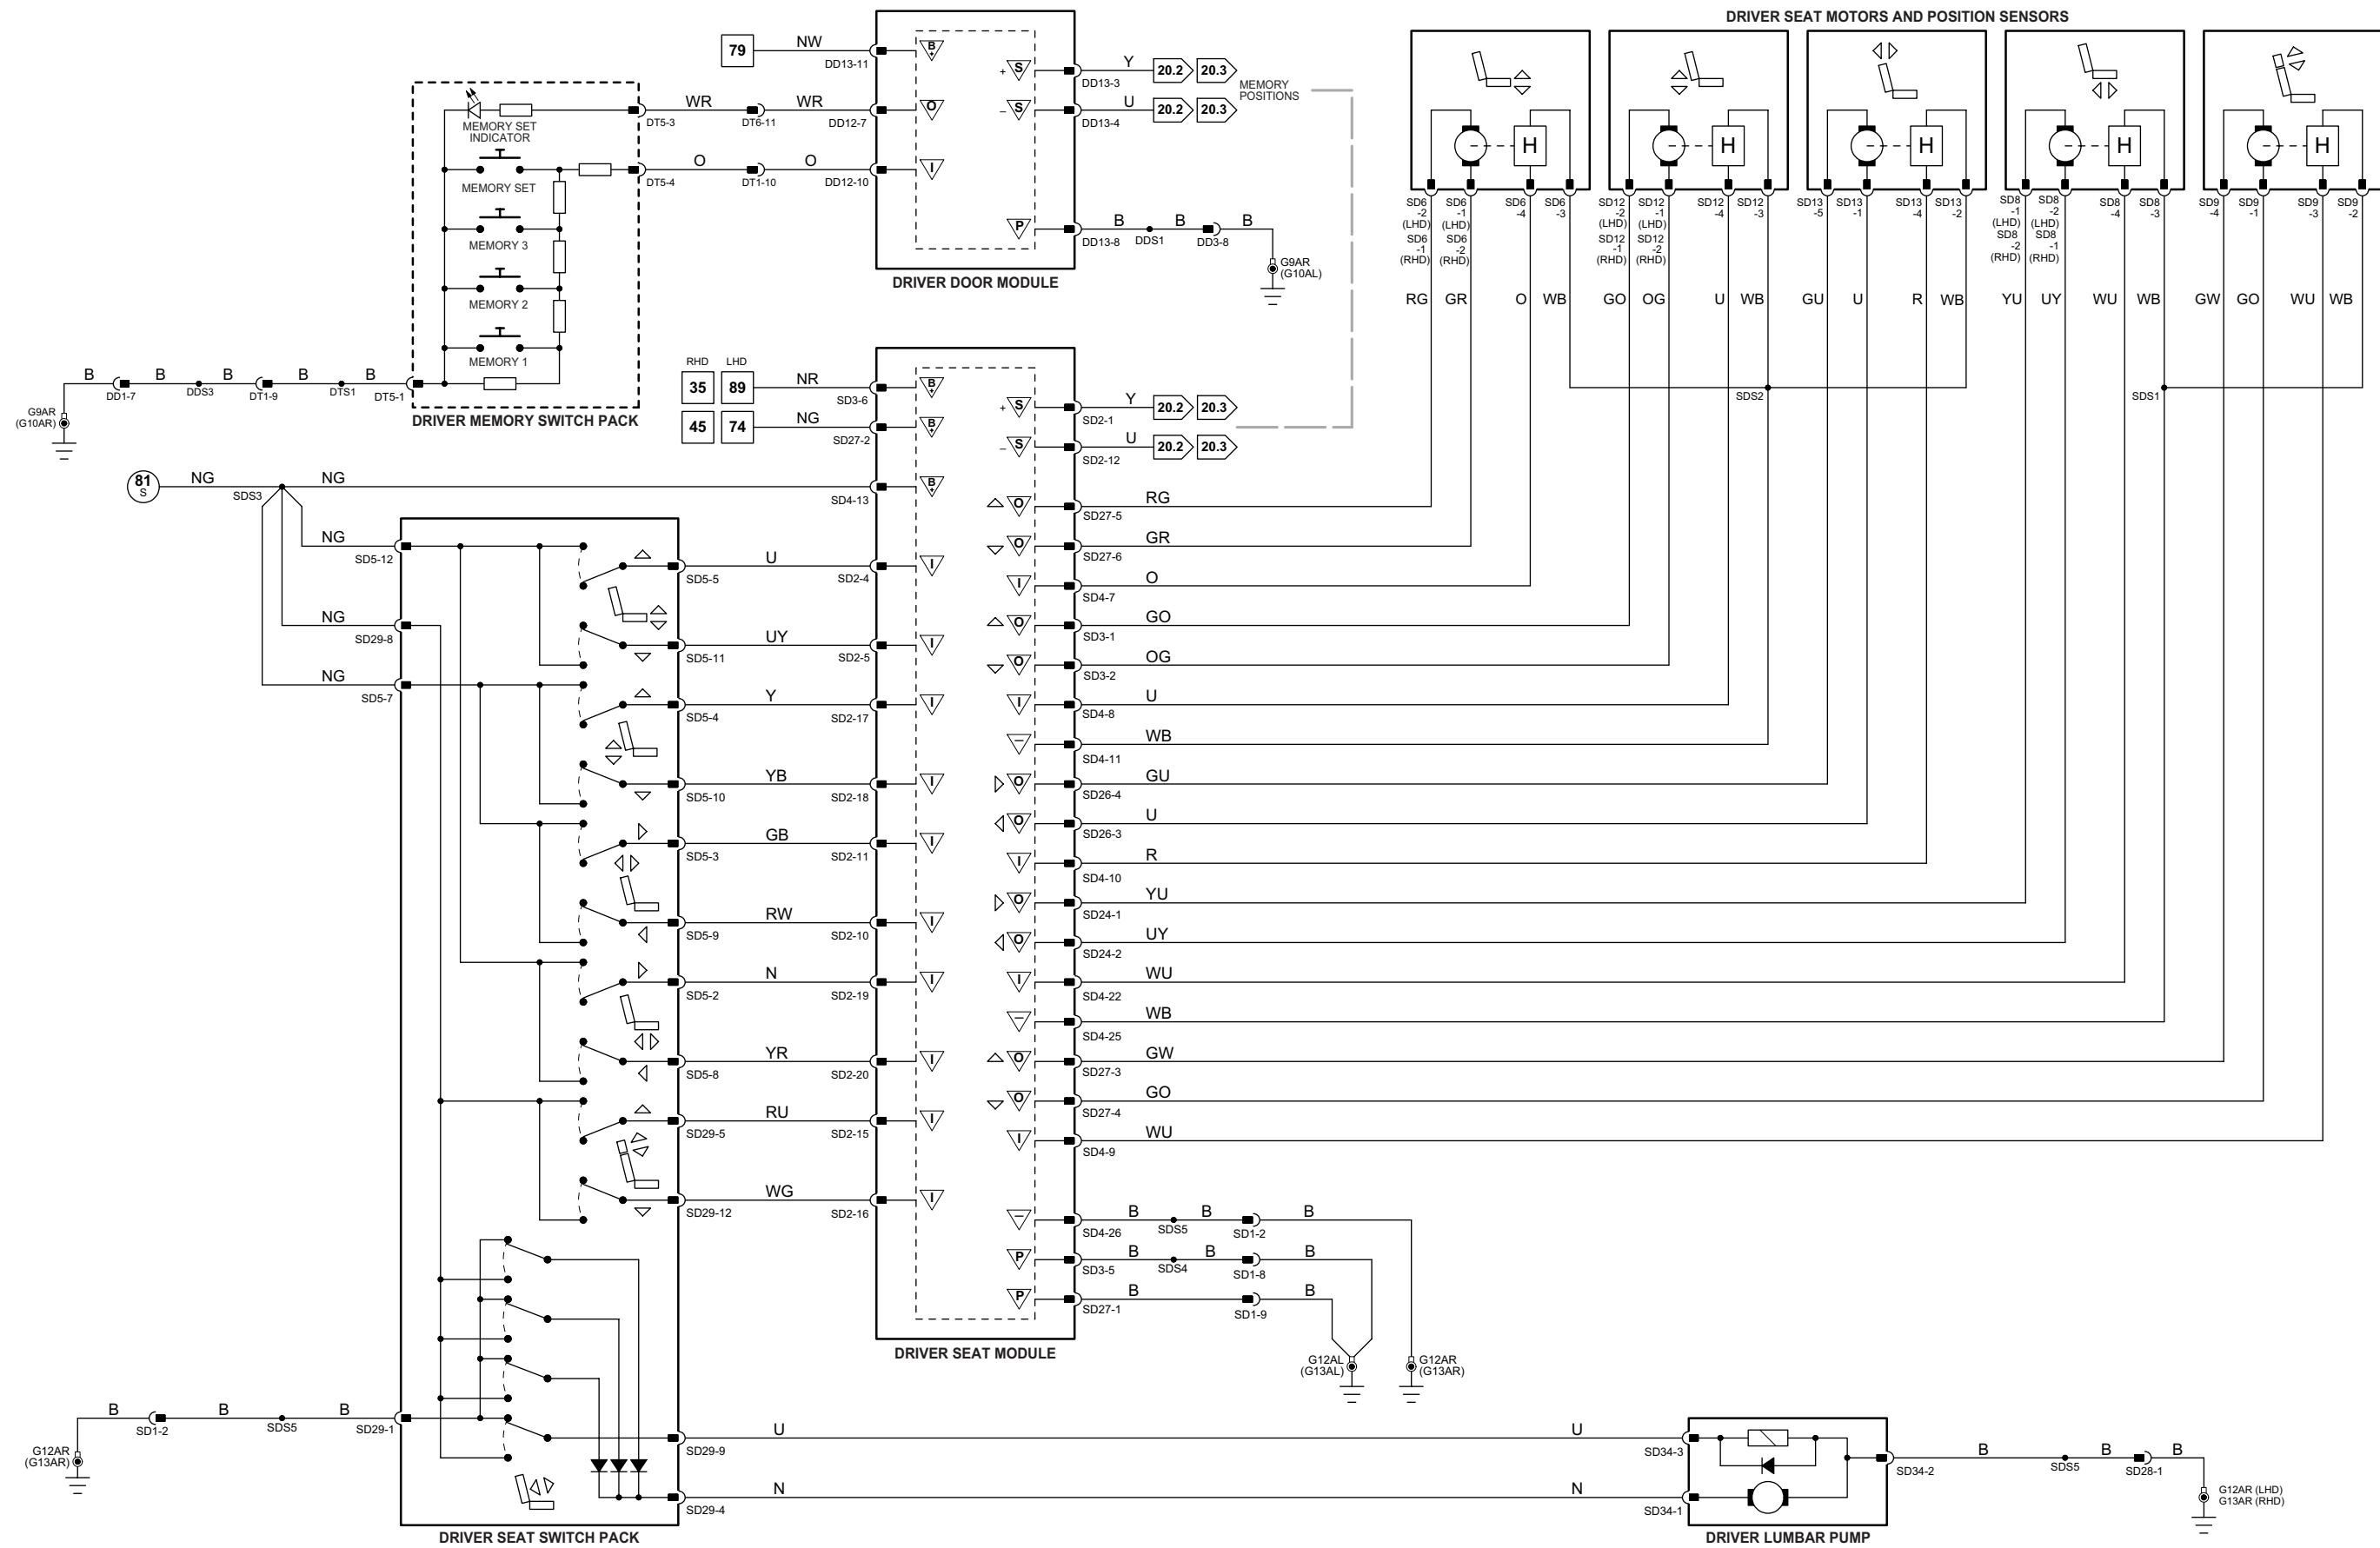

f11\_1\_35008

**Driver Seat Module**

Pin	Description and Characteristic
S SD2-1	SCP+
I SD2-4	SEAT CUSHION FRONT RAISE REQUEST: ACTIVE = B+
I SD2-5	SEAT CUSHION FRONT LOWER REQUEST: ACTIVE = B+
I SD2-10	SEAT BACK RECLINE REARWARD REQUEST: ACTIVE = B+
I SD2-11	SEAT BACK RECLINE FORWARD REQUEST: ACTIVE = B+
S SD2-12	SCP -
I SD2-15	HEAD REST RAISE REQUEST: ACTIVE = B+
I SD2-16	HEADREST LOWER REQUEST: ACTIVE = B+
I SD2-17	SEAT RAISE REQUEST: ACTIVE = B+
I SD2-18	SEAT LOWER REQUEST: ACTIVE = B+
I SD2-19	SEAT FORWARD REQUEST: ACTIVE = B+
I SD2-20	SEAT REARWARD REQUEST: ACTIVE = B+
I SD2-21	SEAT CUSHION EXTEND REARWARD REQUEST: ACTIVE = B+
I SD2-22	SEAT CUSHION EXTEND FORWARD REQUEST: ACTIVE = B+
O SD3-1	SEAT HEIGHT MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD3-2	SEAT HEIGHT MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
PG SD3-5	POWER GROUND: GROUND
B+ SD3-6	BATTERY POWER SUPPLY: B+
I SD4-7	SEAT CUSHION FRONT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-8	SEAT HEIGHT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-9	HEADREST POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-10	SEAT BACK RECLINE POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
SG SD4-11	SIGNAL GROUND: GROUND
SG SD4-12	SIGNAL GROUND: GROUND
B+ SD4-13	BATTERY POWER SUPPLY – LOGIC: B+
I SD4-22	SEAT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I SD4-23	SEAT CUSHION EXTEND POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
SG SD4-25	SIGNAL GROUND: GROUND
SG SD4-26	LOGIC GROUND: GROUND
O SD24-1	SEAT POSITION MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD24-2	SEAT POSITION MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD24-3	SEAT CUSHION EXTEND MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD24-4	SEAT CUSHION EXTEND MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD26-3	SEAT BACK RECLINE MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD26-4	SEAT BACK RECLINE MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
PG SD27-1	POWER GROUND: GROUND
B+ SD27-2	BATTERY POWER SUPPLY: B+
O SD27-3	HEADREST POSITION MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-4	HEADREST POSITION MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-5	SEAT CUSHION FRONT MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O SD27-6	SEAT CUSHION FRONT MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+

**Fig. 11.2**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
DRIVER SEAT MODULE	SD2	22-WAY / BLACK	UNDER DRIVER SEAT
SEAT CUSHION EXTEND MOTOR AND POSITION SENSOR – DRIVER	SD3	6-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT CUSHION FRONT RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER	SD4	26-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT CUSHION REAR RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER	SD24	4-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT FORWARD / AFT MOTOR AND POSITION SENSOR – DRIVER	SD26	4-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT HEADREST MOTOR AND POSITION SENSOR – DRIVER	SD27	6-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT INCLINE / RECLINE MOTOR AND POSITION SENSOR – DRIVER	SD7	5-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT LUMBAR PUMP – 16-WAY SEAT – DRIVER	SD8	5-WAY / BLACK	DRIVER SEAT CUSHION / UNDER
SEAT LUMBAR SOLENOIDS – DRIVER	SD9	5-WAY / BLACK	DRIVER SEAT BACK / UPPER
SEAT SWITCH PACK – DRIVER	SD12	5-WAY / BLACK	DRIVER SEAT BACK / LOWER
SEAT FORE / AFT MOTOR AND POSITION SENSOR – DRIVER	SD13	5-WAY / BLACK	DRIVER SEAT BACK / LOWER
SEAT HEADREST MOTOR AND POSITION SENSOR – DRIVER	SD32	3-WAY / BLACK	DRIVER SEAT BACK / LOWER
SEAT LUMBAR PUMP – 16-WAY SEAT – DRIVER	SD32	3-WAY / BLACK	DRIVER SEAT BACK / UPPER
SEAT SWITCH PACK – DRIVER	SD5	12-WAY / BLACK	DRIVER SEAT / OUTBOARD
SEAT CUSHION FRONT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL	SD29	14-WAY / BLACK	DRIVER SEAT / OUTBOARD

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT

**GROUNDS**

Ground	Location
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data


I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

**Fig. 11.2**

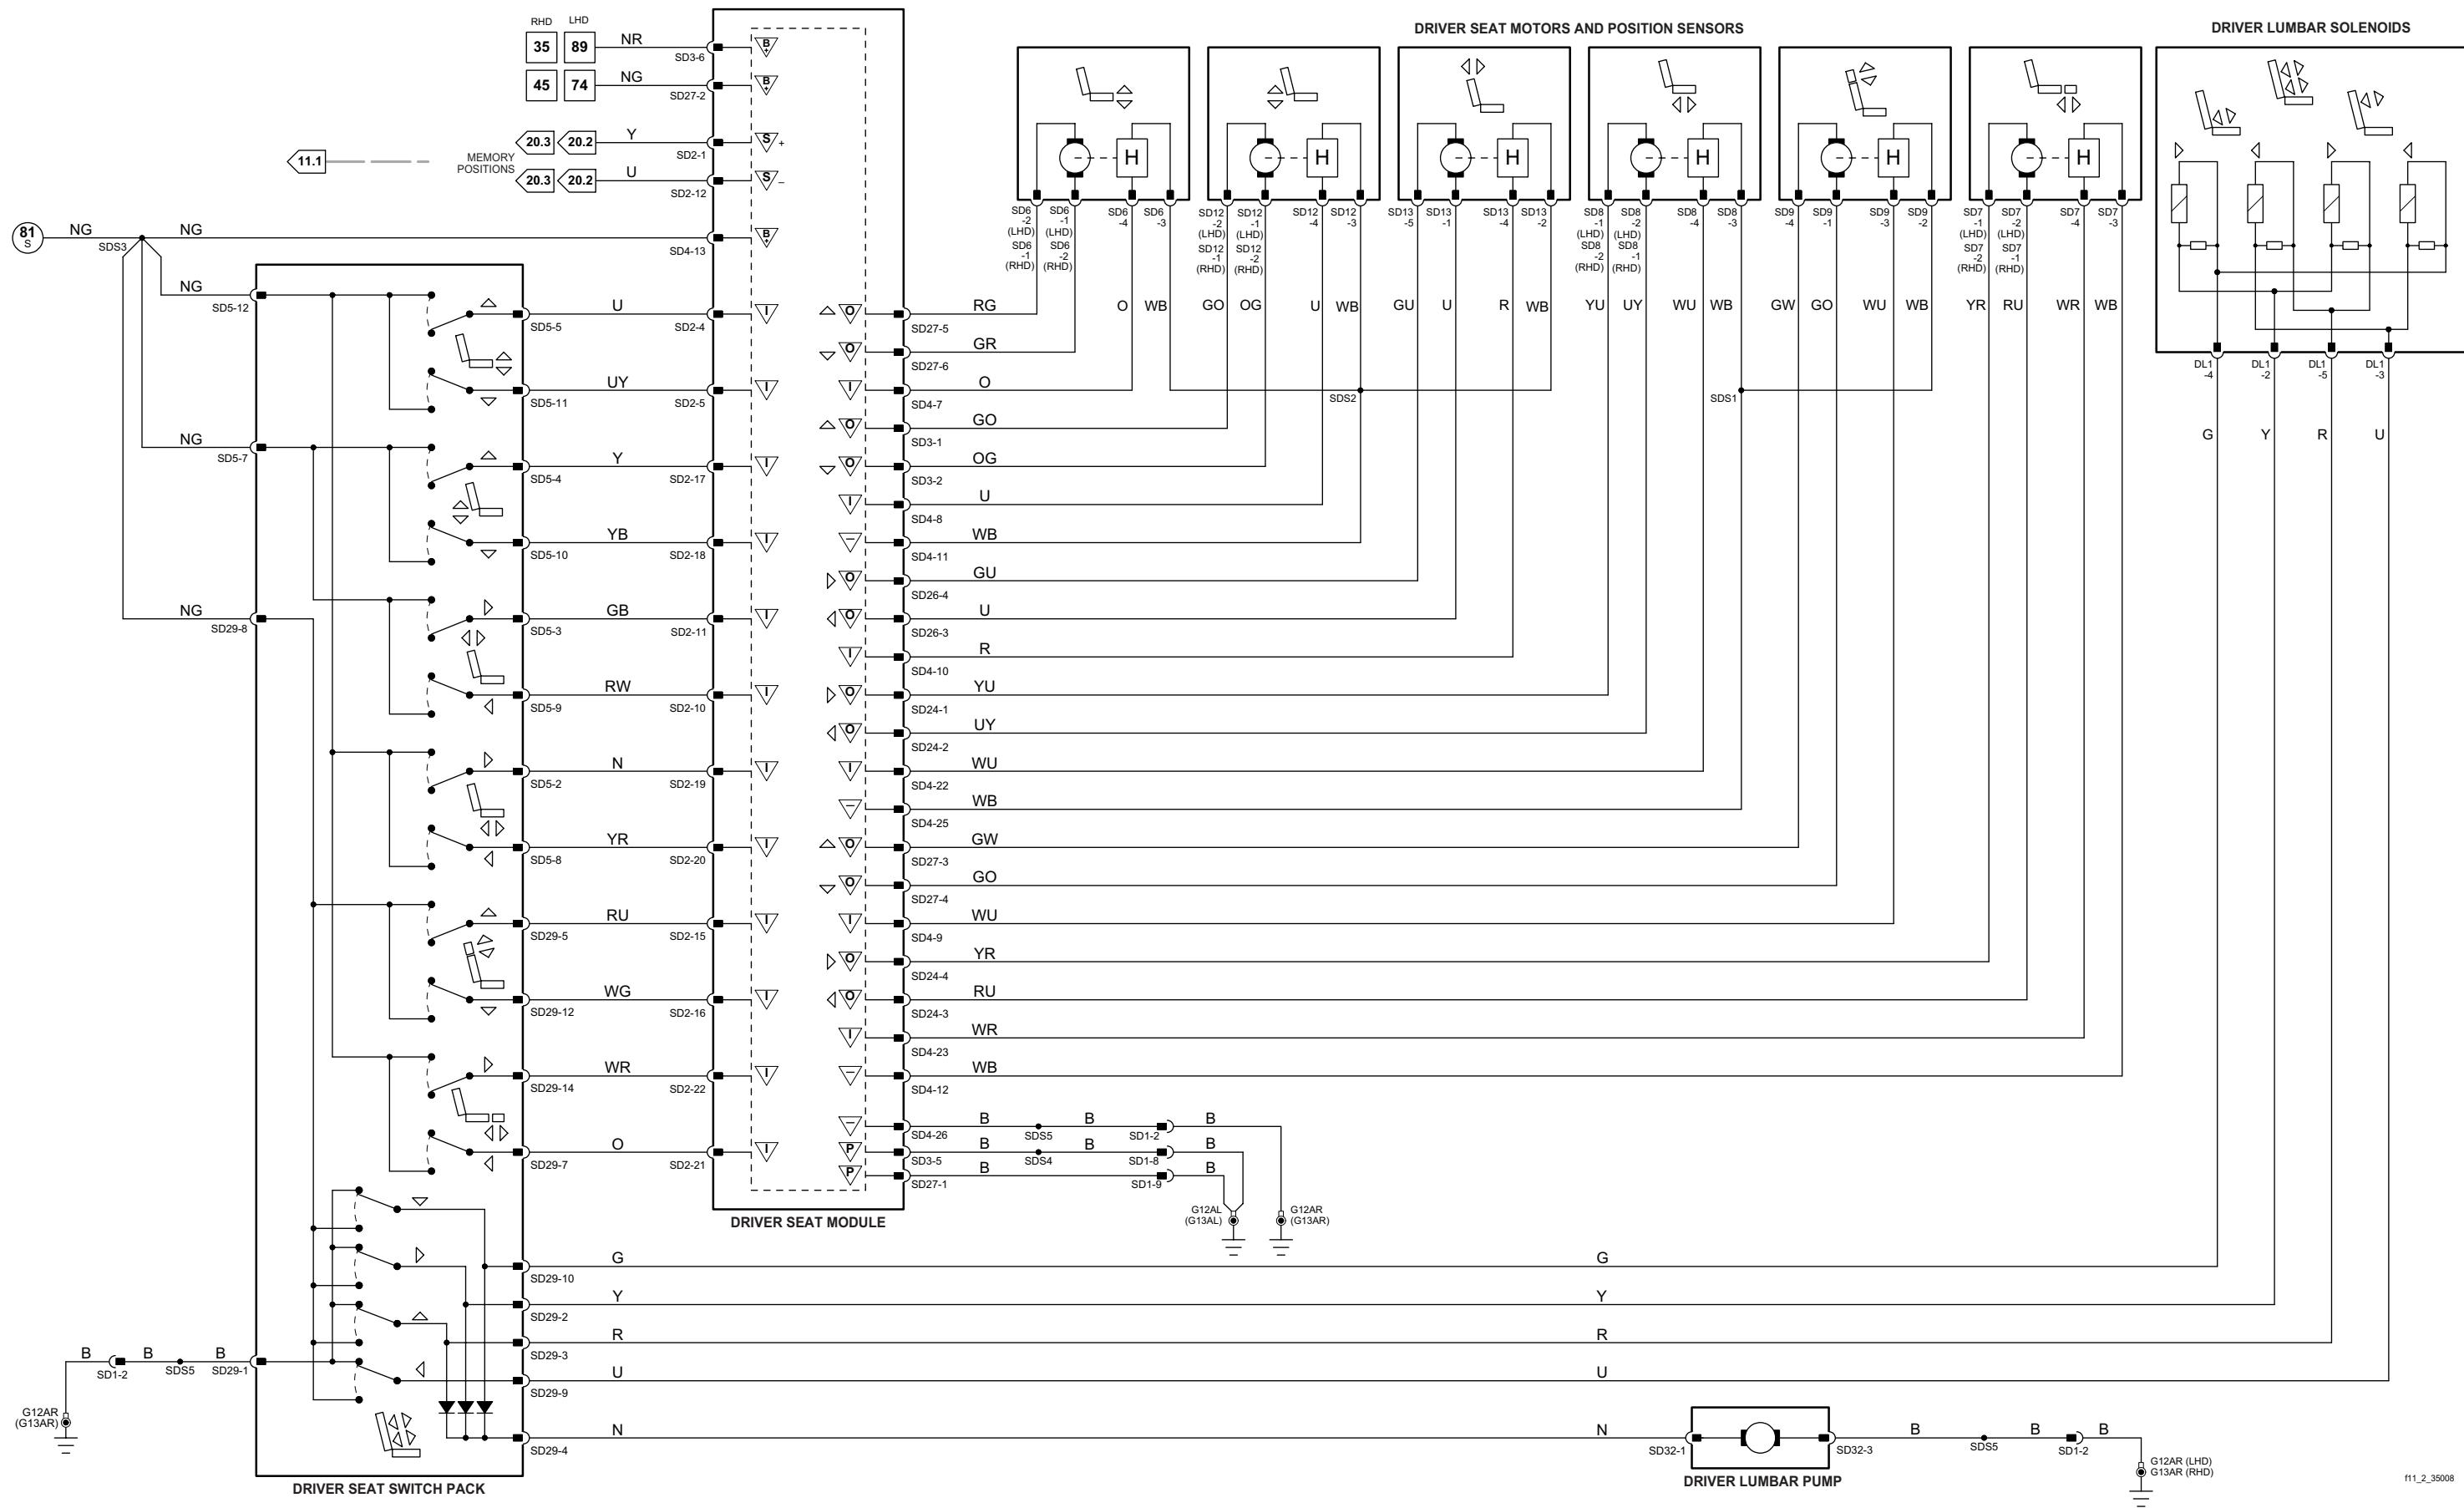

**Fig. 11.3**

**COMPONENTS**

<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
SEAT CUSHION FRONT RAISE / LOWER MOTOR – PASSENGER	SP6	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT CUSHION REAR RAISE / LOWER MOTOR – PASSENGER	SP12	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT FORE / AFT MOTOR – PASSENGER	SP8	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT HEADREST MOTOR – PASSENGER	SP9	5-WAY / BLACK	PASSENGER SEAT BACK / UPPER
SEAT INCLINE / RECLINE MOTOR – PASSENGER	SP13	5-WAY / BLACK	PASSENGER SEAT BACK / LOWER
SEAT LUMBAR PUMP – 12-WAY SEAT – PASSENGER	SP38	3-WAY / BLACK	PASSENGER SEAT BACK / LOWER
SEAT SWITCH PACK – PASSENGER	SP5	12-WAY / BLACK	PASSENGER SEAT / OUTBOARD
	SP24	14-WAY / BLACK	


**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT

**GROUNDS**

<b>Ground</b>	<b>Location</b>
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

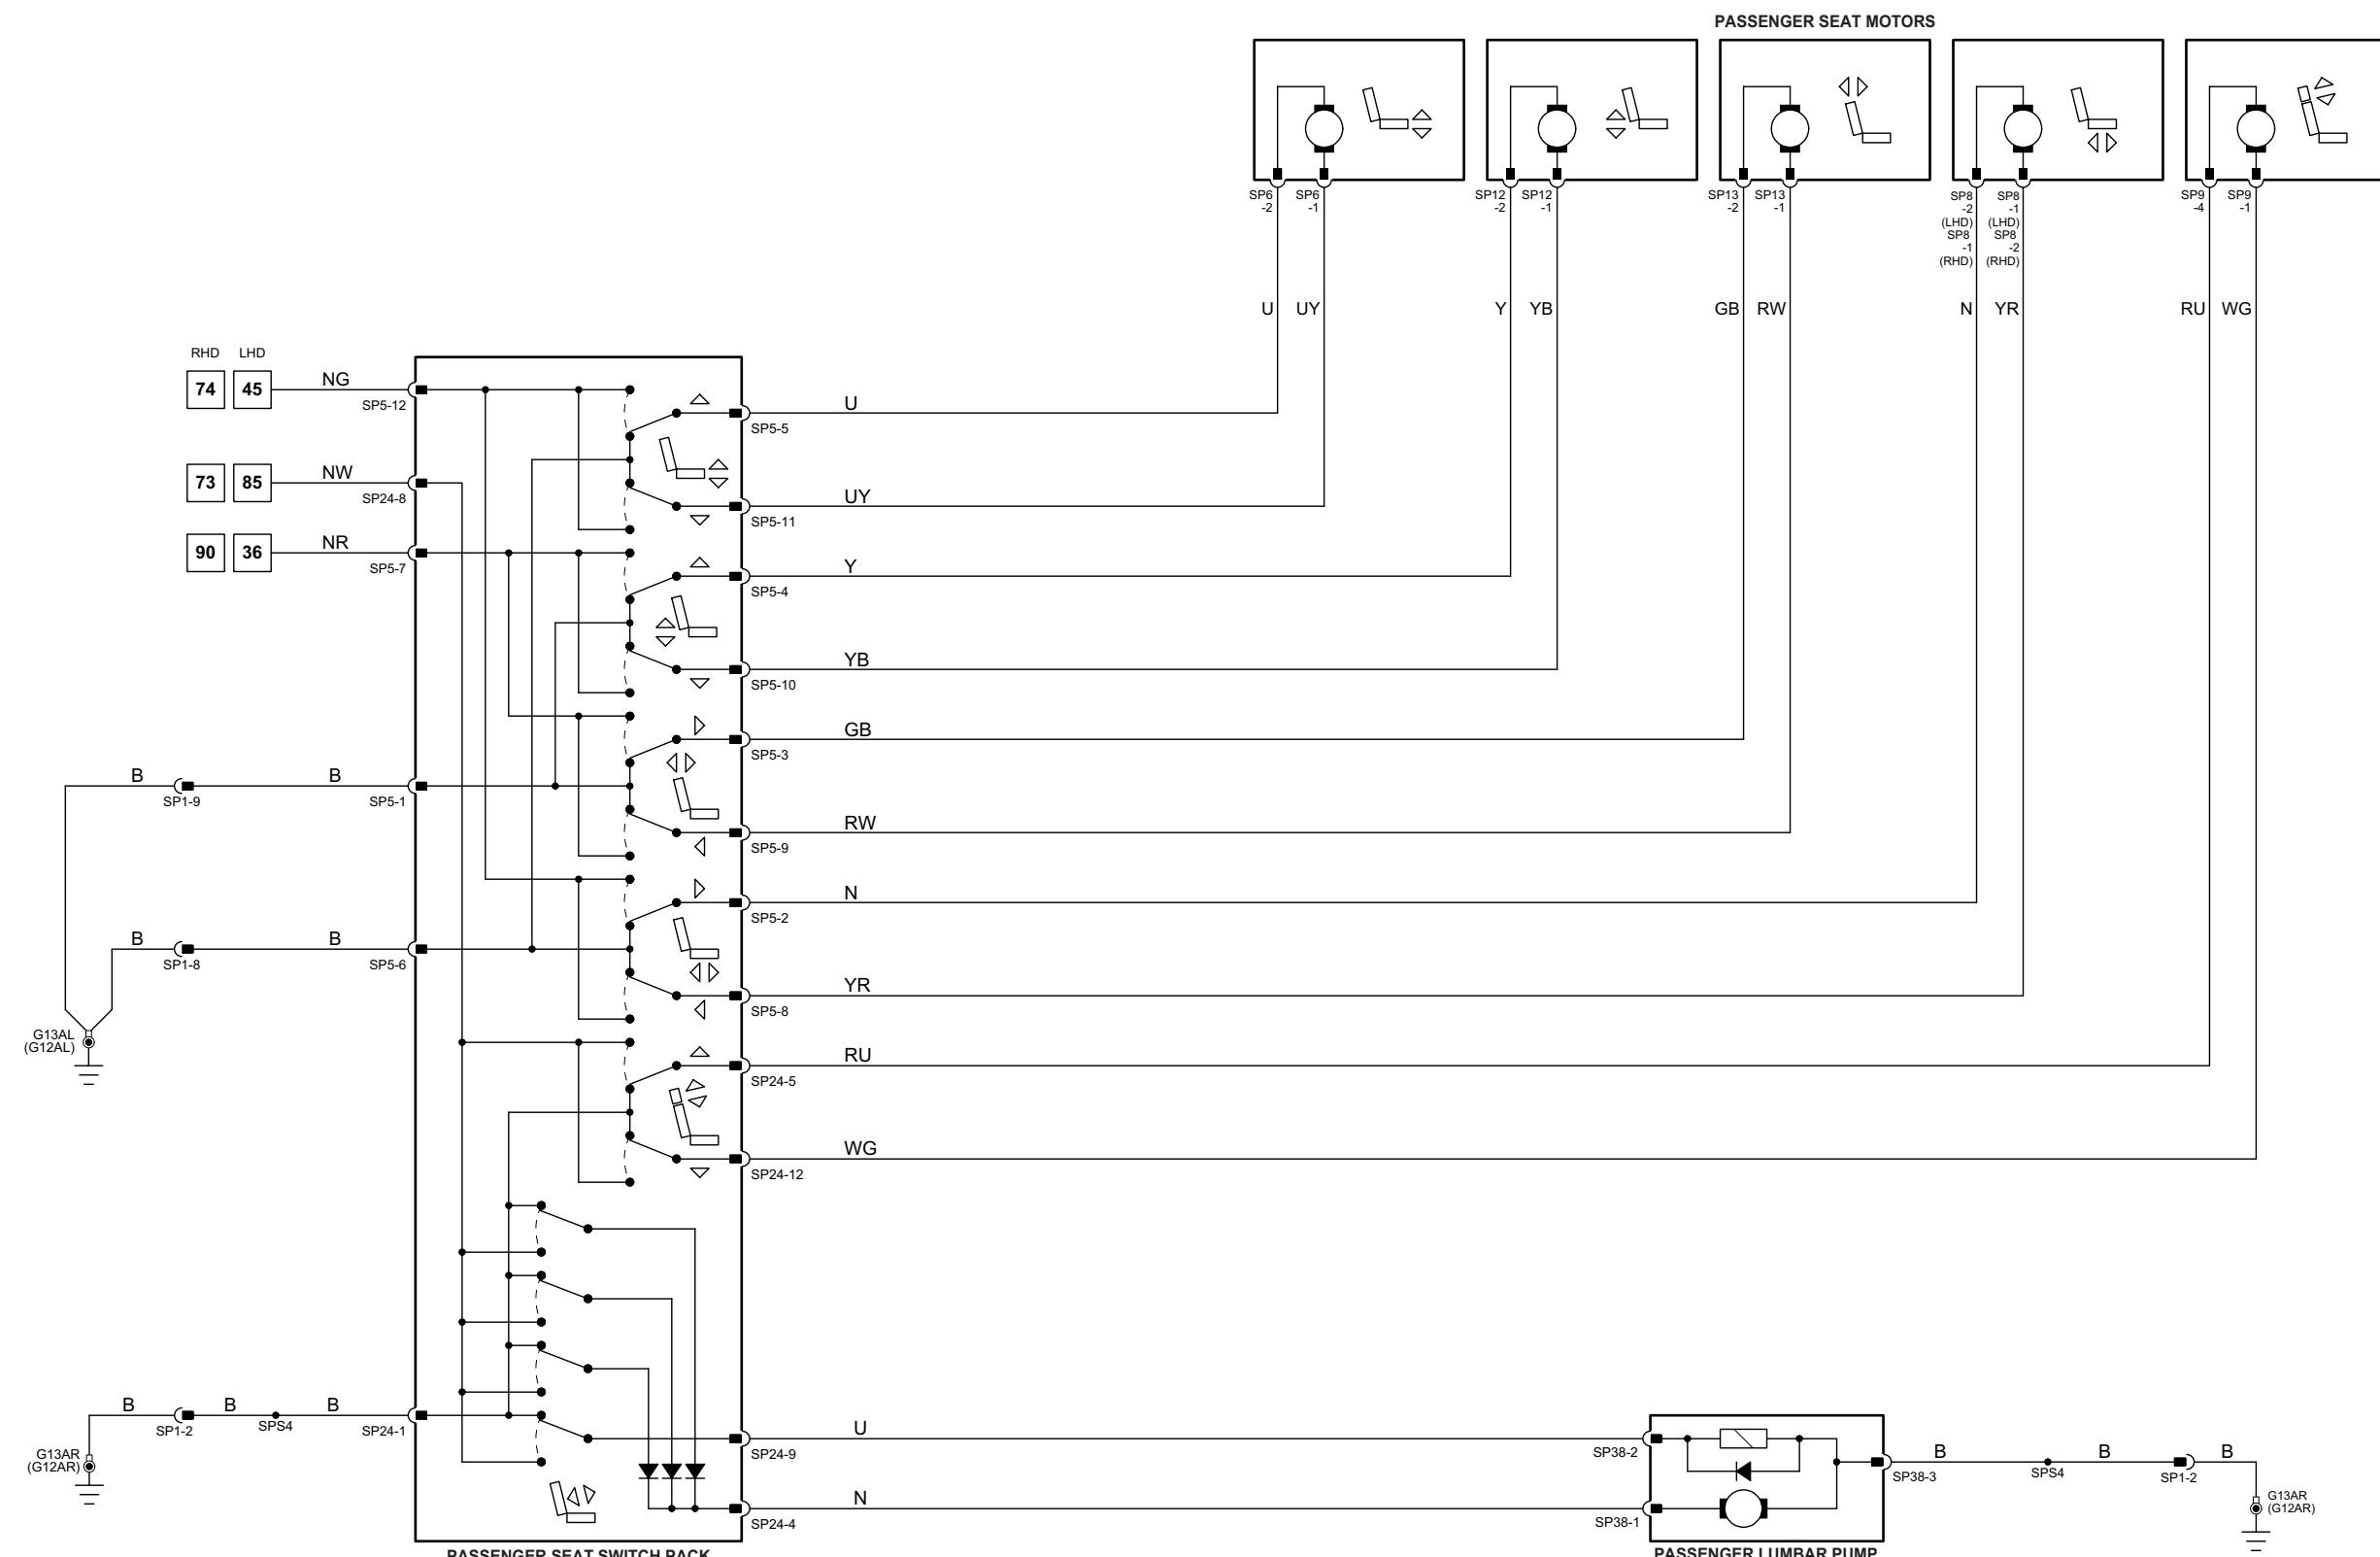

f11\_3\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	I Input	B Battery Voltage	+ Sensor/Signal Supply V	A ACP	S SCP	VARIANT: 12-way Passenger Seat Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	O Output	GND Power Ground	- Sensor/Signal Ground	C CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

**Fig. 11.4**

**COMPONENTS**

<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
SEAT CUSHION EXTEND MOTOR – PASSENGER	SP26	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT CUSHION FRONT RAISE / LOWER MOTOR – PASSENGER	SP6	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT CUSHION REAR RAISE / LOWER MOTOR – PASSENGER	SP12	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT FORE / AFT MOTOR – PASSENGER	SP8	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT HEADREST MOTOR – PASSENGER	SP9	5-WAY / BLACK	PASSENGER SEAT BACK / UPPER
SEAT INCLINE / RECLINE MOTOR – PASSENGER	SP13	5-WAY / BLACK	PASSENGER SEAT BACK / LOWER
SEAT LUMBAR PUMP – PASSENGER (16-WAY)	PL3	2-WAY / BLACK	LOWER SEAT BACK
SEAT LUMBAR SOLENOIDS – PASSENGER	SP36	3-WAY / BLACK	UPPER SEAT BACK
SEAT SWITCH PACK – PASSENGER	SP5	12-WAY / BLACK	PASSENGER SEAT / OUTBOARD
SEAT LUMBAR PUMP – PASSENGER (16-WAY)	SP24	14-WAY / BLACK	
	SP36	3-WAY / BLACK	LOWER SEAT BACK


**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT

**GROUNDS**

<b>Ground</b>	<b>Location</b>
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

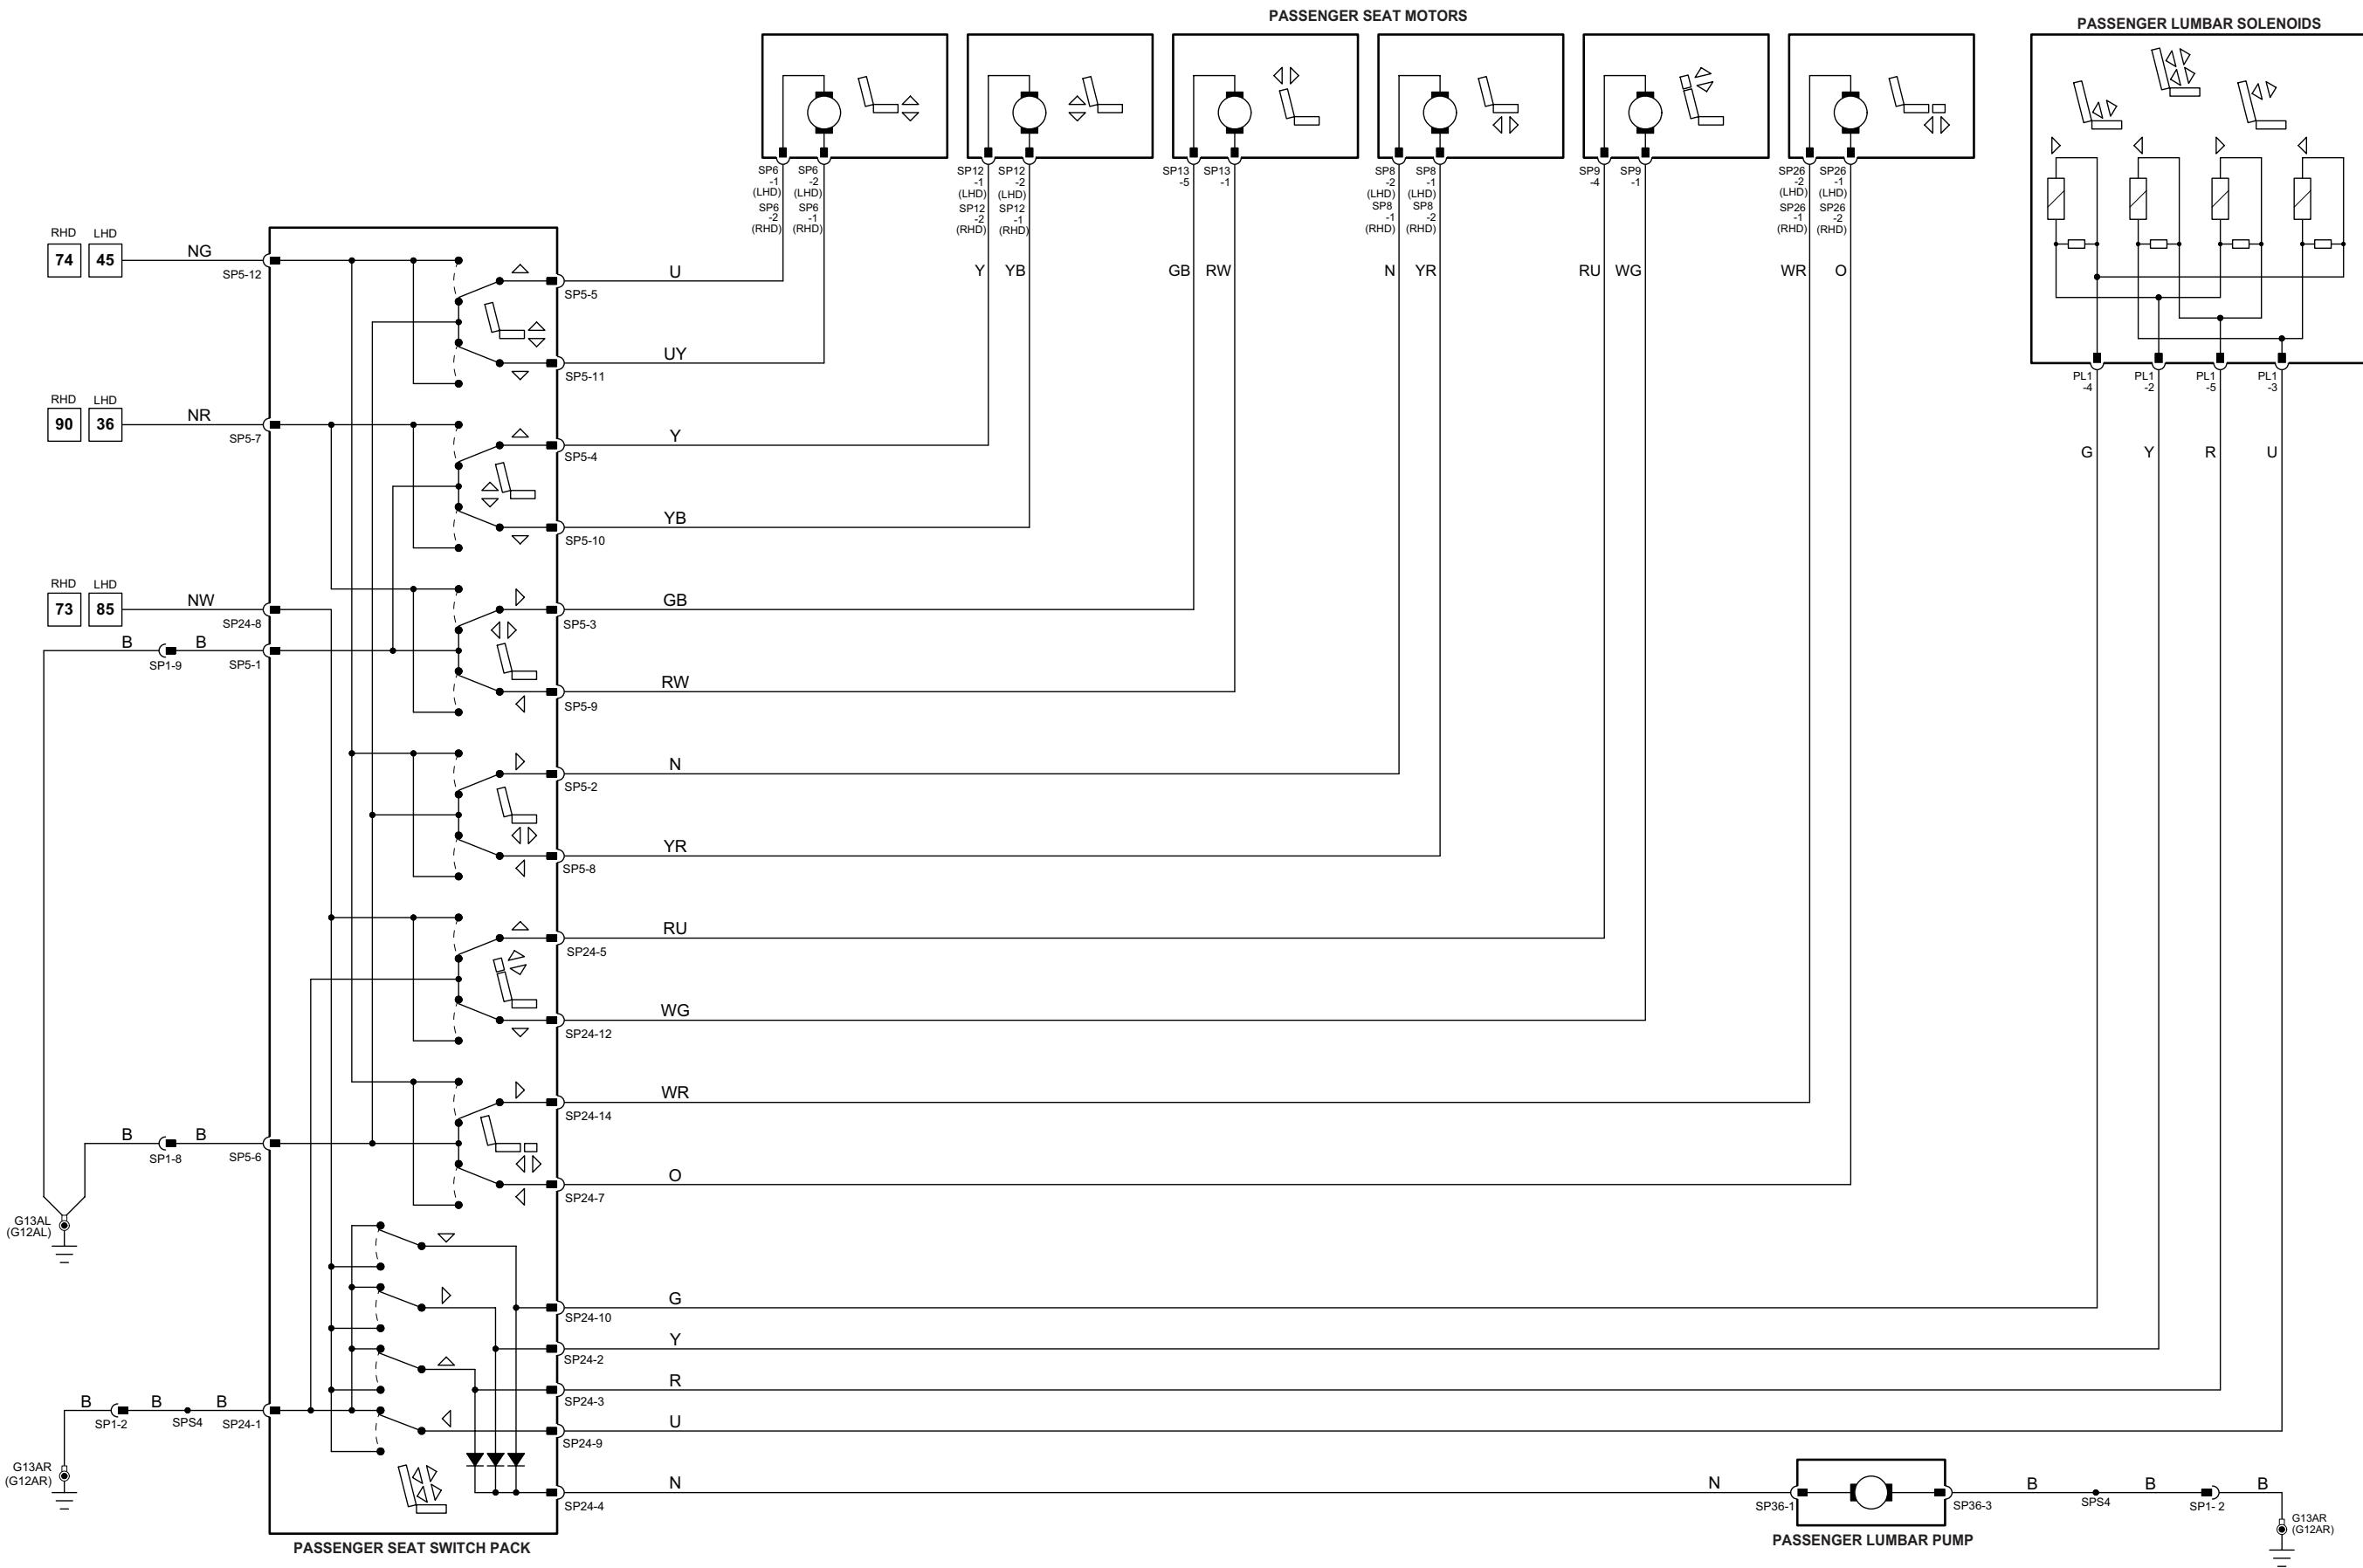

**Rear Electronic Module**

Pin	Description and Characteristic
PG	CR11-11 POWER GROUND: GROUND
SG	CR11-25 LOGIC GROUND: GROUND
O	CR12-2 REAR WINDOW ISOLATE: TO ISOLATE, REM INTERRUPTS GROUND SUPPLY

**Fig. 11.5**
**COMPONENTS**

Component	Connector(s)	Connector Description	Location
REAR ELECTRONIC MODULE	CR4 CR11 CR12 CR13 CR71 CR73 SP31 SP32	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK	TRUNK / RH REAR        
REAR OVERRIDE RELAY PACK	LS5 RS5	22-WAY / BLACK 22-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER  
REAR SEAT SWITCH PACK - LH	SP26	5-WAY / BLACK	LH REAR SEAT CUSHION / OUTBOARD
REAR SEAT SWITCH PACK - RH	SP26	5-WAY / BLACK	RH REAR SEAT CUSHION / OUTBOARD
SEAT CUSHION EXTEND MOTOR - PASSENGER	SP26	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT CUSHION FRONT RAISE / LOWER MOTOR - PASSENGER	SP26	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT CUSHION REAR RAISE / LOWER MOTOR - PASSENGER	SP12	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT FORE / AFT MOTOR - PASSENGER	SP8	5-WAY / BLACK	PASSENGER SEAT CUSHION / UNDER
SEAT HEADREST MOTOR - PASSENGER	SP9	5-WAY / BLACK	PASSENGER SEAT BACK / UPPER
SEAT INCLINE / RECLINE MOTOR - PASSENGER	SP13	5-WAY / BLACK	PASSENGER SEAT BACK / LOWER
SEAT LUMBAR SOLENOIDS - PASSENGER	PL1	6-WAY / BLACK	UPPER SEAT BACK
SEAT SWITCH PACK - PASSENGER	SP5	12-WAY / BLACK	PASSENGER SEAT / OUTBOARD
SEAT LUMBAR PUMP - PASSENGER (16-WAY)	SP24 SP36	14-WAY / BLACK -3-WAY / BLACK	LOWER SEAT BACK

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
LS1	22-WAY / BLACK / CABIN HARNESS TO LH REAR SEAT HARNESS	CABIN / BELOW LH REAR SEAT
RS1	22-WAY / BLACK / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT

**GROUNDS**

Ground	Location
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data


I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

**Fig. 11.5**

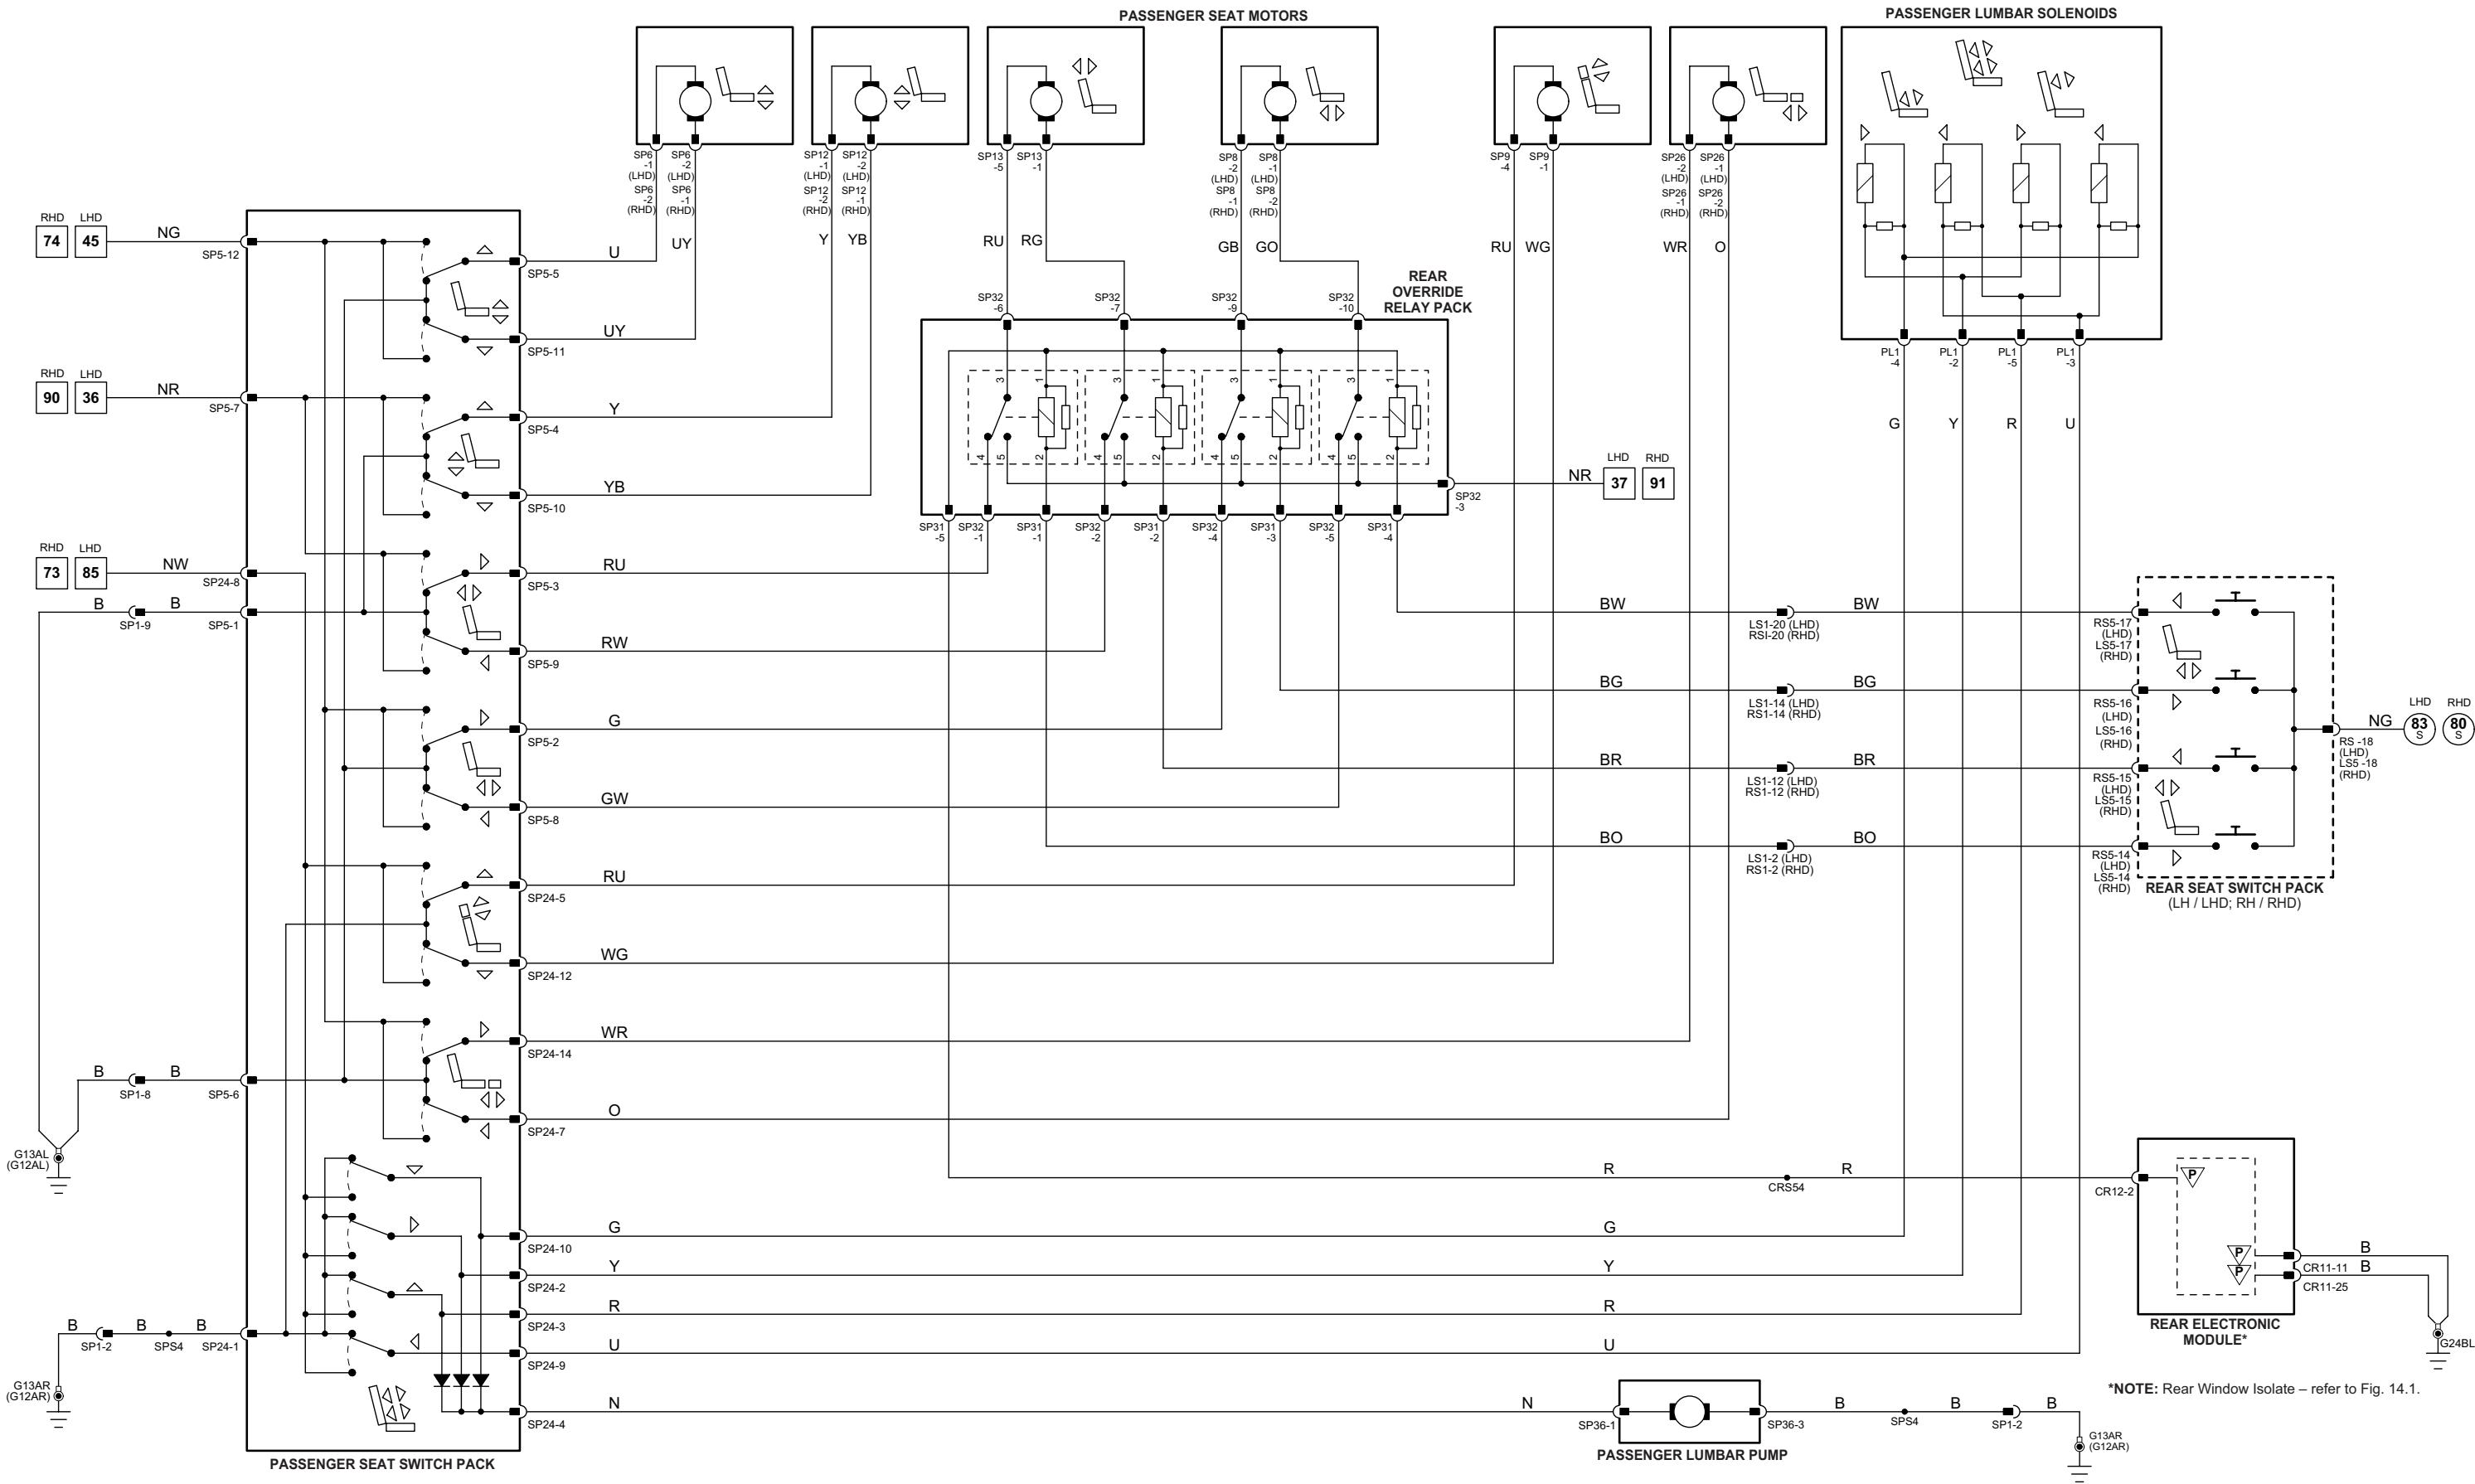

\*NOTE: Rear Window Isolate – refer to Fig. 14.1.

f11\_5\_35008

**Fig. 11.6**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
	CL2	8-WAY / BLACK	
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
	CR9	12-WAY / BLACK	
	CR10	17-WAY / BLACK	
	CR85	20-WAY / BLACK	
	EC36	22-WAY / BLACK	
SEAT BACK HEATER – DRIVER	SD15	2-WAY / BLACK	DRIVER SEAT BACK
SEAT BACK HEATER – PASSENGER	SP15	2-WAY / BLACK	PASSENGER SEAT BACK
SEAT CUSHION HEATERS – DRIVER	SD14	4-WAY / BLACK	DRIVER SEAT CUSHION
SEAT CUSHION HEATERS – PASSENGER	SP14	4-WAY / BLACK	PASSENGER SEAT CUSHION


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH 'A' POST
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

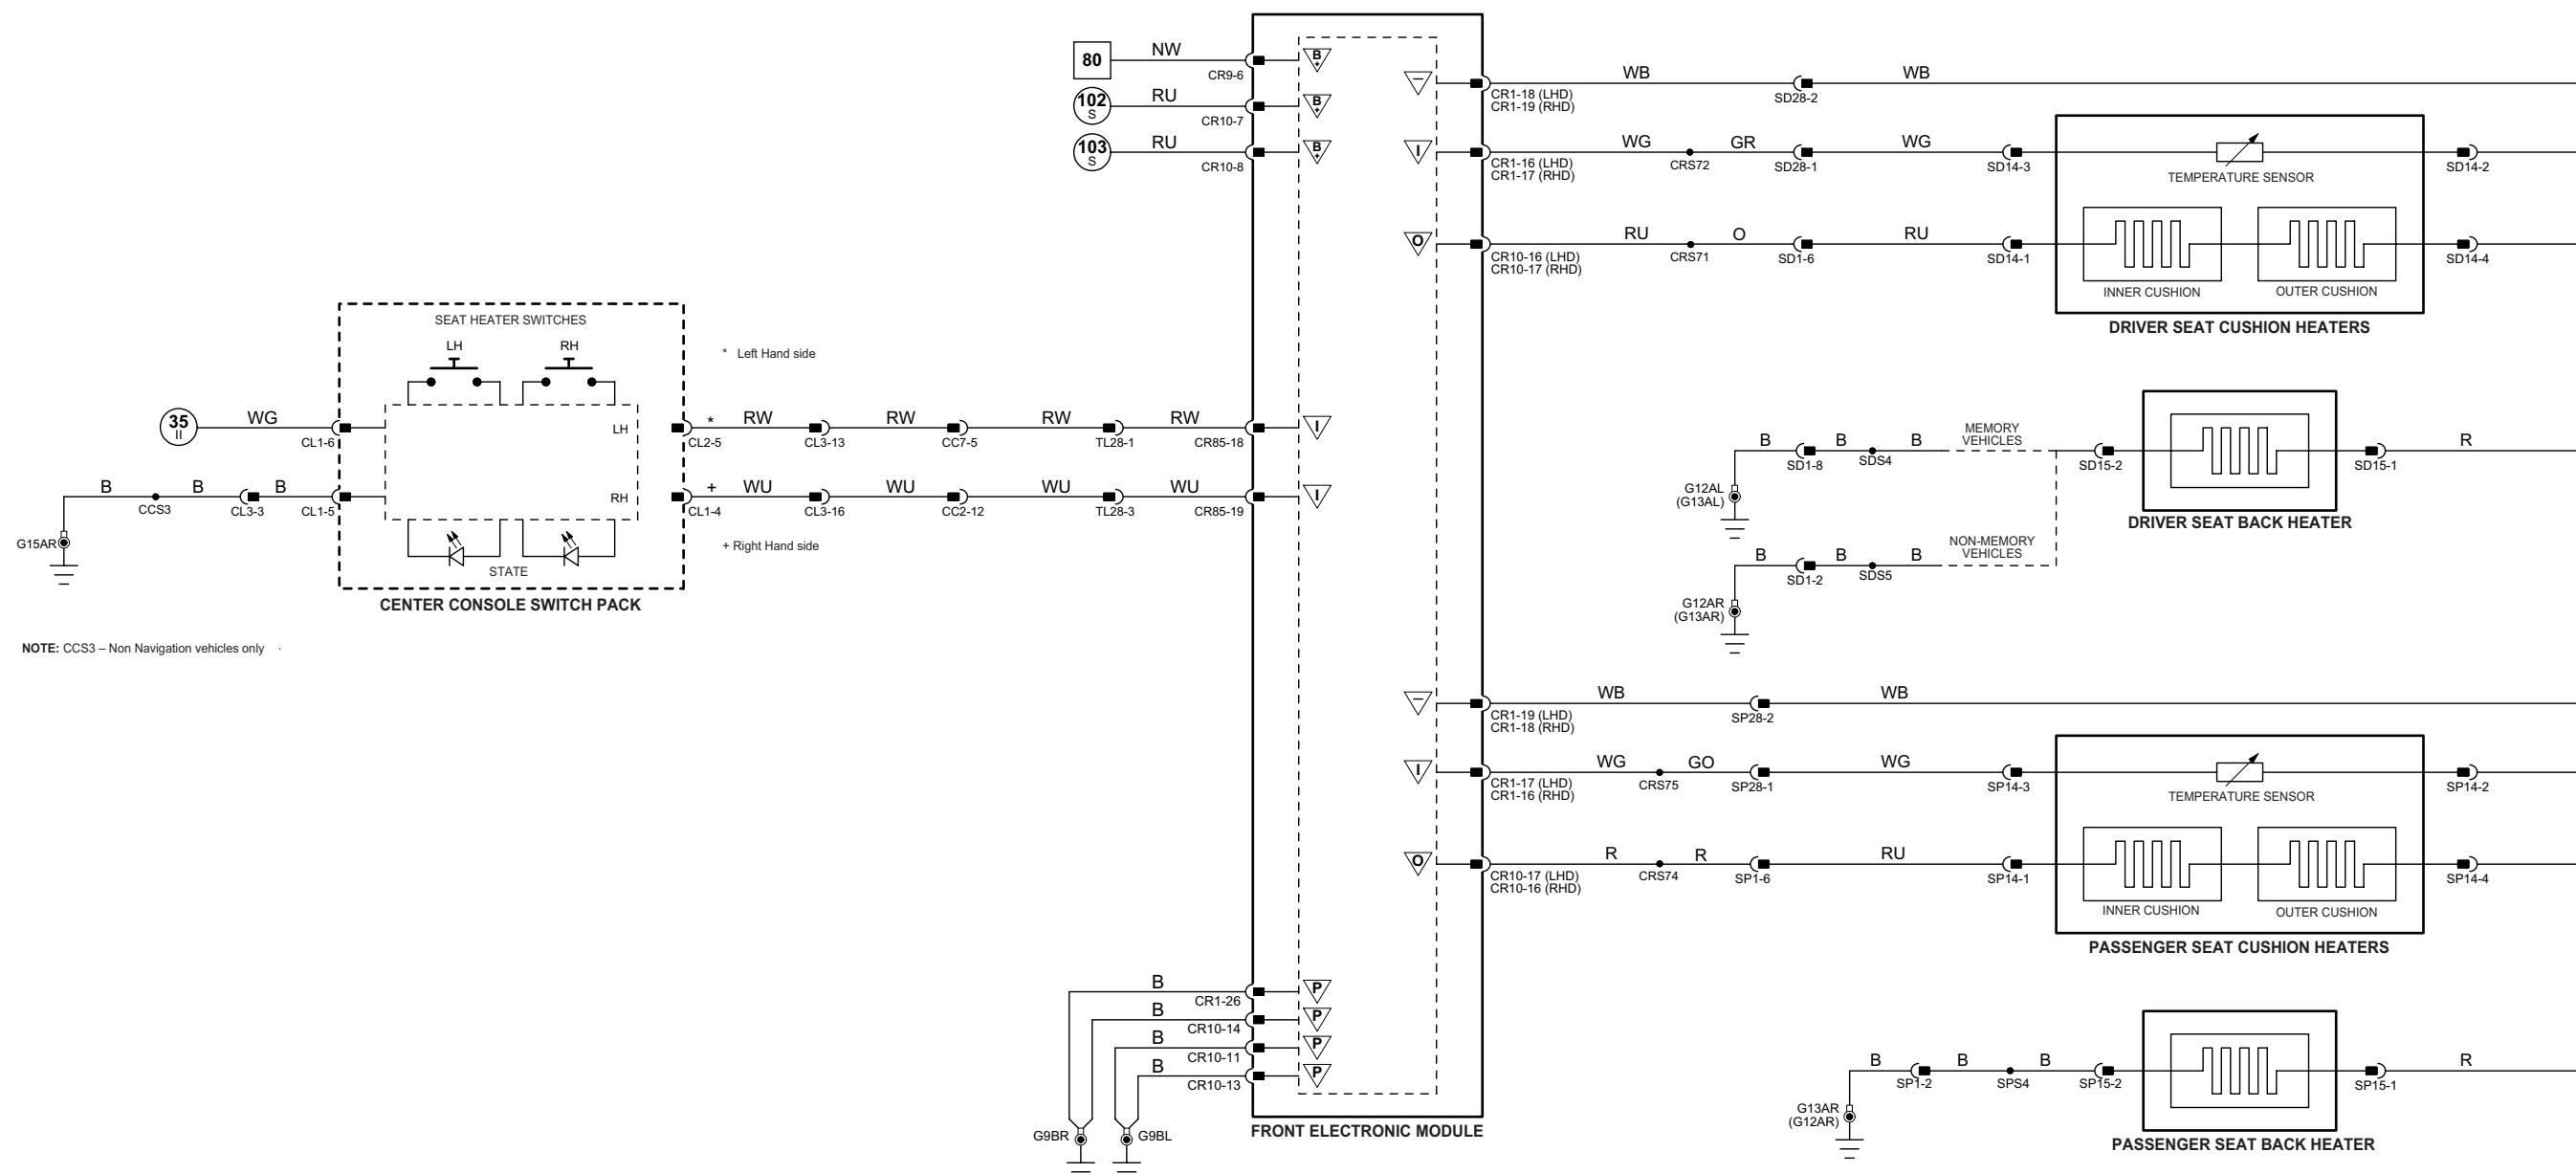

f11\_6\_35008

## Rear Memory Module

Pin	Description and Characteristic
I CR37-2	MEMORY 1, 2, 3, SET INPUT SIGNAL: VARIABLE RESISTANCE
O CR37-3	MEMORY SET INDICATOR ACTIVATE: TO ACTIVATE, RMM SWITCHES CIRCUIT TO B+
I CR37-9	SEAT POSITION SENSOR SIGNAL: 5V PULSED SIGNAL
B+ CR37-10	SEAT POSITION SENSOR SIGNAL: 5V PULSED SIGNAL
SG CR37-13	SWITCHED SYSTEM POWER SUPPLY (LOGIC): B+
SG CR37-15	REAR SEAT MEMORY SWITCH PACK REFERENCE GROUND: GROUND
SG CR37-24	SIGNAL GROUND: GROUND
SG CR37-25	SIGNAL GROUND: GROUND
SG CR37-26	SIGNAL GROUND: GROUND
S CR38-1	SCP +
I CR38-10	SEAT BACK RECLINE REARWARD REQUEST: ACTIVE = B+
I CR38-11	SEAT BACK RECLINE FORWARD REQUEST: ACTIVE = B+
S CR38-12	SCP -
I CR38-15	HEAD REST RAISE REQUEST: ACTIVE = B+
I CR38-16	HEADREST LOWER REQUEST: ACTIVE = B+
O CR53-3	SEAT BACK RECLINE MOTOR DRIVE – REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O CR53-4	SEAT BACK RECLINE MOTOR DRIVE – FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
PG CR59-1	POWER GROUND (LH SEAT): GROUND
B+ CR59-2	BATTERY POWER SUPPLY (LH SEAT): B+
O CR59-3	HEADREST POSITION MOTOR DRIVE – RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O CR59-4	HEADREST POSITION MOTOR DRIVE – LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+

Fig. 11.7

## COMPONENTS

Component	Connector(s)	Connector Description	Location
REAR MEMORY MODULE	CR21 CR37 CR38	4-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK	REAR BULKHEAD / BEHIND REAR SEAT BACK
REAR SEAT BACK INCLINE / RECLINE MOTOR AND POSITION SENSOR – LH	CR41	6-WAY / BLACK	LH REAR SEAT BACK / UPPER
REAR SEAT BELT COMFORT SOLENOID – LH	CR53	4-WAY / BLACK	LH REAR SEAT BELT TENSIONER
REAR SEAT BELT COMFORT SWITCH – LH	CR59	6-WAY / BLACK	LH REAR SEAT BELT BUCKLE
REAR SEAT HEADREST MOTOR AND POSITION SENSOR – LH	SL1	5-WAY / BLACK	LH REAR SEAT BACK / UPPER
REAR SEAT LUMBAR PUMP – LH	CR112	3-WAY / BLACK	LH REAR SEAT BELT TENSIONER
REAR SEAT LUMBAR SOLENOIDS – LH	CR109	2-WAY / BLACK	LH REAR SEAT BACK / UPPER
REAR SEAT MEMORY SWITCH PACK – LH	SL2	5-WAY / BLACK	LH REAR SEAT BACK / UPPER
REAR SEAT SWITCH PACK – LH	LL3	2-WAY / BLACK	LH REAR SEAT BACK / UPPER
	LL1	5-WAY / BLACK	LH REAR SEAT BACK / UPPER
	LT5	8-WAY / BLACK	LH REAR DOOR TRIM
	LS5	22-WAY / BLACK	LH REAR SEAT CUSHION / OUTBOARD

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
LL2	6-WAY / BLACK / LH REAR SEAT HARNESS TO LH REAR SEAT LUMBAR HARNESS	CABIN / BEHIND REAR SEAT BACK / LH SIDE
LS1	22-WAY / BLACK / CABIN HARNESS TO LH REAR SEAT HARNESS	CABIN / BELOW LH REAR SEAT
LS11	6-WAY / GREY / CABIN HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW LH REAR SEAT
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH B/C POST
SL4	20-WAY / BLACK / LH REAR SEAT HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / RH SIDE

## GROUNDS

Ground	Location
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / LH SIDE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

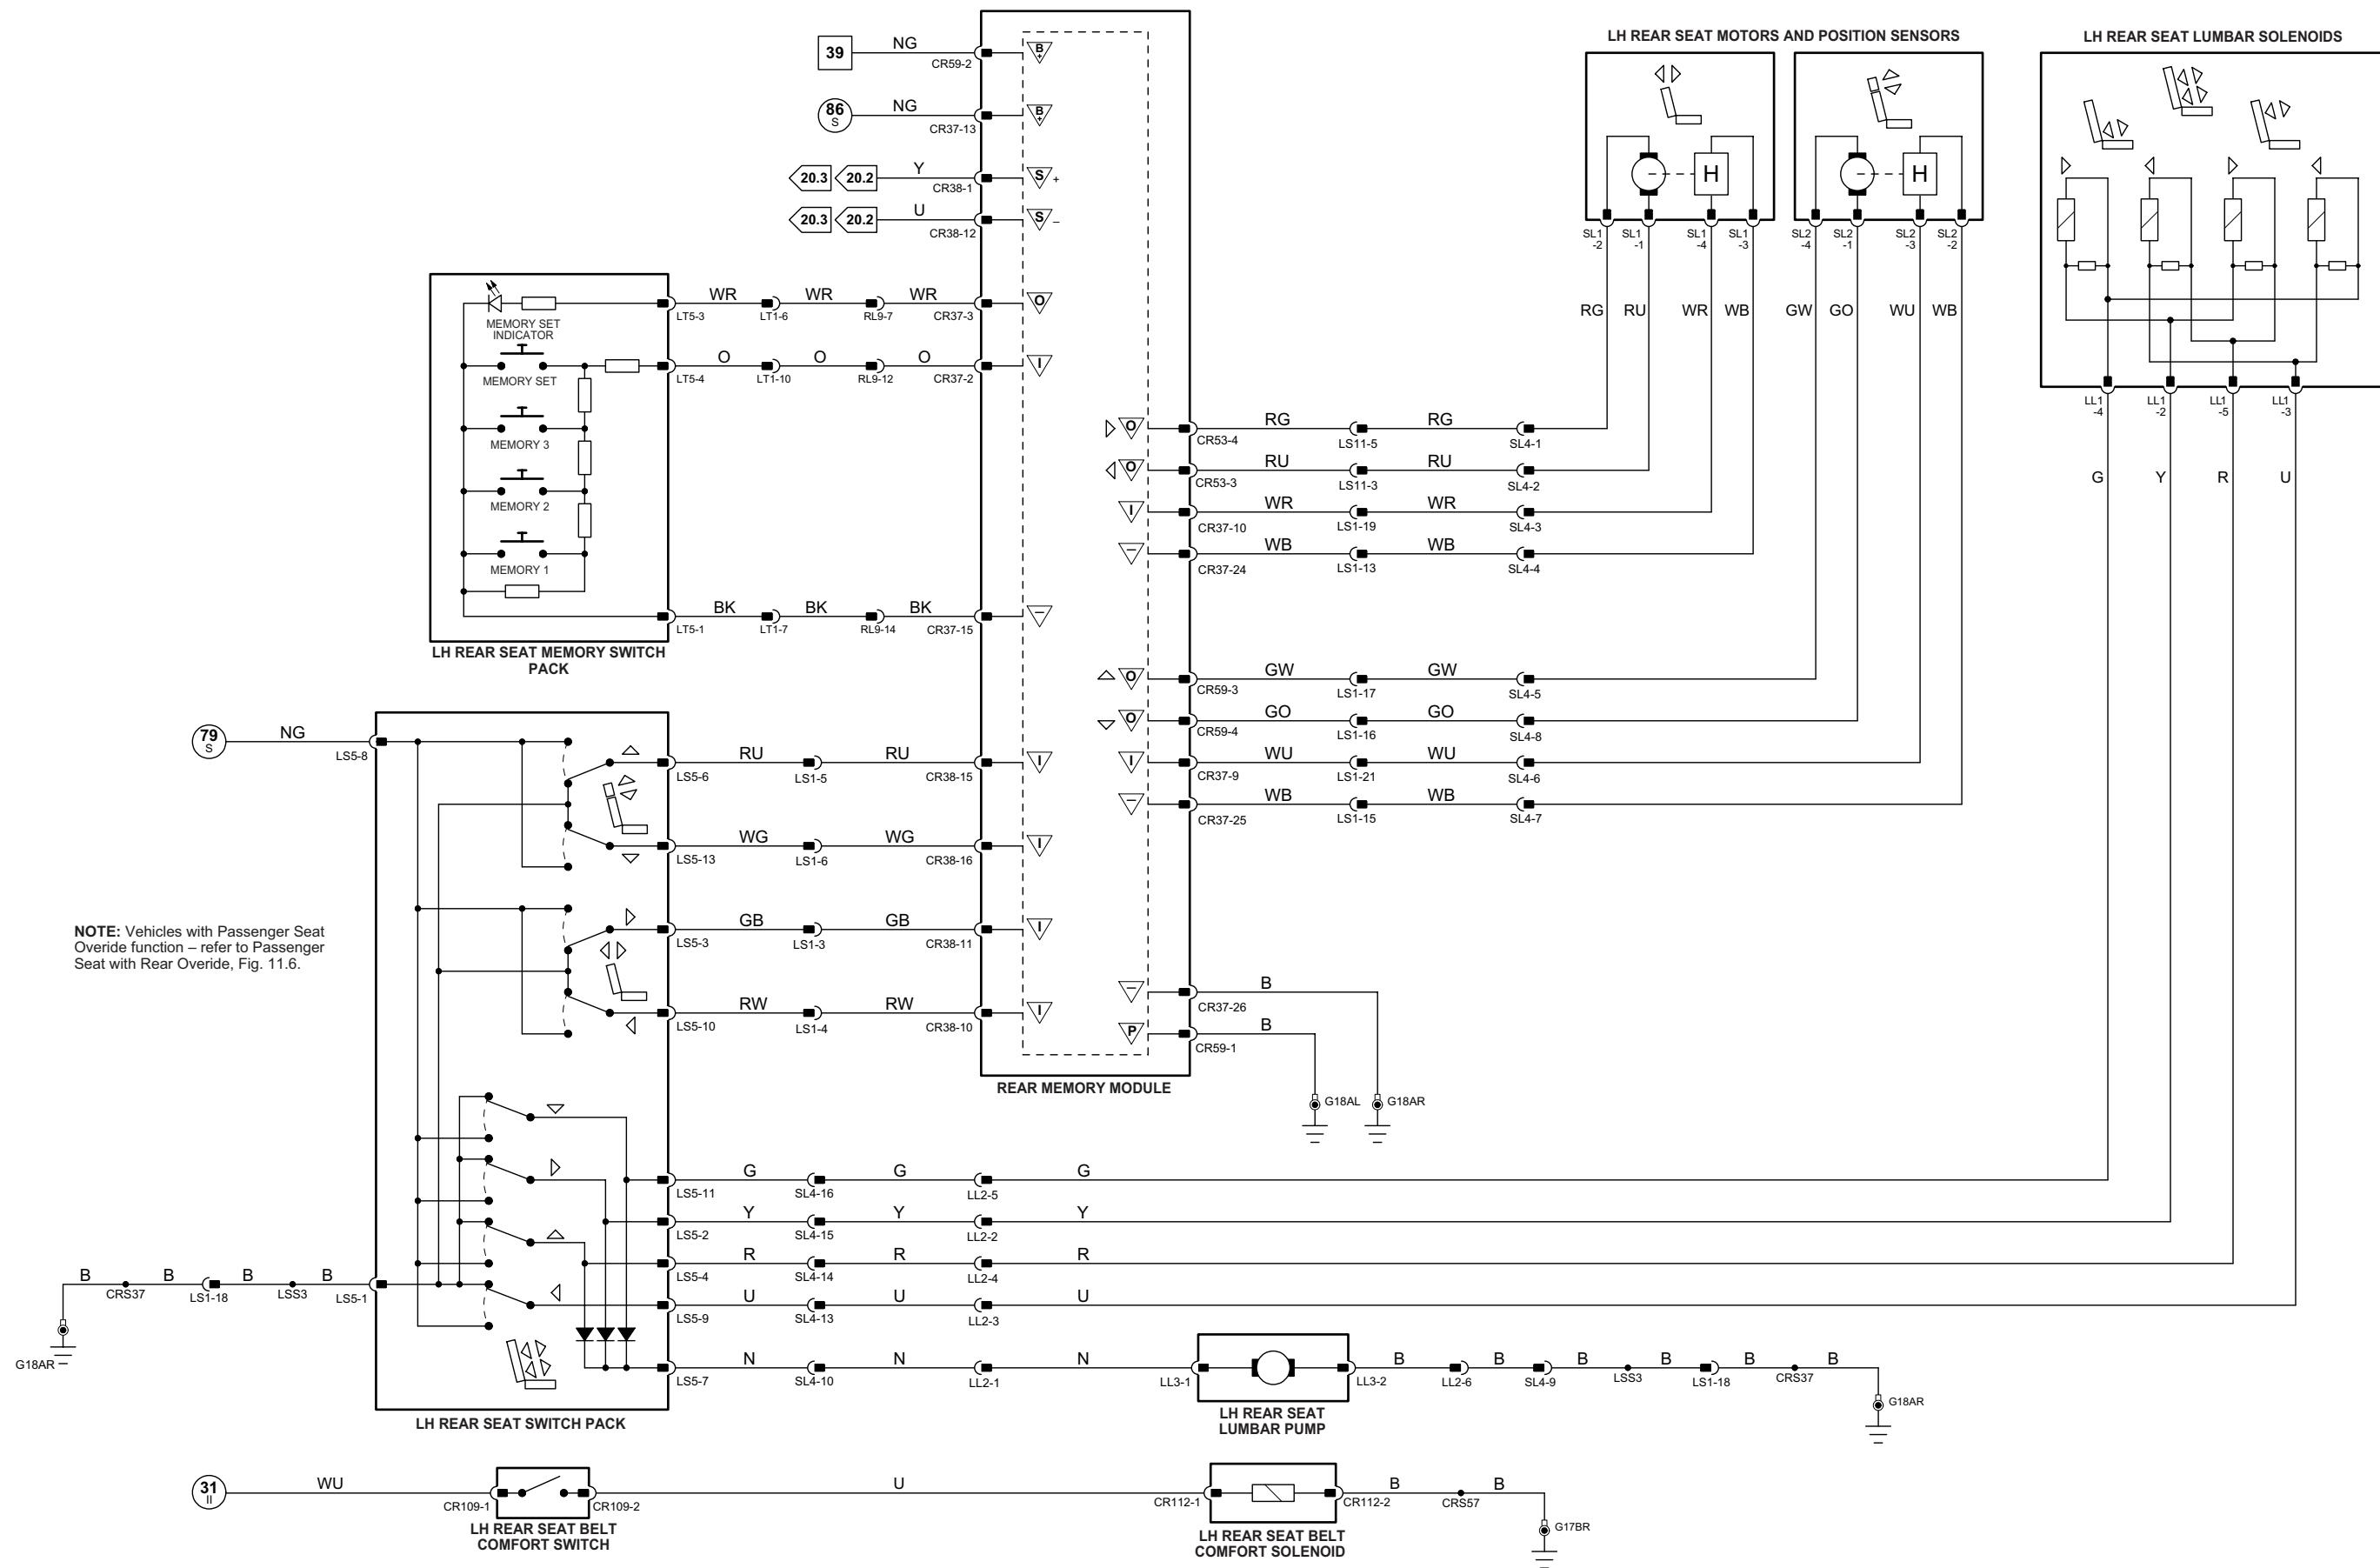

## Rear Memory Module

Pin	Description and Characteristic	
O	CR21-1	SEAT BACK RECLINE MOTOR DRIVE - REARWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O	CR21-2	SEAT BACK RECLINE MOTOR DRIVE - FORWARD: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O	CR21-3	HEADREST POSITION MOTOR DRIVE - RAISE: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
O	CR21-4	HEADREST POSITION MOTOR DRIVE - LOWER: TO ACTIVATE, DSCM SWITCHES CIRCUIT TO B+
I	CR37-1	MEMORY 1, 2, 3, SET INPUT SIGNAL: VARIABLE RESISTANCE
SG	CR37-11	SIGNAL GROUND: GROUND
SG	CR37-12	SIGNAL GROUND: GROUND
B+	CR37-13	SWITCHED SYSTEM POWER SUPPLY (LOGIC): B+
SG	CR37-14	REAR SEAT MEMORY SWITCH PACK REFERENCE GROUND: GROUND
O	CR37-16	MEMORY SET INDICATOR ACTIVATE: TO ACTIVATE, RMM SWITCHES CIRCUIT TO B+
I	CR37-22	SEAT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
I	CR37-23	SEAT POSITION SENSOR SIGNAL: 5 V PULSED SIGNAL
SG	CR37-26	SIGNAL GROUND: GROUND
S	CR38-1	SCP +
S	CR38-12	SCP -
I	CR38-19	HEAD REST RAISE REQUEST: ACTIVE = B+
I	CR38-20	HEADREST LOWER REQUEST: ACTIVE = B+
I	CR38-21	SEAT BACK RECLINE REARWARD REQUEST: ACTIVE = B+
I	CR38-22	SEAT BACK RECLINE FORWARD REQUEST: ACTIVE = B+
PG	CR41-5	POWER GROUND (RH SEAT): GROUND
B+	CR41-6	BATTERY POWER SUPPLY (RH SEAT): B+

Fig. 11.8

## COMPONENTS

Component	Connector(s)	Connector Description	Location
REAR MEMORY MODULE	CR21	4-WAY / BLACK	REAR BULKHEAD / BEHIND REAR SEAT BACK
	CR37	26-WAY / BLACK	
	CR38	22-WAY / BLACK	
	CR41	6-WAY / BLACK	
	CR53	4-WAY / BLACK	
	CR59	6-WAY / BLACK	
REAR SEAT BACK INCLINE / RECLINE MOTOR AND POSITION SENSOR - RH	SR1	5-WAY / BLACK	RH REAR SEAT BACK / UPPER
REAR SEAT BELT COMFORT SOLENOID - RH	CR114	3-WAY / BLACK	RH REAR SEAT BELT TENSIONER
REAR SEAT BELT COMFORT SWITCH - RH	CR111	2-WAY / BLACK	RH REAR SEAT BELT BUCKLE
REAR SEAT HEADREST MOTOR AND POSITION SENSOR - RH	SR2	5-WAY / BLACK	RH REAR SEAT BACK / UPPER
REAR SEAT LUMBAR PUMP - RH	YL3	2-WAY / BLACK	RH REAR SEAT BACK / UPPER
REAR SEAT LUMBAR SOLENOIDS - RH	YL1	5-WAY / BLACK	RH REAR SEAT BACK / UPPER
REAR SEAT MEMORY SWITCH PACK - RH	RT5	8-WAY / BLACK	RH REAR DOOR TRIM
REAR SEAT SWITCH PACK - RH	RS5	22-WAY / BLACK	RH REAR SEAT CUSHION / OUTBOARD

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RS1	22-WAY / BLACK / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
RS11	6-WAY / GREY / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM
SR4	20-WAY / BLACK / RH REAR SEAT HARNESS TO RH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / LH SIDE
YL2	6-WAY / BLACK / RH REAR SEAT HARNESS TO RH REAR SEAT LUMBAR HARNESS	CABIN / BEHIND REAR SEAT BACK / RH SIDE

## GROUNDS

Ground	Location
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / LH SIDE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

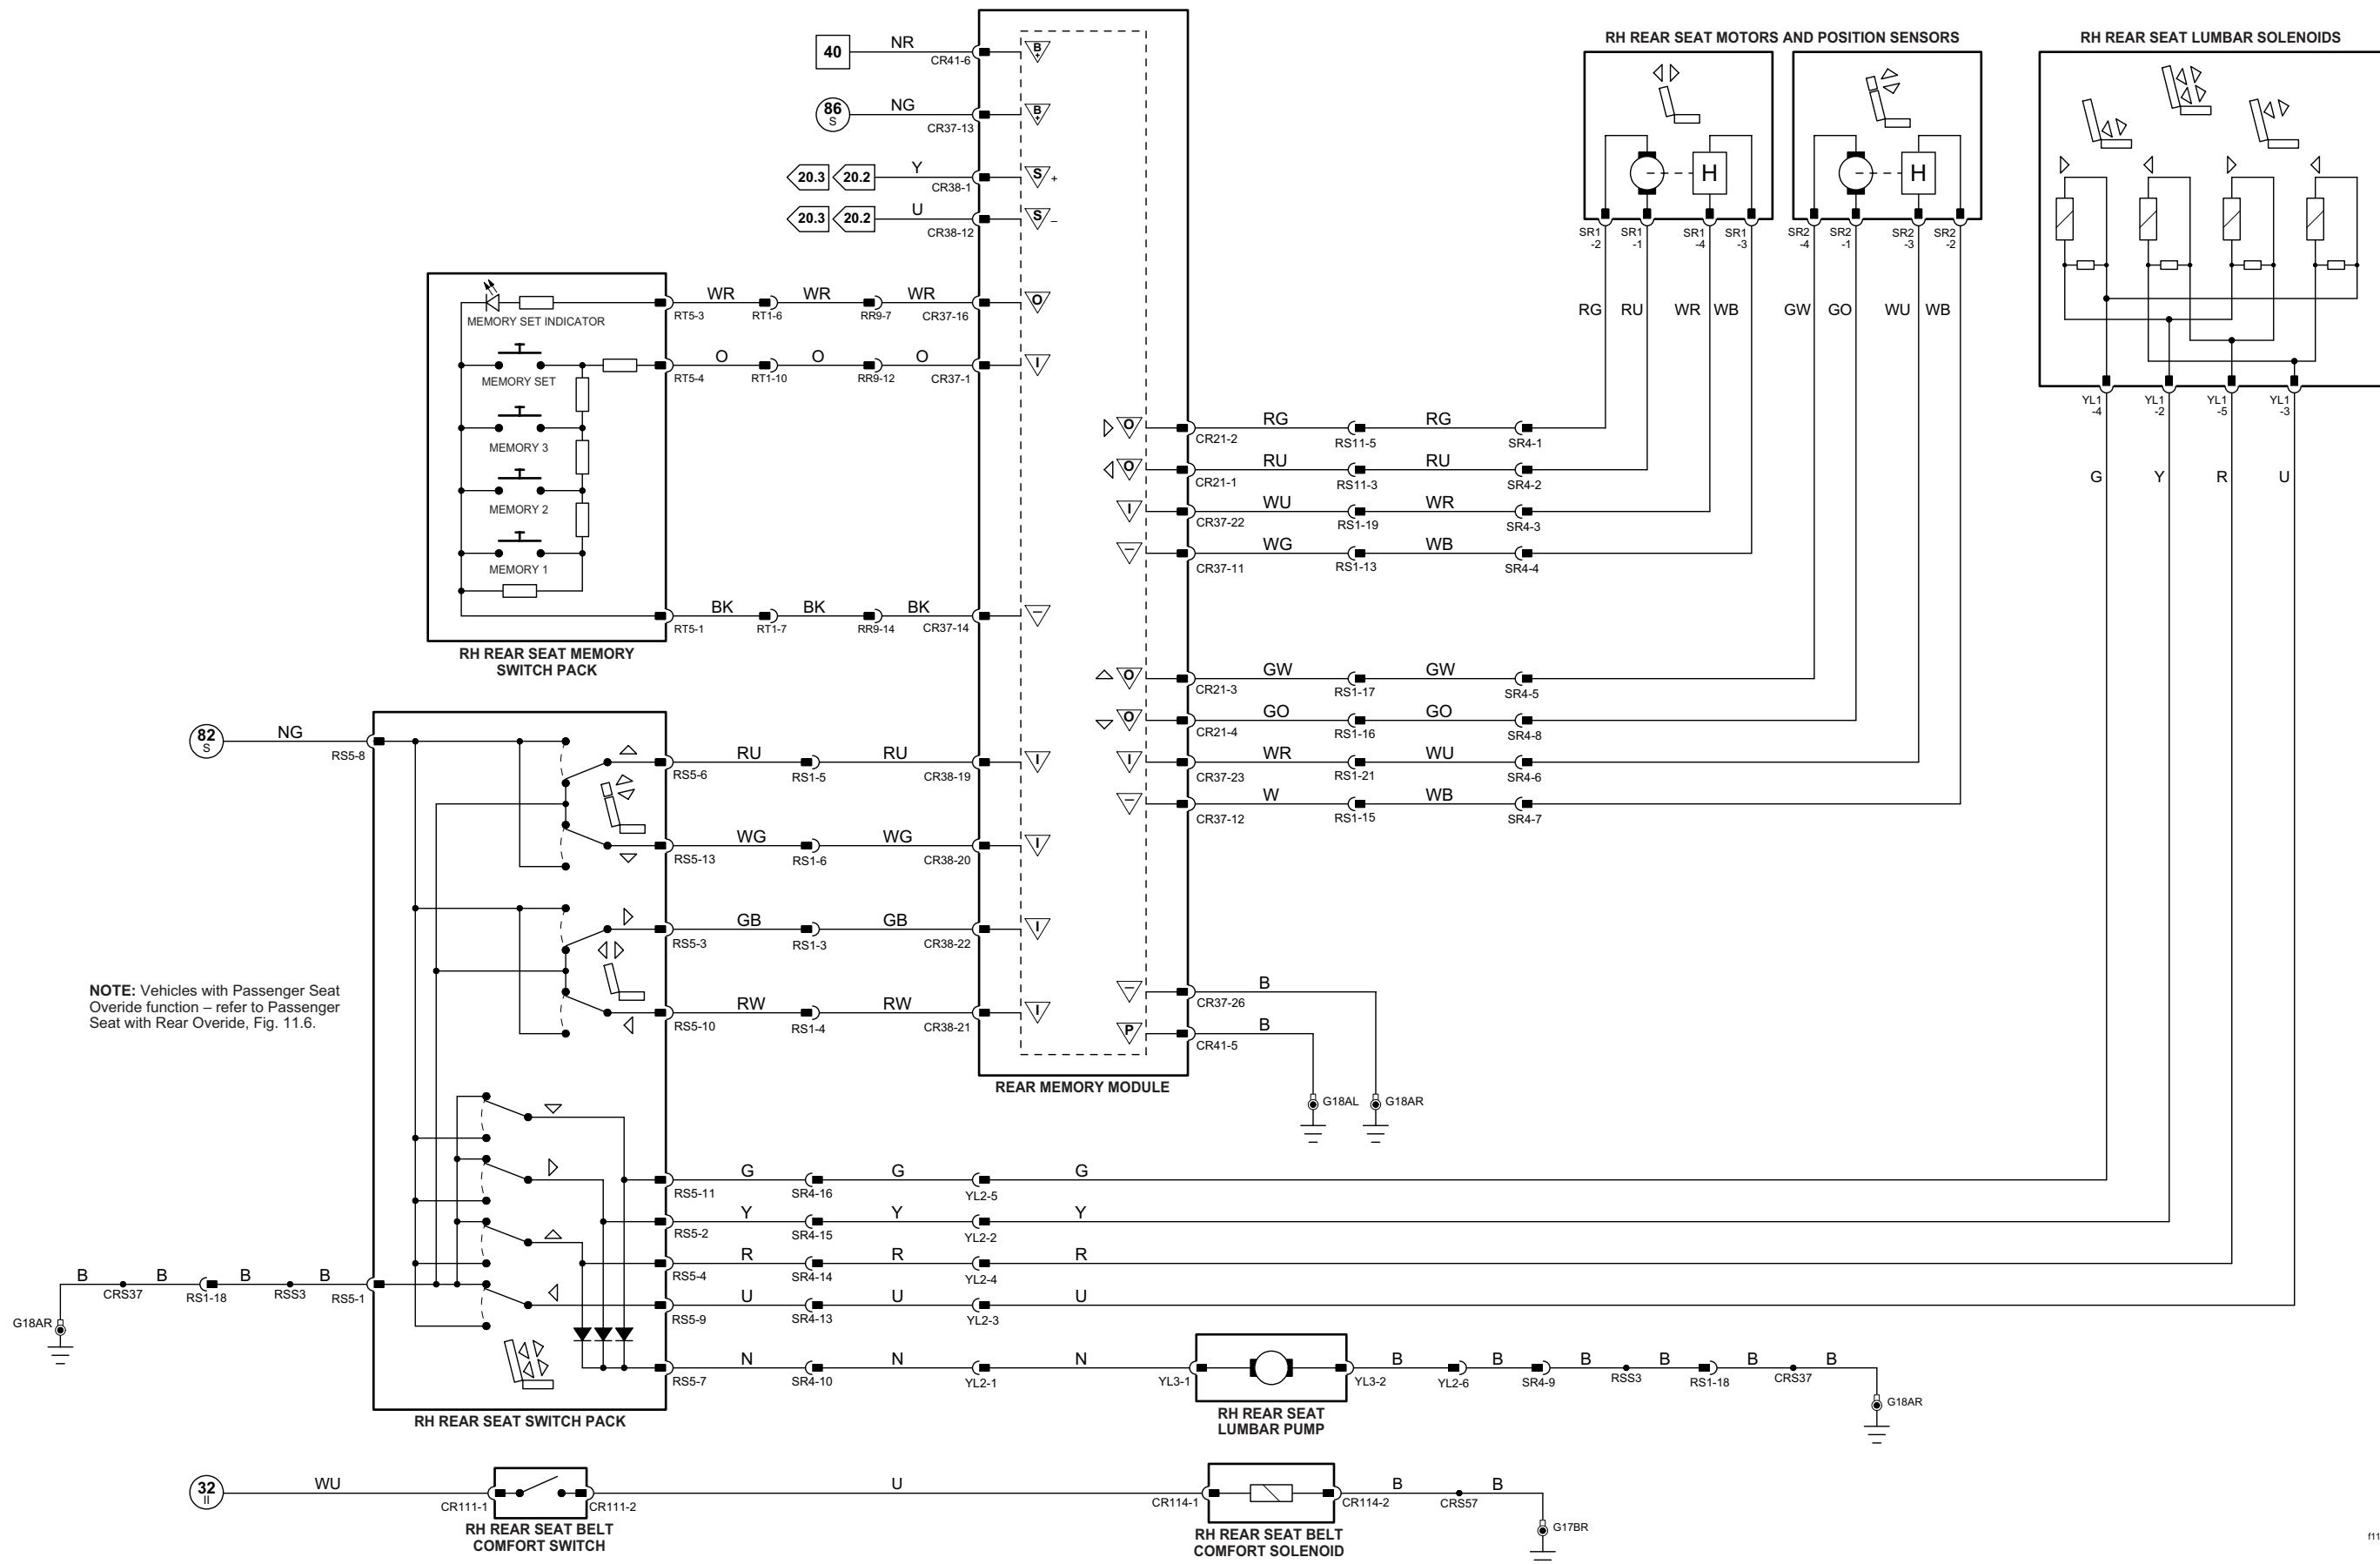

f11\_8\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: Powered Rear Seats Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	Sensor/Signal Ground	CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

## Rear Electronic Module

Pin	Description and Characteristic
B+	CR4-3 BATTERY POWER SUPPLY (LOGIC): B+
O	CR4-8 RIGHT REAR SEAT HEAT SENSOR RETURN
O	CR4-9 LEFT REAR SEAT HEAT SENSOR RETURN
I	CR4-10 LEFT REAR SEAT HEATER SWITCH PWM
PG	CR11-11 POWER GROUND (RH SEAT): GROUND
I	CR11-13 RIGHT REAR SEAT HEATER SWITCH PWM
I	CR13-16 RIGHT REAR SEAT HEAT SENSOR INPUT
I	CR13-17 LEFT REAR SEAT HEAT SENSOR INPUT
B+	CR71-7 VB3 - SEAT HEATERS POWER INPUT
B+	CR71-8 VB3 - SEAT HEATERS POWER INPUT
O	CR71-16 LEFT REAR SEAT HEATER PWM OUTPUT
O	CR71-17 RIGHT REAR SEAT HEATER PWM OUTPUT

Fig. 11.9

## COMPONENTS

Component	Connector(s)	Connector Description	Location
REAR CENTER CONSOLE SWITCH PACK	TL89	8-WAY / BLACK	REAR CENTER CONSOLE
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR SEAT BACK HEATER - LH	SL3	2-WAY / BLACK	LH REAR SEAT SQUAB
REAR SEAT BACK HEATER - RH	SR3	2-WAY / BLACK	RH REAR SEAT SQUAB
REAR SEAT CUSHION HEATERS - LH	LS4	4-WAY / BLACK	LH REAR SEAT CUSHION
REAR SEAT CUSHION HEATERS - RH	RS4	4-WAY / BLACK	RH REAR SEAT CUSHION

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CR122	4-WAY / GREY	CABIN / BELOW LH REAR SEAT
LS11	6-WAY / GREY / CABIN HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
RS11	6-WAY / GREY / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SL4	20-WAY / BLACK / LH REAR SEAT HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SR4	20-WAY / BLACK / RH REAR SEAT HARNESS TO RH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / LH SIDE
TL35	22-WAY / GREY / CABIN HARNESS TO REAR CENTRE CONSOLE	TRUNK / LH REAR

## GROUNDS

Ground	Location
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / RH SIDE
G24	TRUNK / RH REAR / REAR ELECTRONIC MODULE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

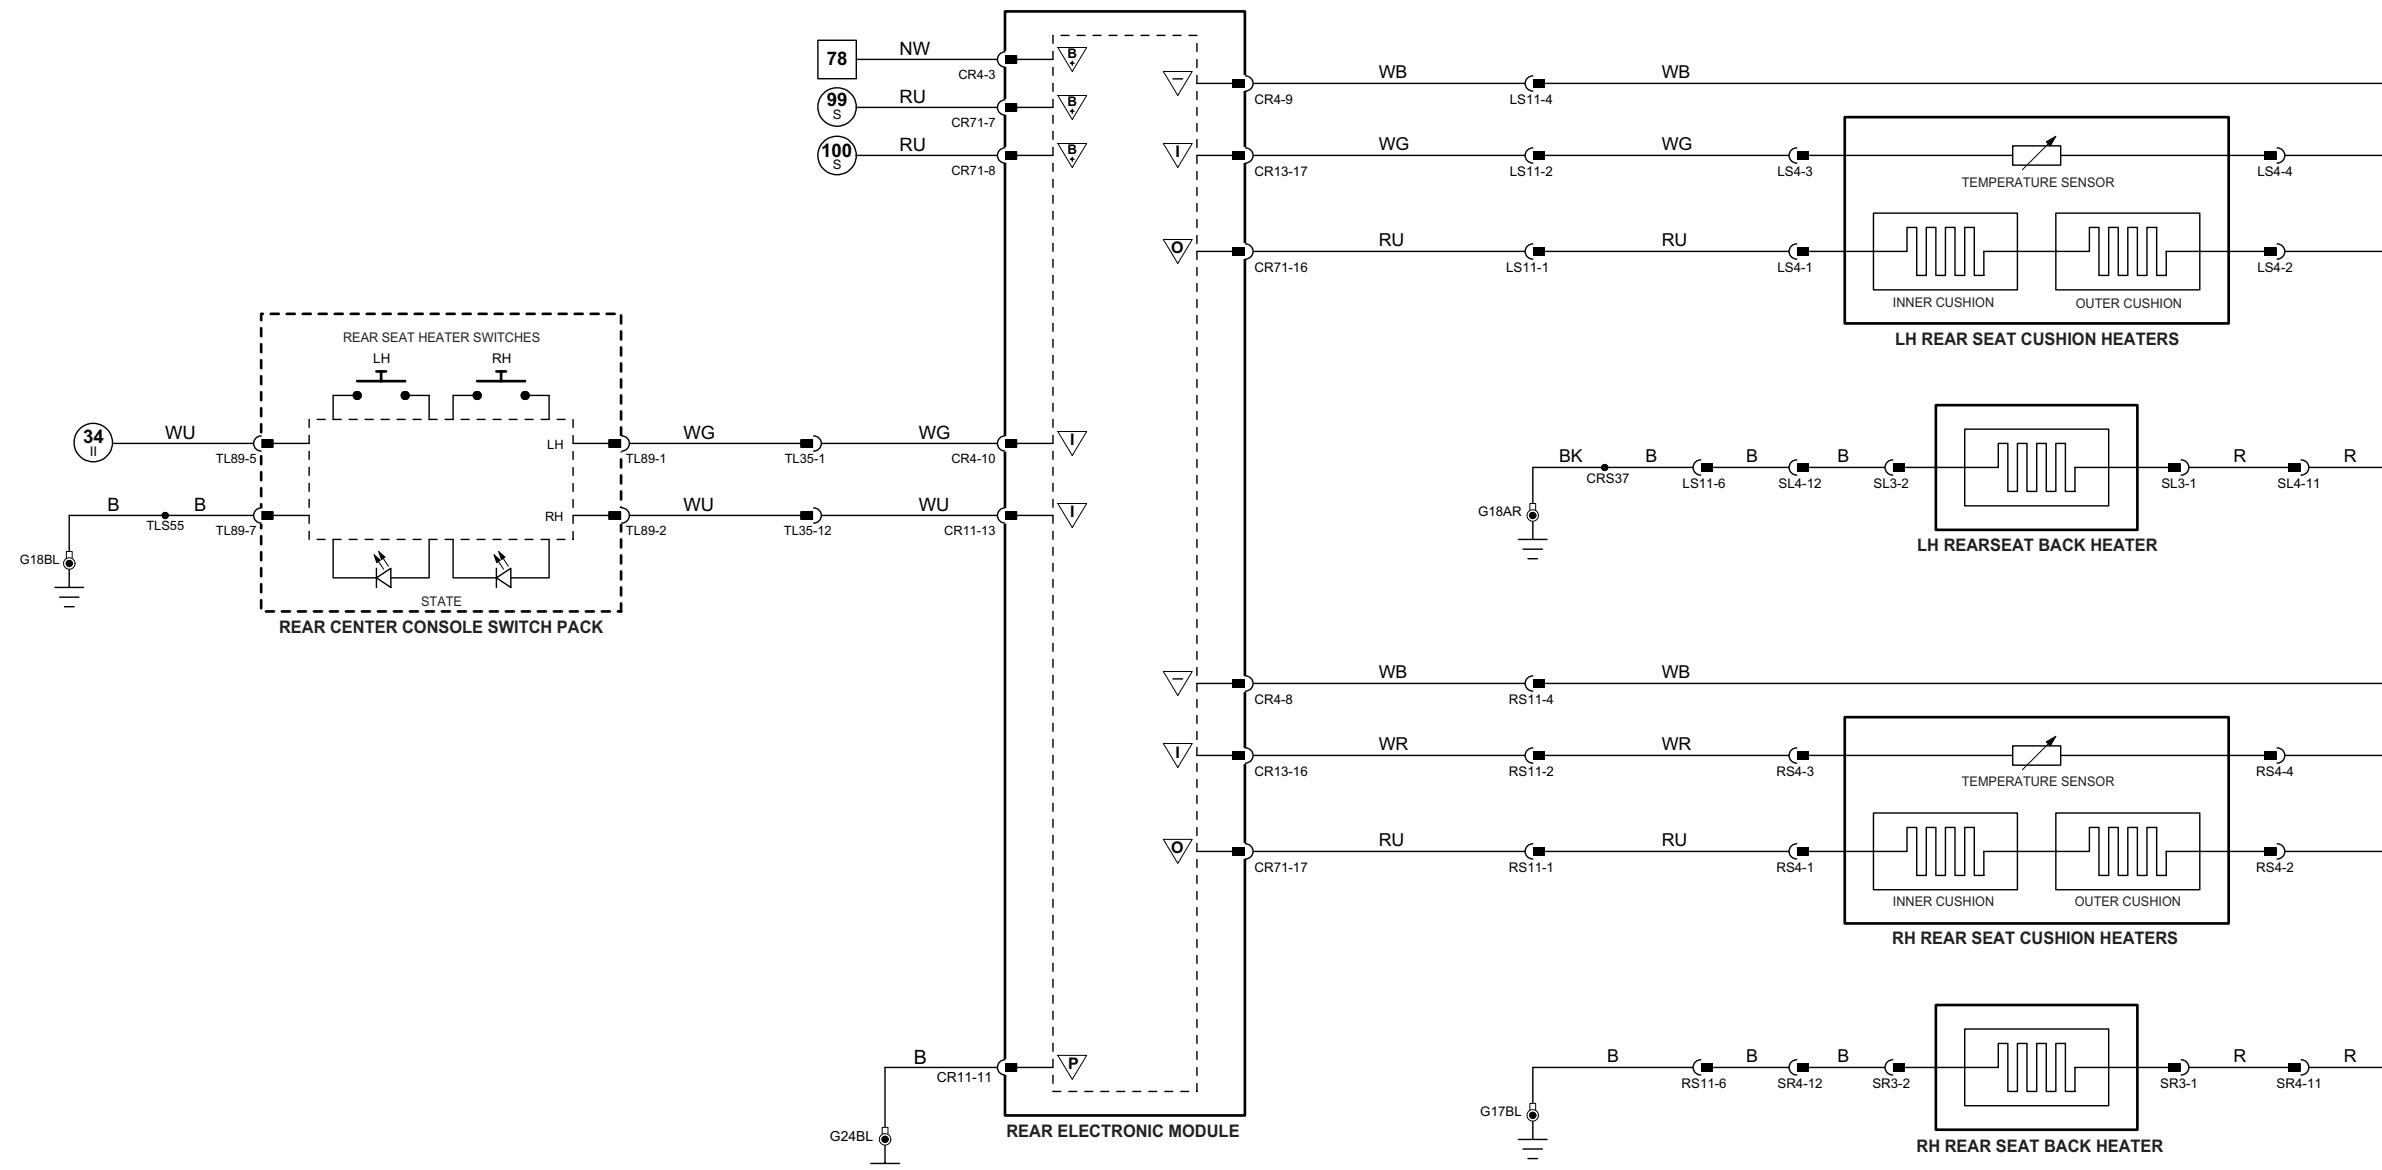

f11\_9\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	+	ACP	VARIANT: Heated Rear Seats Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	Power Ground	-	SCP	VIN RANGE: All
							CAN	DATE OF ISSUE: May 2007
							D	Serial and Encoded Data

### Climate-Controlled Seat Module

Pin	Description and Characteristic
O IP80-A	PASSENGER SEAT CUSHION TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-B	PASSENGER SEAT CUSHION TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-C	PASSENGER SEAT BACK TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-D	PASSENGER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
B+ IP80-E	BATTERY POWER SUPPLY: B+
B+ IP80-F	BATTERY POWER SUPPLY: B+
O IP80-G	DRIVER SEAT CUSHION TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-H	DRIVER SEAT CUSHION TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-I	DRIVER SEAT BACK TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-J	DRIVER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-K	DRIVER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
PG IP80-M	POWER GROUND: CONTROL MODULE
B+ IP81-1	IGNITION SWITCHED POWER SUPPLY (II): B+
I IP81-2	PASSENGER SEAT CUSHION TEMPERATURE SENSOR SIGNAL INPUT
I IP81-3	PASSENGER SEAT CUSHION TEMPERATURE SENSOR RETURN
I IP81-4	PASSENGER SEAT BACK TEMPERATURE SENSOR SIGNAL INPUT
I IP81-5	PASSENGER SEAT BACK TEMPERATURE SENSOR RETURN
I IP81-7	DRIVER SEAT CUSHION TEMPERATURE SENSOR SIGNAL INPUT
I IP81-8	DRIVER SEAT CUSHION TEMPERATURE SENSOR RETURN
I IP81-9	DRIVER SEAT BACK TEMPERATURE SENSOR SIGNAL INPUT
I IP81-10	DRIVER SEAT BACK TEMPERATURE SENSOR RETURN
C IP82-1	CAN +
C IP82-2	CAN -
O IP82-3	PASSENGER SEAT CUSHION BLOWER MOTOR SPEED CONTROL
O IP82-4	PASSENGER SEAT BACK BLOWER MOTOR SPEED CONTROL
IP82-5	SPARE - INTERNALLY CONNECTED TO GROUND
I IP82-6	PASSENGER SEAT SWITCH INPUT- PWM SIGNAL FROM CENTER CONSOLE SWITCHPACK
O IP82-7	PASSENGER SEAT CUSHION/BACK BLOWER MOTORS RETURN: -Ve
O IP82-8	PASSENGER SEAT CUSHION/BACK BLOWER MOTORS SUPPLY: +Ve
IP82-9	SPARE - INTERNALLY CONNECTED TO GROUND
IP82-10	SPARE - INTERNALLY CONNECTED TO GROUND
O IP82-11	DRIVER SEAT CUSHION BLOWER MOTOR SPEED CONTROL SIGNAL
O IP82-12	DRIVER SEAT BACK BLOWER MOTOR SPEED CONTROL SIGNAL
IP82-13	SPARE - INTERNALLY CONNECTED TO GROUND
I IP82-14	DRIVER SEAT SWITCH INPUT - PWM SIGNAL FROM CENTER CONSOLE SWITCHPACK
O IP82-15	DRIVER SEAT CUSHION/BACK BLOWER MOTORS RETURN: -Ve
O IP82-16	DRIVER SEAT CUSHION/BACK BLOWER MOTORS SUPPLY: +Ve

Fig. 11.10

### COMPONENTS

Component	Connector(s)	Connector Description	Location
DRIVER CLIMATE SEAT BACK	SD30	8-WAY / GREY	DRIVER SEAT BACK / LOWER
DRIVER CLIMATE SEAT CUSHION	SD31	8-WAY / GREY	DRIVER SEAT CUSHION / UNDER
CLIMATE-CONTROLLED SEAT MODULE	IP80	12-WAY / BLACK	BELOW INSTRUMENT PANEL / DRIVER SIDE
	IP81	10-WAY / BLACK	
	IP82	16-WAY / BLACK	
PASSENGER CLIMATE SEAT BACK	SP34	8-WAY / GREY	PASSENGER SEAT BACK / LOWER
PASSENGER CLIMATE SEAT CUSHION	SP35	8-WAY / GREY	PASSENGER SEAT CUSHION / UNDER
CLIMATE CONTROLLED SEAT SWITCHES	CL1	8-WAY / BLACK	CENTER CONSOLE / ABOVE TOUCH SCREEN DISPLAY
	CL2	8-WAY / BLACK	

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP69	14-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

### GROUNDS

Ground	Location
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

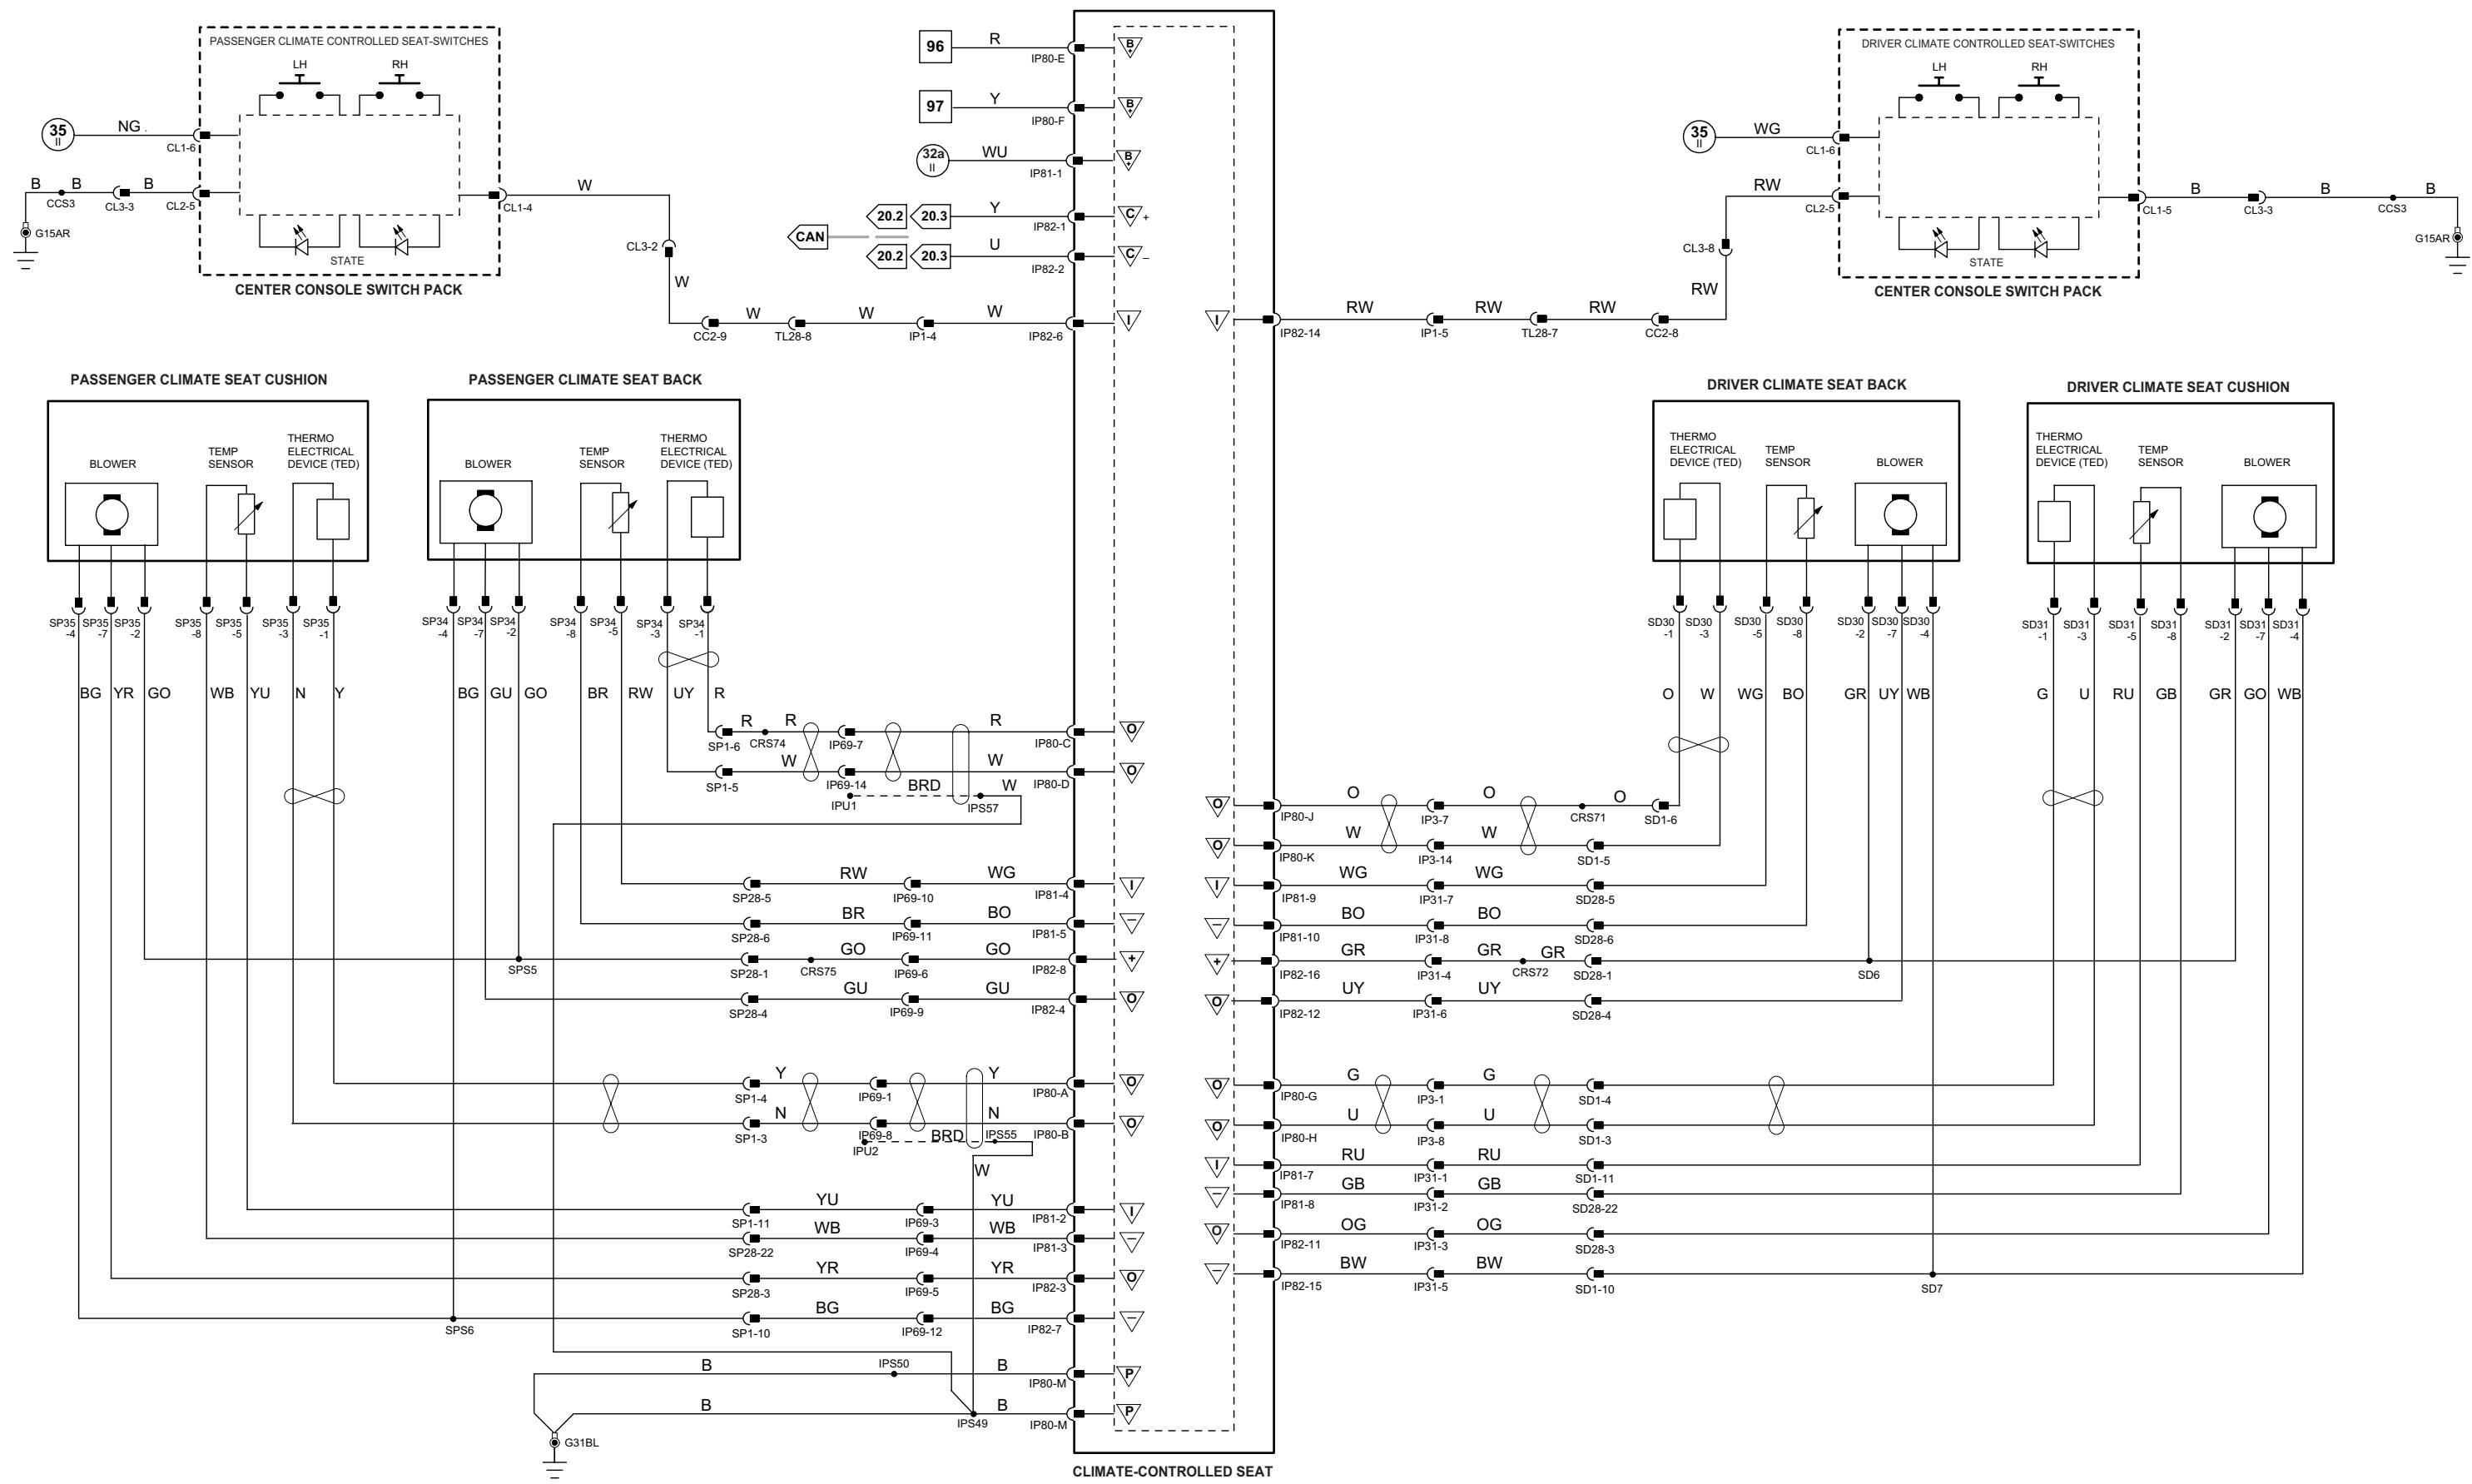

VARIANT: Climate Seats Vehicles (LHD)	VIN RANGE: All
	DATE OF ISSUE: May 2007

### Climate-Controlled Seat Module

Pin	Description and Characteristic
O IP80-A	PASSENGER SEAT CUSHION TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-B	PASSENGER SEAT CUSHION TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-C	PASSENGER SEAT BACK TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-D	PASSENGER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
B+ IP80-E	BATTERY POWER SUPPLY: B+
B+ IP80-F	BATTERY POWER SUPPLY: B+
O IP80-G	DRIVER SEAT CUSHION TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-H	DRIVER SEAT CUSHION TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-I	DRIVER SEAT BACK TED PWM OUTPUT : +Ve IN HEAT MODE; -Ve IN COOL MODE
O IP80-J	DRIVER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
O IP80-K	DRIVER SEAT BACK TED PWM OUTPUT : -Ve IN HEAT MODE; +Ve IN COOL MODE
PG IP80-M	POWER GROUND: CONTROL MODULE
B+ IP81-1	IGNITION SWITCHED POWER SUPPLY (II): B+
I IP81-2	PASSENGER SEAT CUSHION TEMPERATURE SENSOR SIGNAL INPUT
I IP81-3	PASSENGER SEAT CUSHION TEMPERATURE SENSOR RETURN
I IP81-4	PASSENGER SEAT BACK TEMPERATURE SENSOR SIGNAL INPUT
I IP81-5	PASSENGER SEAT BACK TEMPERATURE SENSOR RETURN
I IP81-7	DRIVER SEAT CUSHION TEMPERATURE SENSOR SIGNAL INPUT
I IP81-8	DRIVER SEAT CUSHION TEMPERATURE SENSOR RETURN
I IP81-9	DRIVER SEAT BACK TEMPERATURE SENSOR SIGNAL INPUT
I IP81-10	DRIVER SEAT BACK TEMPERATURE SENSOR RETURN
C IP82-1	CAN +
C IP82-2	CAN -
O IP82-3	PASSENGER SEAT CUSHION BLOWER MOTOR SPEED CONTROL
O IP82-4	PASSENGER SEAT BACK BLOWER MOTOR SPEED CONTROL
IP82-5	SPARE - INTERNALLY CONNECTED TO GROUND
I IP82-6	PASSENGER SEAT SWITCH INPUT- PWM SIGNAL FROM CENTER CONSOLE SWITCHPACK
O IP82-7	PASSENGER SEAT CUSHION/BACK BLOWER MOTORS RETURN: -Ve
O IP82-8	PASSENGER SEAT CUSHION/BACK BLOWER MOTORS SUPPLY: +Ve
IP82-9	SPARE - INTERNALLY CONNECTED TO GROUND
IP82-10	SPARE - INTERNALLY CONNECTED TO GROUND
O IP82-11	DRIVER SEAT CUSHION BLOWER MOTOR SPEED CONTROL SIGNAL
O IP82-12	DRIVER SEAT BACK BLOWER MOTOR SPEED CONTROL SIGNAL
I IP82-13	SPARE - INTERNALLY CONNECTED TO GROUND
I IP82-14	DRIVER SEAT SWITCH INPUT - PWM SIGNAL FROM CENTER CONSOLE SWITCHPACK
O IP82-15	DRIVER SEAT CUSHION/BACK BLOWER MOTORS RETURN: -Ve
O IP82-16	DRIVER SEAT CUSHION/BACK BLOWER MOTORS SUPPLY: +Ve

Fig. 11.11

### COMPONENTS

Component	Connector(s)	Connector Description	Location
DRIVER CLIMATE SEAT BACK	SD30	8-WAY / GREY	DRIVER SEAT BACK / LOWER
DRIVER CLIMATE SEAT CUSHION	SD31	8-WAY / GREY	DRIVER SEAT CUSHION / UNDER
CLIMATE-CONTROLLED SEAT MODULE	IP80	12-WAY / BLACK	BELOW INSTRUMENT PANEL / DRIVER SIDE
	IP81	10-WAY / BLACK	
	IP82	16-WAY / BLACK	
PASSENGER CLIMATE SEAT BACK	SP34	8-WAY / GREY	PASSENGER SEAT BACK / LOWER
PASSENGER CLIMATE SEAT CUSHION	SP35	8-WAY / GREY	PASSENGER SEAT CUSHION / UNDER
CLIMATE CONTROLLED SEAT SWITCHES	CL1	8-WAY / BLACK	CENTER CONSOLE / ABOVE TOUCH SCREEN DISPLAY
	CL2	8-WAY / BLACK	

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP69	14-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
SD1	12-WAY / GREY / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

### GROUNDS

Ground	Location
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

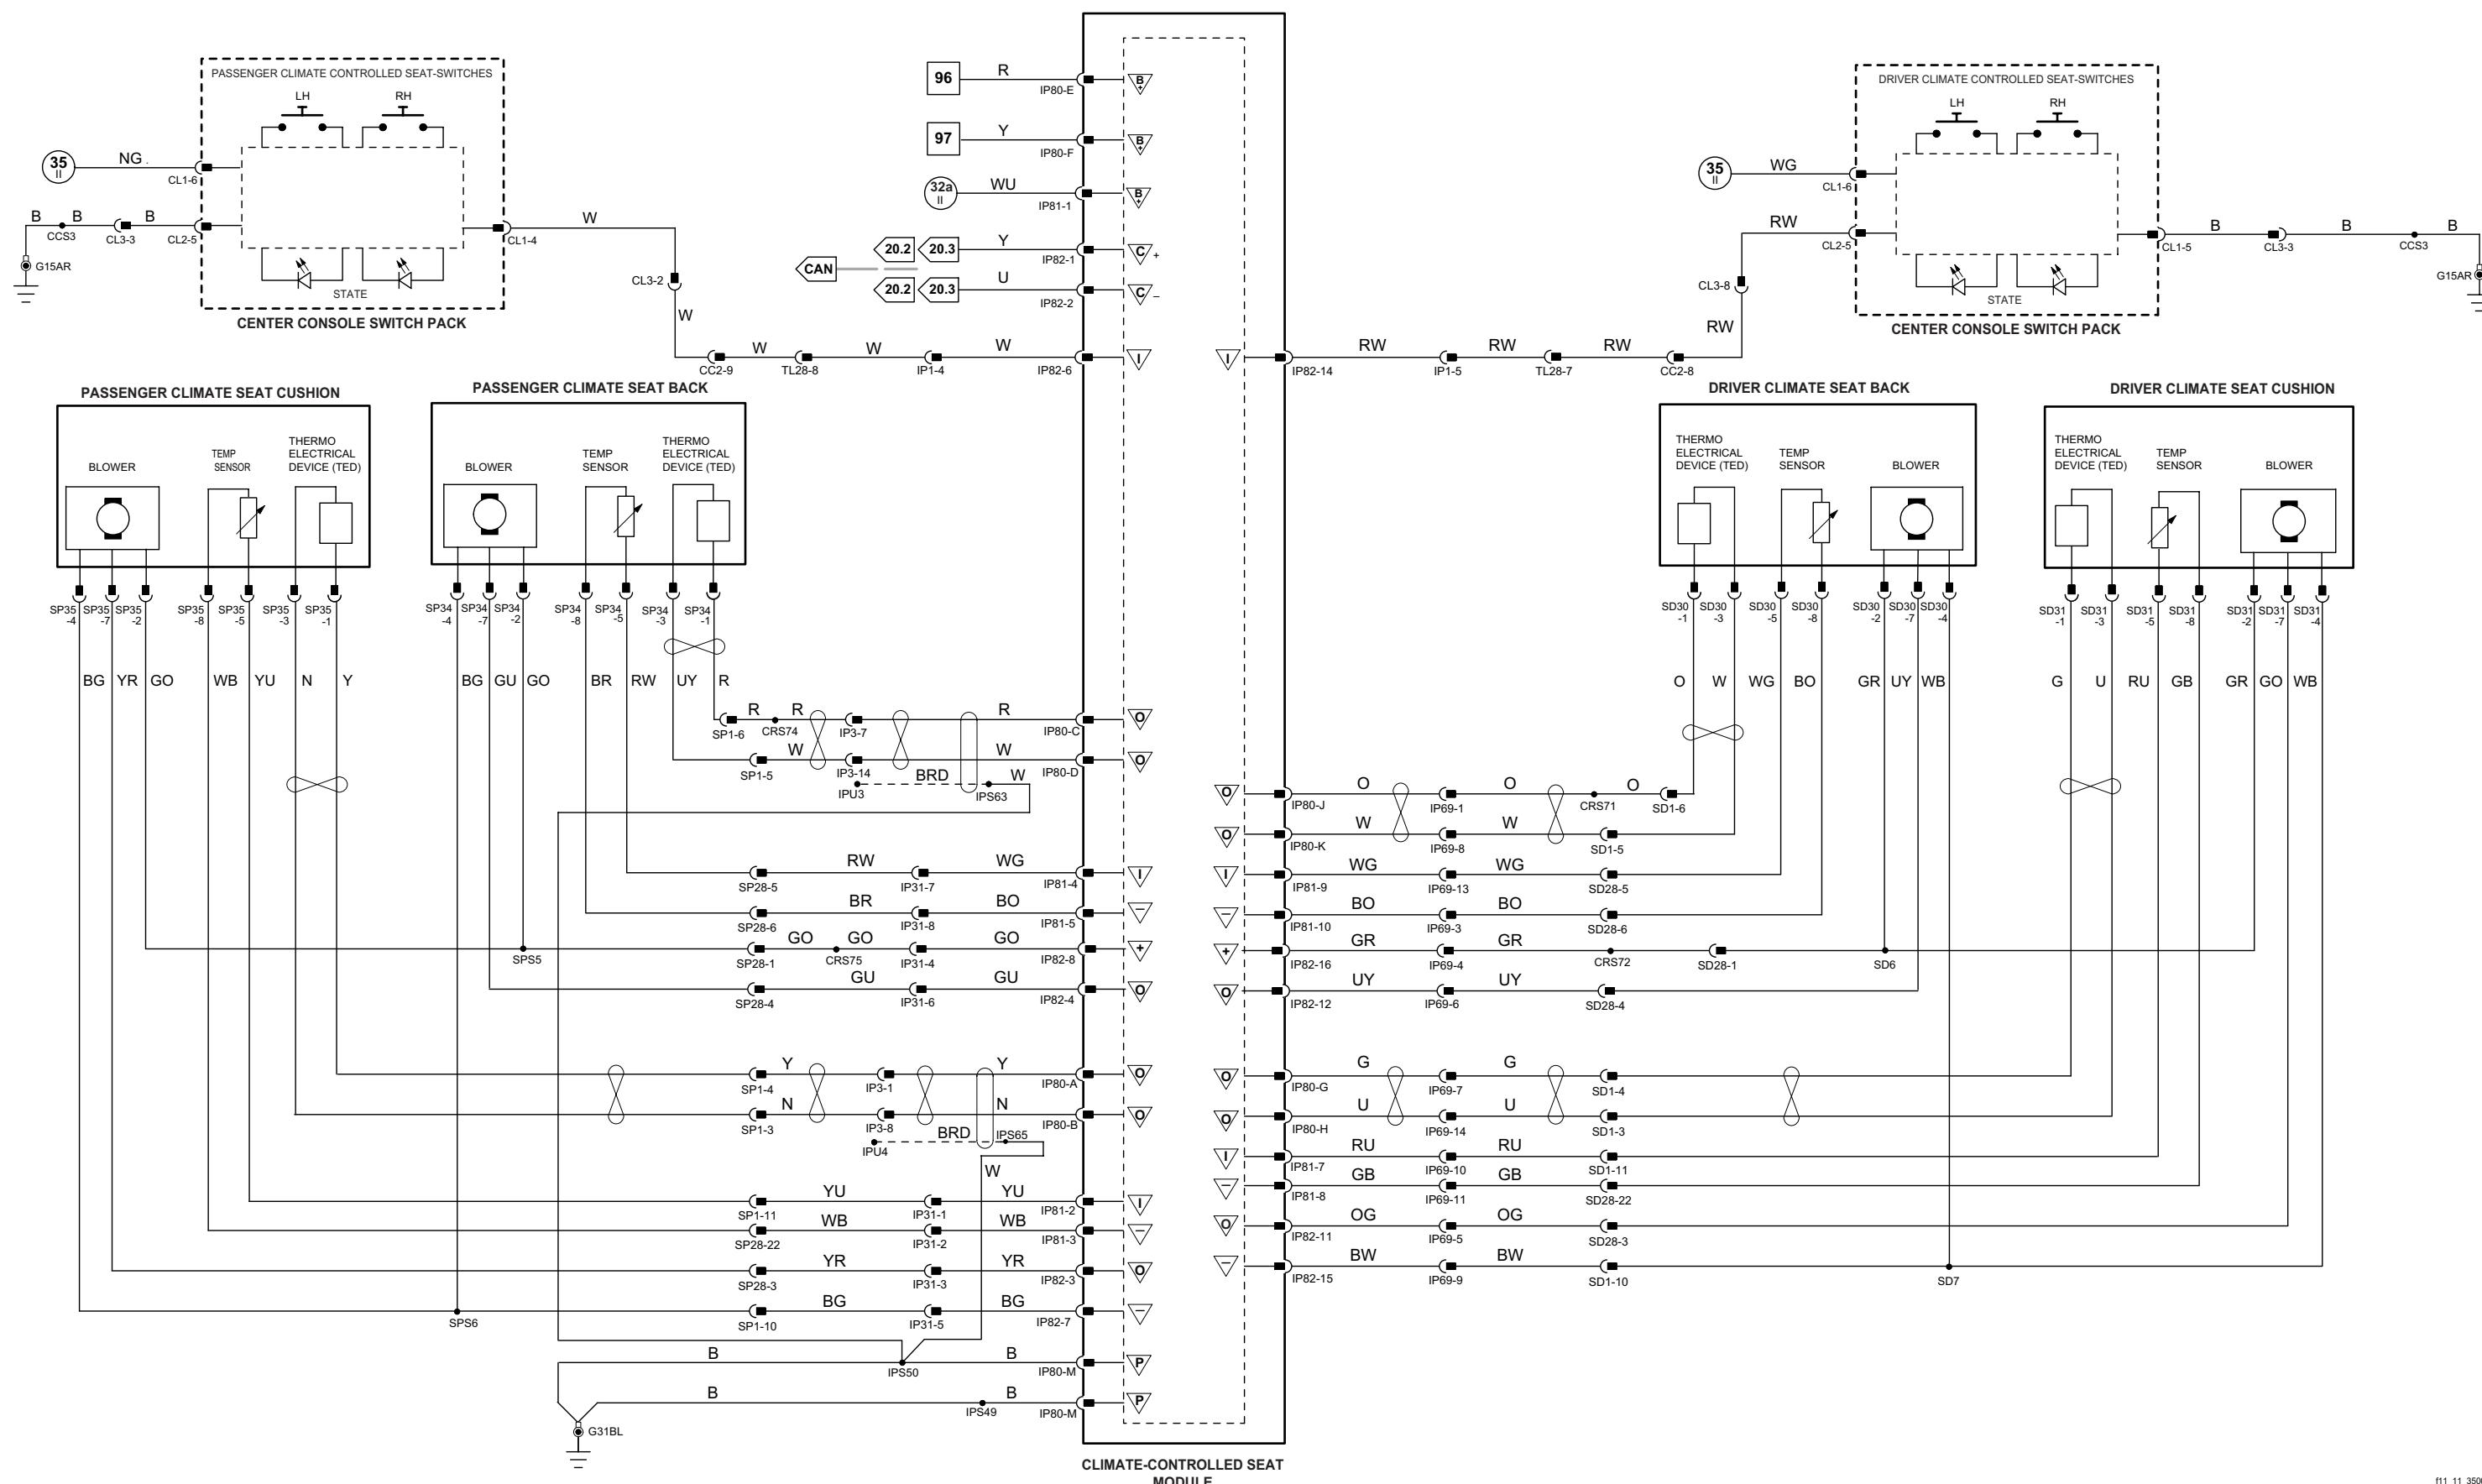

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: Climate Seats Vehicles (RHD)
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	O Power Ground	Sensor/Signal Ground	CAN	D Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

**Fig. 12.1**

**Driver Door Module**

Pin	Description and Characteristic
O DD11-6	REMOTE KEYLESS ENTRY MODULE POWER SUPPLY: B+
O DD11-8	LOCK DRIVE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
O DD11-9	UNLOCK DRIVE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
O DD11-10	DOUBLE LOCK DRIVE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
D DD11-13	REMOTE KEYLESS ENTRY MODULE SIGNAL: ENCODED COMMUNICATIONS
I DD11-16	DRIVER DOOR ALARM SET / LOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND
I DD11-17	DRIVER DOOR ALARM RESET / UNLOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND
D DD11-18	REMOTE KEYLESS ENTRY MODULE SIGNAL: ENCODED COMMUNICATIONS
D DD11-20	REMOTE KEYLESS ENTRY RETURN
I DD12-25	DRIVER DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
I DD13-2	DRIVER UNLOCK STATUS SWITCH SIGNAL: GROUND WHEN ACTIVATED
S DD13-3	SCP NETWORK +
S DD13-4	SCP NETWORK -
SG DD13-7	LOGIC GROUND: GROUND
PG DD13-8	POWER GROUND: GROUND
I DD13-10	DRIVER LOCK STATUS SWITCH SIGNAL: GROUND WHEN ACTIVATED
B+ DD13-11	BATTERY POWER SUPPLY: LOGIC: B+
B+ DD13-12	SWITCHED SYSTEM POWER SUPPLY: B+

**Front Electronic Module**

Pin	Description and Characteristic
I CR1-1	PASSENGER DOOR AJAR SWITCH SIGNAL: GROUND WHEN ACTIVATED
S CR9-1	SCP -
B+ CR9-6	BATTERY POWER SUPPLY (LOGIC): B+
S CR9-7	SCP +
I CR9-8	GLOBAL OPEN / CLOSE SWITCH SIGNAL: GROUND WHEN ACTIVATED
SG CR9-12	LOGIC GROUND: GROUND
B+ CR85-1	SWITCHED SYSTEM POWER SUPPLY: B+
I CR85-6	VALET SWITCH SIGNAL: GROUND WHEN ACTIVATED
I EC36-5	FUEL FLAP RELEASE SWITCH SIGNAL: GROUND WHEN ACTIVATED
I EC36-8	TRUNK RELEASE SWITCH SIGNAL: GROUND WHEN ACTIVATED

**Rear Electronic Module**

Pin	Description and Characteristic
O CR4-1	UNLOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR4-2	LOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
I CR4-7	TRUNK CLOSE SWITCH SIGNAL: GROUND (SIGNAL) WHEN TRUNK IS AJAR
O CR4-11	DOUBLE LOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR4-12	DOUBLE LOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR11-3	FUEL FILLER FLAP MOTOR ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR11-4	TRUNK RELEASE MOTOR ACTIVATE: OPEN / CLOSE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR11-5	TRUNK RELEASE MOTOR ACTIVATE: CLOSE / OPEN: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR11-6	LOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR11-7	UNLOCK MOTOR DRIVE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
I CR11-8	TRUNK RELEASE MOTOR OPEN STATUS SIGNAL: GROUND (SIGNAL) WHEN ACTIVATED
SG CR11-10	TRUNK LATCH SIGNAL GROUND: GROUND
PG CR11-11	POWER GROUND: GROUND
SG CR11-12	LOGIC GROUND: GROUND
I CR11-21	PASSENGER DOOR LATCH LOCK STATUS SWITCH SIGNAL: GROUND WHEN ACTIVATED
I CR11-22	PASSENGER DOOR LATCH UNLOCK STATUS SWITCH SIGNAL: GROUND WHEN ACTIVATED
SG CR11-25	LOGIC GROUND: GROUND
I CR12-9	EXTERNAL TRUNK RELEASE SWITCH SIGNAL: GROUND WHEN ACTIVATED
S CR13-1	SCP +
S CR13-2	SCP -
I CR13-14	TRUNK AJAR SWITCH SIGNAL: GROUND (SIGNAL) WHEN TRUNK IS AJAR
I CR13-15	TRUNK RELEASE MOTOR CLOSED STATUS SIGNAL: GROUND (SIGNAL) WHEN ACTIVATED

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUXILIARY LIGHTING SWITCH	IP33	12-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
CL2	8-WAY / BLACK		
DOOR AJAR SWITCH – DRIVER	DD7	2-WAY / BLACK	DRIVER DOOR
DOOR AJAR SWITCH – PASSENGER	DD10	3-WAY / BLACK	PASSENGER DOOR
DOOR LATCH – DRIVER	PD7	2-WAY / BLACK	PASSENGER DOOR
DRIVER DOOR MODULE	PDT0	3-WAY / BLACK	
DOOR LATCH – PASSENGER	DD2	8-WAY / BLACK	DRIVER DOOR TRIM
DRIVER DOOR	DD11	20-WAY / BLACK	DRIVER DOOR
DRIVER DOOR	DD12	26-WAY / BLACK	
DRIVER DOOR	DD13	12-WAY / BLACK	
EXTERNAL TRUNK RELEASE SWITCH	BT5	2-WAY / BLACK	LUGGAGE COMPARTMENT LID
FRONT ELECTRONIC MODULE	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
CR9	12-WAY / BLACK		
FUEL FILLER FLAP MOTOR	CR10	17-WAY / BLACK	
REAR DOOR LOCK MOTOR – DRIVER	CR85	20-WAY / BLACK	
REAR DOOR LOCK MOTOR – PASSENGER	EC36	22-WAY / BLACK	
REAR ELECTRONIC MODULE	EC36	22-WAY / BLACK	
REAR ELECTRONIC MODULE	CR15	2-WAY / BLACK	TRUNK / RH SIDE
REAR DOOR LOCK MOTOR – PASSENGER	RL2	8-WAY / BLACK	DRIVER REAR DOOR
REAR DOOR LOCK MOTOR – PASSENGER	RR2	8-WAY / BLACK	DRIVER REAR DOOR
REAR ELECTRONIC MODULE	RL2	8-WAY / BLACK	PASSENGER REAR DOOR
REAR ELECTRONIC MODULE	RR2	8-WAY / BLACK	PASSENGER REAR DOOR
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
REAR ELECTRONIC MODULE	CR11	26-WAY / NATURAL	
REAR ELECTRONIC MODULE	CR12	12-WAY / BLACK	
REAR ELECTRONIC MODULE	CR13	22-WAY / BLACK	
REAR ELECTRONIC MODULE	CR71	17-WAY / BLACK	
REAR ELECTRONIC MODULE	CR73	4-WAY / BLACK	
REMOTE KEYLESS ENTRY MODULE	IP60	4-WAY / BLACK	BEHIND INSTRUMENT PANEL / DRIVER SIDE
TRUNK AND FUEL FLAP RELEASE SWITCH PACK	IP50	10-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
TRUNK LATCH	BT2	8-WAY / BLACK	TRUNK LID

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK / TRUNK LID
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP17	16-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

**GROUNDS**

Ground	Location
G9	CABIN / UPPER LH A POST
G10	CABIN / RH A POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

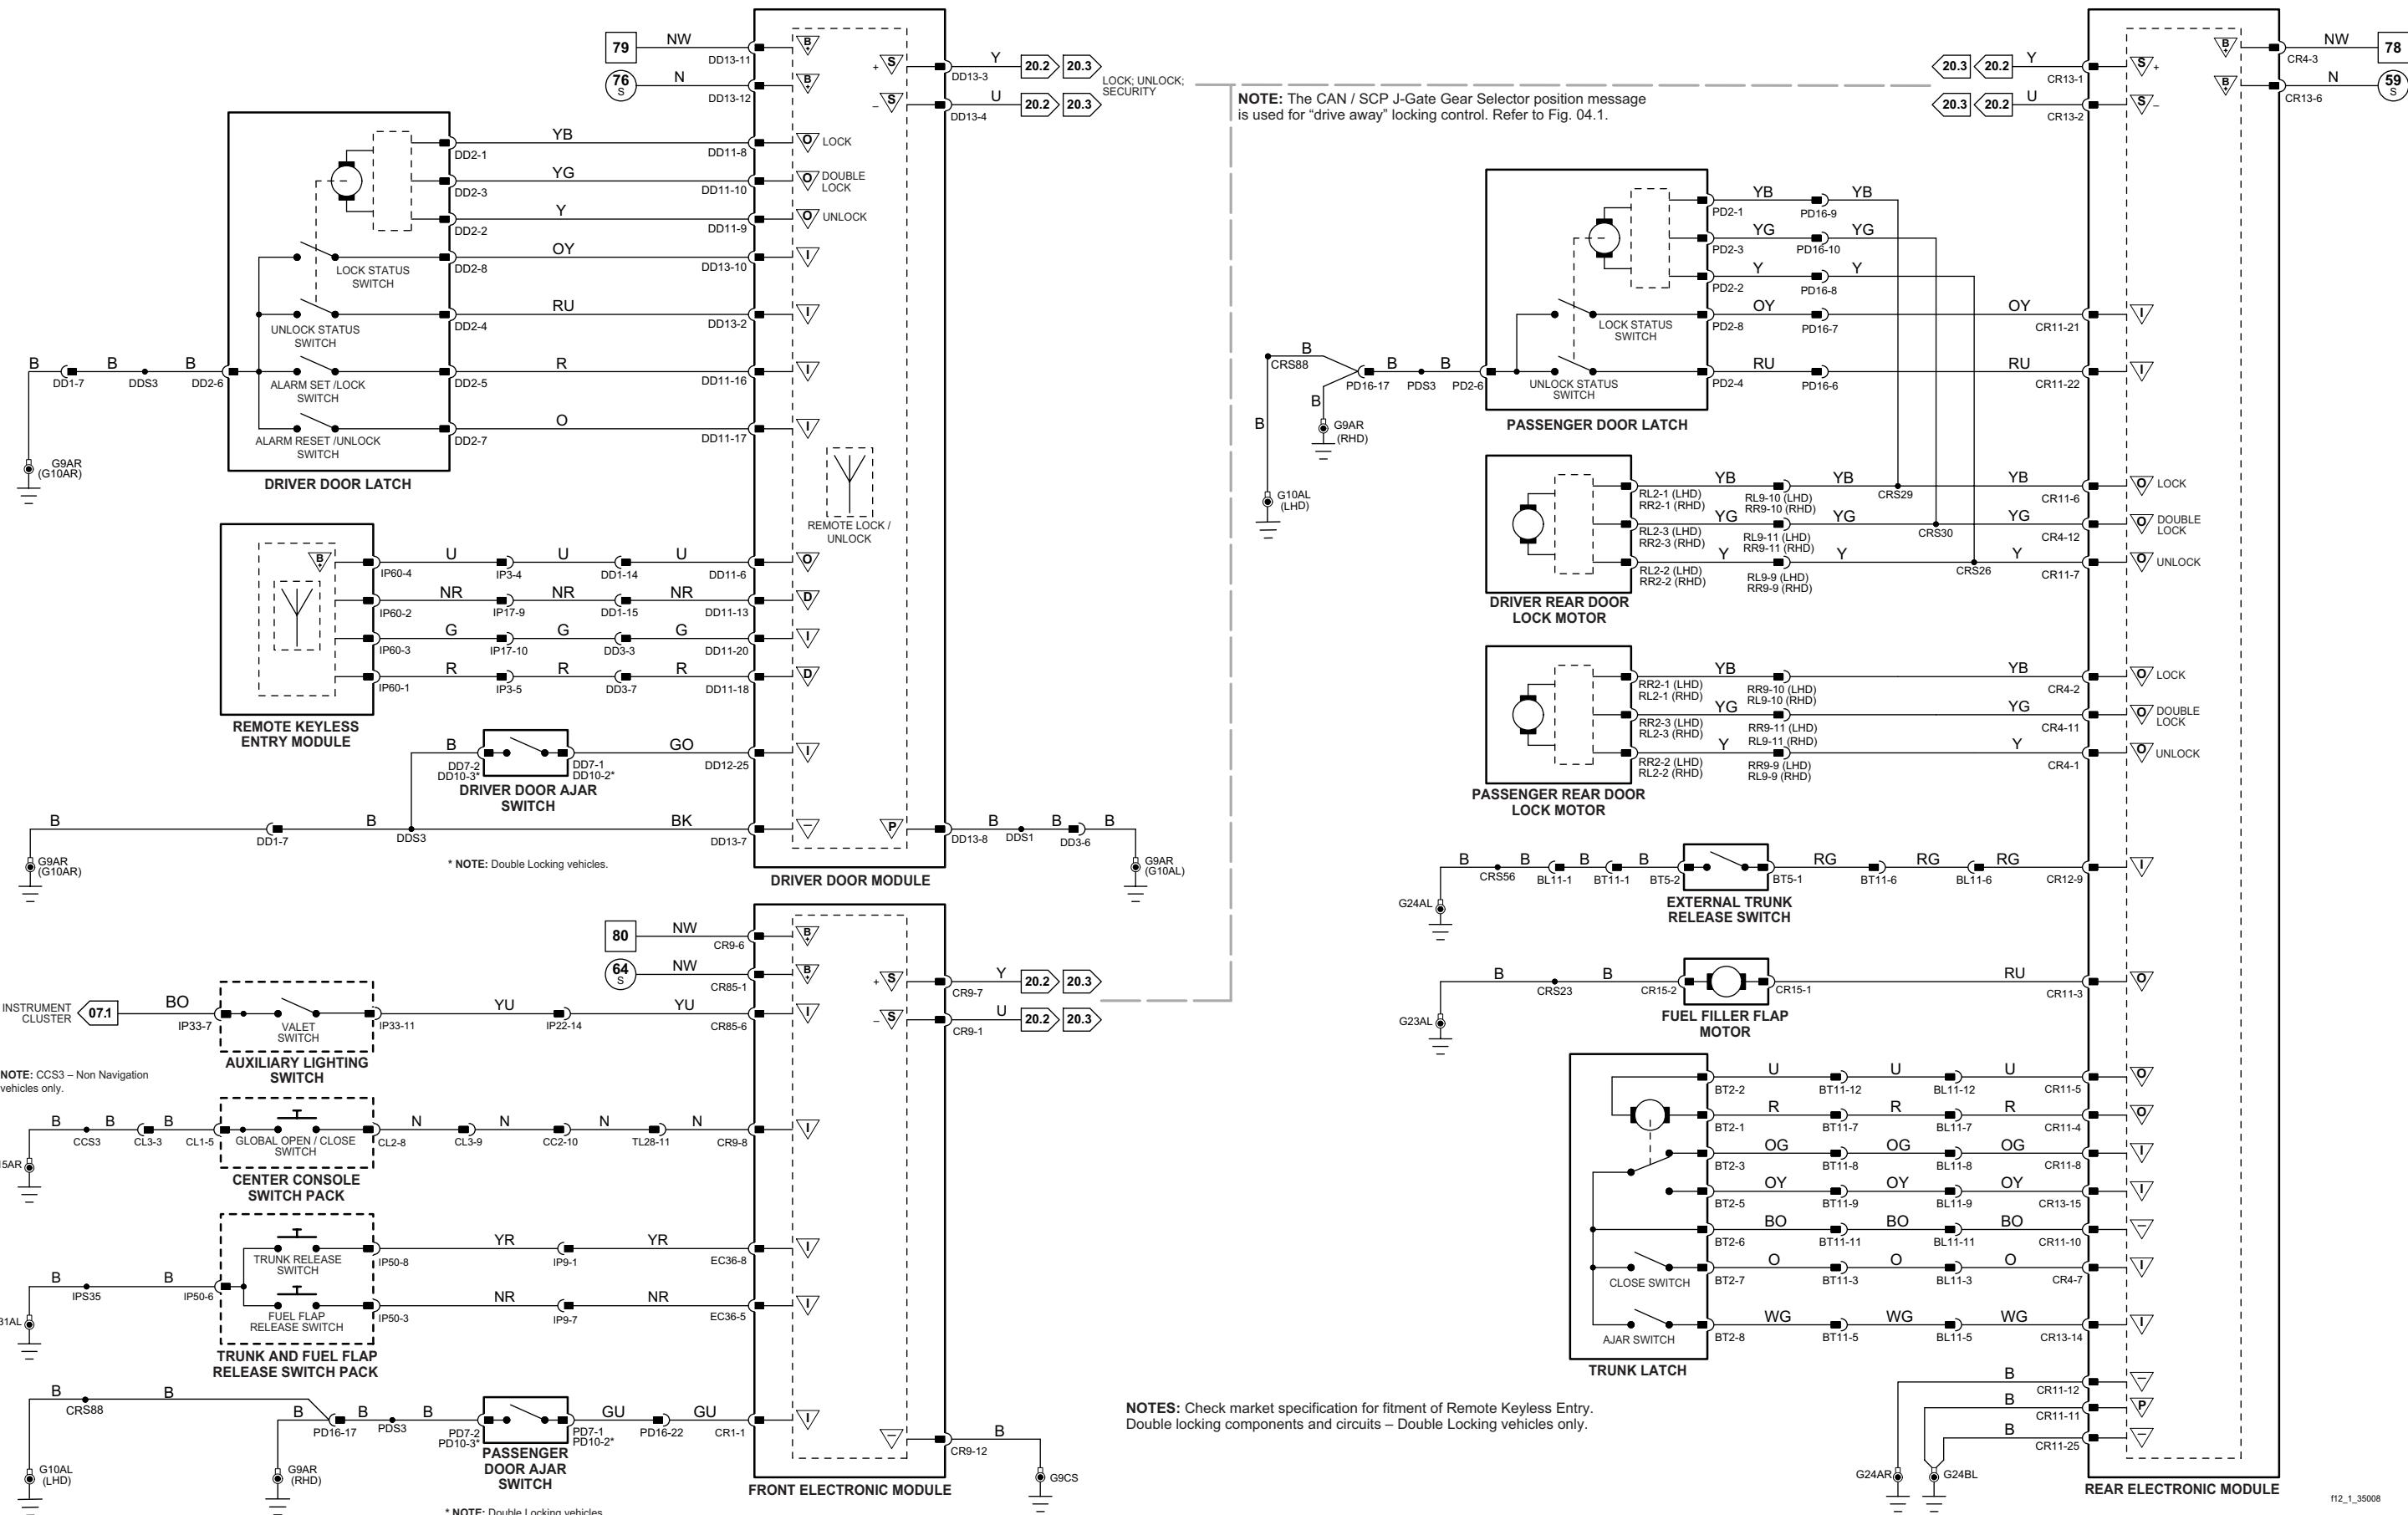

**Fig. 12.2**

**Driver Door Module**

Pin	Description and Characteristic
O DD11-6	REMOTE KEYLESS ENTRY MODULE POWER SUPPLY: B+
D DD11-13	REMOTE KEYLESS ENTRY MODULE SIGNAL: ENCODED COMMUNICATIONS
I DD11-16	DRIVER DOOR ALARM SET / LOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND
I DD11-17	DRIVER DOOR ALARM RESET / UNLOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND
D DD11-18	REMOTE KEYLESS ENTRY MODULE SIGNAL: ENCODED COMMUNICATIONS
D DD11-20	REMOTE KEYLESS ENTRY RETURN
O DD12-6	DDM SECURITY: DDM GROUND
I DD12-25	DRIVER DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
S DD13-3	SCP NETWORK +
S DD13-4	SCP NETWORK -
SG DD13-7	LOGIC GROUND: GROUND
PG DD13-8	POWER GROUND: GROUND
B+ DD13-11	BATTERY POWER SUPPLY: LOGIC: B+

**Engine Control Module**

Pin	Description and Characteristic
C PI1-123	CAN +
C PI1-124	CAN -

**Front Electronic Module**

Pin	Description and Characteristic
I CR1-1	PASSENGER DOOR AJAR SWITCH SIGNAL: GROUND WHEN ACTIVATED
PG CR1-25	FEM SECURITY SYSTEM GROUND SENSING: GROUND WHEN FEM IS INSTALLED
S CR9-1	SCP -
I CR9-3	TELEMATICS DISPLAY SECURITY GROUND SENSING: OPEN CIRCUIT IF TELEMATICS DISPLAY IS REMOVED
B+ CR9-6	BATTERY POWER SUPPLY: LOGIC: B+
S CR9-7	SCP +
SG CR9-12	LOGIC GROUND: GROUND
O CR10-4	LH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O CR10-10	RH TURN SIGNAL ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
B+ CR85-3	IGNITION SWITCHED POWER SUPPLY (II): B+
I CR85-6	VALET SWITCH SIGNAL: GROUND WHEN ACTIVATED
I CR85-7	AUDIO UNIT SECURITY GROUND SENSING: OPEN CIRCUIT IF AUDIO UNIT IS REMOVED
P CR85-14	STEERING COLUMN LOCK MODULE GROUND: GROUND
I EC36-2	HOOD AJAR SWITCH SIGNAL: GROUND WHEN ACTIVATED
I EC36-8	TRUNK RELEASE SWITCH SIGNAL: GROUND WHEN ACTIVATED
O EC36-20	HORN RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND

**Instrument Cluster**

Pin	Description and Characteristic
I IP5-2	KEY-IN AUDIBLE WARNING: B+ WHEN KEY IN
B+ IP5-3	IGNITION SWITCHED POWER SUPPLY (II): B+
B+ IP5-4	IGNITION SWITCHED POWER SUPPLY (I): B+
O IP5-10	SEAT BELT AUDIBLE WARNING REQUEST: AUDIBLE WARNING REQUEST ACTIVE = GROUND
SG IP5-14	SIGNAL GROUND: GROUND
PG IP6-2	POWER GROUND: GROUND
I IP6-4	PATS GROUND: GROUND
D IP6-5	PATS TRANSCIEVER: ENCODED COMMUNICATION
D IP6-6	PATS TRANSCIEVER: ENCODED COMMUNICATION
C IP6-8	CAN +
C IP6-9	CAN -
S IP6-10	SCP -
S IP6-20	SCP +

**Rear Electronic Module**

Pin	Description and Characteristic
B+ CR4-3	BATTERY POWER SUPPLY (LOGIC): B+
O CR4-5	ACTIVE SECURITY SOUNDER ACTIVATE: ENCODED COMMUNICATION
I CR4-6	INTRUSION SENSOR SIGNAL: GROUND (PULSED)
I CR4-7	TRUNK CLOSE SWITCH SIGNAL: GROUND (SIGNAL) WHEN TRUNK IS AJAR
I CR4-17	RH REAR DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
I CR4-19	FEM SECURITY SYSTEM GROUND SENSING: GROUND WHEN FEM IS INSTALLED
I CR11-9	INCLINATION SENSOR SIGNAL
SG CR11-10	TRUNK LATCH SIGNAL GROUND: GROUND
PG CR11-11	POWER GROUND: GROUND
I CR11-16	LH REAR DOOR AJAR SWITCH SIGNAL: GROUND WHEN DOOR IS AJAR
SG CR11-25	LOGIC GROUND: GROUND
O CR12-1	SLCM POWER SUPPLY: B+
I CR12-7	DDM SECURITY SYSTEM GROUND SENSING: GROUND WHEN DDM IS INSTALLED
S CR13-1	SCP +
S CR13-2	SCP -
O CR13-8	PASSIVE SECURITY SOUNDER ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO B+
O CR13-9	INCLINATION SENSOR POWER SUPPLY: B+
O CR13-10	INTRUSION SENSOR POWER SUPPLY: B+
PG CR13-12	ACTIVE SECURITY SOUNDER GROUND SUPPLY: GROUND
I CR13-14	TRUNK AJAR SWITCH SIGNAL: GROUND (SIGNAL) WHEN TRUNK IS AJAR
O CR71-3	LH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND
O CR71-4	RH REAR TURN SIGNAL ACTIVATE: TO ACTIVATE, REM SWITCHES CIRCUIT TO GROUND

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUDIO UNIT	CC8 CC9	20-WAY / BLACK 2-WAY / BLACK	CENTER CONSOLE
AUTO LAMP SENSOR	CC21	FIBER OPTIC CONNECTOR	INSTRUMENT PANEL / CENTER FRONT
AUXILIARY LIGHTING SWITCH	IP36	6-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
CENTER CONSOLE SWITCH PACK	IP33 CL1 CL2	12-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK	CENTER CONSOLE
DOOR AJAR SWITCH – DRIVER	DD7	2-WAY / BLACK	DRIVER DOOR
DOOR AJAR SWITCH – LH REAR	DD10	3-WAY / BLACK	LH REAR DOOR
DOOR AJAR SWITCH – PASSENGER	RL7 RL10	2-WAY / BLACK 3-WAY / BLACK	PASSENGER DOOR
DOOR AJAR SWITCH – RH REAR	PD7 PD10 RR7	3-WAY / BLACK 3-WAY / BLACK 2-WAY / BLACK	RH REAR DOOR
DOOR LATCH – DRIVER	RR10	3-WAY / BLACK	
DRIVER DOOR MODULE	DD2 DD11	8-WAY / BLACK 20-WAY / BLACK	DRIVER DOOR TRIM DRIVER DOOR / BEHIND TRIM
FRONT ELECTRONIC MODULE	CR1 CR9 CR10 CR85 EC36	26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK	CABIN / LH 'A' POST
HOOD AJAR SWITCH	EC14	2-WAY / BLACK	ENGINE COMPARTMENT / BEHIND RH HEADLAMP UNIT
IGNITION SWITCH	IP34	7-WAY / BLACK	STEERING COLUMN
INCLINATION SENSOR	CR28	6-WAY / BLACK	TRUNK / LH REAR
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	IP18	4-WAY / GREEN	IGNITION SWITCH
REAR ELECTRONIC MODULE	CR4 CR11 CR12 CR13 CR71	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK	TRUNK / RH REAR
REMOTE KEYLESS ENTRY MODULE	CR73	4-WAY / BLACK	BEHIND INSTRUMENT PANEL / DRIVER SIDE
ROOF CONSOLE	IP60	4-WAY / BLACK	CABIN ROOF
SECURITY SOUNDER – ACTIVE	RF3	20-WAY / BLACK	TRUNK / RH SIDE / FORWARD
SECURITY SOUNDER – PASSIVE	BS1 PS1	3-WAY / BLACK 1-WAY / BLACK	TRUNK / RH SIDE / FORWARD
STEERING COLUMN LOCK MODULE	PS2	1-WAY / BLACK	UPPER STEERING COLUMN
TELEMATICS DISPLAY	IP24	4-WAY / BLACK	CENTER CONSOLE
TRUNK AND FUEL FLAP RELEASE SWITCH PACK	CC12 IP50	22-WAY / BLACK 10-WAY / BLACK	INSTRUMENT PANEL / OUTBOARD OF STEERING COLUMN
TRUNK LATCH	BT2	8-WAY / BLACK	TRUNK LID

**HARNESS IN-LINE CONNECTORS**


Connector	Connector Description / Location	Location
BL11	16-WAY / BLACK / CABIN HARNESS TO TRUNK LID HARNESS	TRUNK / BEHIND TRUNK LID LINER
BT11	16-WAY / GREY / CABIN TO TRUNK LID LINK HARNESS TO TRUNK LID HARNESS	TRUNK LID
CC1	22-WAY / GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CR122	4-WAY / GREY / CABIN HARNESS TO BATTERY BACKED SOUNDER HARNESS	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND DRIVER SIDE INSTRUMENT PANEL END PLATE
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP17	16-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INST PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSM TUNNEL

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G9	CABIN / UPPER LH A POST
G10	CABIN / RH A POST
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT
G17	CABIN / BELOW REAR SEAT / RH SIDE
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE
G31	CABIN / BEHIND PASSENGER AIR BAG

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

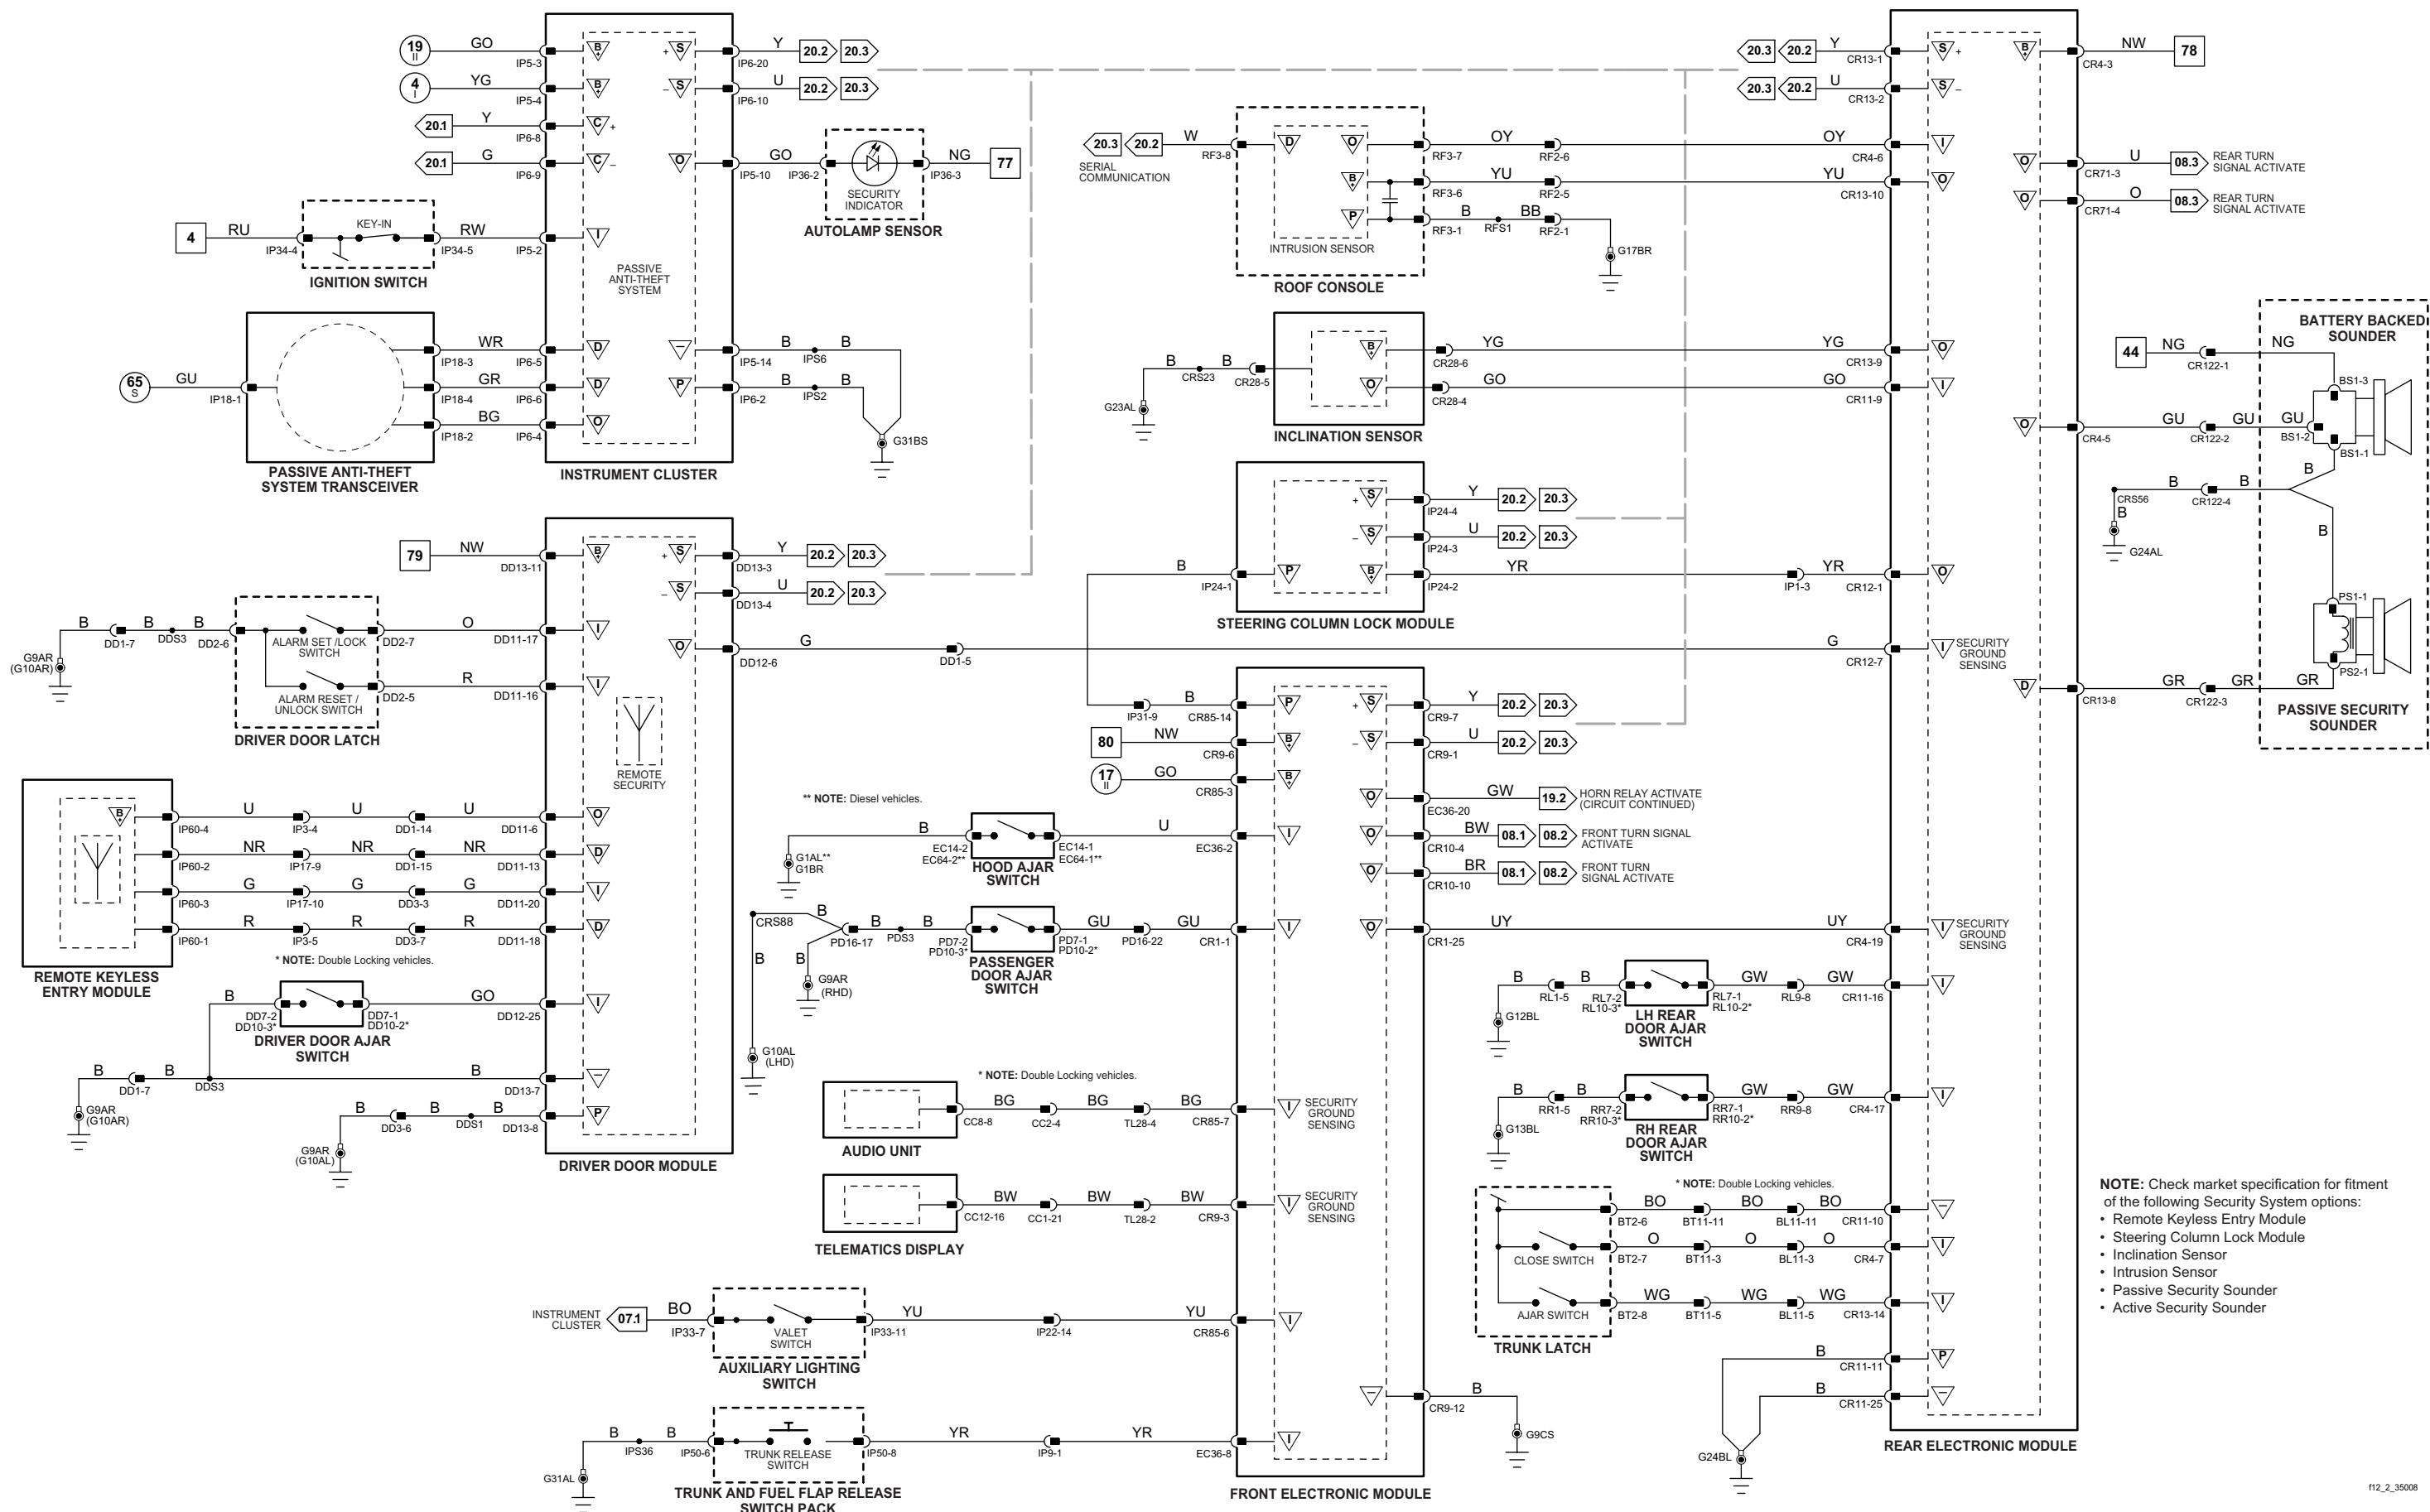

**NOTE:** Check market specification for fitment of the following Security System options:

- Remote Keyless Entry Module
- Steering Column Lock Module
- Inclination Sensor
- Intrusion Sensor
- Passive Security Sounder
- Active Security Sounder

### Front Electronic Module

Pin	Description and Characteristic
I	CR1-4 RAIN SENSING MODULE SIGNAL: PULSED SIGNAL
O	CR1-6 RAIN SENSING MODULE POWER SUPPLY: B+
PG	CR1-26 POWER GROUND: GROUND
SG	CR9-12 LOGIC GROUND: GROUND
B+	CR10-1 SWITCHED SYSTEM POWER SUPPLY: B+
PG	CR10-11 POWER GROUND: GROUND
PG	CR10-13 POWER GROUND: GROUND
PG	CR10-14 POWER GROUND: GROUND
PG	CR85-2 POWER GROUND: GROUND
O	CR85-4 WINDSHIELD WASHER PUMP DRIVE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
SG	CR85-6 WIPE / WASH SWITCHES SIGNAL GROUND: GROUND
I	CR85-9 MOMENTARY WIPE SWITCH SIGNAL: VARIABLE RESISTANCE
I	CR85-10 WASH / WIPE SWITCH SIGNAL: VARIABLE RESISTANCE
I	CR85-13 INTERMITTENT WIPE SWITCH SIGNAL: VARIABLE RESISTANCE
I	CR85-16 WIPER MASTER SWITCH SIGNAL: VARIABLE RESISTANCE
O	EC36-1 WIPER ON / OFF RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
I	EC36-3 WIPERS PARKED SIGNAL: GROUND = PARKED
I	EC36-6 WASHER FLUID LEVEL SIGNAL: GROUND WHEN ACTIVATED
PG	EC36-10 RAIN SENSING MODULE POWER GROUND: GROUND
O	EC36-16 POWER WASH RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND
O	EC36-17 WIPER FAST / SLOW RELAY ACTIVATE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO GROUND

Fig. 13.1

### COMPONENTS

Component	Connector(s)	Connector Description	Location
FRONT ELECTRONIC MODULE	CR1 CR9 CR10 CR85	26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK	CABIN / LH 'A' POST
FRONT POWER DISTRIBUTION FUSE BOX	EC36 EC4 EC5 EC19 EC22 EC26 EC28 EC32 EC35 EC40 EC41	22-WAY / BLACK 4-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 12-WAY / BLACK 4-WAY / BLACK 8-WAY / BLACK 8-WAY / BLACK 10-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
POWER WASH PUMP	WS1	—	FRONT POWER DISTRIBUTION FUSE BOX – R11
POWER WASH RELAY	—	—	CABIN / WINDSHIELD CENTER
RAIN SENSING MODULE	RF6	3-WAY / BLACK	
WASHER FLUID LEVEL SWITCH	WS3		
WINDSHIELD WASHER PUMP	WS2		
WIPE / WASH COLUMN SWITCH	IP40	6-WAY / BLACK	STEERING COLUMN
WIPER FAST / SLOW RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R8
WIPER MOTOR	EC27	4-WAY / BLACK	ENGINE COMPARTMENT, BULKHEAD
WIPER ON / OFF RELAY	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R4

### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
EC53	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / ABOVE LH FOOTWELL
EC70		
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP4	14-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
RF25	8-WAY / BLACK / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER LH 'A' POST

### GROUNDS

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G2	ENGINE COMPARTMENT / BELOW FRONT POWER DISTRIBUTION FUSE BOX
G9	CABIN / UPPER LH 'A' POST
G26	ENGINE COMPARTMENT / RH SIDE / REARWARD OF SUSPENSION TOWER
G30	ENGINE COMPARTMENT / LH SIDE / REARWARD OF SUSPENSION TOWER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

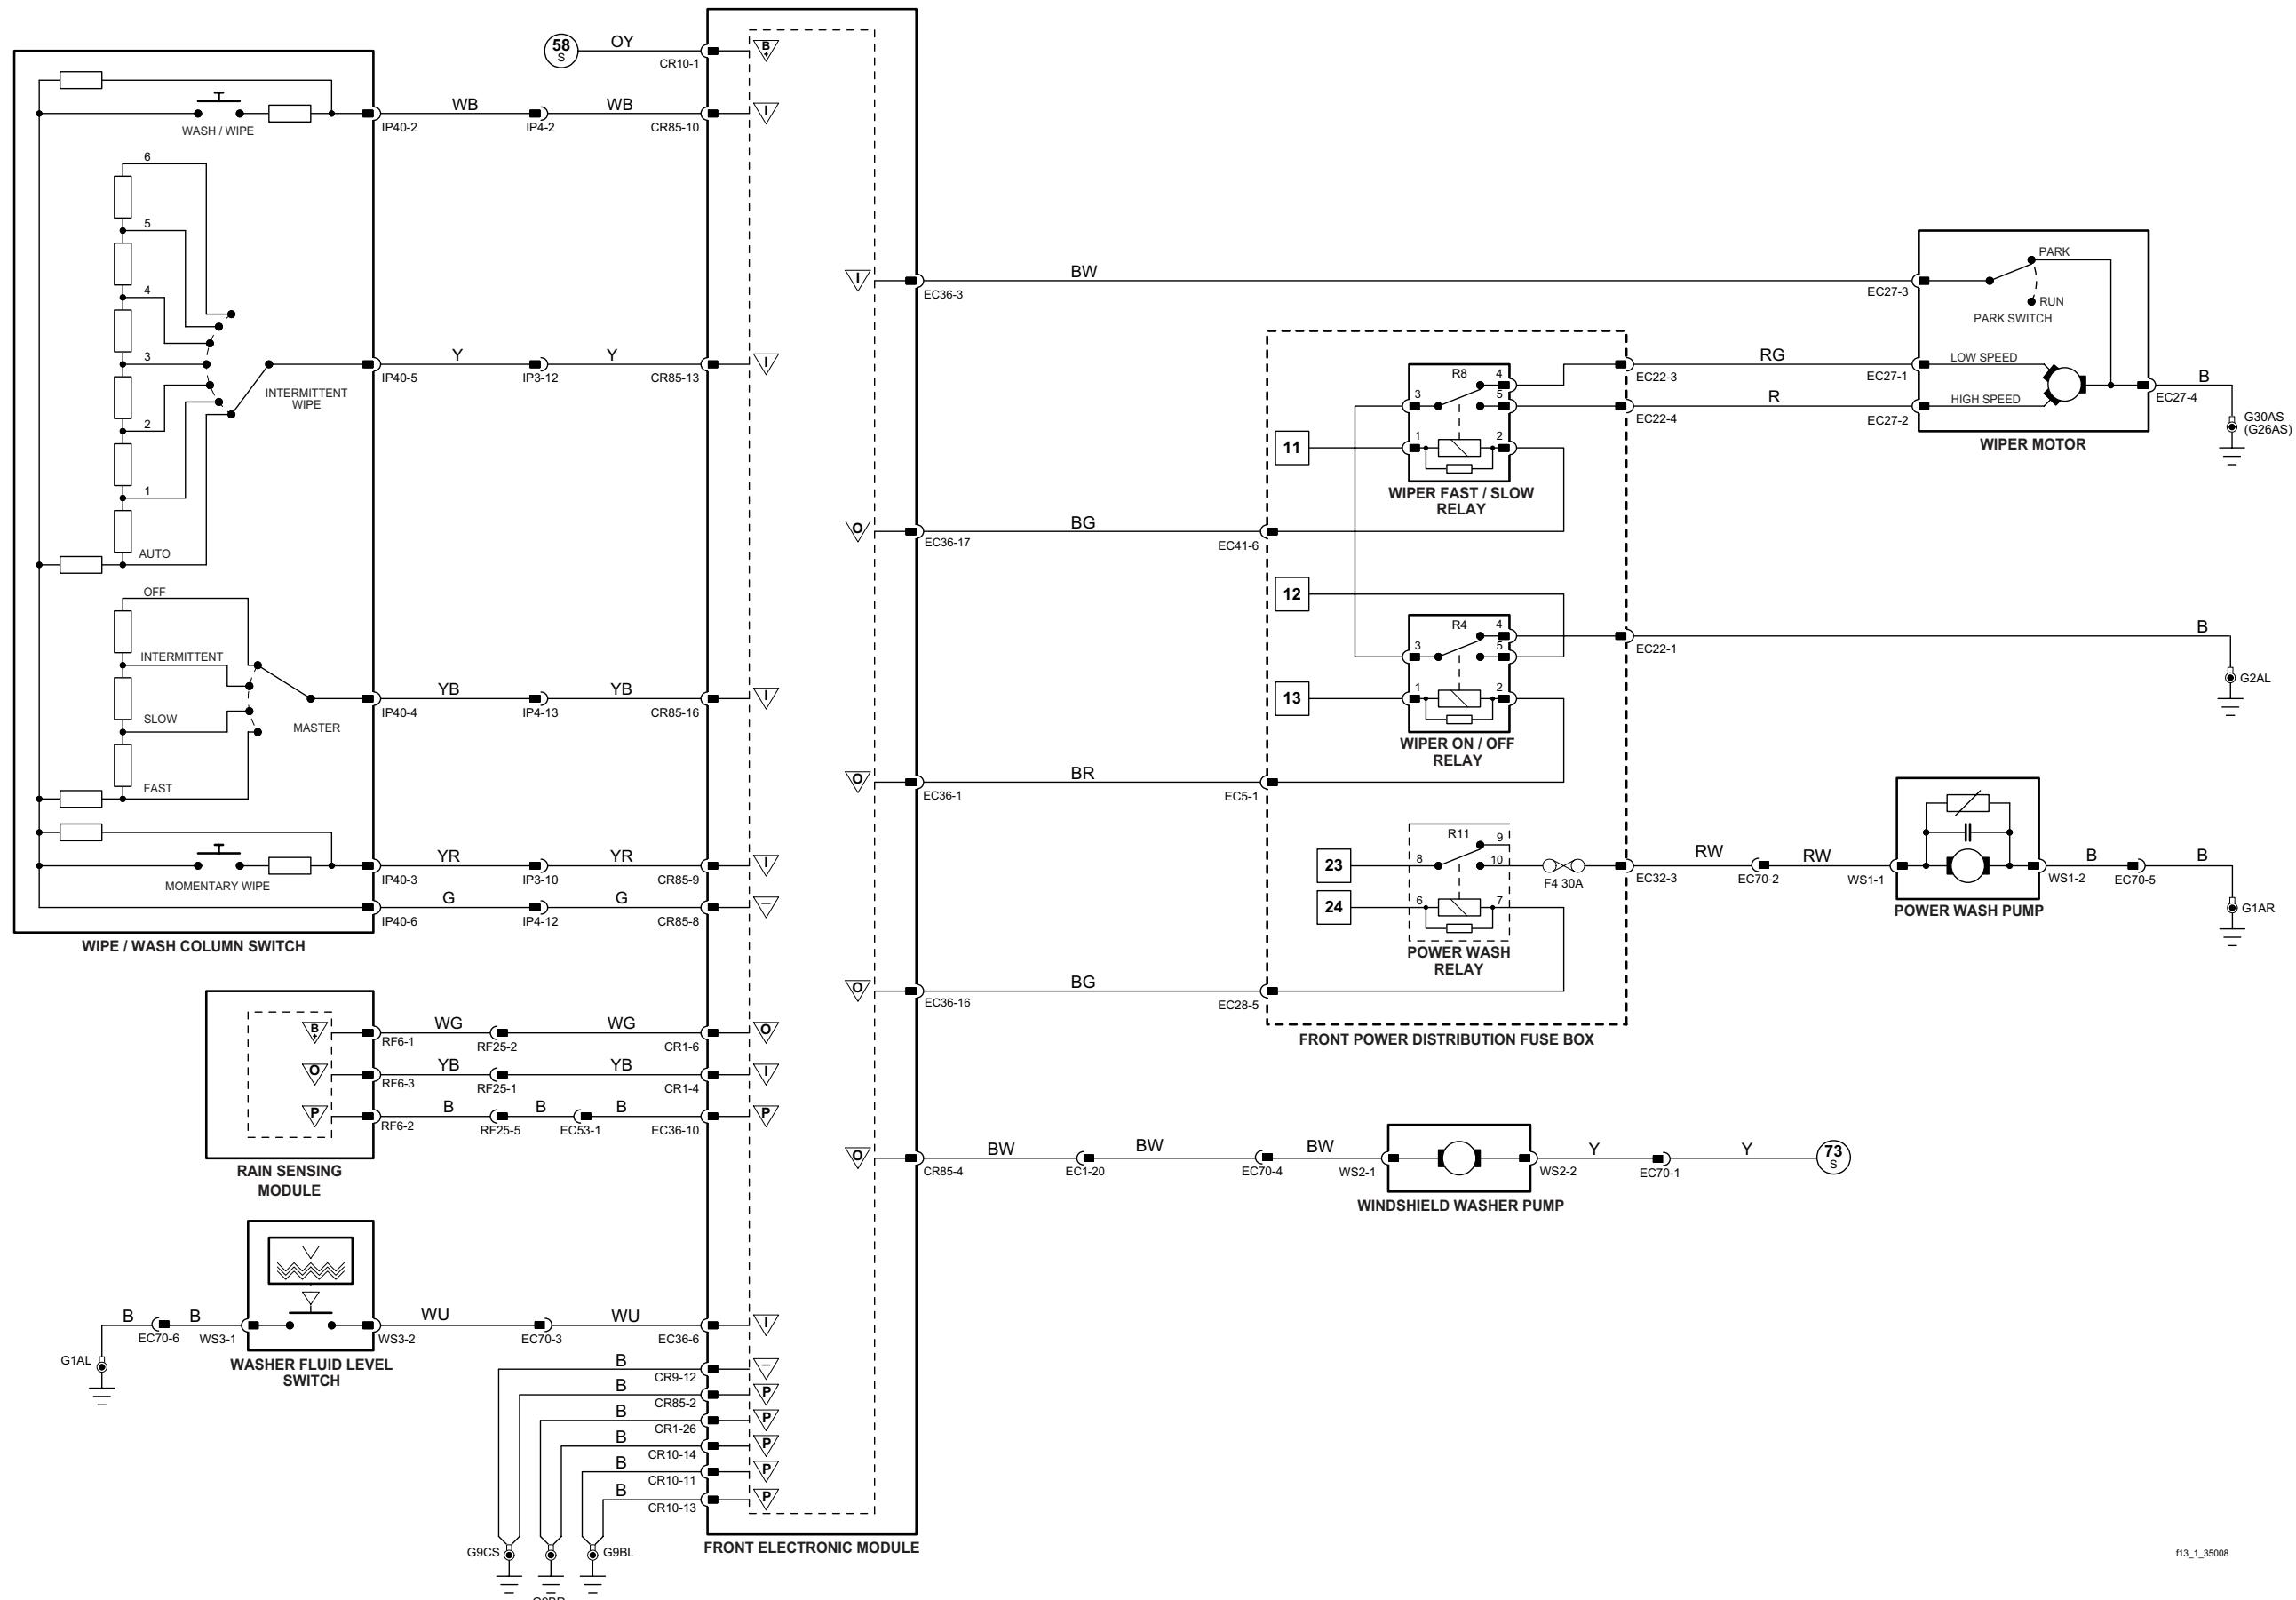

## Driver Door Module

Pin	Description and Characteristic
I DD11-16	DRIVER DOOR ALARM SET / LOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND
I DD11-17	DRIVER DOOR ALARM RESET / UNLOCK SWITCH (NORMALLY OPEN): OPEN CIRCUIT / GROUND

O DD12-12	REAR WINDOW ISOLATE STATUS LED ACTIVATE: TO ACTIVATE, DDM SWITCHES CIRCUIT TO B+
I DD12-22	REAR WINDOW ISOLATE SWITCH SIGNAL: NORMALLY CLOSED SWITCH, OPEN CIRCUIT WHEN SELECTED

S DD13-3	SCP NETWORK +
S DD13-4	SCP NETWORK -
SG DD13-7	LOGIC GROUND: GROUND
B+ DD13-11	BATTERY POWER SUPPLY: LOGIC: B+

## Front Electronic Module

Pin	Description and Characteristic
O CR1-14	POWER WINDOWS ENABLE: TO ACTIVATE, FEM SWITCHES CIRCUIT TO B+
O CR1-15	GLOBAL CLOSE SIGNAL: 20 ms PULSED SIGNAL

S CR9-1	SCP -
B+ CR9-6	BATTERY POWER SUPPLY (LOGIC): B+
S CR9-7	SCP +
I CR9-8	GLOBAL OPEN / CLOSE SWITCH SIGNAL: GROUND WHEN ACTIVATED
SG CR9-12	LOGIC GROUND: GROUND

## Rear Electronic Module

Pin	Description and Characteristic
B+ CR4-3	BATTERY POWER SUPPLY (LOGIC): B+

PG CR11-11	POWER GROUND: GROUND
SG CR11-25	LOGIC GROUND: GROUND

O CR12-2	REAR WINDOW ISOLATE: TO ISOLATE, REM INTERRUPTS GROUND SUPPLY
----------	---

S CR13-1	SCP +
S CR13-2	SCP -

Fig. 14.1

## COMPONENTS

Component	Connector(s)	Connector Description	Location
CENTER CONSOLE SWITCH PACK	CL1	8-WAY / BLACK	CENTER CONSOLE
DOOR LATCH – DRIVER	CL2	8-WAY / BLACK	
DOOR SWITCH PACK – DRIVER	DD2	8-WAY / BLACK	DRIVER DOOR TRIM
DOOR SWITCH PACK – LH REAR	DT4	20-WAY / BLACK	DRIVER DOOR TRIM
DOOR SWITCH PACK – PASSENGER	LT3	8-WAY / BLACK	LH REAR DOOR TRIM
DOOR SWITCH PACK – RH REAR	PT4	8-WAY / BLACK	PASSENGER DOOR TRIM
DRIVER DOOR MODULE	RT3	8-WAY / BLACK	RH REAR DOOR TRIM
	DD11	20-WAY / BLACK	DRIVER DOOR
	DD12	26-WAY / NATURAL	
FRONT ELECTRONIC MODULE	DD13	12-WAY / BLACK	
	CR1	26-WAY / BLACK	CABIN / LH 'A' POST
	CR9	12-WAY / BLACK	
	CR10	17-WAY / BLACK	
	CR85	20-WAY / BLACK	
REAR ELECTRONIC MODULE	EC36	22-WAY / BLACK	
	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
ROOF CONSOLE	RF3	22-WAY / BLACK	ROOF HEADLINER
SLIDING ROOF MODULE	CR30	10-WAY / GREY	ABOVE ROOF CONSOLE
WINDOW MOTOR ASSEMBLY – DRIVER	DD6	8-WAY / GREY	DRIVER DOOR
WINDOW MOTOR ASSEMBLY – LH REAR	RL6	8-WAY / GREY	PASSENGER DOOR
WINDOW MOTOR ASSEMBLY – PASSENGER	PD6	8-WAY / GREY	LH REAR DOOR
WINDOW MOTOR ASSEMBLY – RH REAR	RR6	8-WAY / GREY	RH REAR DOOR

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC1	22-WAY / GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
DT6	16-WAY / BLUE / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
EC1	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PD16	22-WAY / DARK GREY / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PT1	12-WAY / GREY / PASSENGER DOOR HARNESS TO PASSENGER DOOR TRIM HARNESS	CABIN / BEHIND PASSENGER DOOR TRIM
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RL9	16-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RR9	16-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM

## GROUNDS

Ground	Location
G9	CABIN / UPPER LH A POST
G10	CABIN / RH 'A' POST
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G17	CABIN / BELOW REAR SEAT / RH SIDE
G24	TRUNK / RH SIDE / REAR ELECTRONIC MODULE

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

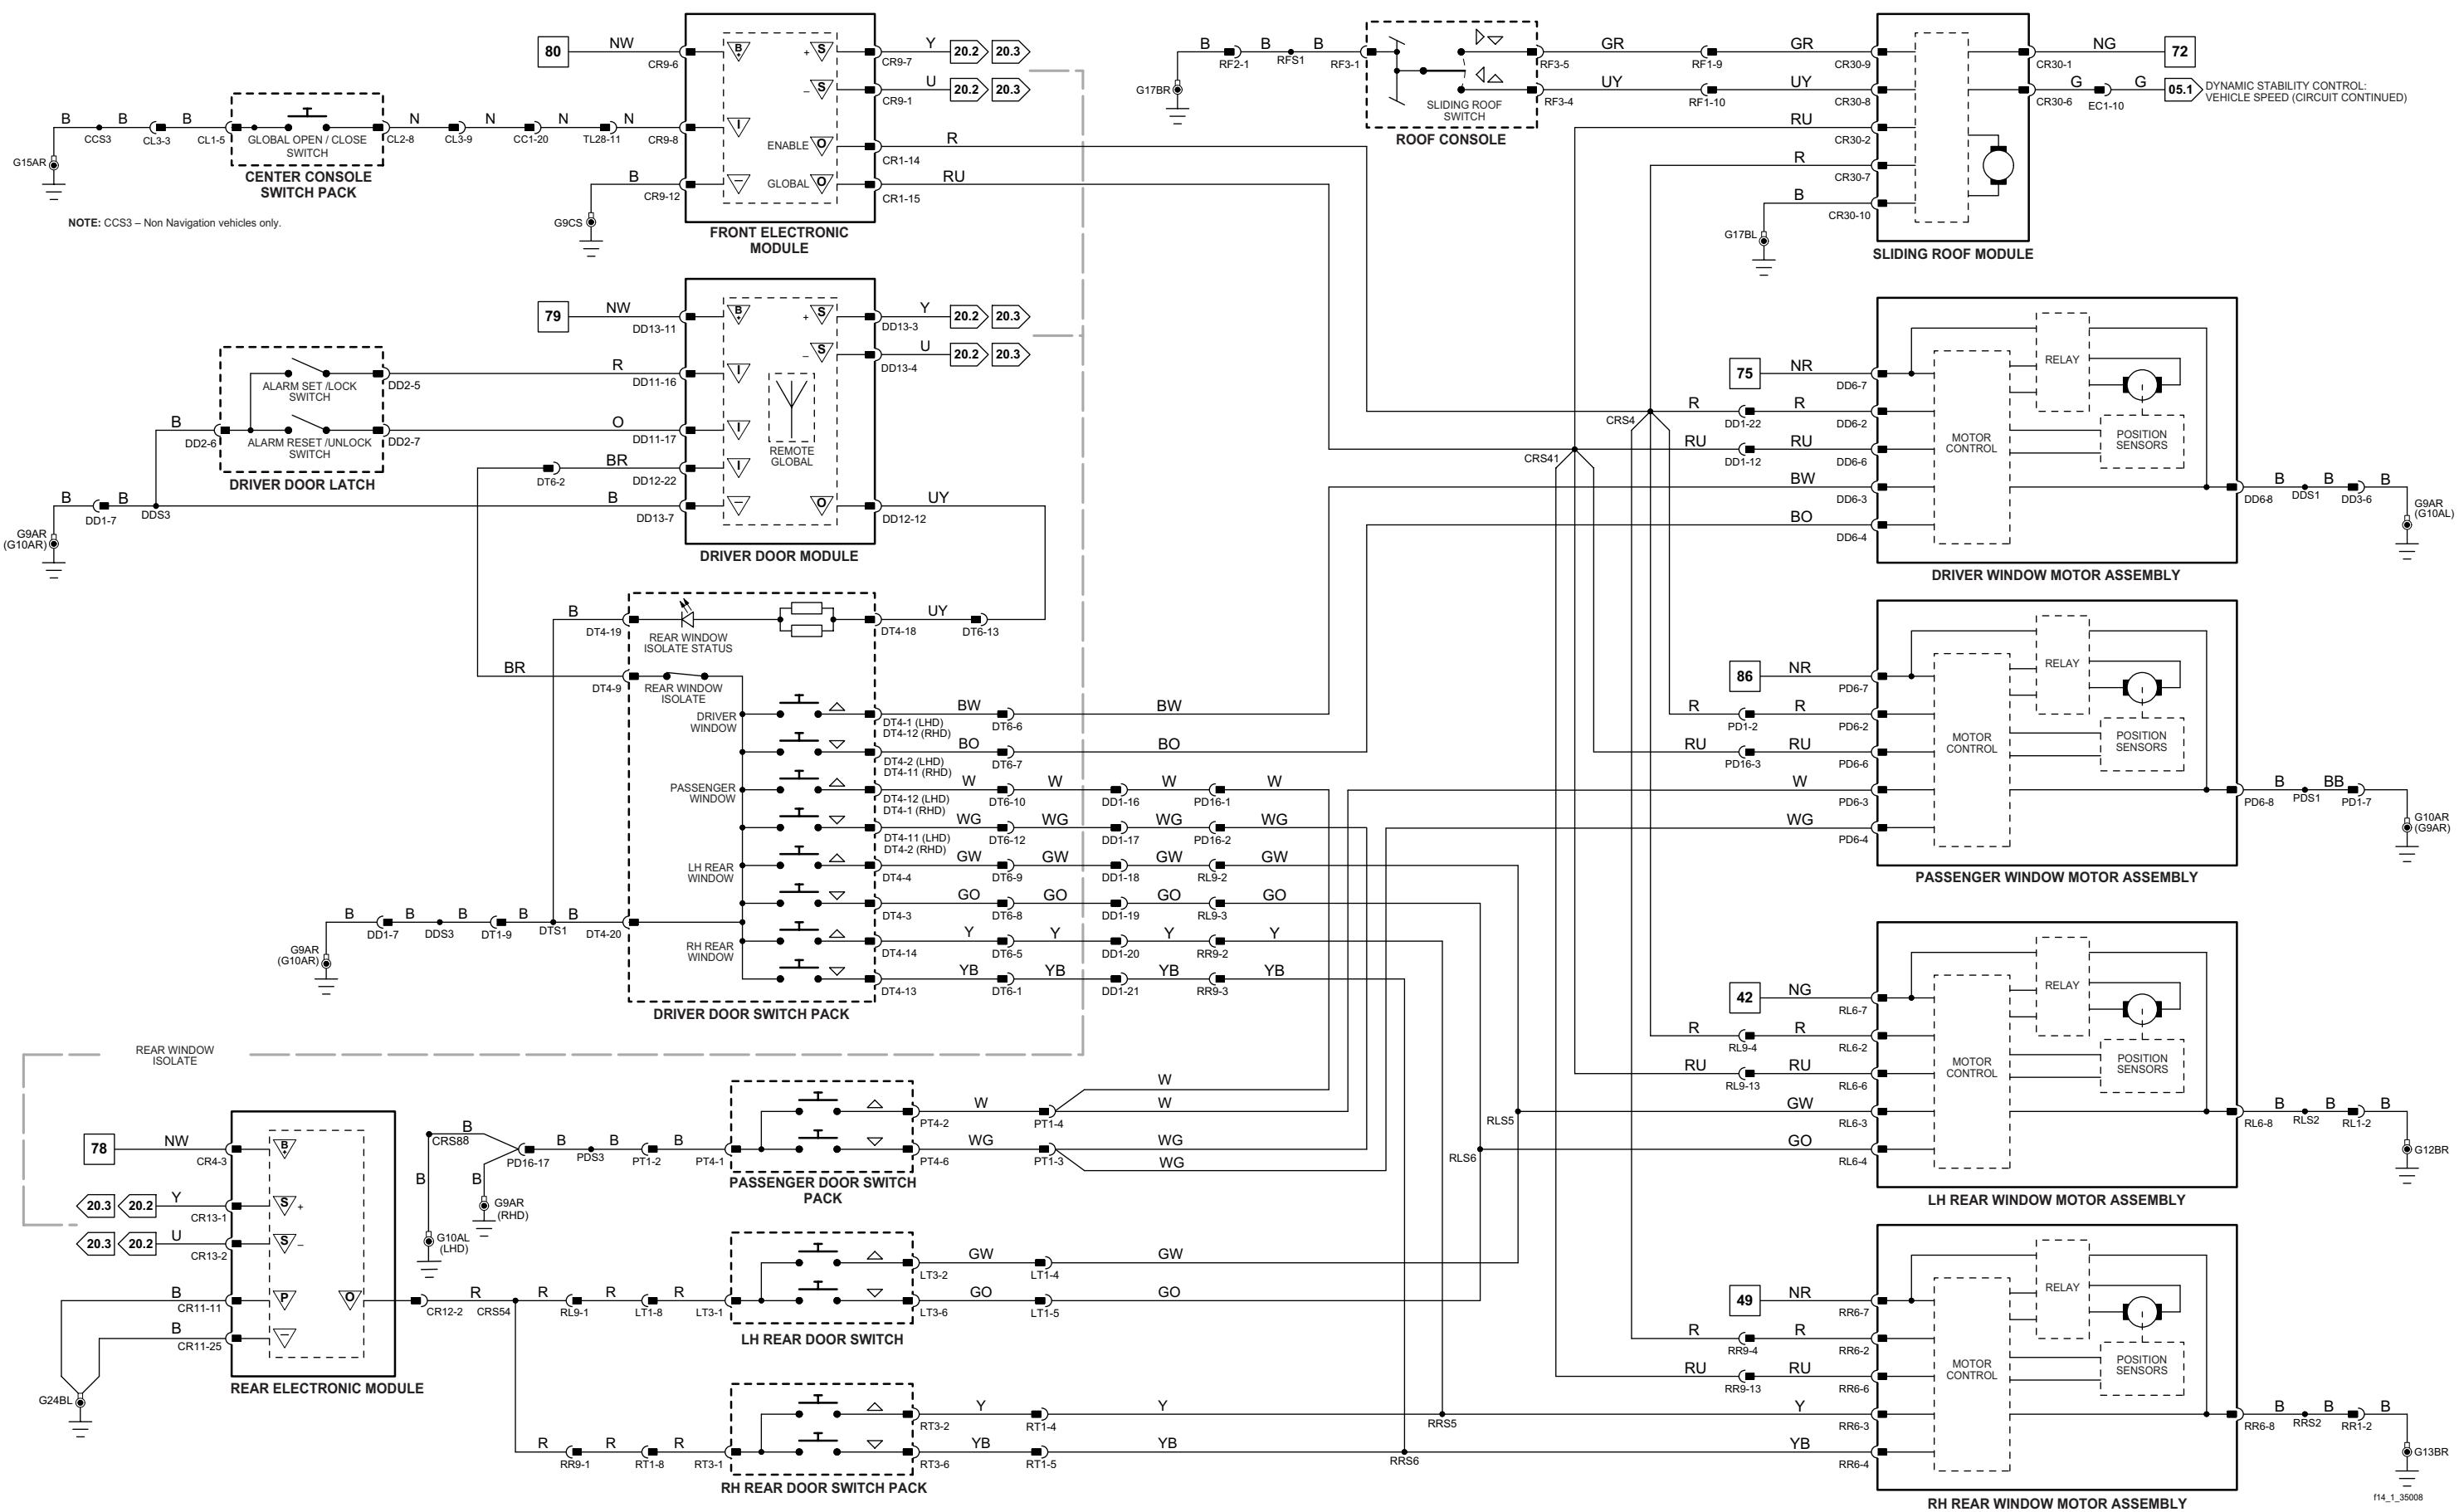

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	+	ACP	VARIANT: All Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	G Sensor/Signal Supply V	SCP	SC	VIN RANGE: All
					Power Ground	Ground	CAN	DATE OF ISSUE: May 2007
							D Serial and Encoded Data	

**Fig. 15.1**

**Audio Unit – Premium**

Pin	Description and Characteristic
PG	CC8-1 POWER GROUND: GROUND
B+	CC8-2 IGNITION SWITCHED POWER SUPPLY (I): B+
O	CC8-3 LH REAR AUDIO +
O	CC8-4 LH REAR AUDIO -
O	CC8-5 RH REAR AUDIO +
O	CC8-6 RH REAR AUDIO -
I	CC8-7 TELEPHONE MUTE SIGNAL
O	CC8-8 SECURITY SYSTEM GROUND SENSING: GROUND WHEN AUDIO UNIT INSTALLED
S	CC8-9 SCP +
S	CC8-10 SCP -
B+	CC8-11 BATTERY POWER SUPPLY: B+
O	CC8-12 LH FRONT AUDIO -
O	CC8-13 LH REAR AUDIO +
O	CC8-14 RH FRONT AUDIO -
O	CC8-15 RH REAR AUDIO +
I	CC8-16 DIMMER-CONTROLLED ILLUMINATION: PWM, 80 Hz, GROUND = 0% DUTY CYCLE, B+ = 100% DUTY CYCLE
I	CC8-17 STEERING WHEEL SWITCHES: STEPPED RESISTANCE
O	CC8-18 D2B NETWORK WAKE-UP
I	CC9-1 ANTENNA
SG	CC9-2 ANTENNA SHIELD
D2	CC21-1 D2B NETWORK TRANSMIT
D2	CC21-2 D2B NETWORK RECEIVE

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AM / FM ANTENNA AMPLIFIER	TL11	3-WAY / BLACK	CABIN / LH 'D' POST
AUDIO UNIT	TL26	2-WAY / BLACK	
	CC8	20-WAY / BLACK	CENTER CONSOLE
	CC9	2-WAY / BLACK	
CD AUTOCHANGER	CC21	FIBER OPTIC CONNECTOR	
	CC22	1-WAY SCREENED	
HEATED REAR WINDOW	DB2	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / THIRD FROM TOP
	TL5	3-WAY / BLACK	
	HW1	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
MID-BASS SPEAKER – LH FRONT	HW2	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
	DD4	2-WAY / WHITE	LH FRONT DOOR
MID-BASS SPEAKER – LH REAR	PD4	2-WAY / WHITE	
MID-BASS SPEAKER – RH FRONT	RL4	2-WAY / WHITE	LH REAR DOOR
	DD4	2-WAY / WHITE	
MID-BASS SPEAKER – RH REAR	PD4	2-WAY / WHITE	RH FRONT DOOR
STEERING WHEEL AUDIO SWITCHES	RR4	2-WAY / WHITE	RH REAR DOOR
TWEETER SPEAKER – LH FRONT	—	—	STEERING WHEEL
	DT3	2-WAY / WHITE	LH FRONT DOOR
TWEETER SPEAKER – LH REAR	PT3	2-WAY / WHITE	
TWEETER SPEAKER – RH FRONT	LT4	2-WAY / WHITE	LH REAR DOOR
	DT3	2-WAY / WHITE	
TWEETER SPEAKER – RH REAR	PT3	2-WAY / WHITE	RH FRONT DOOR
	RT4	2-WAY / WHITE	RH REAR DOOR

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CC19	2-WAY / BLACK / AUDIO UNIT ANTENNA	CABIN / BEHIND CENTER CONSOLE
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PT1	12-WAY / GREY / LH REAR DOOR HARNESS TO PASSENGER DOOR TRIM HARNESS	CABIN / BEHIND PASSENGER DOOR TRIM
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM
TL31	14-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

**GROUNDS**

Ground	Location
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

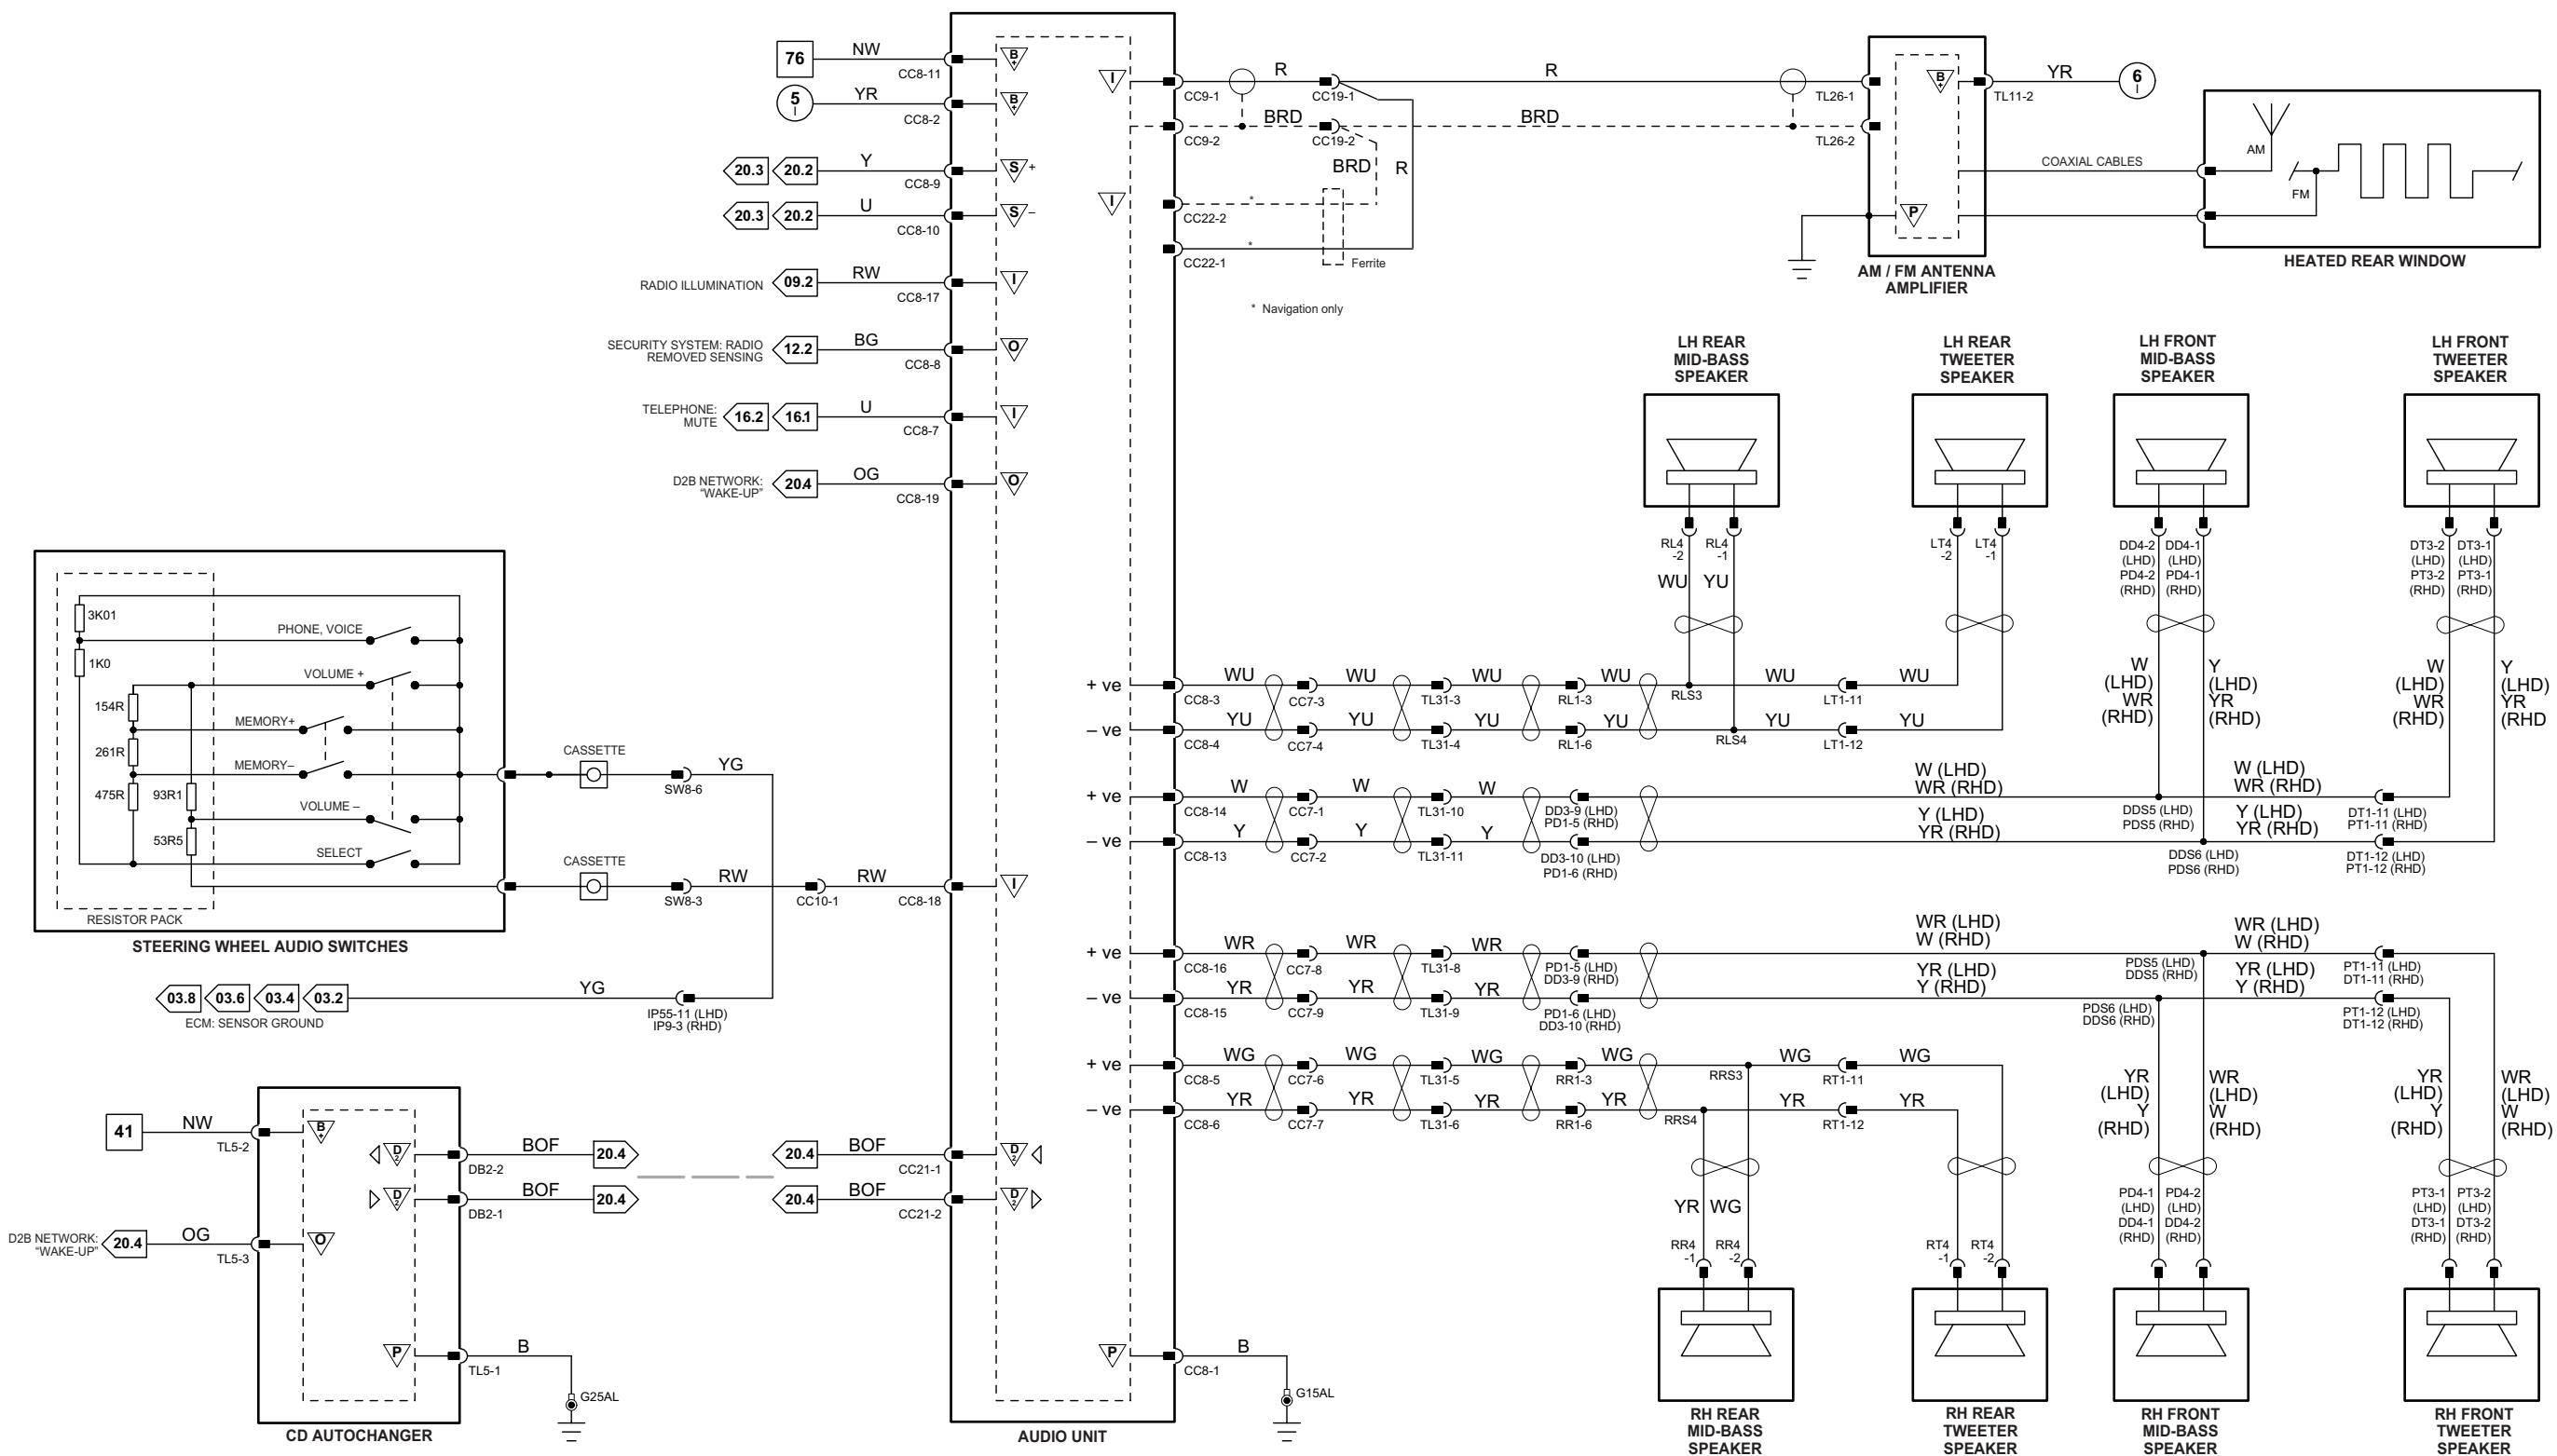

f15\_1\_35008

**Fig. 15.2**

**Audio Unit – Audiophile**

Pin	Description and Characteristic
PG	CC8-1 POWER GROUND: GROUND
B+	CC8-2 IGNITION SWITCHED POWER SUPPLY (I): B+
I	CC8-7 TELEPHONE MUTE SIGNAL
O	CC8-8 SECURITY SYSTEM GROUND SENSING: GROUND WHEN AUDIO UNIT INSTALLED
S	CC8-9 SCP +
S	CC8-10 SCP -
B+	CC8-11 BATTERY POWER SUPPLY: B+
I	CC8-17 DIMMER-CONTROLLED ILLUMINATION: PWM, 80 Hz, GROUND = 0% DUTY CYCLE, B+ = 100% DUTY CYCLE
I	CC8-18 STEERING WHEEL SWITCHES: STEPPED RESISTANCE
O	CC8-19 D2B NETWORK WAKE-UP

**Power Amplifier**

Pin	Description and Characteristic
D2	DB7-1 D2B NETWORK TRANSMIT
D2	DB7-2 D2B NETWORK RECEIVE
PG	TL9-2 POWER GROUND: GROUND
B+	TL9-3 BATTERY POWER SUPPLY: B+
O	TL9-5 D2B NETWORK WAKE-UP
PG	TL9-8 POWER GROUND: GROUND
B+	TL9-9 BATTERY POWER SUPPLY: B+
O	TL10-2 RH SUBWOOFER AUDIO +
O	TL10-3 LH SUBWOOFER AUDIO -
O	TL10-4 LH REAR AUDIO +
O	TL10-5 LH FRONT AUDIO +
O	TL10-6 RH FRONT AUDIO -
O	TL10-7 LH FASCIA AUDIO +
O	TL10-8 RH FASCIA AUDIO -
O	TL10-10 RH SUBWOOFER AUDIO -
O	TL10-11 LH SUBWOOFER AUDIO +
O	TL10-12 LH REAR AUDIO -
O	TL10-13 RH REAR AUDIO -
O	TL10-14 RH REAR AUDIO +
O	TL10-15 LH FRONT AUDIO -
O	TL10-16 RH FRONT AUDIO +
O	TL10-17 LH FASCIA AUDIO -
O	TL10-18 RH FASCIA AUDIO +

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AM / FM ANTENNA AMPLIFIER	TL11	3-WAY / BLACK	CABIN / LH 'D' POST
AUDIO UNIT	TL26	2-WAY / BLACK	CENTER CONSOLE
CD AUTOCHANGER	CC8	20-WAY / BLACK	CENTER CONSOLE
HEATED REAR WINDOW	CC9	2-WAY / BLACK	
MID-BASS SPEAKER – LH FRONT	CC21	FIBER OPTIC CONNECTOR	
MID-BASS SPEAKER – RH FRONT	CC22	1-WAY SCREENED	
MID-BASS SPEAKER – LH REAR	DB2	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / THIRD FROM TOP
MID-BASS SPEAKER – RH REAR	HW1	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
MID-RANGE SPEAKER – LH FASCIA	HW2	1-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK / LH SIDE (CONNECTOR LOCATION)
MID-RANGE SPEAKER – RH FASCIA	HW2	1-WAY / BLACK	LH FRONT DOOR
POWER AMPLIFIER	HW2	1-WAY / BLACK	LH REAR DOOR
POWER AMPLIFIER	DD4	2-WAY / WHITE	RH FRONT DOOR
POWER AMPLIFIER	PD4	2-WAY / WHITE	RH REAR DOOR
POWER AMPLIFIER	RR4	2-WAY / WHITE	
POWER AMPLIFIER	IP25	2-WAY / WHITE	INSTRUMENT PANEL / LH SIDE
POWER AMPLIFIER	IP30	2-WAY / WHITE	INSTRUMENT PANEL / RH SIDE
POWER AMPLIFIER	TL9	12-WAY / WHITE	LUGGAGE COMPARTMENT, LH REAR
POWER AMPLIFIER	TL10	18-WAY / WHITE	
POWER AMPLIFIER	DB7	FIBER OPTIC CONNECTOR	
STEERING WHEEL AUDIO SWITCHES	—	—	STEERING WHEEL
SUBWOOFER – LH	TL3	2-WAY / WHITE	PARCEL SHELF, LH SIDE
SUBWOOFER – RH	TL61	2-WAY / WHITE	PARCEL SHELF, RH SIDE
TWEETER SPEAKER – LH FRONT	DT3	2-WAY / WHITE	LH FRONT DOOR
TWEETER SPEAKER – LH REAR	DT4	2-WAY / WHITE	LH REAR DOOR
TWEETER SPEAKER – RH FRONT	PT3	2-WAY / WHITE	RH FRONT DOOR
TWEETER SPEAKER – RH REAR	PT3	2-WAY / WHITE	RH REAR DOOR
TWEETER SPEAKER – RH REAR	RT4	2-WAY / WHITE	

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
CC19	2-WAY / BLACK / AUDIO UNIT ANTENNA	CABIN / BEHIND CENTER CONSOLE
DD3	10-WAY / GREY / DRIVER DOOR HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / DRIVER SIDE 'A' POST
DT1	16-WAY / GREEN / DRIVER DOOR HARNESS TO DRIVER DOOR TRIM HARNESS	CABIN / BEHIND DRIVER DOOR TRIM
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
LT1	12-WAY / GREY / LH REAR DOOR HARNESS TO LH REAR DOOR TRIM HARNESS	CABIN / LH REAR DOOR TRIM
PD1	14-WAY / BLUE / CABIN HARNESS TO PASSENGER DOOR HARNESS	CABIN / PASSENGER SIDE 'A' POST
PT1	12-WAY / GREY / PASSENGER DOOR HARNESS TO PASSENGER DOOR TRIM HARNESS	CABIN / BEHIND PASSENGER DOOR TRIM
RL1	6-WAY / GREY / LH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / LH 'B/C' POST
RR1	6-WAY / GREY / RH REAR DOOR HARNESS TO CABIN HARNESS	CABIN / RH 'B/C' POST
RT1	12-WAY / GREY / RH REAR DOOR HARNESS TO RH REAR DOOR TRIM HARNESS	CABIN / RH REAR DOOR TRIM
TL31	14-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

**GROUNDS**

Ground	Location
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

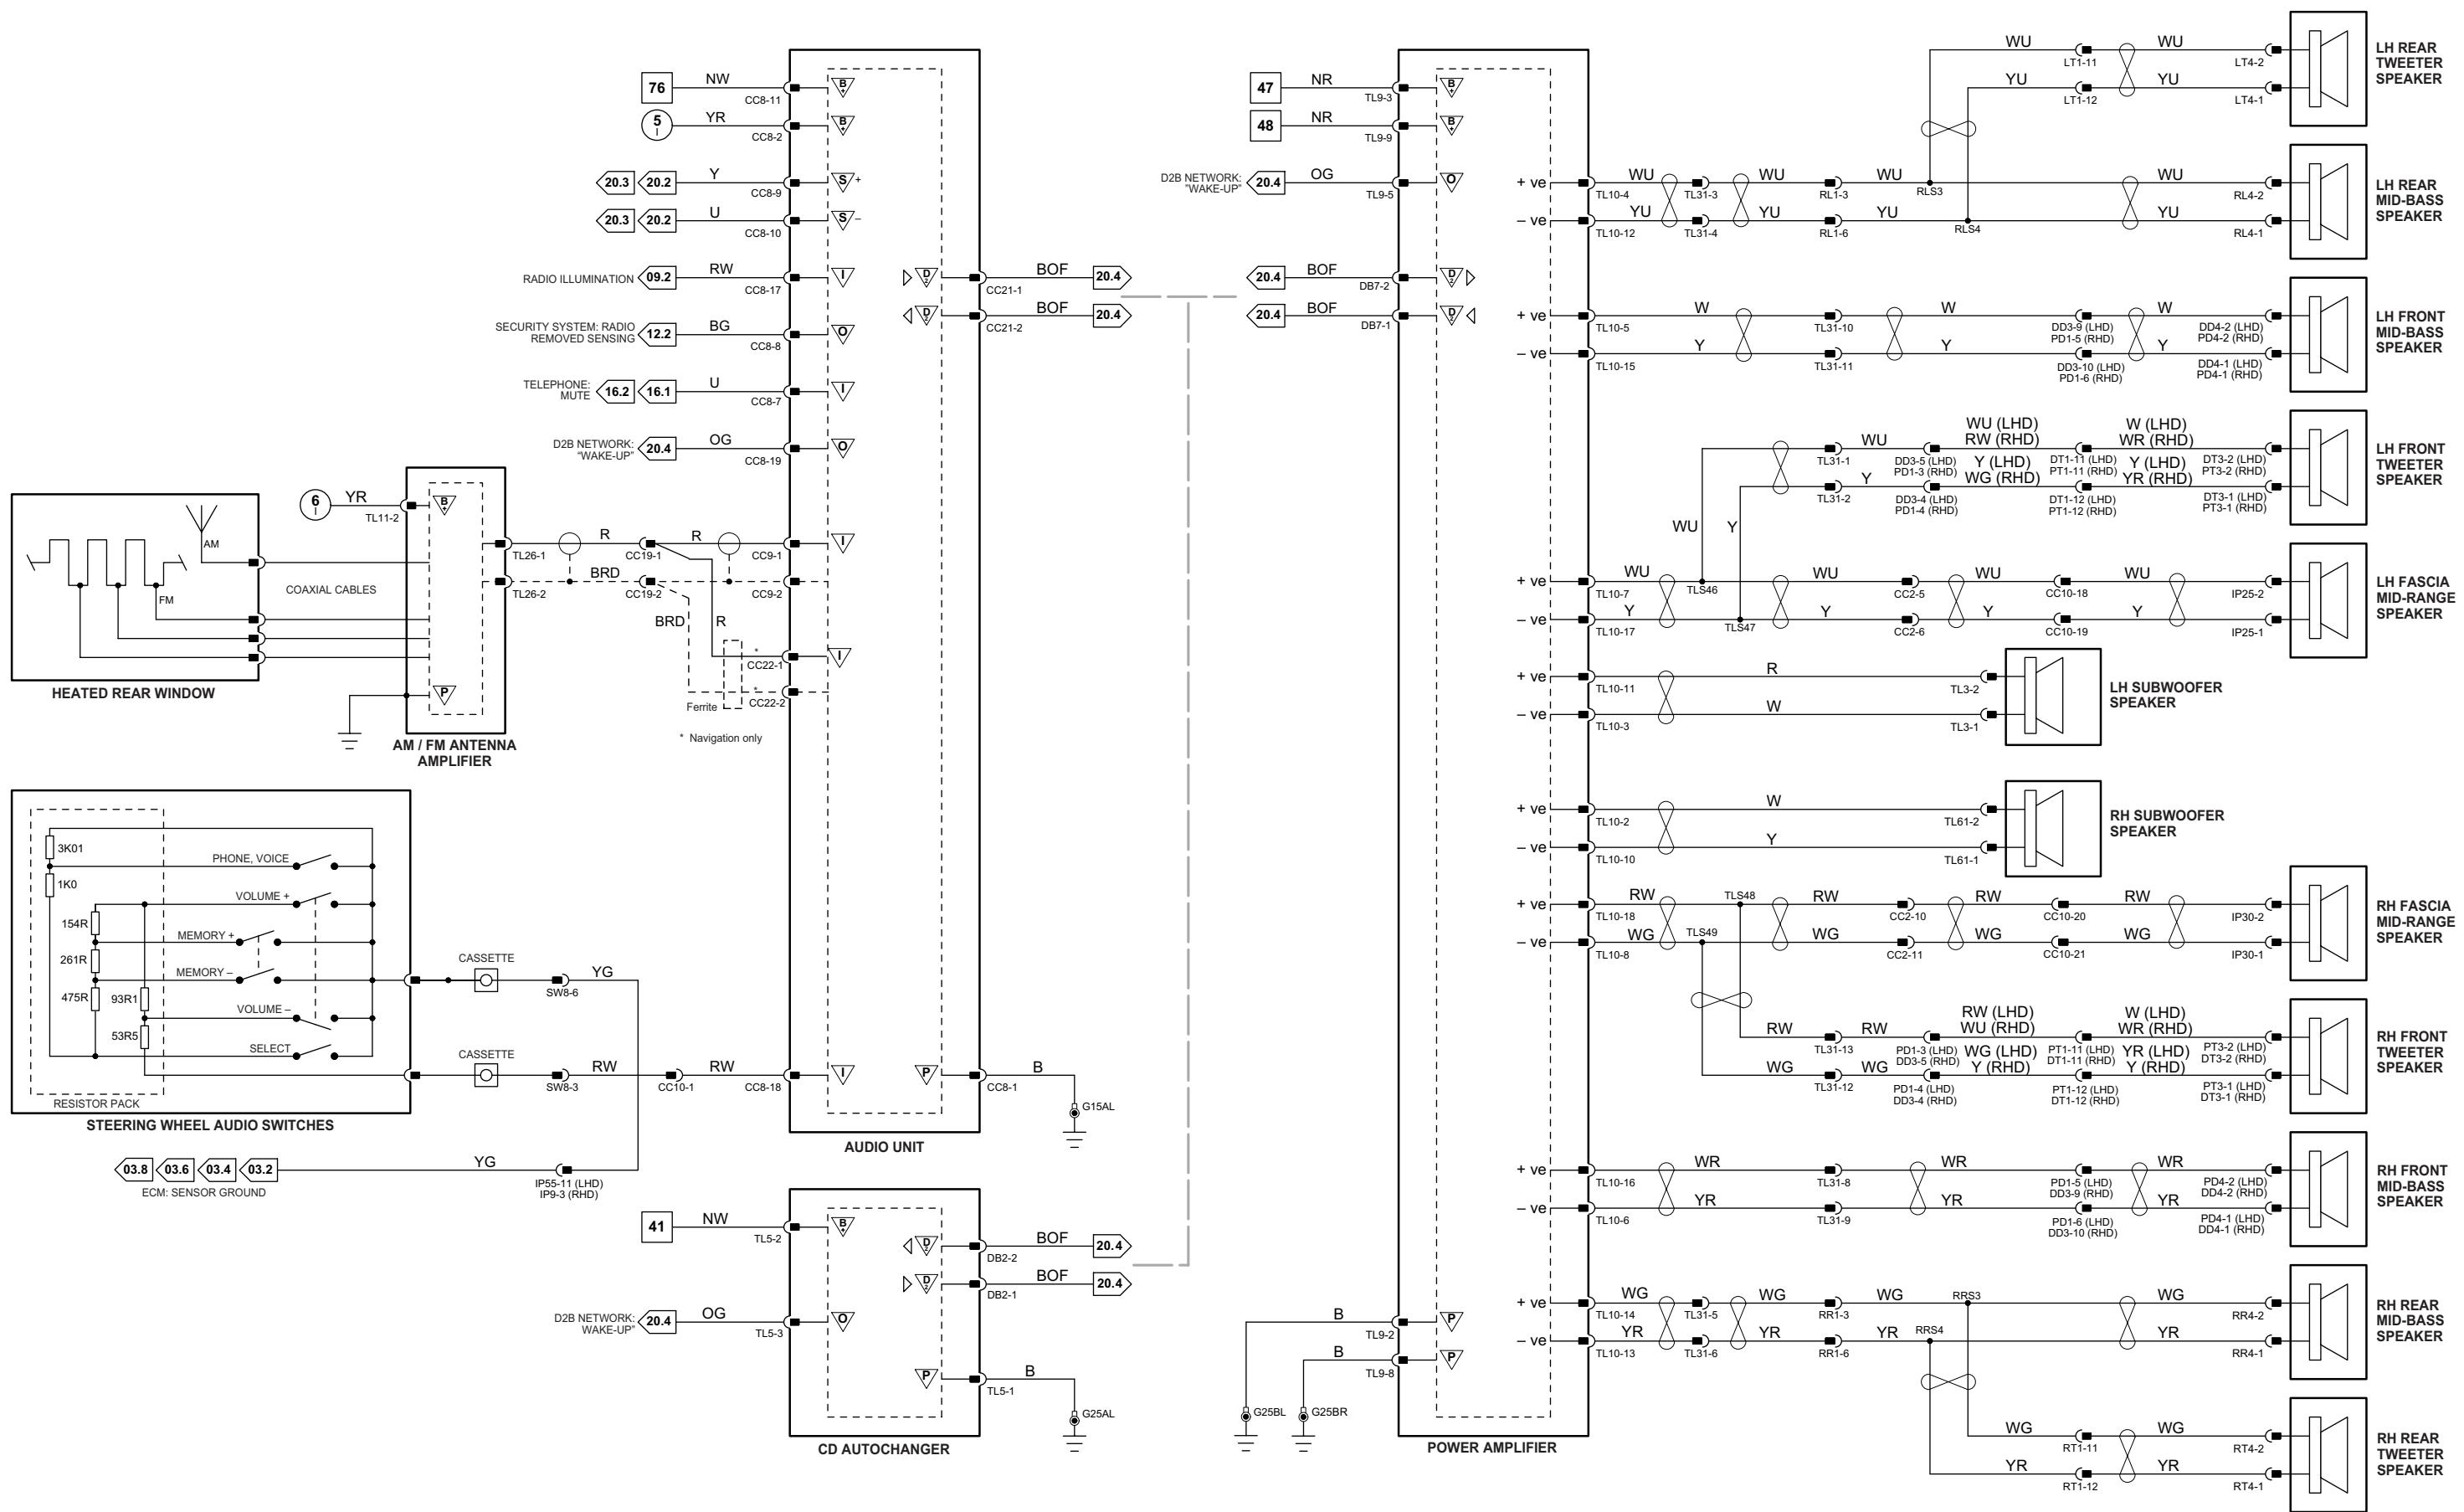

**Fig. 15.3**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
ARMREST LID SWITCH	RC7	3-WAY / BLACK	REAR SEAT ARMREST
AUDIO / VIDEO SELECTOR	TL20	20-WAY / BLACK	CABIN REAR BULKHEAD / BEHIND REAR SEAT BACK / LH SIDE
	TL85	20-WAY / BLACK	
	TL86	20-WAY / BLACK	
	TL87	20-WAY / BLACK	
DVD PLAYER	TL32	4-WAY / NATURAL	TRUNK / LH SIDE / MODULE STACK / TOP
	TL47	13-WAY / BLACK	
MULTIMEDIA CONTROL PANEL	RC1	8-WAY / BLACK	REAR SEAT ARM REST OR REAR FLOOR CONSOLE
	RC3	20-WAY / BLACK	
	RC5	FIBER OPTIC CONNECTOR	
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
	TL2	20-WAY / BLACK	
	TL29	26-WAY / BLACK	
	TL30	12-WAY / BLACK	
	TL37	2-WAY / BLACK	
TELEMATICS DISPLAY	CC11	12-WAY / BLACK	CENTER CONSOLE
	CC12	22-WAY / BLACK	
	CC13	2-WAY / BLACK	
	CC14	2-WAY / BLACK	
	CC15	2-WAY / BLACK	
	CC16	2-WAY / BLACK	
TELEVISION SCREEN – LH REAR	VL1	20-WAY / GREEN	LH FRONT SEAT HEAD REST
TELEVISION SCREEN – RH REAR	VR1	20-WAY / GREEN	RH FRONT SEAT HEAD REST


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
RC4	20-WAY / BLACK / TELEMATICS HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
TL91	20-WAY / BLACK / TELEMATICS HARNESS TO RH REAR TELEVISION HARNESS	CABIN / BELOW RH FRONT SEAT
TL92	20-WAY / GREEN / TELEMATICS HARNESS TO LH REAR TELEVISION HARNESS	CABIN / BELOW LH FRONT SEAT
VL2	21-WAY / BLACK / TELEMATICS HARNESS TO LH REAR TELEVISION HARNESS	CABIN / BEHIND LH FRONT SEAT BACK FINISHER
VR2	21-WAY / BLACK / TELEMATICS HARNESS TO RH REAR TELEVISION HARNESS	CABIN / BEHIND RH FRONT SEAT BACK FINISHER

**GROUNDS**

Ground	Location
G18	CABIN / BELOW REAR SEAT / LH SIDE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

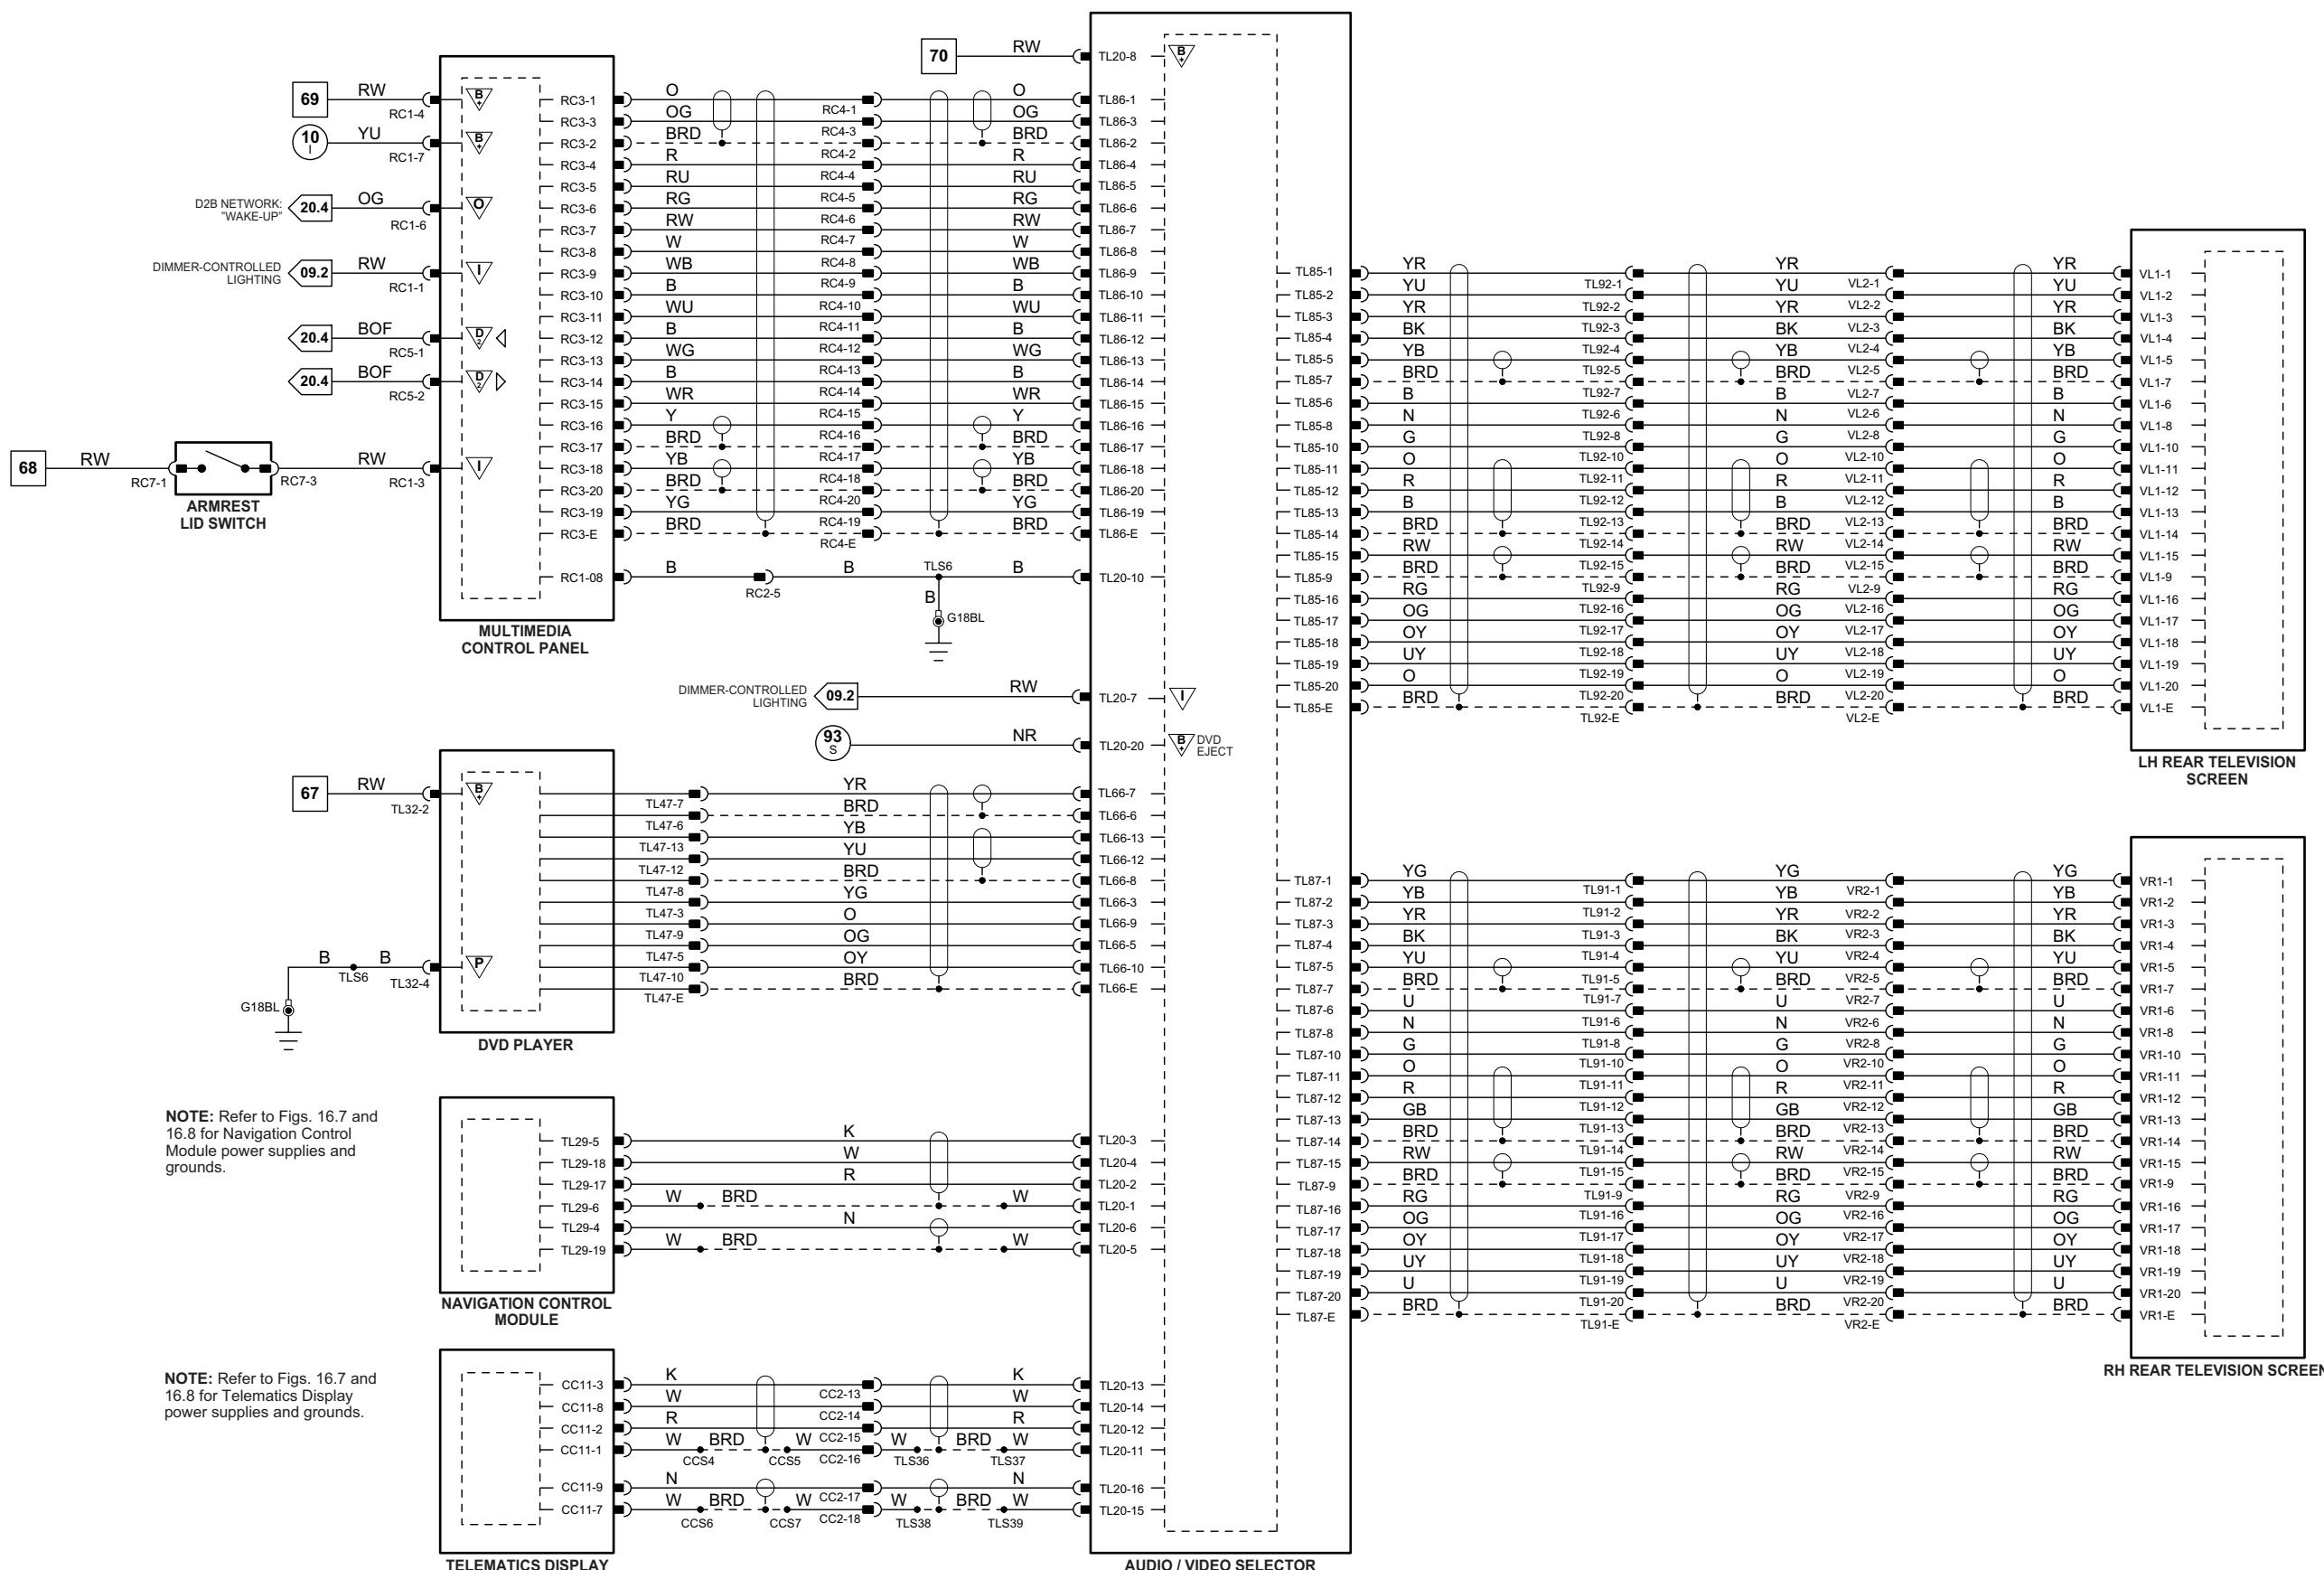

**Fig. 15.4**

<b>COMPONENTS</b>			
<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
AM/FM DIVERSITY MODULE	TL39	1-WAY / SCREENED	CABIN / LH 'D' POST
BAND 3 AMPLIFIER	TL109	1-WAY / SCREENED	CABIN / RH 'D' POST
DIGITAL AUDIO BROADCASTING (DAB) ANTENNA	TL12	1-WAY / SCREENED	ROOF HEADLINER
DAB RECEIVER MODULE	TL105	2-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK
	TL106	2-WAY MOST	
GATEWAY MODULE	TL107	4-WAY / BLACK	
	DB8	2-WAY FIBRE OPTICS	TRUNK / LEFT SIDE / MODULE STACK
	TL97	4-WAY / BLACK	
	TL98	2-WAY MOST	
GPS ANTENNA	TL8	1-WAY / SCREENED	ROOF HEADLINER
GATEWAY MODULE	TL110	4-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK
	TL112	1-WAY / SCREENED	
NAVIGATION MODULE	TL37	1-WAY / SCREENED	TRUNK / LEFT SIDE / MODULE STACK / SECOND FROM TOP
SATELLITE DIGITAL AUDIO RECEIVER SYSTEM (SDARS) ANTENNA	TL13	1-WAY / SCREENED	ROOF HEADLINER
SDARS RECEIVER MODULE	TL100	2-WAY / BLACK	CABIN / BEHIND REAR SEAT BACK
	TL102	1-WAY / SCREENED	


**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>


**GROUNDS**

<b>Ground</b>	<b>Location</b>
G33	BELOW REAR SEAT / LH SIDE


Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

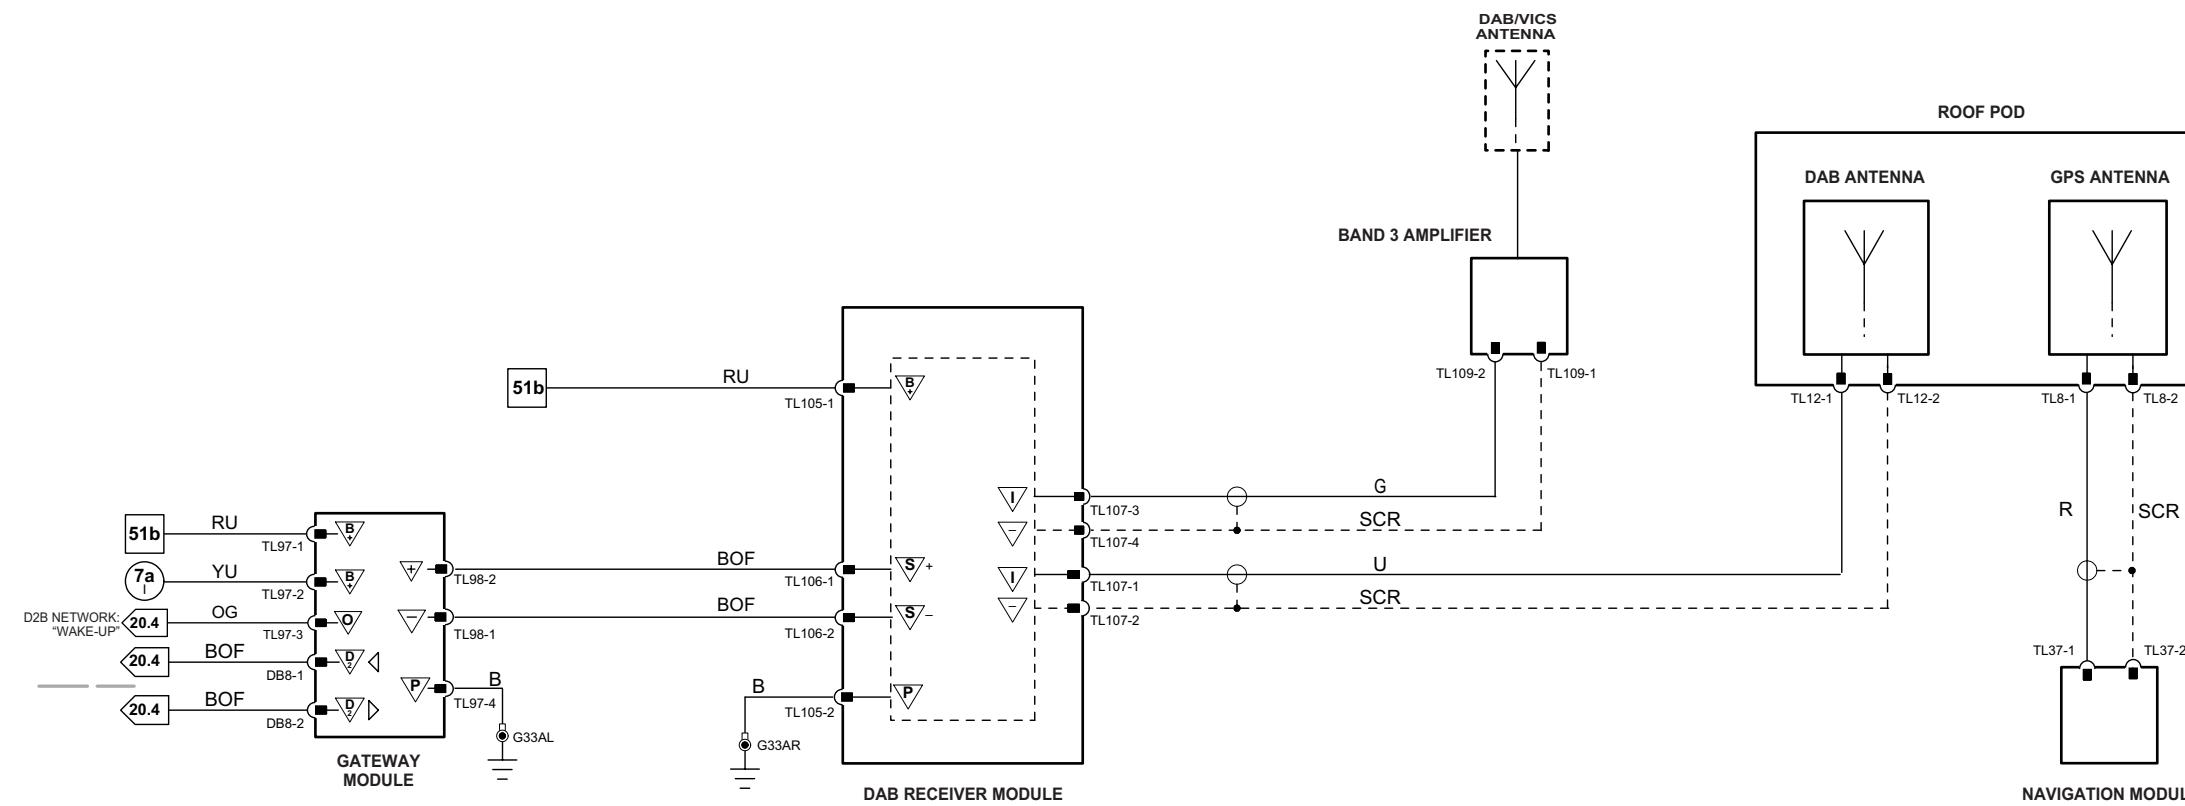

DAB (Europe)

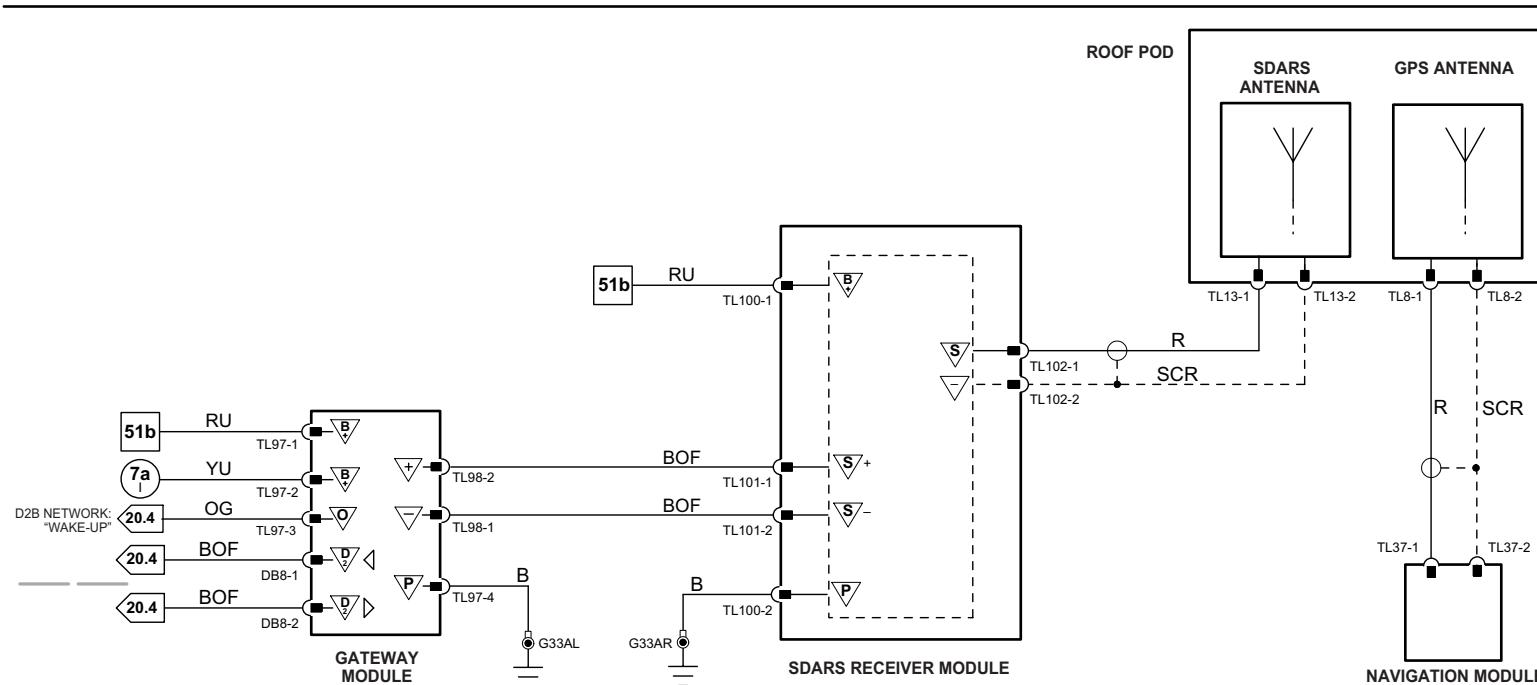

SDARS (USA)

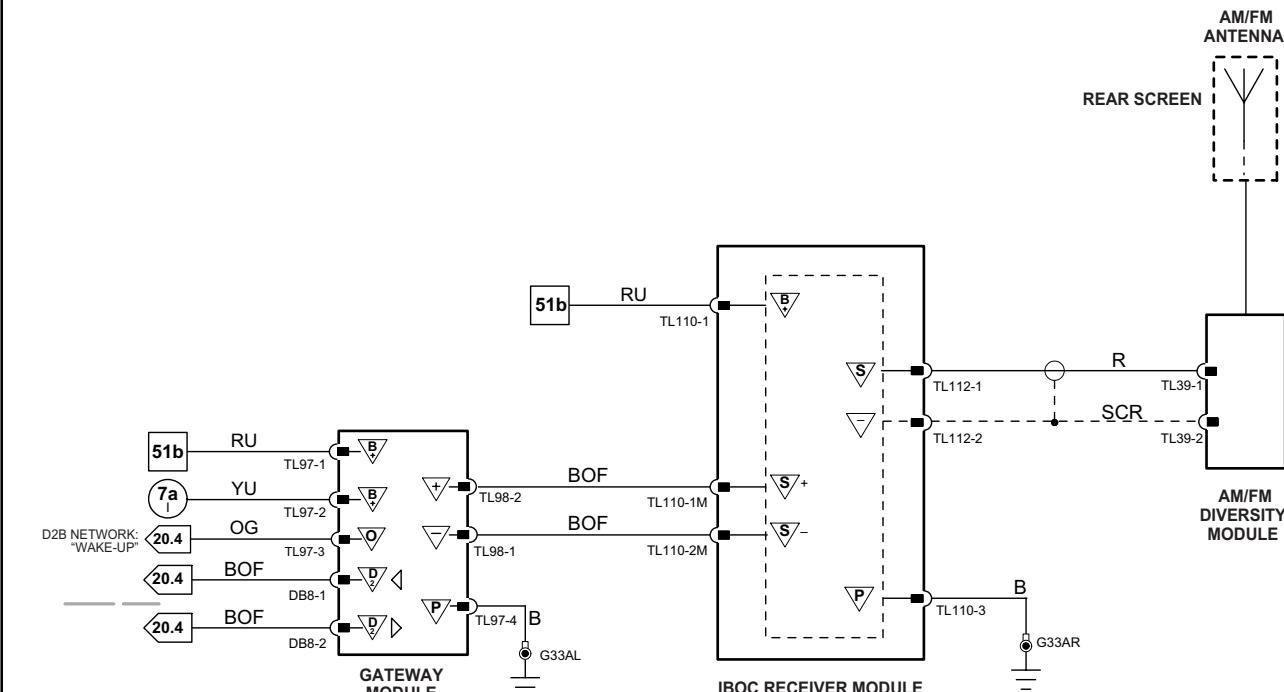

IBOC (USA)

f15\_4\_35008

**Fig. 16.1**

**Audio Unit**

Pin	Description and Characteristic
I CC8-7	TELEPHONE MUTE SIGNAL

**Cellular Phone Module**

Pin	Description and Characteristic
D2	DB3-1 D2B NETWORK RECEIVE
D2	DB3-2 D2B NETWORK TRANSMIT
O	TL7-1 PHONE BATTERY CHARGING SUPPLY
O	TL7-2 HANDS FREE AUDIO TO PHONE
O	TL7-3 PHONE ON / OFF (RESPONSE TO INCOMING AUDIO)
O	TL7-4 MUTE COMMAND
O	TL7-6 PHONE BATTERY VOLTAGE
PG	TL7-9 POWER GROUND: GROUND
SG	TL7-10 ANALOG GROUND: GROUND
SG	TL7-11 MICROPHONE SHIELD: GROUND
B+	TL7-12 BATTERY POWER SUPPLY: B+
B+	TL7-13 BATTERY POWER SUPPLY: B+
B+	TL7-14 IGNITION SWITCHED POWER SUPPLY (I): B+
I	TL7-17 MICROPHONE +
I	TL7-18 MICROPHONE -
D	TL7-20 TELEPHONE SERIAL COMMUNICATIONS DATA
D	TL7-22 TELEPHONE SERIAL COMMUNICATIONS DATA
I	TL7-23 D2B NETWORK WAKE-UP
I	TL7-25 POWER GROUND: GROUND
I	TL7-26 TELEPHONE LOGIC GROUND: GROUND
I	TL7-29 IGNITION SWITCHED POWER SUPPLY (II): B+

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUDIO UNIT	CC8 CC9 CC21	20-WAY / BLACK 2-WAY / BLACK FIBER OPTIC CONNECTOR	CENTER CONSOLE
BLUETOOTH ANTENNA	TL118		
CELLULAR PHONE MODULE	TL116 TL117	32-WAY / BLACK ??	LUGGAGE COMPARTMENT, LH REAR
HANDS FREE MICROPHONE	RF3	20-WAY / BLACK	ROOF CONSOLE
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
TELEMATICS DISPLAY	TL2 TL29 TL30 TL37 CC12 CC13 CC14 CC15 CC16	20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK 22-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK	CENTER CONSOLE

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
RF26	8-WAY / BLACK / TELEMATICS HARNESS TO ROOF HARNESS	CABIN / LH 'D' POST
TL68	22 WAY	

**GROUNDS**

Ground	Location
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

**FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.**


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

**CAUTION:** The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

**NOTE:** The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

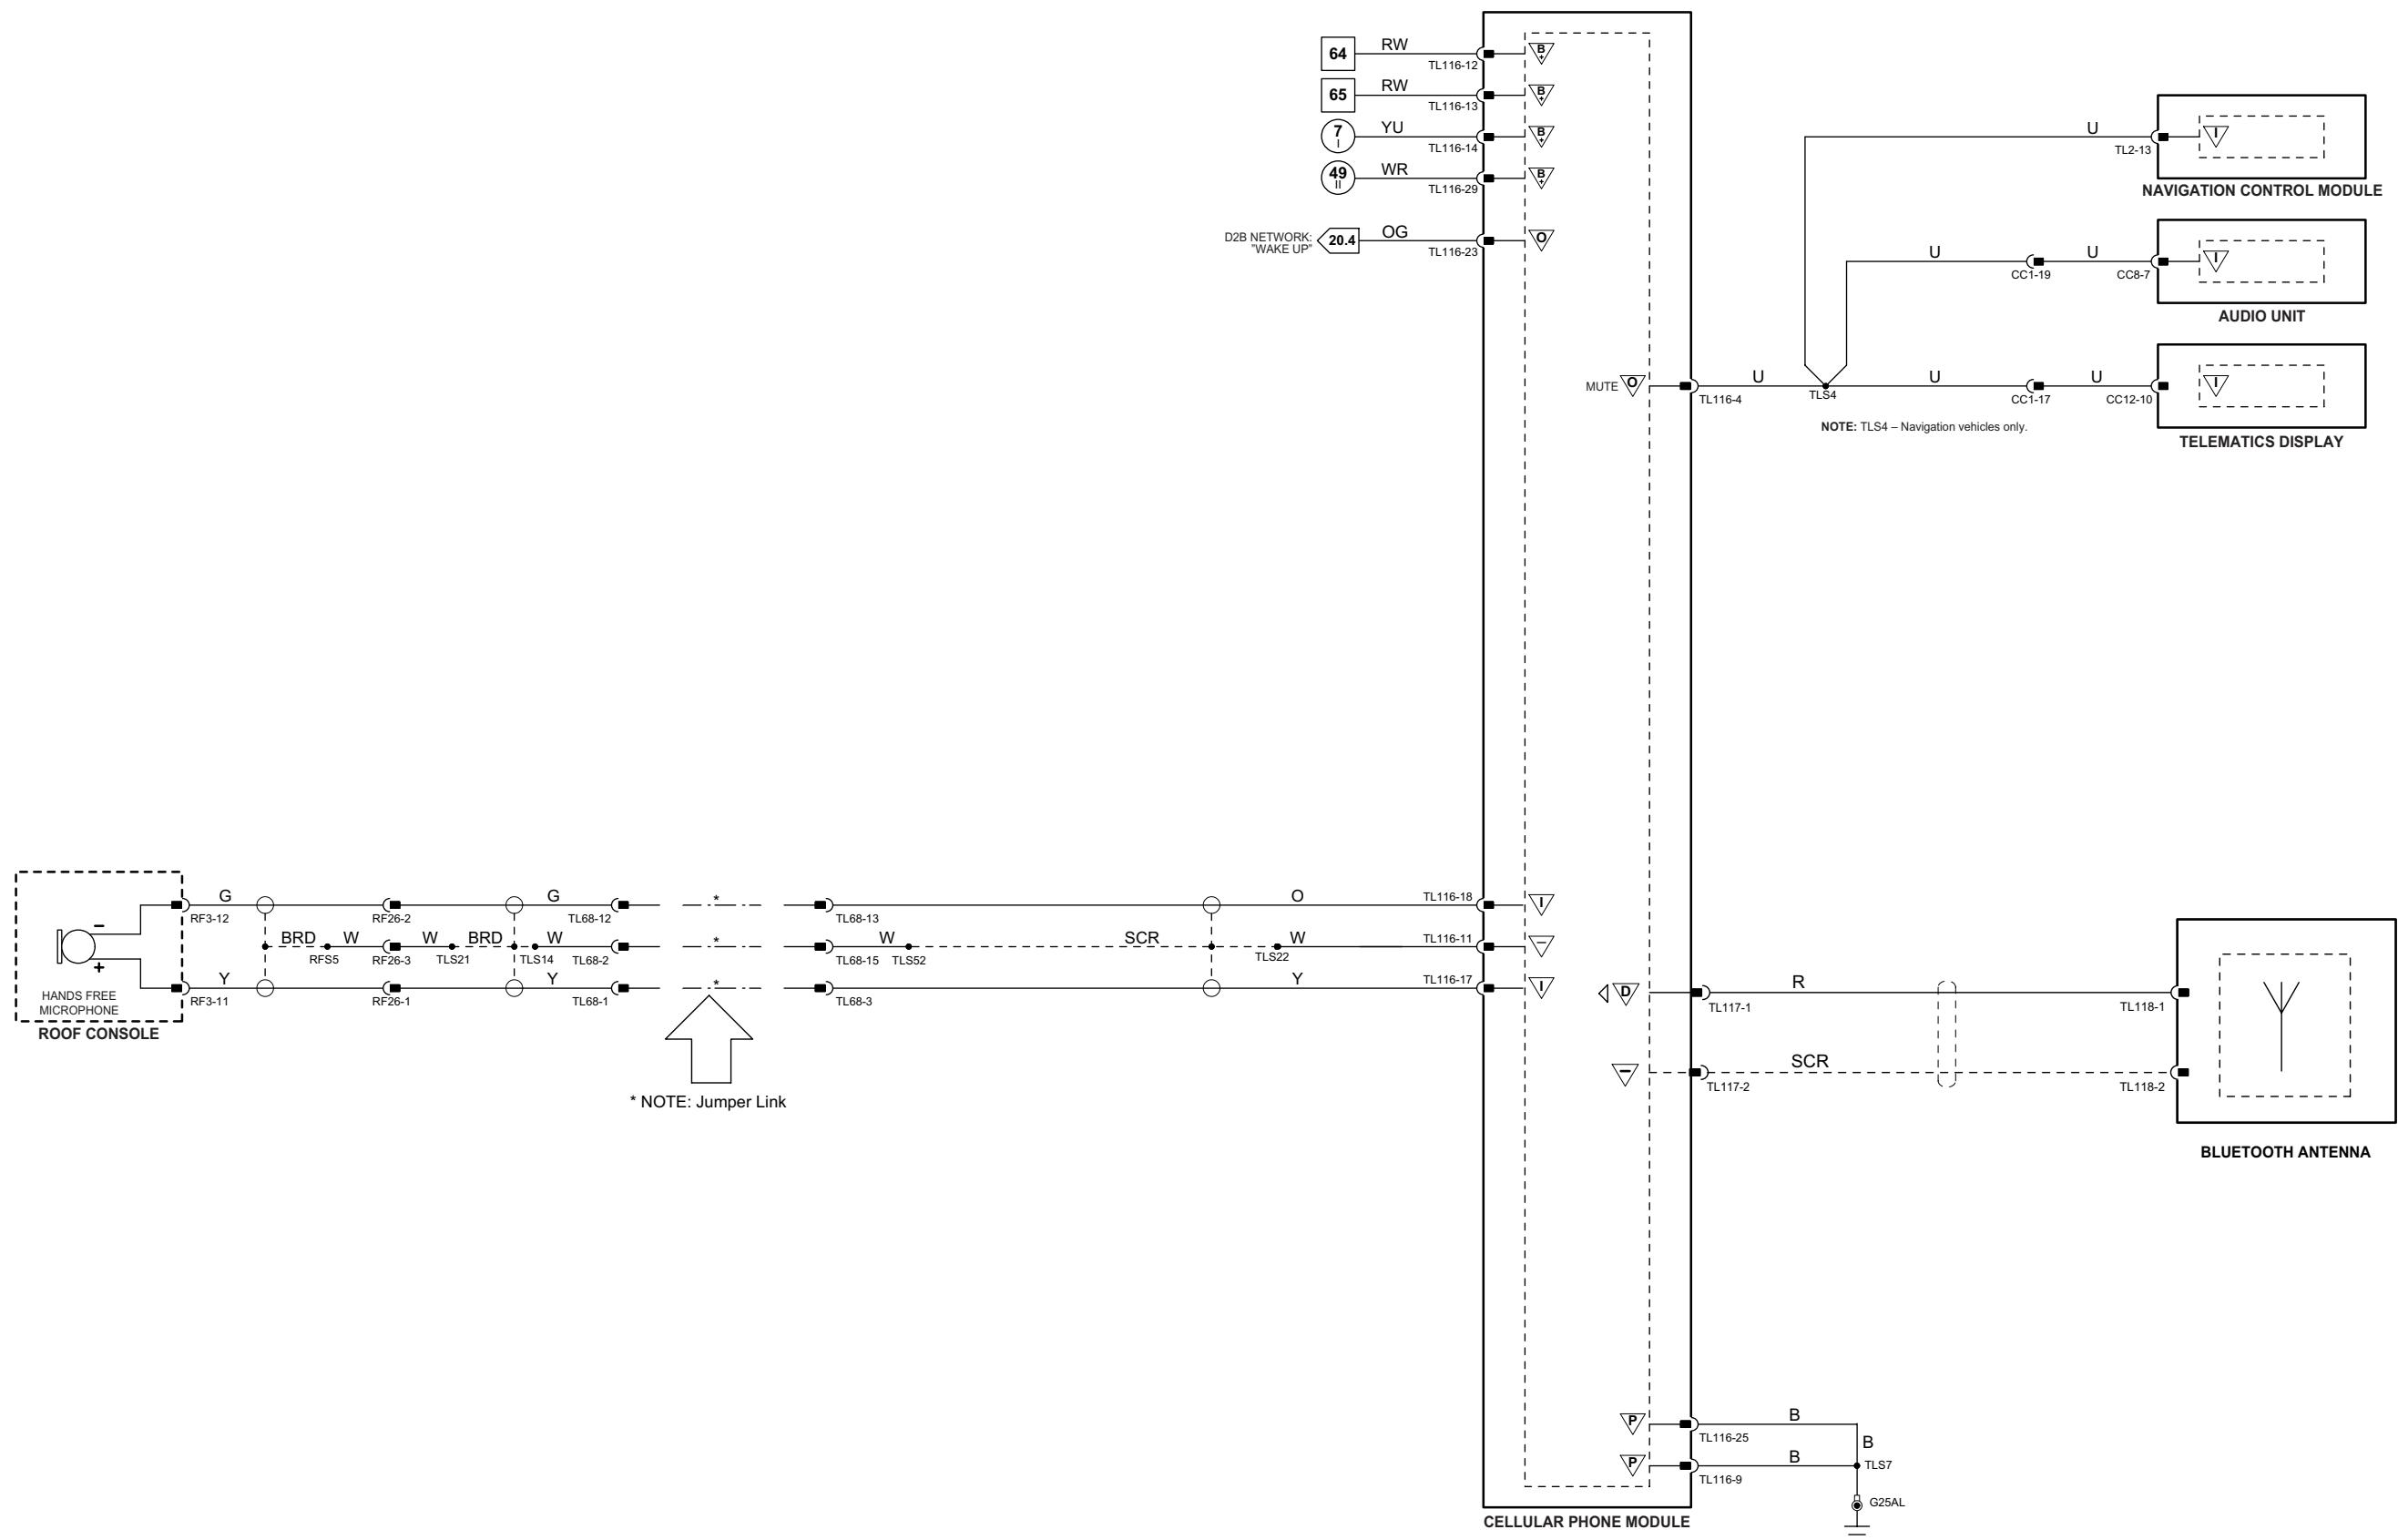

f16\_1\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	SCP	VARIANT: Telephone only Vehicles (Japan)
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	P Power Ground	Sensor/Signal Ground	CAN	Serial and Encoded Data	VIN RANGE: All
									DATE OF ISSUE: May 2007

**Fig. 16.2**

**Audio Unit**

Pin	Description and Characteristic
I	CC8-7 TELEPHONE MUTE SIGNAL
I	CC8-18 STEERING WHEEL SWITCHES: STEPPED RESISTANCE

D2	CC21-1 D2B NETWORK TRANSMIT
D2	CC21-2 D2B NETWORK RECEIVE

**Cellular Phone Control Module**

Pin	Description and Characteristic
D2	DB3-1 D2B NETWORK RECEIVE
D2	DB3-2 D2B NETWORK TRANSMIT

O	TL7-1 PHONE BATTERY CHARGING SUPPLY
O	TL7-2 HANDS FREE AUDIO TO PHONE
O	TL7-3 PHONE ON / OFF (RESPONSE TO INCOMING AUDIO)
O	TL7-4 MUTE COMMAND
I	TL7-6 PHONE BATTERY VOLTAGE
PG	TL7-9 POWER GROUND: GROUND
SG	TL7-10 ANALOG GROUND: GROUND
SG	TL7-11 MICROPHONE SHIELD: GROUND
B+	TL7-12 BATTERY POWER SUPPLY: B+
B+	TL7-13 BATTERY POWER SUPPLY: B+
B+	TL7-14 IGNITION SWITCHED POWER SUPPLY (I): B+
I	TL7-17 MICROPHONE +
I	TL7-18 MICROPHONE -
D	TL7-20 TELEPHONE SERIAL COMMUNICATIONS DATA
D	TL7-21 TELEPHONE SERIAL COMMUNICATIONS DATA
D	TL7-22 TELEPHONE SERIAL COMMUNICATIONS DATA
I	TL7-23 D2B NETWORK WAKE-UP
I	TL7-25 POWER GROUND: GROUND
I	TL7-26 TELEPHONE LOGIC GROUND: GROUND
I	TL7-29 IGNITION SWITCHED POWER SUPPLY (II): B+

**Voice Activation Module**

Pin	Description and Characteristic
D2	DB4-1 D2B NETWORK TRANSMIT
D2	DB4-2 D2B NETWORK RECEIVE

I	TL68-1 MICROPHONE +
SG	TL68-2 MICROPHONE SHIELD
O	TL68-3 MICROPHONE +
B+	TL68-6 IGNITION SWITCHED POWER SUPPLY (II) (START / RUN STATUS)
SG	TL68-7 MICROPHONE SHIELD
B+	TL68-8 IGNITION SWITCHED POWER SUPPLY (I)
SG	TL68-9 MICROPHONE SHIELD
PG	TL68-11 POWER GROUND
I	TL68-12 MICROPHONE -
O	TL68-13 MICROPHONE -
O	TL68-14 D2B NETWORK WAKE UP
SG	TL68-15 MICROPHONE SHIELD
I	TL68-18 MICROPHONE +
I	TL68-19 MICROPHONE -
I	TL68-20 MICROPHONE +
I	TL68-21 MICROPHONE -
B+	TL68-22 BATTERY POWER SUPPLY

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUDIO UNIT	CC8	20-WAY / BLACK	CENTER CONSOLE
	CC9	2-WAY / BLACK	
	CC21	FIBER OPTIC CONNECTOR	
BLUETOOTH ANTENNA	TL118	1-WAY SCREENED	
CELLULAR PHONE MODULE	DB3	FIBER OPTIC CONNECTOR	LUGGAGE COMPARTMENT, LH REAR
	TL116	32-WAY	
	TL117	1-WAY SCREENED	
MICROPHONE – ROOF CONSOLE	RF3	20-WAY / BLACK	ROOF CONSOLE
MICROPHONE – LH REAR	RF23	2-WAY	ROOF / LH REAR
MICROPHONE – RH REAR	RF24	2-WAY	ROOF / RH REAR
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
	TL2	20-WAY / BLACK	
	TL29	26-WAY / BLACK	
	TL30	12-WAY / BLACK	
	TL37	2-WAY / BLACK	
STEERING WHEEL AUDIO SWITCHES	—	—	STEERING WHEEL
TELEMATICS DISPLAY	CC12	22-WAY / BLACK	CENTER CONSOLE
	CC13	2-WAY / BLACK	
	CC14	2-WAY / BLACK	
	CC15	2-WAY / BLACK	
	CC16	2-WAY / BLACK	
VOICE ACTIVATION MODULE	DB4	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM BOTTOM
	TL68	22-WAY	

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
RF26	8-WAY / BLACK / TELEMATICS HARNESS TO ROOF HARNESS	CABIN / LH 'D' POST
TL55	4-WAY / BLACK / TELEMATICS HARNESS TO REAR MICROPHONES	CABIN / LH REAR SEAT BACK

**GROUNDS**

Ground	Location
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

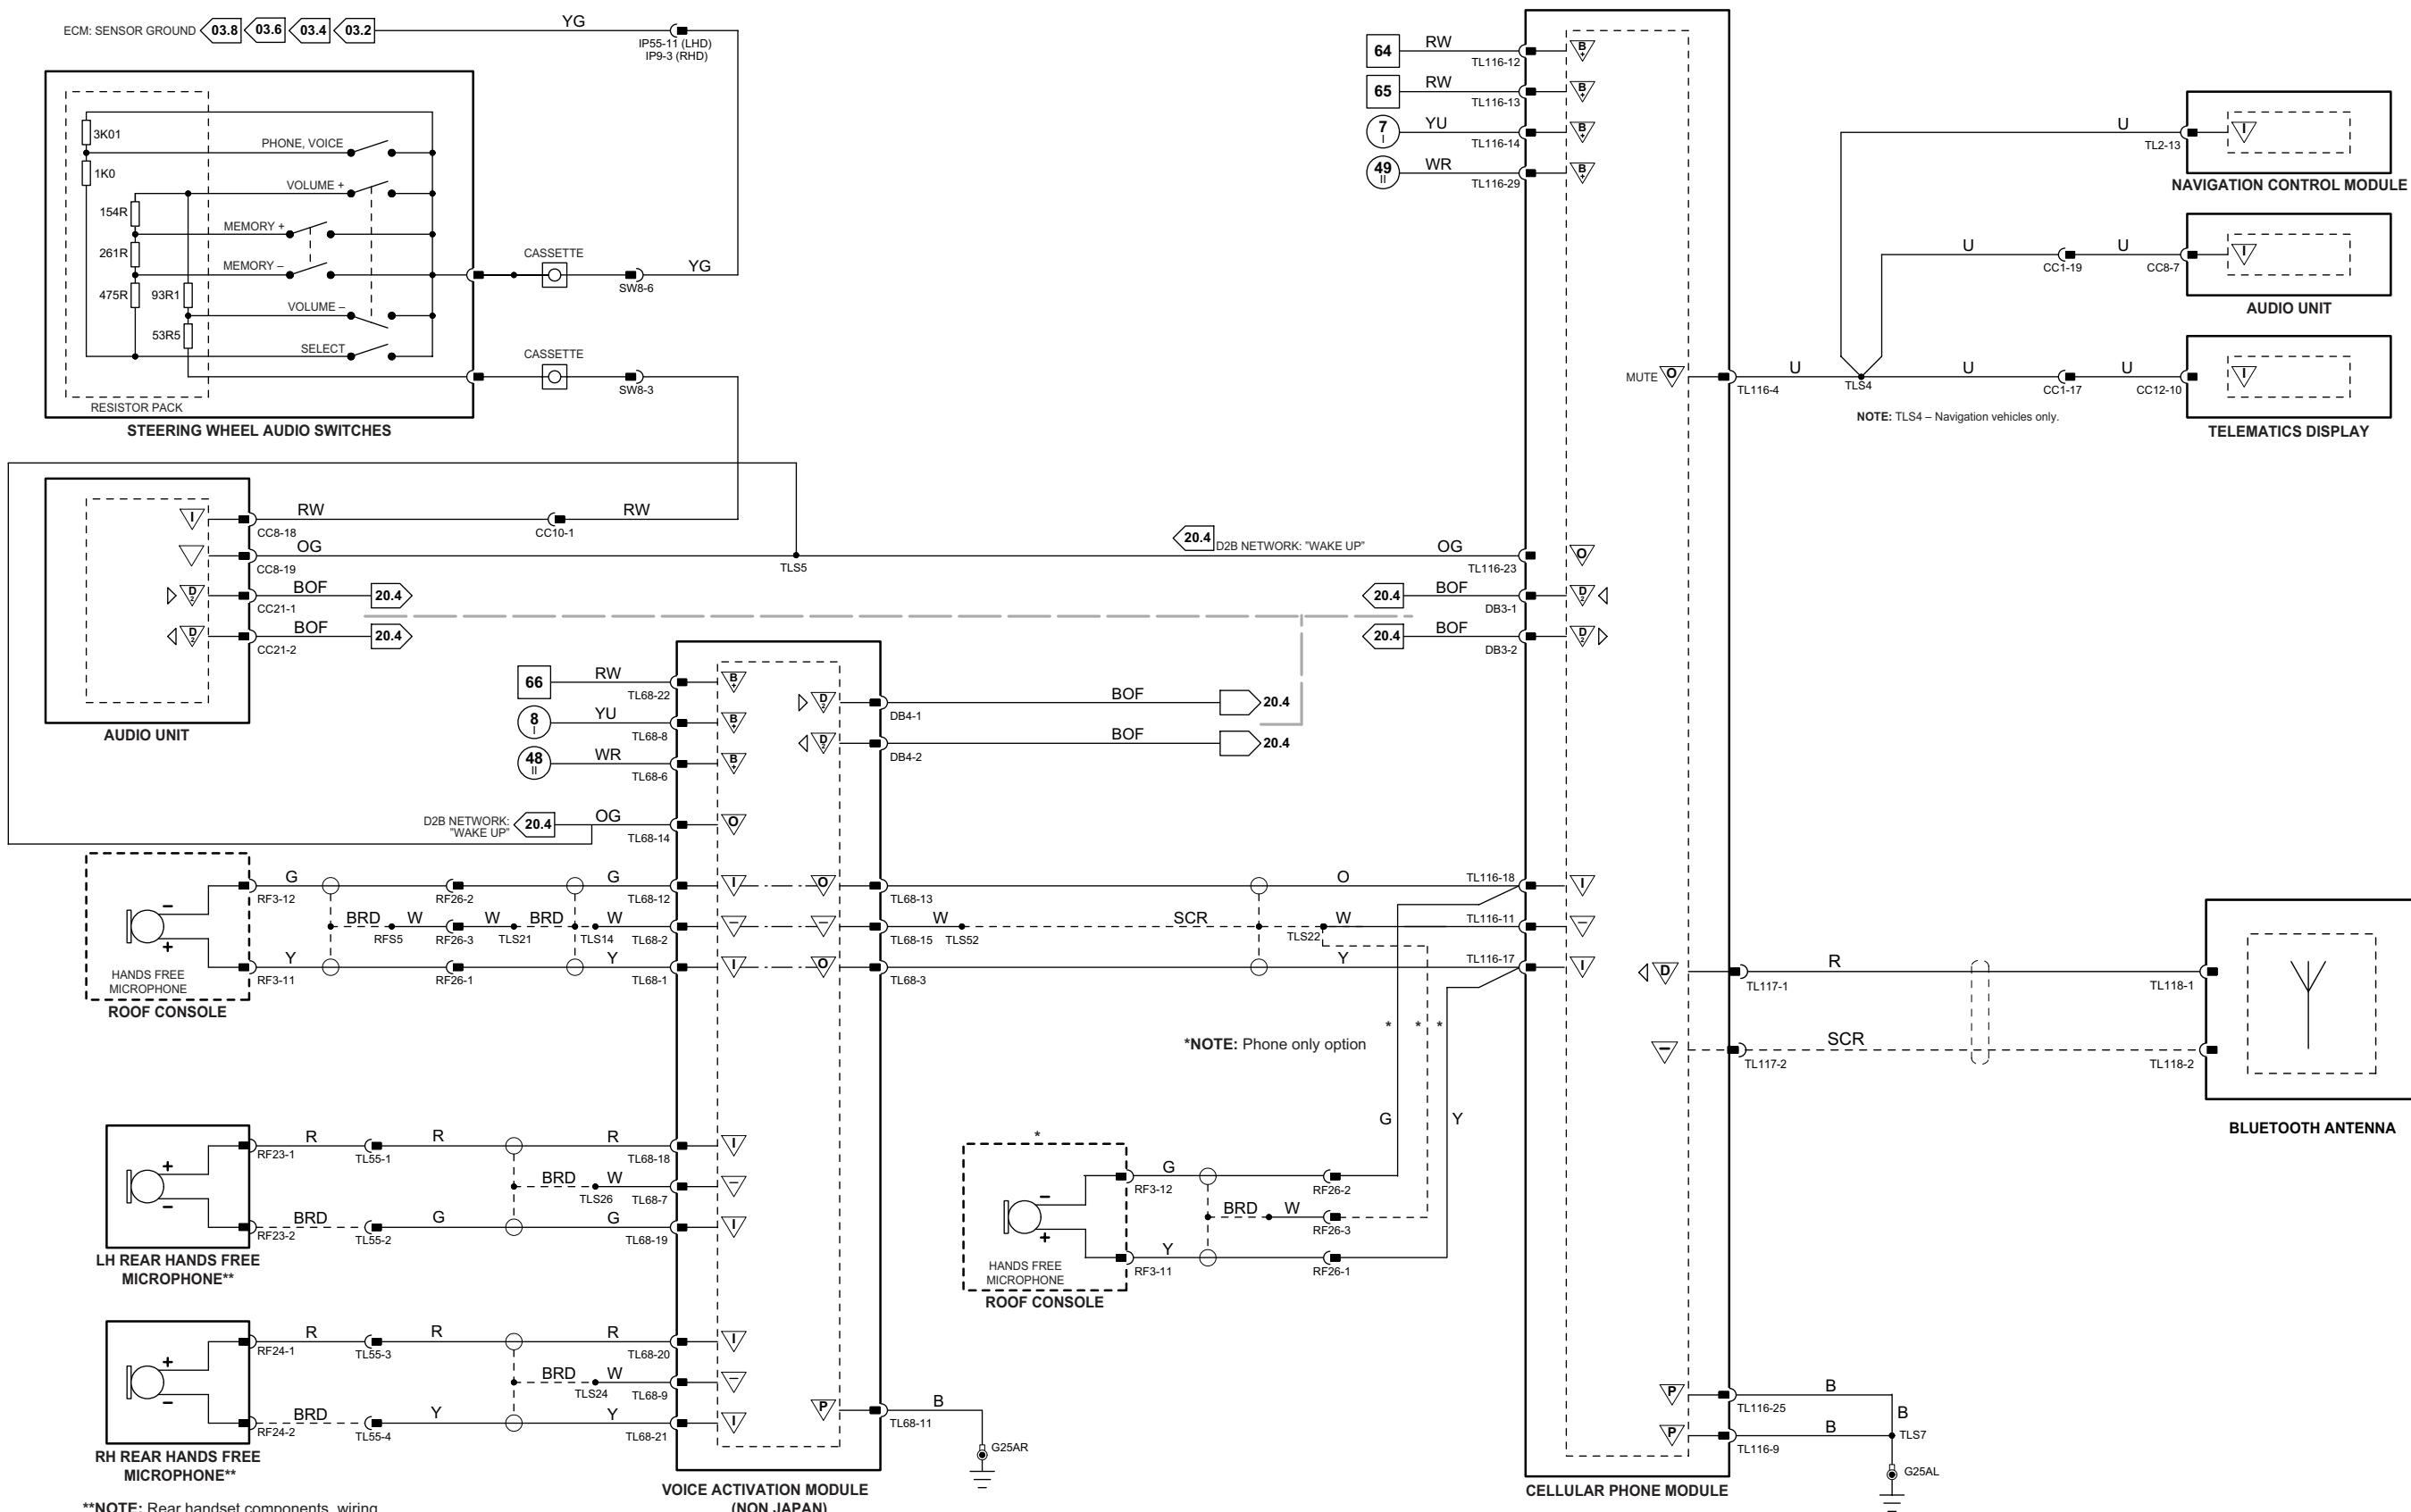

\*\*NOTE: Rear handset components, wiring and circuitry – Multi-zone Voice vehicles only.

f16\_2\_35008

**Fig. 16.3**

<b>COMPONENTS</b>			
<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
NAVIGATION CONTROL MODULE	DB6 TL2 TL29 TL30 TL37	FIBER OPTIC CONNECTOR 20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
NAVIGATION GPS ANTENNA	TL8	2-WAY / BLACK	PARCEL SHELF
TELEMATICS DISPLAY	CC12 CC13 CC14 CC15 CC16	22-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK	CENTER CONSOLE


  

<b>HARNESS IN-LINE CONNECTORS</b>		
<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE

<b>GROUNDS</b>	
<b>Ground</b>	<b>Location</b>
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

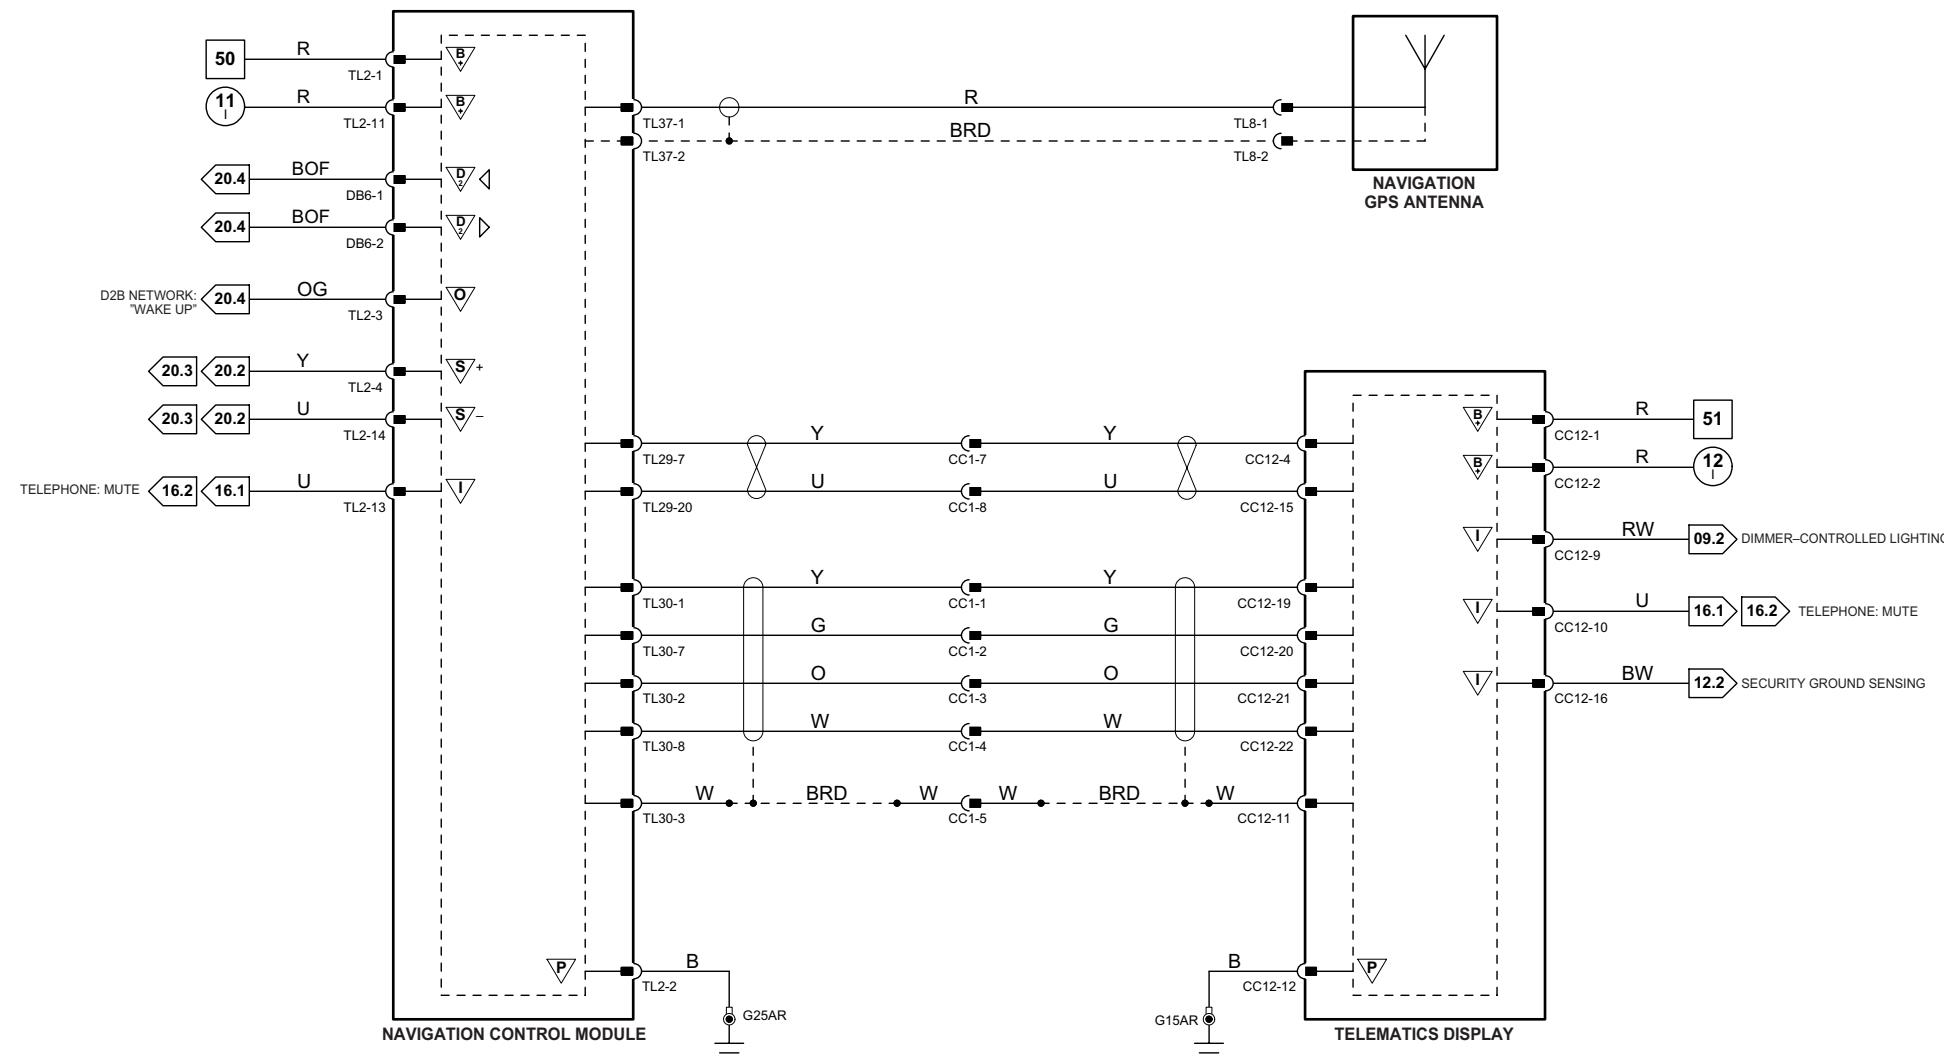

f16\_3\_35006

**Fig. 16.4**

<b>COMPONENTS</b>			
<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
NAVIGATION CONTROL MODULE	DB6 TL2 TL29 TL30 TL37	FIBER OPTIC CONNECTOR 20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
NAVIGATION GPS ANTENNA	TL8	2-WAY / BLACK	PARCEL SHELF
TELEMATICS DISPLAY	CC12 CC13 CC14 CC15 CC16	22-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK 2-WAY / BLACK	CENTER CONSOLE
TELEVISION ANTENNA 1	—	—	PARCEL SHELF
TELEVISION ANTENNA 2	—	—	PARCEL SHELF
TELEVISION ANTENNA 3	—	—	RH 'B/C' POST / UPPER
TELEVISION ANTENNA 4	—	—	RH 'B/C' POST / UPPER
TV ANTENNA AMPLIFIER 1	TL51	2-WAY / BLACK	PARCEL SHELF
TV ANTENNA AMPLIFIER 2	TL52	2-WAY / BLACK	PARCEL SHELF
TV ANTENNA AMPLIFIER 3	TL53	2-WAY / BLACK	RH 'B/C' POST / UPPER
TV ANTENNA AMPLIFIER 4	TL54	2-WAY / BLACK	RH 'B/C' POST / UPPER


**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC5	8-WAY BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE

**GROUNDS**

<b>Ground</b>	<b>Location</b>
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

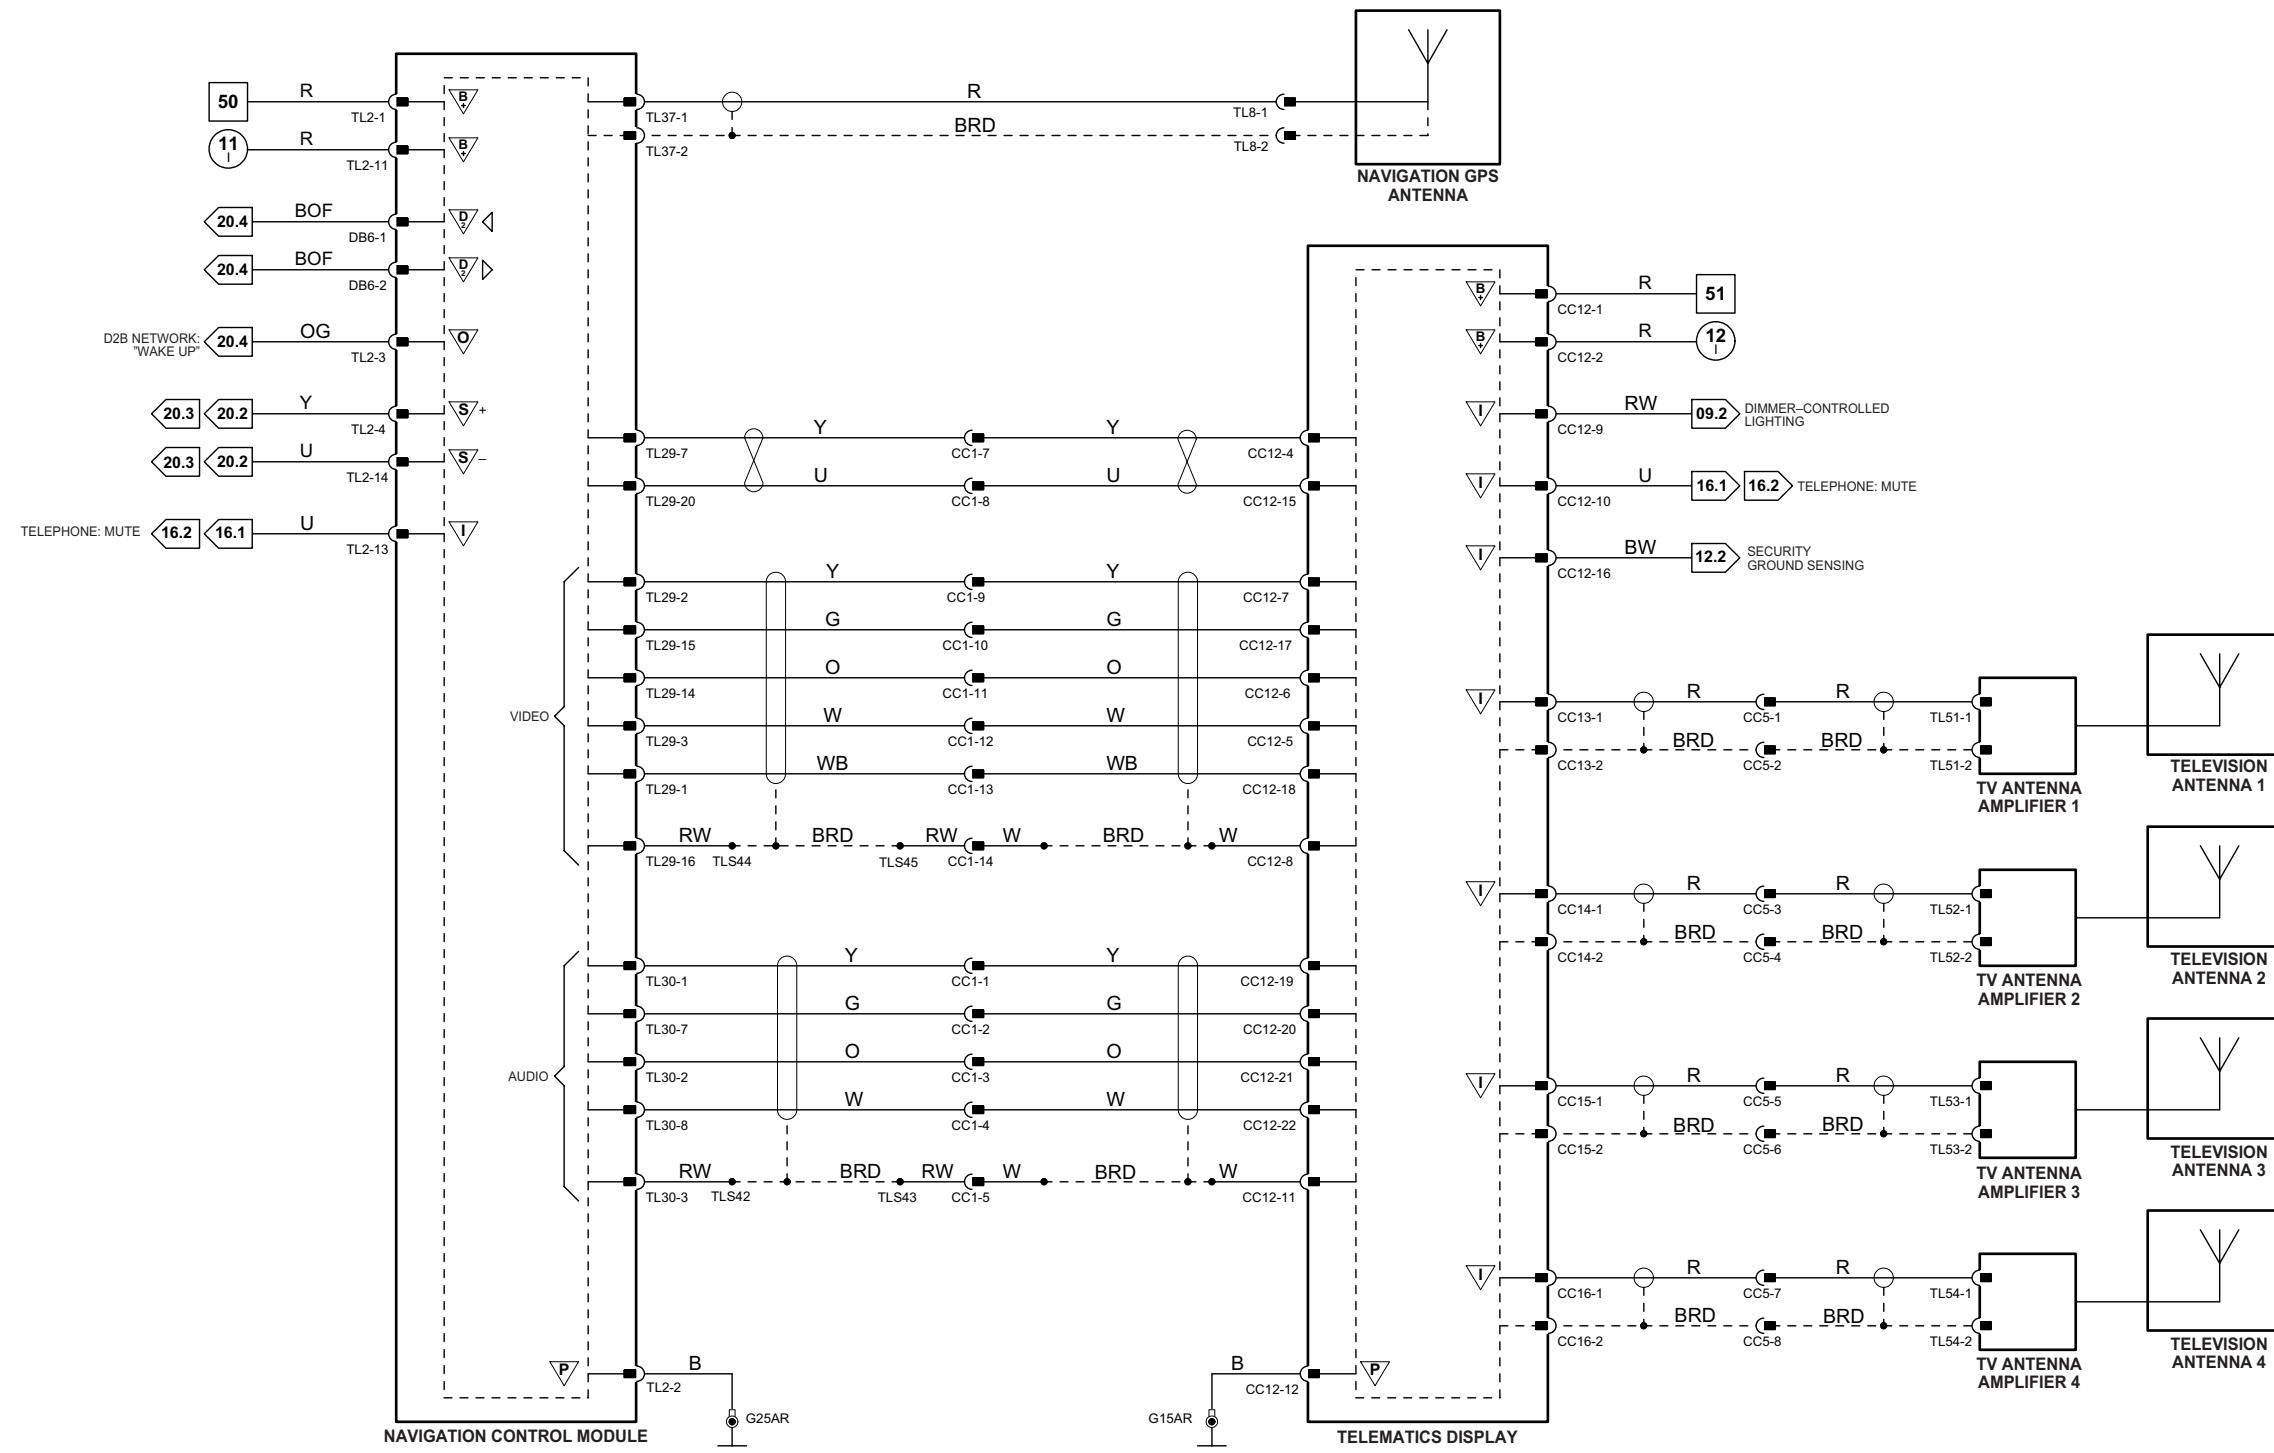

**Fig. 16.5**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
MICROPHONE	RF3	20-WAY / BLACK	ROOF CONSOLE
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
	TL2	20-WAY / BLACK	
	TL29	26-WAY / BLACK	
	TL30	12-WAY / BLACK	
	TL37	2-WAY / BLACK	
NAVIGATION GPS ANTENNA	TL8	2-WAY / BLACK	PARCEL SHELF
TELEMATICS DISPLAY	CC12	22-WAY / BLACK	CENTER CONSOLE
	CC13	2-WAY / BLACK	
	CC14	2-WAY / BLACK	
	CC15	2-WAY / BLACK	
	CC16	2-WAY / BLACK	
TELEVISION ANTENNA 1	—	—	PARCEL SHELF
TELEVISION ANTENNA 2	—	—	PARCEL SHELF
TELEVISION ANTENNA 3	—	—	RH 'B/C' POST / UPPER
TELEVISION ANTENNA 4	—	—	RH 'B/C' POST / UPPER
TV ANTENNA AMPLIFIER 1	TL51	2-WAY / BLACK	PARCEL SHELF
TV ANTENNA AMPLIFIER 2	TL52	2-WAY / BLACK	PARCEL SHELF
TV ANTENNA AMPLIFIER 3	TL53	2-WAY / BLACK	RH 'B/C' POST / UPPER
TV ANTENNA AMPLIFIER 4	TL54	2-WAY / BLACK	RH 'B/C' POST / UPPER
VEHICLE INFORMATION ANTENNA	TL63	2-WAY / BLACK	INSTRUMENT PANEL / LH SIDE
VEHICLE INFORMATION CONTROL MODULE	TL16	10-WAY / NATURAL	TRUNK / LH SIDE / FORWARD OF MODULE STACK
	TL36	2-WAY / BLACK	
	TL64	2-WAY / BLACK	
VEHICLE INFORMATION SENSOR	CR108	2-WAY / BLACK	UPPER LF 'A' POST


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC1	22-WAY / GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC5	8-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
RF26	8-WAY / BLACK / TELEMATICS HARNESS TO ROOF HARNESS	CABIN / LH 'D' POST
TL88	2-WAY / BLACK / CABIN HARNESS TO TELEMATICS HARNESS	CABIN / BELOW LH FRONT SEAT

**GROUNDS**

Ground	Location
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G25	TRUNK / LH SIDE / ADJACENT TO CD AUTOCHANGER

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

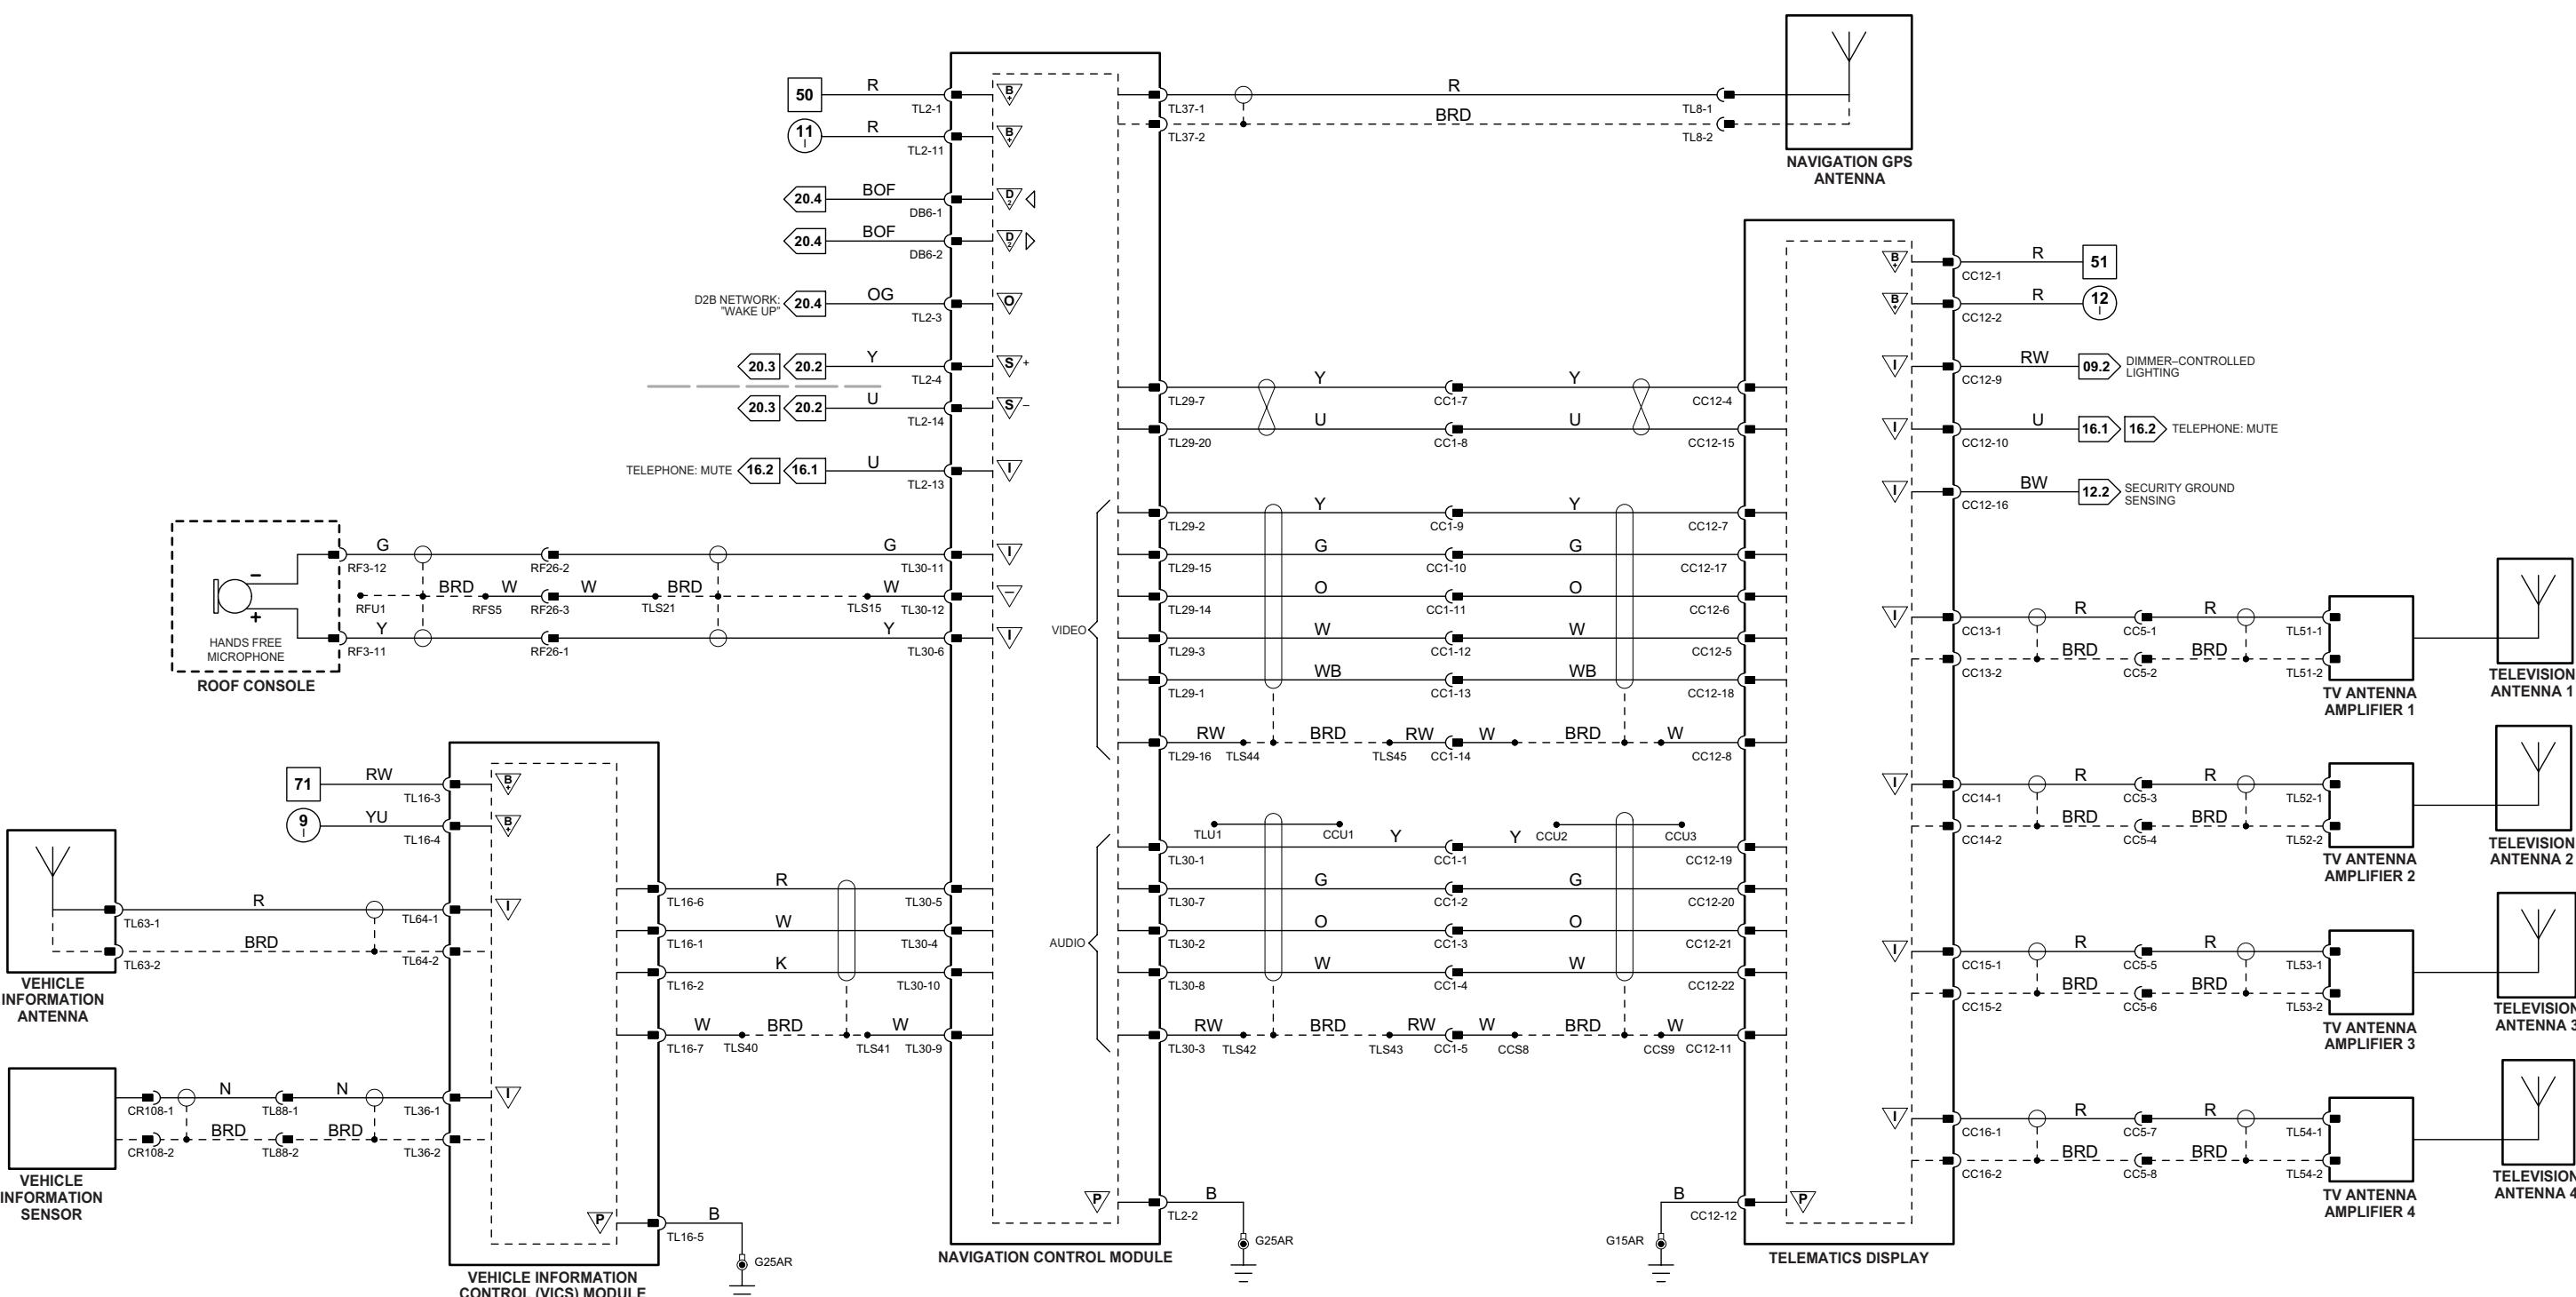

**Fig. 17.1**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
CURTAIN AIR BAG IGNITER – DRIVER	CR62	2-WAY / YELLOW	HEADLINER, DRIVER SIDE
CURTAIN AIR BAG IGNITER – PASSENGER	CR33	2-WAY / YELLOW	HEADLINER, PASSENGER SIDE
DRIVER SEAT POSITION SWITCH	SD20	2-WAY / GREY	DRIVER SEAT TRACK, LH SIDE
DUAL AIR BAG IGNITERS – DRIVER	SW11	2-WAY / BLACK	STEERING WHEEL
	SW12	2-WAY / BLACK	
FRONT IMPACT SENSOR	EC50	2-WAY / BLACK	FRONT CROSS MEMBER, CENTER
PASSENGER SEAT POSITION SWITCH	SP4	2-WAY / GREY	
RESTRAINTS CONTROL MODULE	CR86	24-WAY / BLACK	TRANSMISSION TUNNEL, UNDER CENTER CONSOLE
	CR87	40-WAY / BLACK	
SEAT BELT PRETENSIONER IGNITER – CENTER REAR	CR65	2-WAY / YELLOW	SEAT BELT RETRACTOR
SEAT BELT PRETENSIONER IGNITER – DRIVER	SD19	4-WAY / GREY	SEAT BELT BUCKLE
SEAT BELT PRETENSIONER IGNITER – DRIVER SIDE REAR	CR64	2-WAY / YELLOW	SEAT BELT RETRACTOR
SEAT BELT PRETENSIONER IGNITER – PASSENGER	SP19	4-WAY / GREY	SEAT BELT BUCKLE
SEAT BELT PRETENSIONER IGNITER – PASSENGER SIDE REAR	CR66	2-WAY / YELLOW	SEAT BELT RETRACTOR
SEAT BELT SWITCH – DRIVER	SD19	4-WAY / GREY	SEAT BELT BUCKLE
SIDE AIR BAG IGNITER – DRIVER	SD17	2-WAY / YELLOW	DRIVER SEAT, SEAT BACK
SIDE AIR BAG IGNITER – PASSENGER	SP17	2-WAY / YELLOW	PASSENGER SEAT, SEAT BACK
SIDE IMPACT SENSOR – DRIVER	CR60	2-WAY / BLACK	DRIVER SIDE 'B/C' POST, LOWER
SIDE IMPACT SENSOR – DRIVER REAR	CR61	2-WAY / BLACK	DRIVER SIDE 'D' POST, LOWER
SIDE IMPACT SENSOR – PASSENGER	CR35	2-WAY / BLACK	PASSENGER SIDE 'B/C' POST, LOWER
SIDE IMPACT SENSOR – PASSENGER REAR	CR51	2-WAY / BLACK	PASSENGER SIDE 'D' POST, LOWER


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
SP18	2-WAY / LIGHT GREY	
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT

**GROUNDS**

Ground	Location
G7	CABIN / LH SIDE OF TRANSMISSION TUNNEL
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

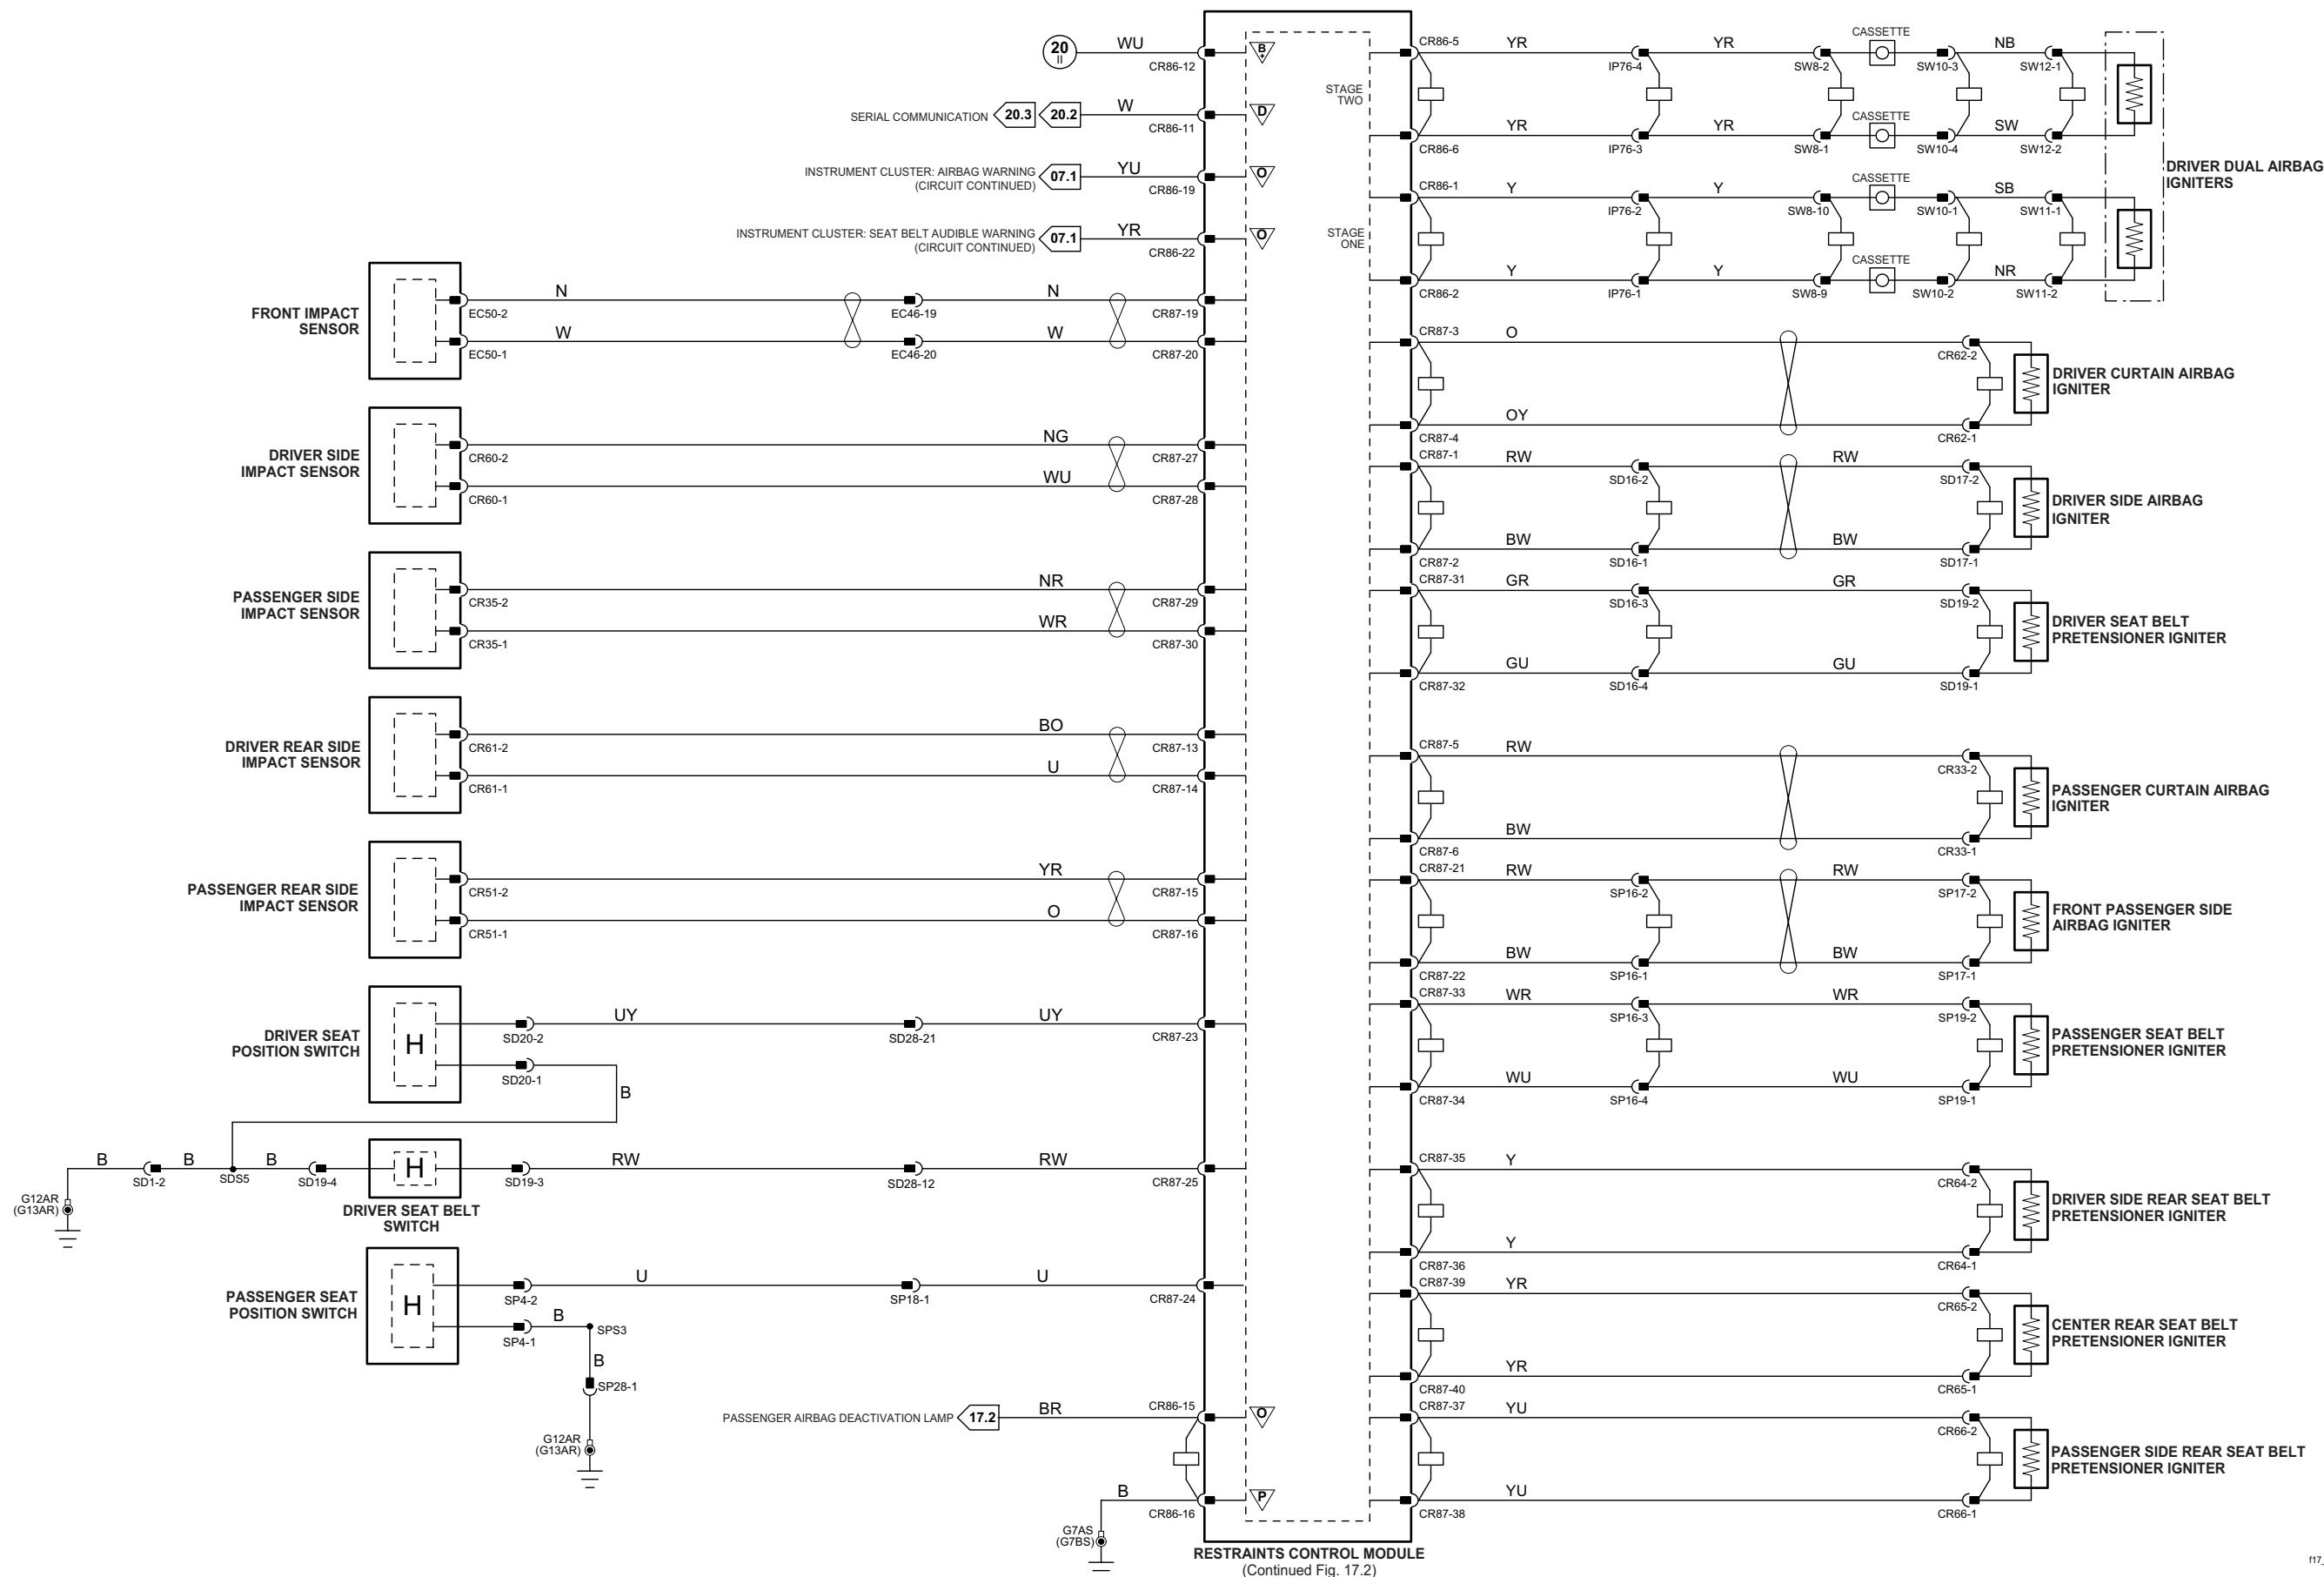

**Fig. 17.2**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
DUAL AIR BAG IGNITERS – PASSENGER	IP15	2-WAY / BLACK	INSTRUMENT PANEL
OCCUPANCY SENSING MODULE	IP56	2-WAY / BLACK	UNDER PASSENGER SEAT
PASSENGER AIR BAG DEACTIVATED INDICATOR LAMP	SP30	26-WAY / BLACK	INSTRUMENT PANEL / PASSENGER SIDE
PASSENGER SEAT WEIGHT PRESSURE SENSOR	IP68	3-WAY / BLACK	PASSENGER SEAT
PASSENGER SEAT WEIGHT SENSING MODULE	SP3	3-WAY / BLACK	UNDER PASSENGER SEAT
RESTRAINTS CONTROL MODULE	SP2	10-WAY / BLACK	UNDER PASSENGER SEAT
	CR86	24-WAY / BLACK	TRANSMISSION TUNNEL, UNDER CENTER CONSOLE
	CR87	40-WAY / BLACK	
SEAT BELT SWITCH – PASSENGER	SP19	4-WAY / GREY	SEAT BELT BUCKLE
SEAT BELT TENSION SENSOR – PASSENGER	SP33	4-WAY / GREY	UNDER PASSENGER SEAT
Spatial Sensor – CENTER CONSOLE (LHD)	CL6	2-WAY / BLACK	CENTER CONSOLE
Spatial Sensor – CENTER CONSOLE (RHD)	CL7	2-WAY / BLACK	
Spatial Sensor – HEADLINER INNER	RF16	2-WAY / BLACK	HEADLINER, ABOVE FRONT PASSENGER
Spatial Sensor – HEADLINER OUTER	RF18	2-WAY / BLACK	HEADLINER, ABOVE FRONT PASSENGER
Spatial Sensor – PASSENGER 'A' POST	CR105	2-WAY / BLACK	PASSENGER SIDE 'A' POST / UPPER


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
IP3	14-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
SP1	12-WAY / GREY / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
SP28	20-WAY / BLACK / PASSENGER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW PASSENGER SEAT
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

**GROUNDS**

Ground	Location
G7	CABIN / LH SIDE OF TRANSMISSION TUNNEL
G12	CABIN / BELOW DRIVER SEAT
G13	CABIN / BELOW PASSENGER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

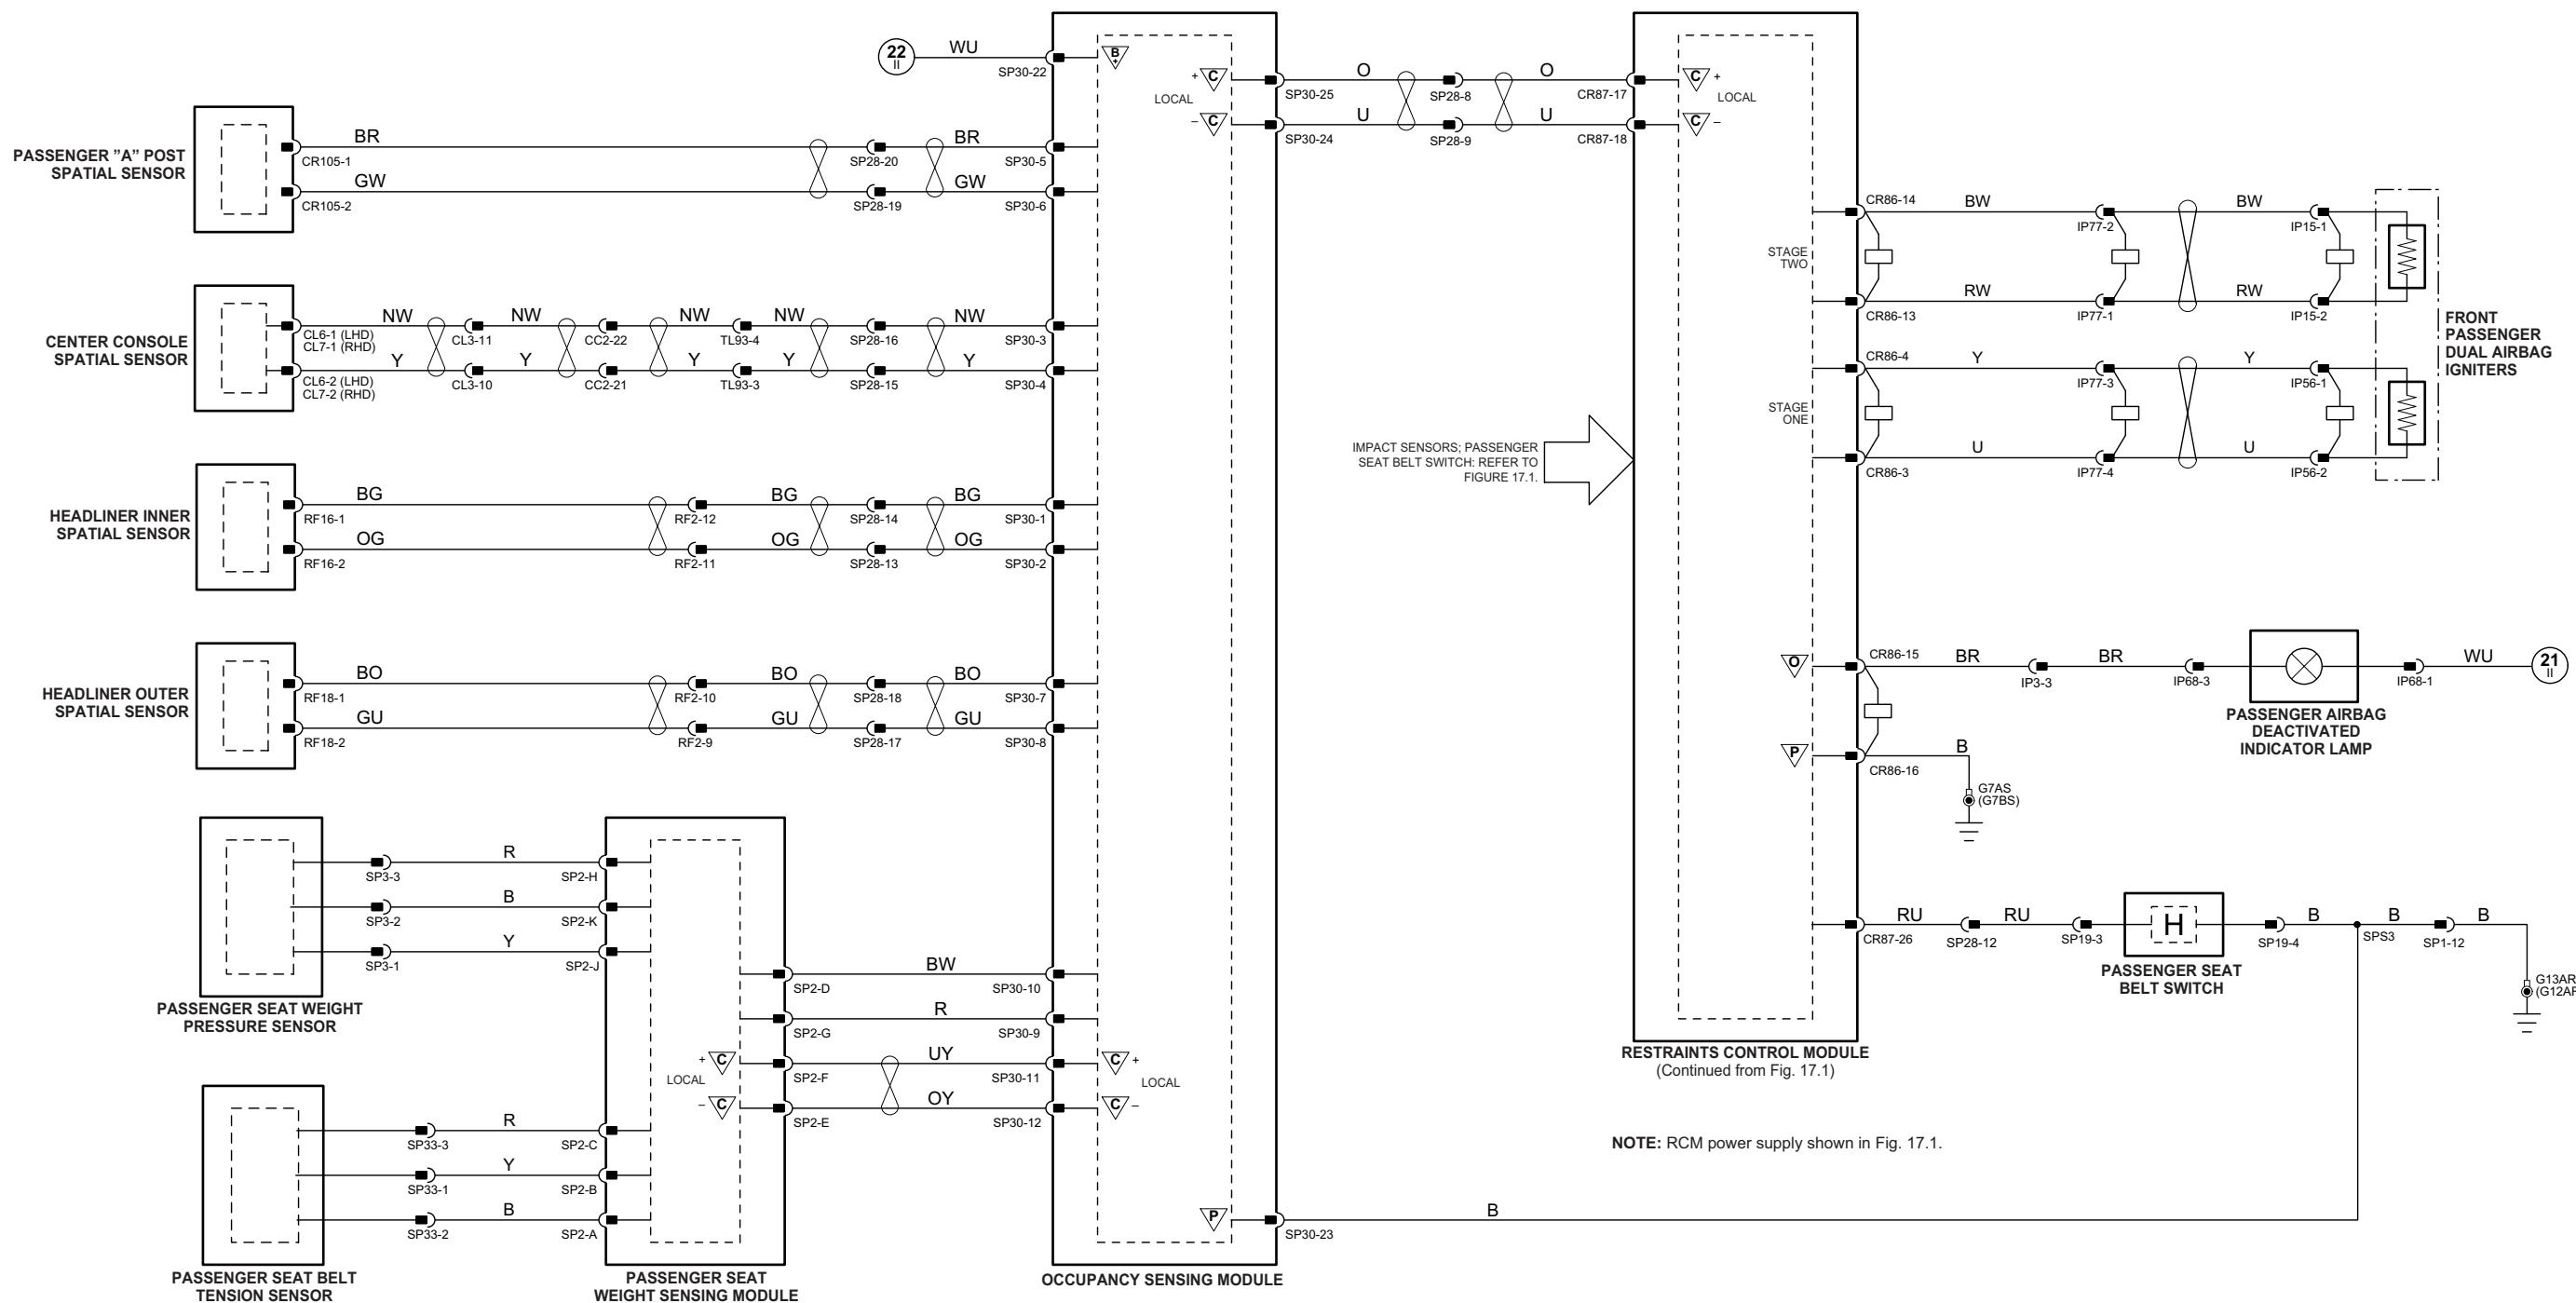

f17\_2\_35008

**Fig. 18.1**

**Instrument Cluster**

Pin	Description and Characteristic
C	IP6-8 CAN +
C	IP6-9 CAN -
S	IP6-10 SCP -
S	IP6-20 SCP +

**Parking Aid Module**

Pin	Description and Characteristic
B+	CR52-1 IGNITION SWITCHED POWER SUPPLY (II): B+
SS	CR52-2 FRONT SENSOR SIGNAL SUPPLY VOLTAGE: B+
PG	CR52-3 POWER GROUND: GROUND
SG	CR52-4 REAR SENSOR SIGNAL GROUND: GROUND
D	CR52-5 SERIAL DATA LINK
I	CR52-6 CHIME INHIBIT SIGNAL
I	CR52-7 PARKING AID SWITCH SIGNAL: GROUND WHEN ACTIVATED
I	CR52-8 TRAILER CONNECTED STATUS: GROUND = TRAILER CONNECTED
I	CR52-9 REVERSE LAMPS STATUS: B+ = REVERSE LAMPS ON
D	CR52-10 REAR LH CENTER SENSOR SIGNAL DATA
D	CR52-11 REAR LH SENSOR SIGNAL DATA
D	CR52-12 FRONT LH CENTER SENSOR SIGNAL DATA
D	CR52-13 FRONT LH SENSOR SIGNAL DATA
O	CR52-14 PARKING AID SOUNDERS +
SS	CR52-15 REAR SENSOR SIGNAL SUPPLY VOLTAGE: B+
SG	CR52-16 REAR SENSOR SIGNAL GROUND: GROUND
O	CR52-17 REAR PARKING AID SOUNDER
O	CR52-18 FRONT PARKING AID SOUNDER
O	CR52-19 PARKING AID STATUS LED ACTIVATE: TO ACTIVATE, PAM SWITCHES CIRCUIT TO B+
D	CR52-20 REAR RH CENTER SENSOR SIGNAL DATA
D	CR52-21 REAR RH SENSOR SIGNAL DATA
D	CR52-22 FRONT RH CENTER SENSOR SIGNAL DATA
D	CR52-23 FRONT RH SENSOR SIGNAL DATA
D	CR52-24 REAR RH SENSOR SIGNAL DATA
D	CR52-25 FRONT RH CENTER SENSOR SIGNAL DATA
D	CR52-26 FRONT RH SENSOR SIGNAL DATA

**Rear Electronic Module**

Pin	Description and Characteristic
O	CR11-17 PARKING AID CHIME INHIBIT SIGNAL
S	CR13-1 SCP +
S	CR13-2 SCP -

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
FRONT LH CENTER SENSOR	BF4	3-WAY / BLACK	FRONT BUMPER, LH, CENTER
FRONT LH SENSOR	BF5	3-WAY / BLACK	FRONT BUMPER, LH
FRONT RH CENTER SENSOR	BF3	3-WAY / BLACK	FRONT BUMPER, RH CENTER
FRONT RH SENSOR	BF2	3-WAY / BLACK	FRONT BUMPER, RH
INSTRUMENT CLUSTER	IP5	22-WAY / GREY	INSTRUMENT PANEL
	IP6	20-WAY / BLACK	
	IP7	22-WAY / BLACK	
PARKING AID MODULE	CR52	12-WAY / BLACK	LUGGAGE COMPARTMENT, LH REAR
PARKING AID SOUNDER, FRONT	IP46	2-WAY / BLACK	INSTRUMENT PANEL / DRIVER SIDE
PARKING AID SOUNDER, REAR	TL6	2-WAY / BLACK	PARCEL SHELF / RH SIDE
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR LH CENTER SENSOR	BR4	3-WAY / BLACK	REAR BUMPER, LH, CENTER
REAR LH SENSOR	BR5	3-WAY / BLACK	REAR BUMPER, LH
REAR RH CENTER SENSOR	BR3	3-WAY / BLACK	REAR BUMPER, RH CENTER
REAR RH SENSOR	BR2	3-WAY / BLACK	REAR BUMPER, RH
ROOF CONSOLE	RF3	20-WAY / BLACK	CABIN ROOF

**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
BF1	10-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO FRONT BUMPER HARNESS	ENGINE COMPARTMENT / BEHIND RH WHEEL ARCH LINER
BR1	10-WAY / GREY / CABIN HARNESS TO REAR BUMPER HARNESS	BEHIND REAR BUMPER, RH SIDE
EC46	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO CABIN HARNESS	CABIN / RH 'A' POST
IP1	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS CABIN / BEHIND	DRIVER SIDE INSTRUMENT PANEL END PLATE
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
TL35	22-WAY / GREY / CABIN HARNESS TO REAR CENTRE CONSOLE	TRUNK / LH REAR

**GROUNDS**

Ground	Location
G17	CABIN / BELOW REAR SEAT / RH SIDE
G29	TRUNK / SPARE WHEEL WELL

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	PG Power Ground	C CAN Network	D Serial and Encoded Data
O Output	SS Sensor / Signal Supply V	S SCP Network	V Voltage (DC)
B+ Battery Voltage	SG Sensor / Signal Ground	D2 D2B Network	PWM Pulse Width Modulated

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

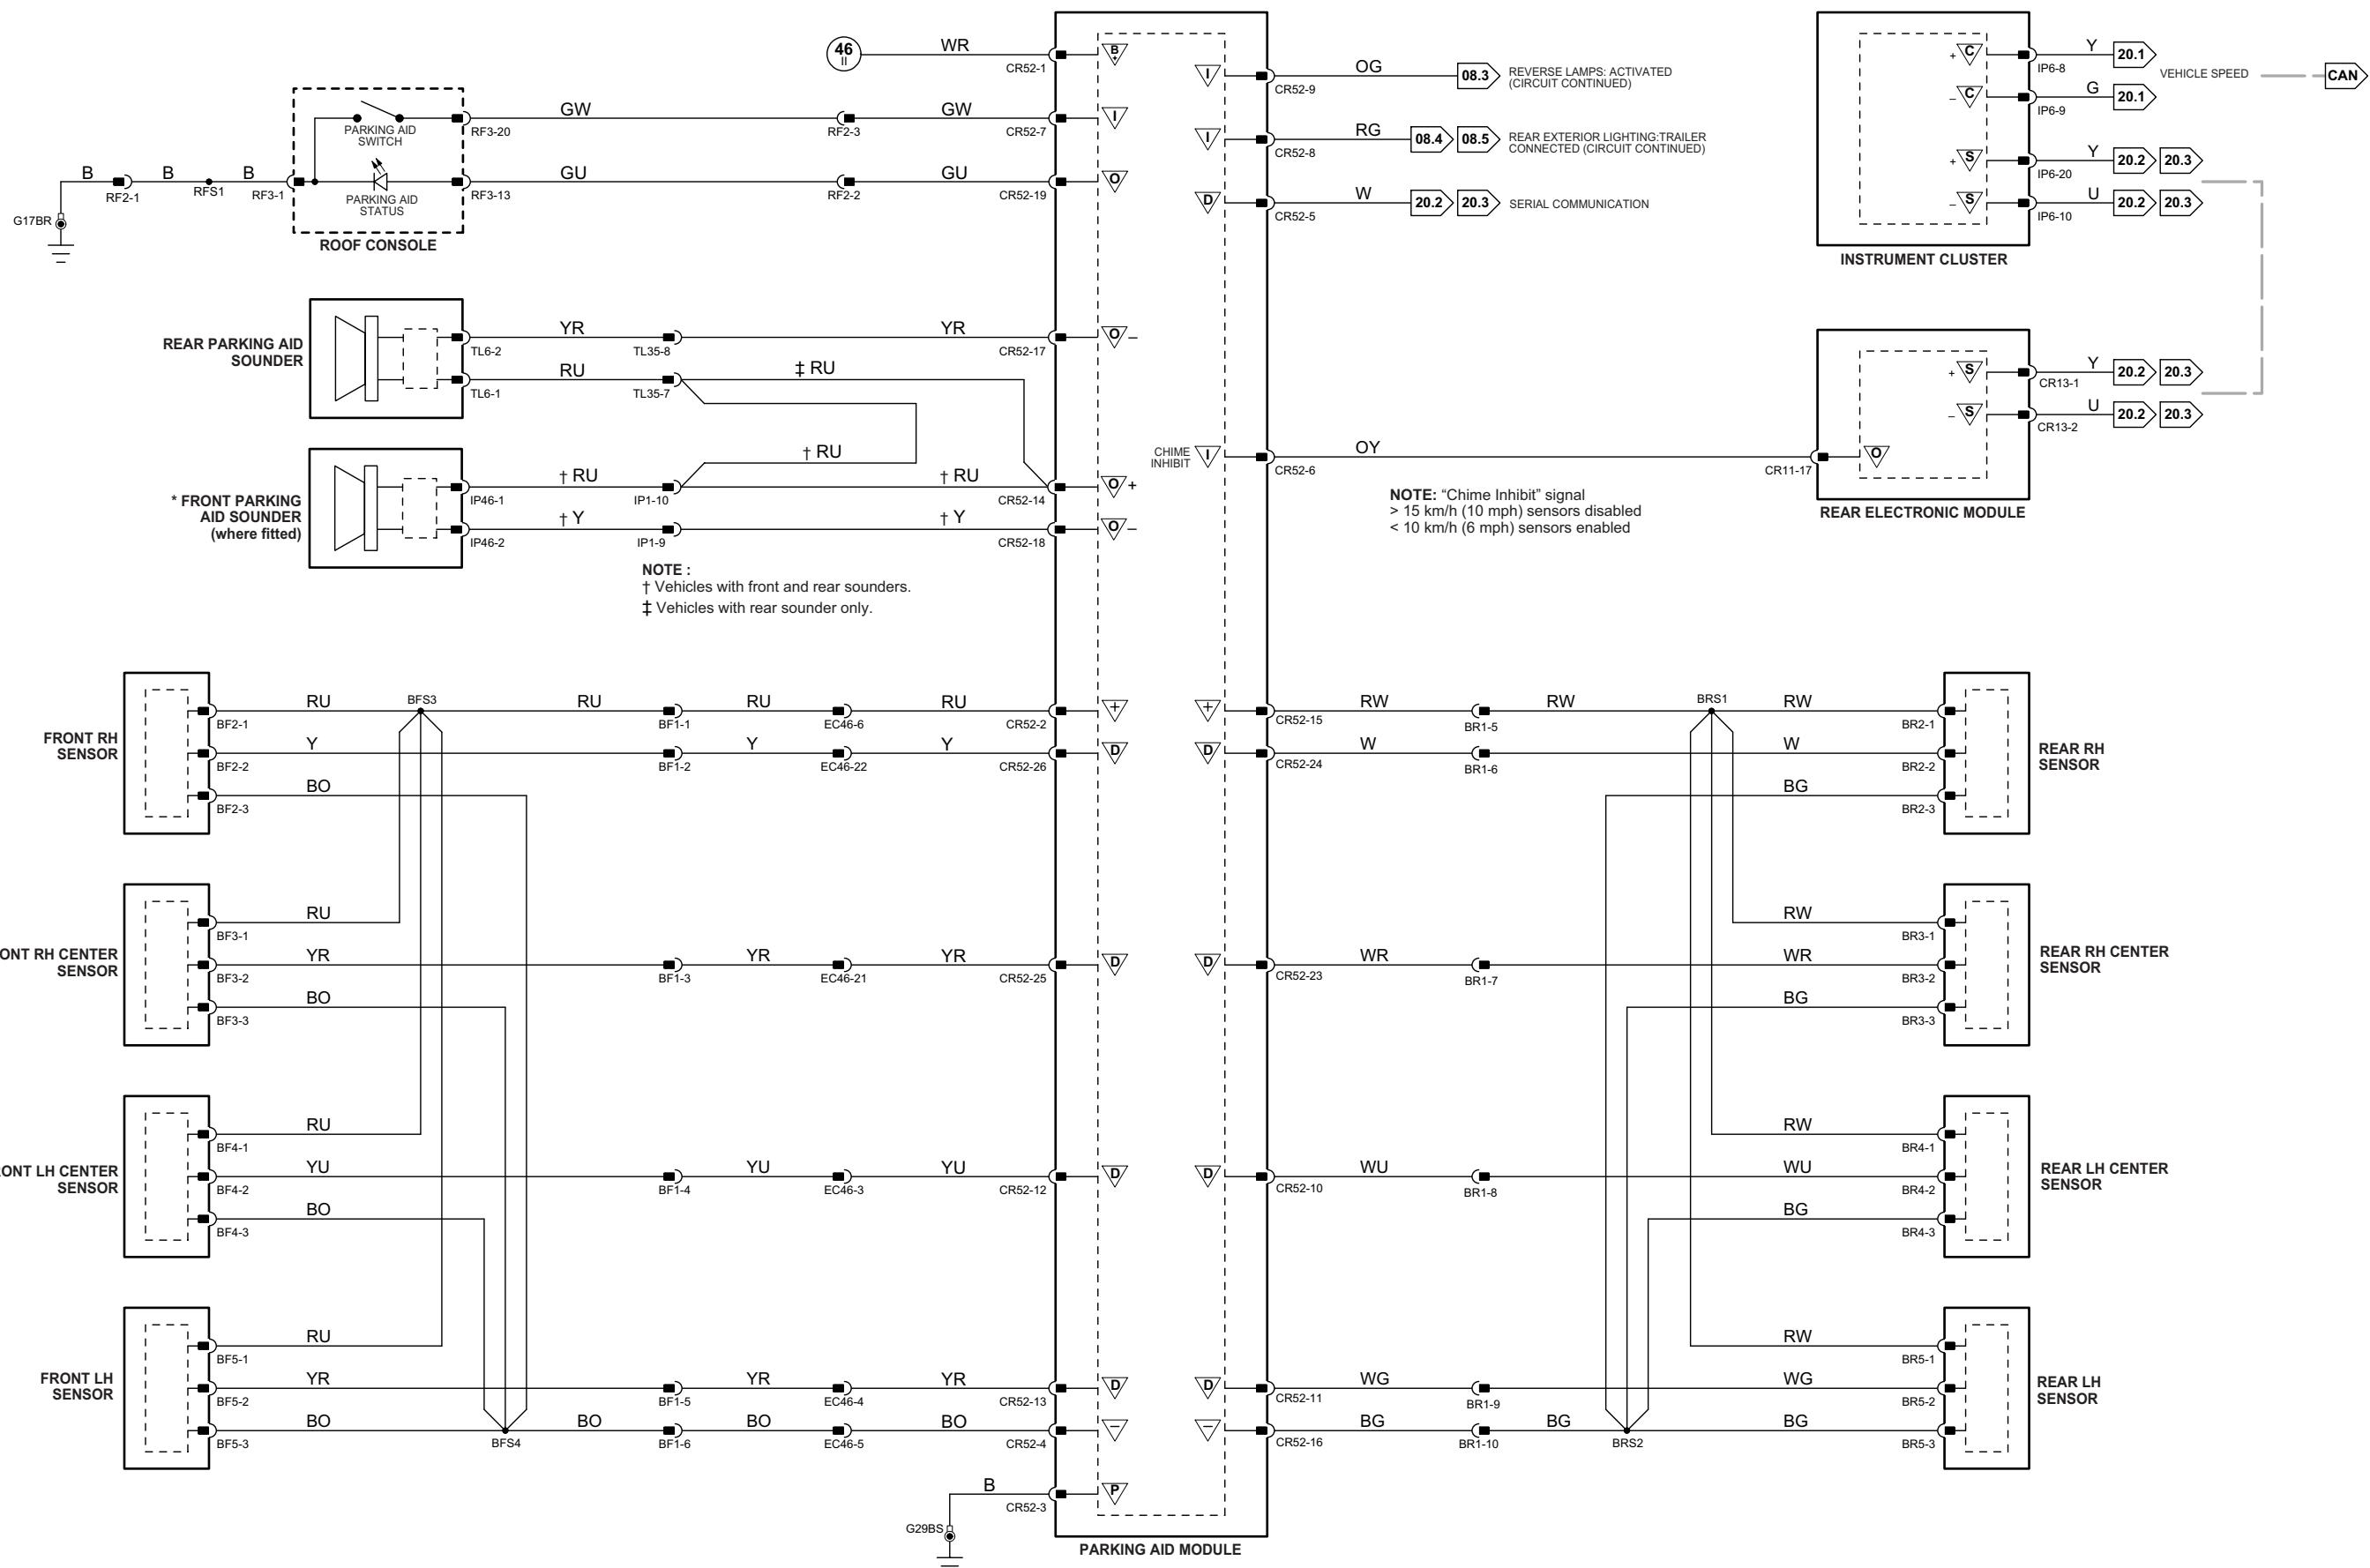

f18\_1\_35008

1 → 6 Fig. 01.1	72 → 97 Fig. 01.3	16 → 53 Fig. 01.5	78 → 105 Fig. 01.7	Input	B Battery Voltage	Sensor/Signal Supply V	ACP	VARIANT: Parking Aid Vehicles
7 → 71 Fig. 01.2	1 → 15 Fig. 01.4	53 → 77 Fig. 01.6	106 → 143 Fig. 01.8	Output	P Power Ground	Sensor/Signal Ground	SCP	VIN RANGE: All
							CAN	DATE OF ISSUE: May 2007

## Front Electronic Module

Pin	Description and Characteristic
PG	CR1-26 POWER GROUND: GROUND
I	CR9-2 GLOVE BOX SWITCH SIGNAL
B+	CR9-6 BATTERY POWER SUPPLY: LOGIC: B+
PG	CR10-11 POWER GROUND: GROUND
PG	CR10-13 POWER GROUND: GROUND
PG	CR10-14 POWER GROUND: GROUND
I	CR85-18 LH FRONT SEAT HEATER SWITCH SIGNAL: PWM
I	CR85-19 RH FRONT SEAT HEATER SWITCH SIGNAL: PWM
O	CR85-20 SEAT HEATERS SWITCHED ON SIGNAL: B+ WHEN ACTIVATED
O	EC36-9 GLOVE BOX RELEASE ACTIVATE

Fig. 19.1

## COMPONENTS

Component	Connector(s)	Connector Description	Location
CENTER CONSOLE SWITCH PACK	CL1 CL2	8-WAY / BLACK 8-WAY / BLACK	CENTER CONSOLE
CLOCK	IP19	6-WAY / BLACK	INSTRUMENT PANEL / CENTER VENT
FRONT ELECTRONIC MODULE	CR1 CR9 CR10 CR85 EC36	26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK	CABIN / LH 'A' POST
GLOVE BOX MOTOR	IP16	3-WAY / BLACK	GLOVE BOX
GLOVE BOX SWITCH	IP12	2-WAY / BLACK	GLOVE BOX
STEERING WHEEL	SW7	4-WAY / BLACK	STEERING WHEEL
STEERING WHEEL HEATER MODULE	SW5	4-WAY / BLACK	STEERING WHEEL

## HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC7	10-WAY / GREY / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CL3	16-WAY / GREY / CENTER CONSOLE HARNESS TO CENTER CONSOLE LINK HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP17	16-WAY / GREEN / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
TL28	16-WAY / GREY / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE OF TRANSMISSION TUNNEL

## GROUNDS

Ground	Location
G9	CABIN / UPPER LH A POST
G15	CABIN / RH SIDE OF TRANSMISSION TUNNEL
G31	CABIN / BEHIND PASSENGER AIR BAG
G32	CABIN / BEHIND INSTRUMENT CLUSTER

FOR CONTROL MODULE PIN-OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	PG	Power Ground	C	CAN Network	D	Serial and Encoded Data
O	Output	SS	Sensor / Signal Supply V	S	SCP Network	V	Voltage (DC)
B+	Battery Voltage	SG	Sensor / Signal Ground	D2	D2B Network	PWM	Pulse Width Modulated


CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted.


Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

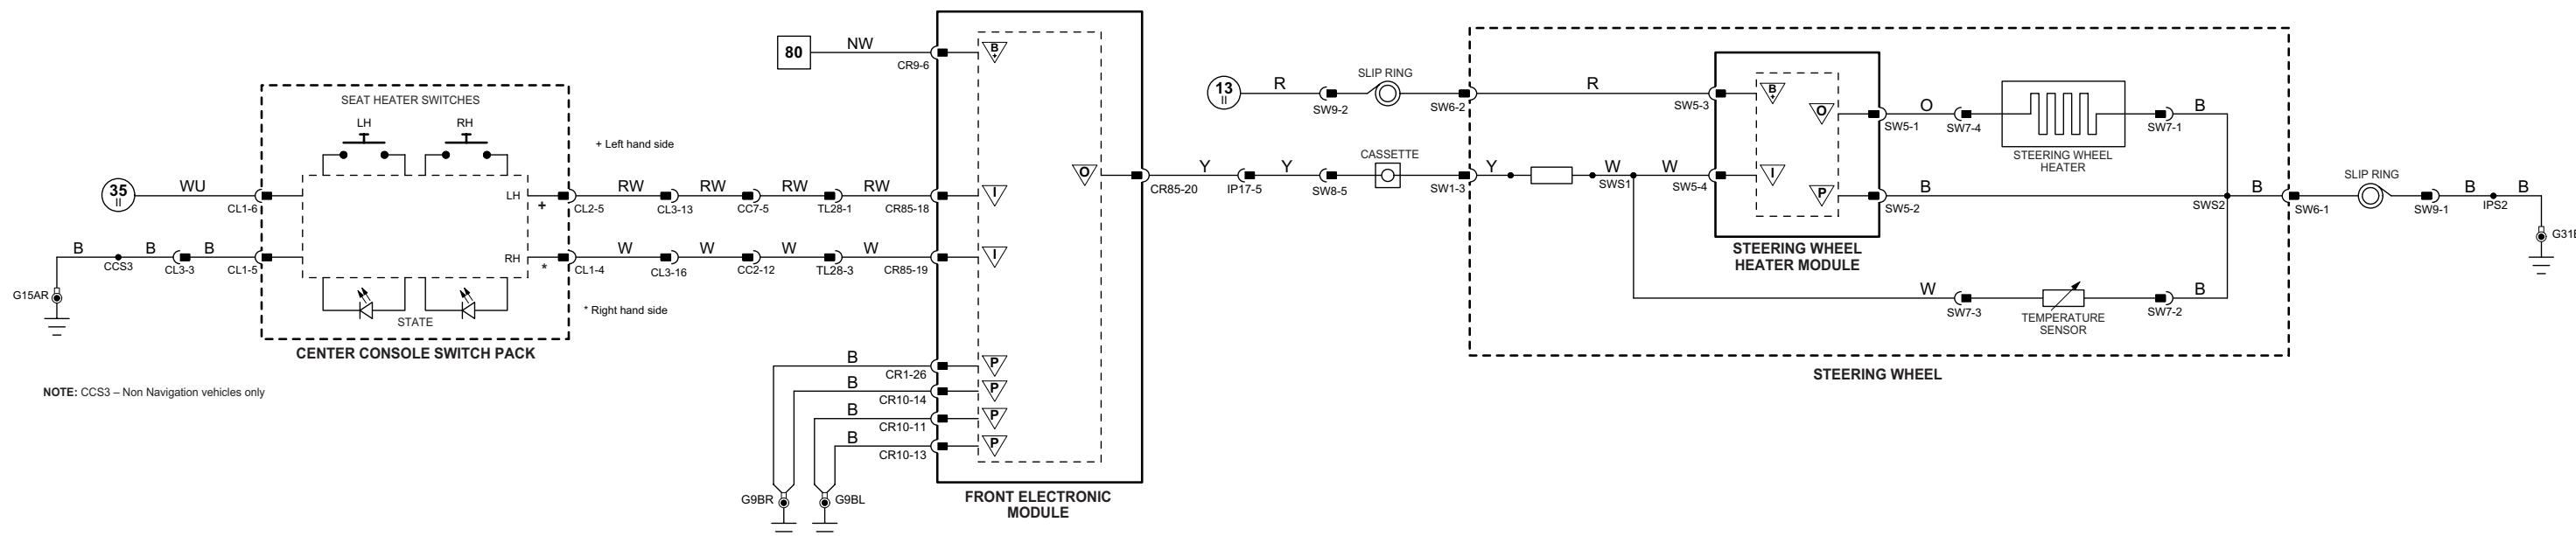

## STEERING WHEEL HEATER

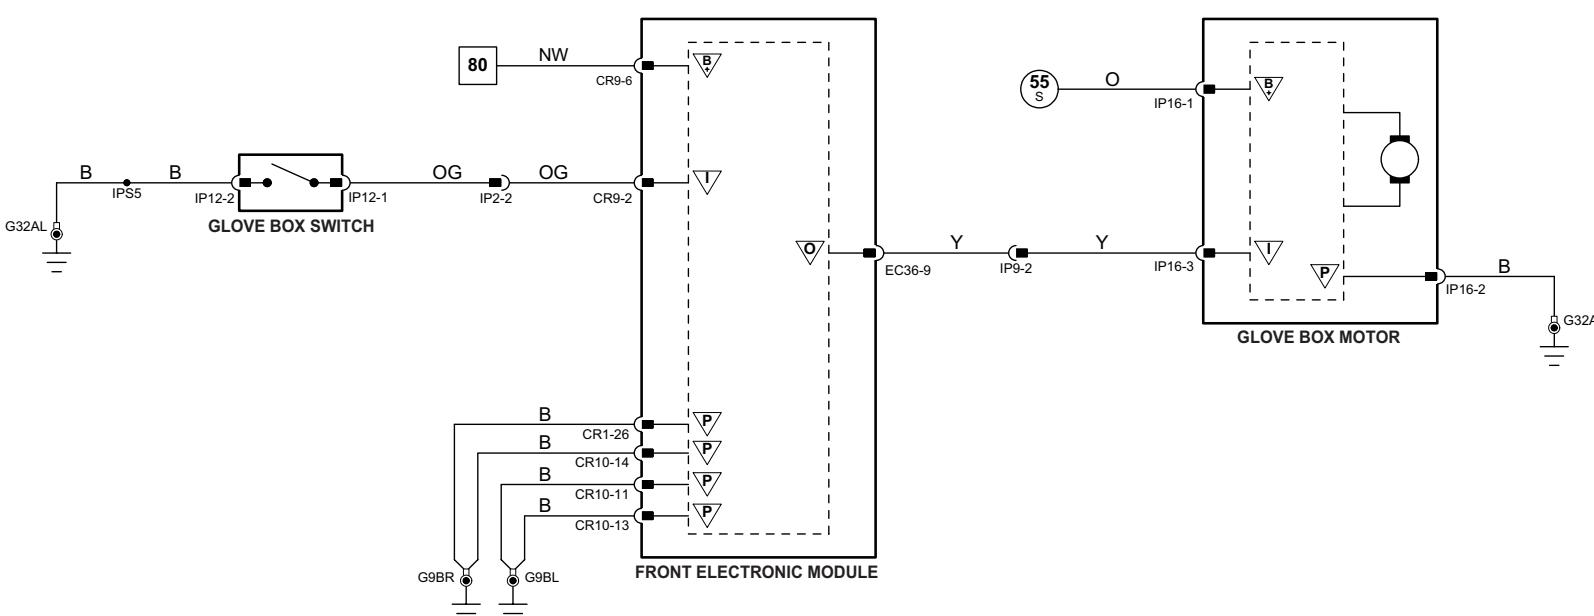

## GLOVE BOX DOOR

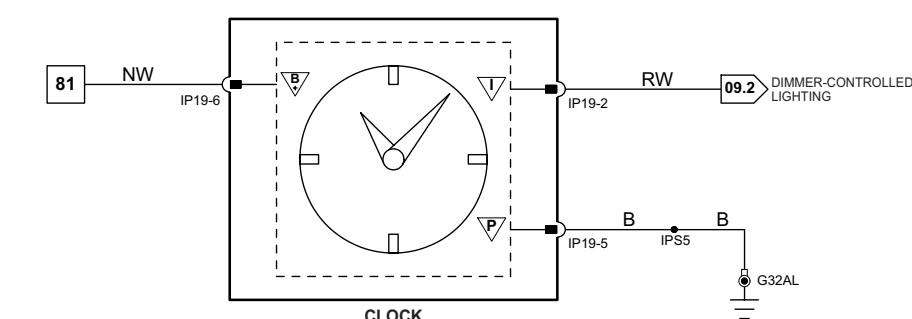

## CLOCK

f19\_1\_35008

**Fig. 19.2**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
ACCESSORY RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R3
AUXILIARY RELAY	—	—	REAR POWER DISTRIBUTION FUSE BOX – R8
CIGAR LIGHTER – FRONT	TL69	3-WAY / BLACK	CENTER CONSOLE
CIGAR LIGHTER – REAR	TL70	3-WAY / BLACK	REAR CENTER CONSOLE
ELECTRONIC ROAD PRICING CONNECTOR	CR121	2-WAY / BLACK	INSTRUMENT PANEL
FRONT POWER DISTRIBUTION FUSE BOX	EC4	4-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
	EC5	4-WAY / BLACK	
	EC19	8-WAY / BLACK	
	EC22	4-WAY / BLACK	
	EC26	8-WAY / BLACK	
	EC28	12-WAY / BLACK	
	EC32	4-WAY / BLACK	
	EC35	8-WAY / BLACK	
	EC40	8-WAY / BLACK	
	EC41	10-WAY / BLACK	
HORN RELAY (DIESEL)	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R14
HORN RELAY (GASOLINE)	—	—	FRONT POWER DISTRIBUTION FUSE BOX – R9B
HORN SWITCH	—	—	STEERING WHEEL
HORN	EC58	2-WAY / BLACK	BEHIND FRONT BUMPER / LH SIDE
HORN	EC59	2-WAY / BLACK	BEHIND FRONT BUMPER / RH SIDE
POWER POINT – FRONT	IP21	3-WAY / BLACK	FRONT CENTER CONSOLE GLOVE BOX
POWER POINT – REAR	TL72	3-WAY / BLACK	REAR CENTER CONSOLE
REAR ACCESSORY CONNECTOR	CR40	3-WAY / BLACK	TRUNK / RH REAR
REAR POWER DISTRIBUTION FUSE BOX	CR3	4-WAY / BLACK	TRUNK / RH REAR
	CR5	4-WAY / BLACK	
	CR68	8-WAY / BLACK	
	CR80	4-WAY / BLACK	
	CR81	8-WAY / BLACK	
	CR82	12-WAY / BLACK	
	CR83	4-WAY / BLACK	
	CR84	8-WAY / BLACK	
	CR97	8-WAY / BLACK	
	CR98	10-WAY / BLACK	
ROOF CONSOLE	RF3	20-WAY / BLACK	CABIN ROOF
SUN SHADE MOTOR	CR70	4-WAY / GREY	REAR WINDOW


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP9	8-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / ADJACENT TO HOOD RELEASE
IP51	10-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
RF2	16-WAY / BLUE / CABIN HARNESS TO ROOF HARNESS	CABIN / RH 'D' POST
TL14	14-WAY / GREY / CABIN HARNESS TO TELEMATICS HARNESS	TRUNK / LH SIDE / BEHIND CD AUTOCHANGER

**GROUNDS**

Ground	Location
G1	ENGINE COMPARTMENT / BEHIND LH HEADLAMP ASSEMBLY
G10	CABIN / RH A POST
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / LH SIDE
G23	TRUNK / RH SIDE / ADJACENT TO BATTERY
G32	CABIN / BEHIND INSTRUMENT CLUSTER

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

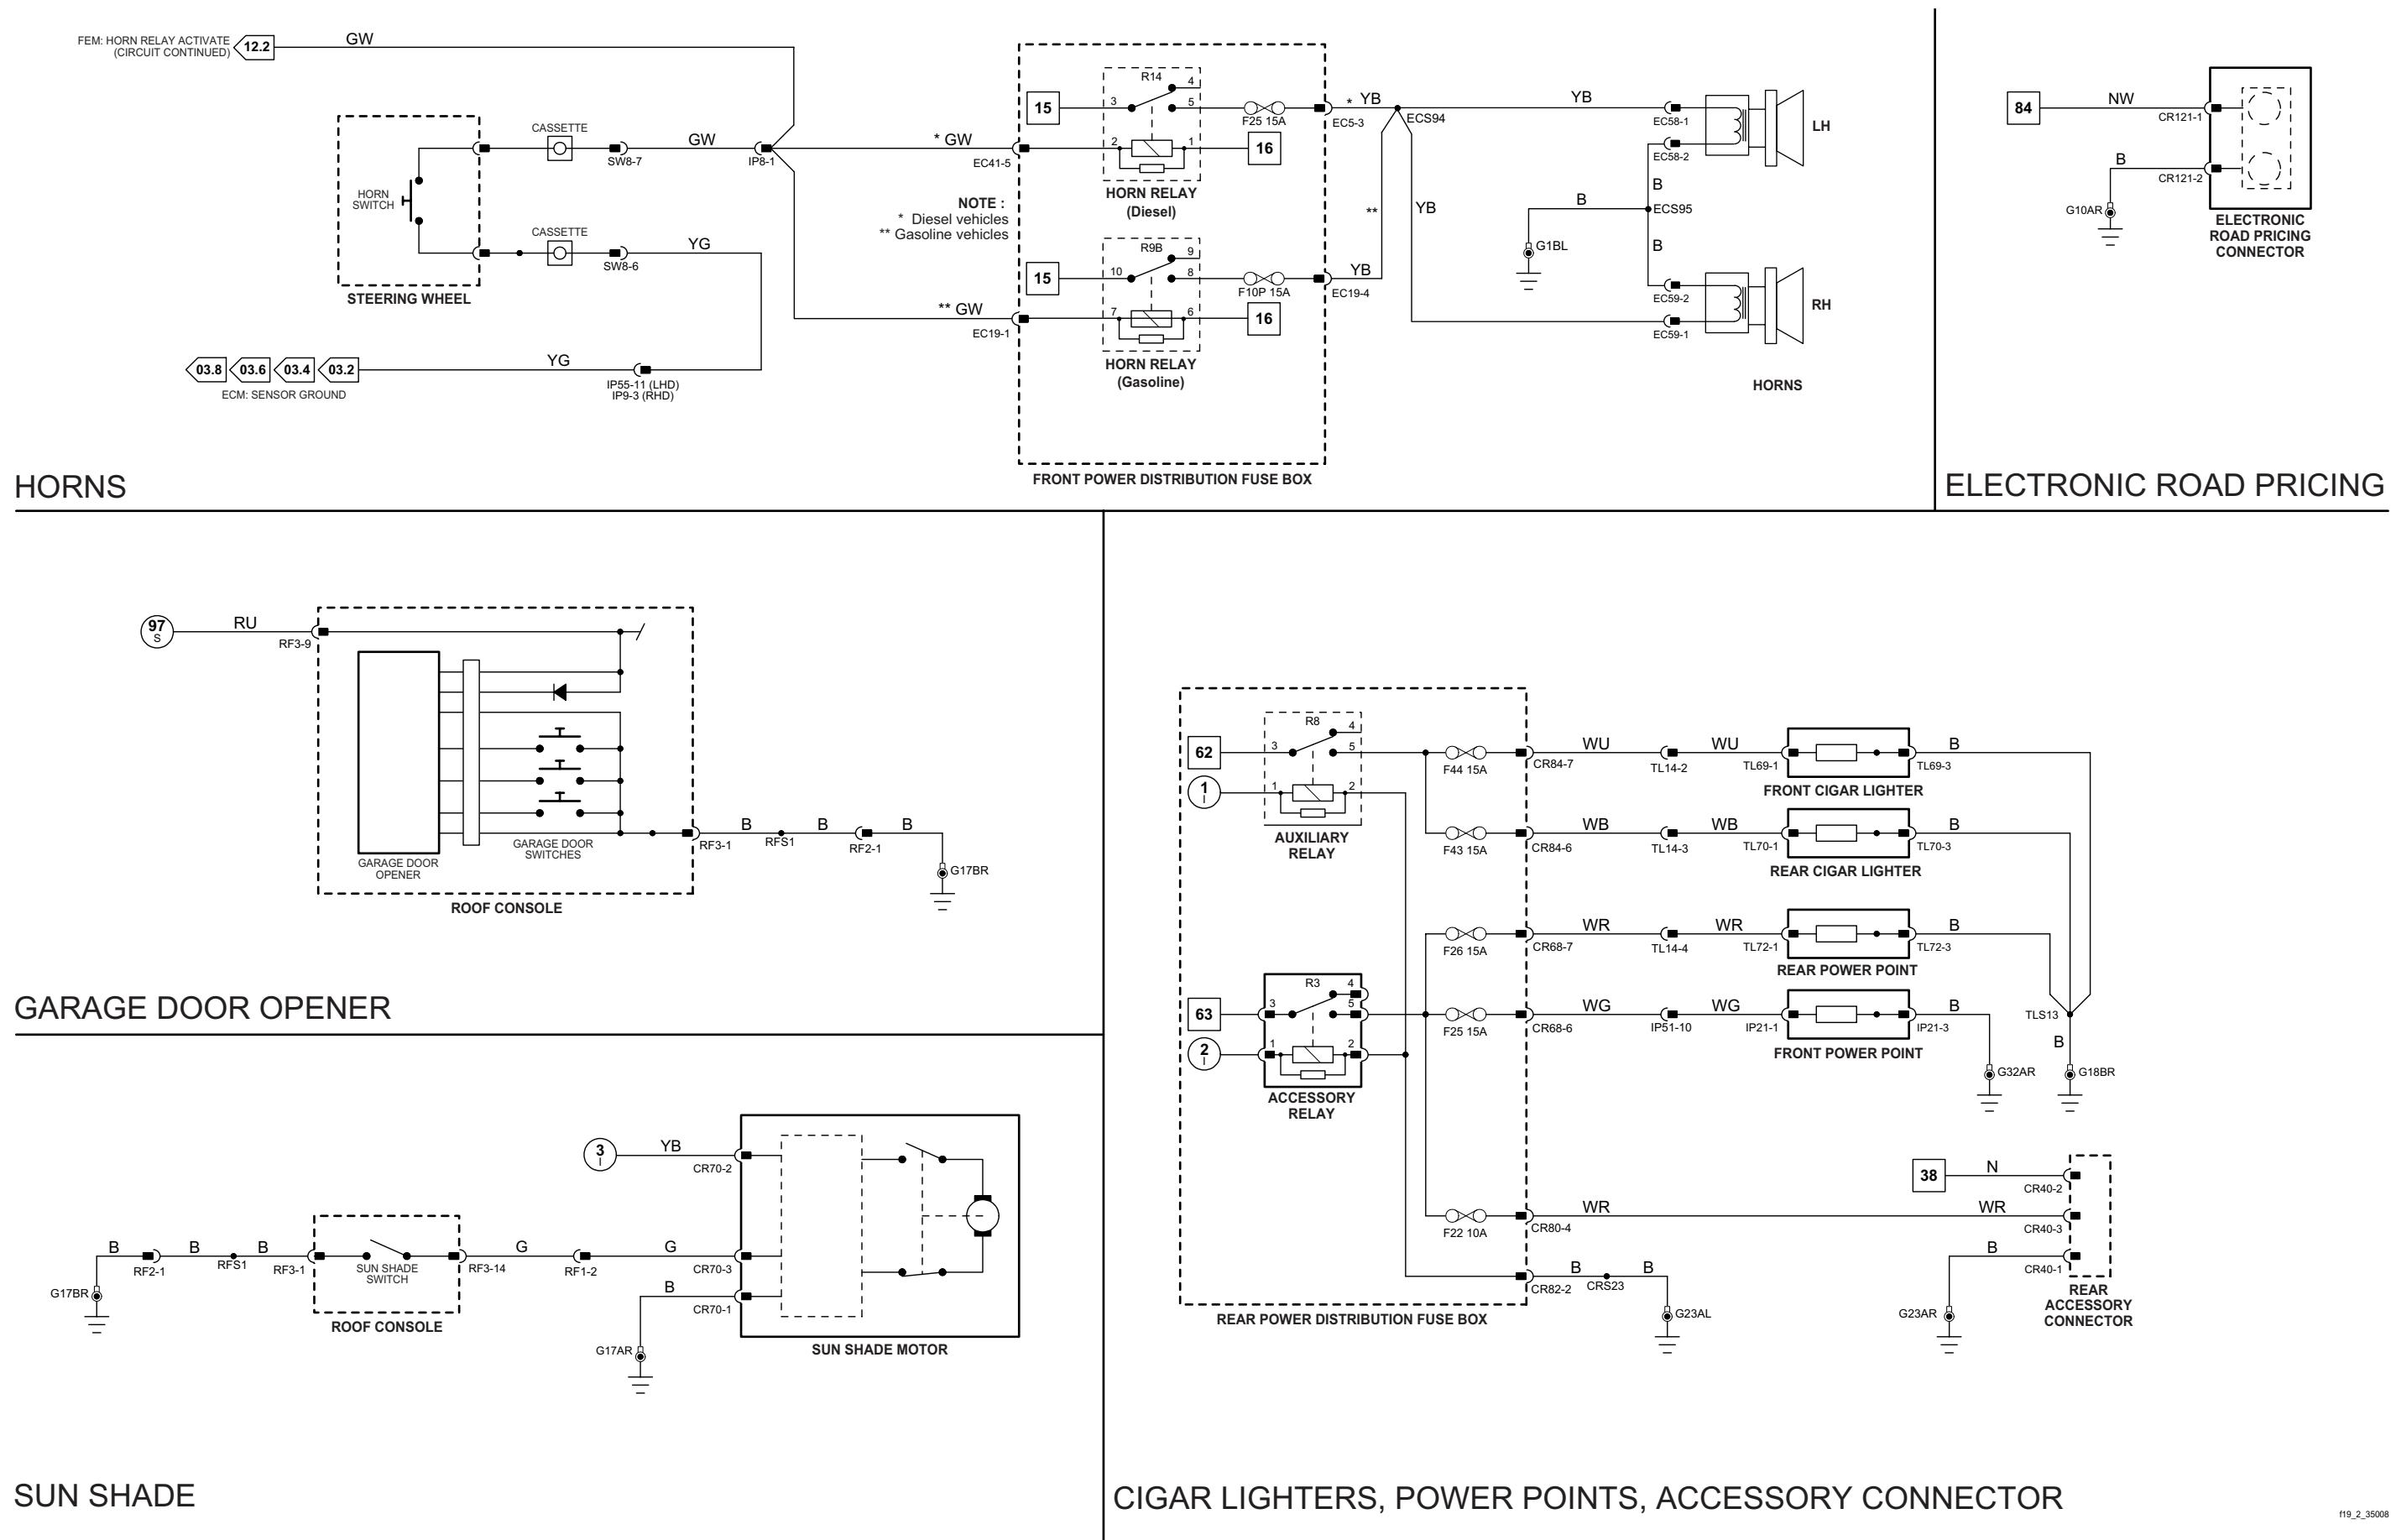

**Fig. 20.1**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AIR SUSPENSION MODULE	CR88 CR89 CR90 CR91	9-WAY / BLACK 12-WAY / BLACK 15-WAY / BLACK 18-WAY / BLACK	CABIN REAR BULKHEAD / BEHIND REAR SEAT BACK / RH SIDE
CLIMATE CONTROL MODULE	AC100 AC101 CR119	16-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK	CLIMATE CONTROL UNIT / DRIVER SIDE
DATA LINK CONNECTOR	IP39	DATA LINK CONNECTOR	TRANSMISSION TUNNEL / DRIVER SIDE
CLIMATE CONTROL SEAT MODULE	IP82	16-WAY / BLACK	
DYNAMIC STABILITY CONTROL MODULE	EC30	47-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
ELECTRIC PARK BRAKE	CR32	12-WAY / GREY	LUGGAGE COMPARTMENT, RH REAR
ENGINE CONTROL MODULE	CR50 EC300 PI300	4-WAY / BLACK 58-WAY / BLACK 96-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FUEL-FIRED AUXILIARY HEATER MODULE	FF1 FF2 FF3	8-WAY / BLACK 2-WAY / BLACK 22-WAY / GREY	BELOW LH HEADLAMP ASSEMBLY
INSTRUMENT CLUSTER	IP5 IP6 IP7	20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL
J-GATE MODULE	IP32	16-WAY / BLACK	J-GATE ASSEMBLY
POWERTRAIN CONTROL MODULE	C98 C99 EC066	48-WAY / BROWN 48-WAY / GREY 48-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
REAR CLIMATE CONTROL MODULE	RA1 RA2	16-WAY / BLACK 12-WAY / BLACK	REAR CENTER CONSOLE
SPEED CONTROL MODULE	IP78	30-WAY YELLOW	BEHIND INSTRUMENT PANEL, DRIVER SIDE
TRANSMISSION CONTROL MODULE	GB2	16-WAY / BLACK	TRANSMISSION CONTROL VALVE ASSEMBLY
TIRE PRESSURE MONITORING SYSTEM MODULE	CR93 CR94 CR96	16-WAY / GREY 16-WAY / BLUE SMB RF COAX CONNECTOR	LUGGAGE COMPARTMENT, RH REAR
YAW RATE SENSOR	IP23	6-WAY / BLACK	CENTER CONSOLE / REARWARD OF J GATE


**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC2	22-WAY / BLACK / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE, LH SIDE (LHD), RH SIDE (RHD)
CR120	8-WAY / BLACK / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL / LH SIDE
EC130	8-WAY / GREY / CABIN HARNESS TO FUEL FIRED HEATER LINK HARNESS	LOWER FRONT RIGHT
GB1	16-WAY / GREY / ENGINE HARNESS TO TRANSMISSION HARNESS	ADJACENT TO TRANSMISSION BELL HOUSING
IP55	22-WAY / BLACK / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP66	14-WAY / GREY / INSTRUMENT PANEL HARNESS TO REAR AIR CONDITIONING HARNESS	CABIN / BELOW CENTER CONSOLE
PI41	42-WAY / BLACK / ENGINE HARNESS TO ENGINE COMPARTMENT HARNESES	ENGINE COMPARTMENT / TOP OF SUSPENSION TOWER / PASSENGER SIDE
TL93	8-WAY / BLACK / CENTER CONSOLE HARNESS TO TELEMATICS HARNESS	CABIN / BELOW REAR CENTER CONSOLE

**GROUNDS**

Ground	Location
G31	CABIN / BEHIND PASSENGER AIR BAG

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

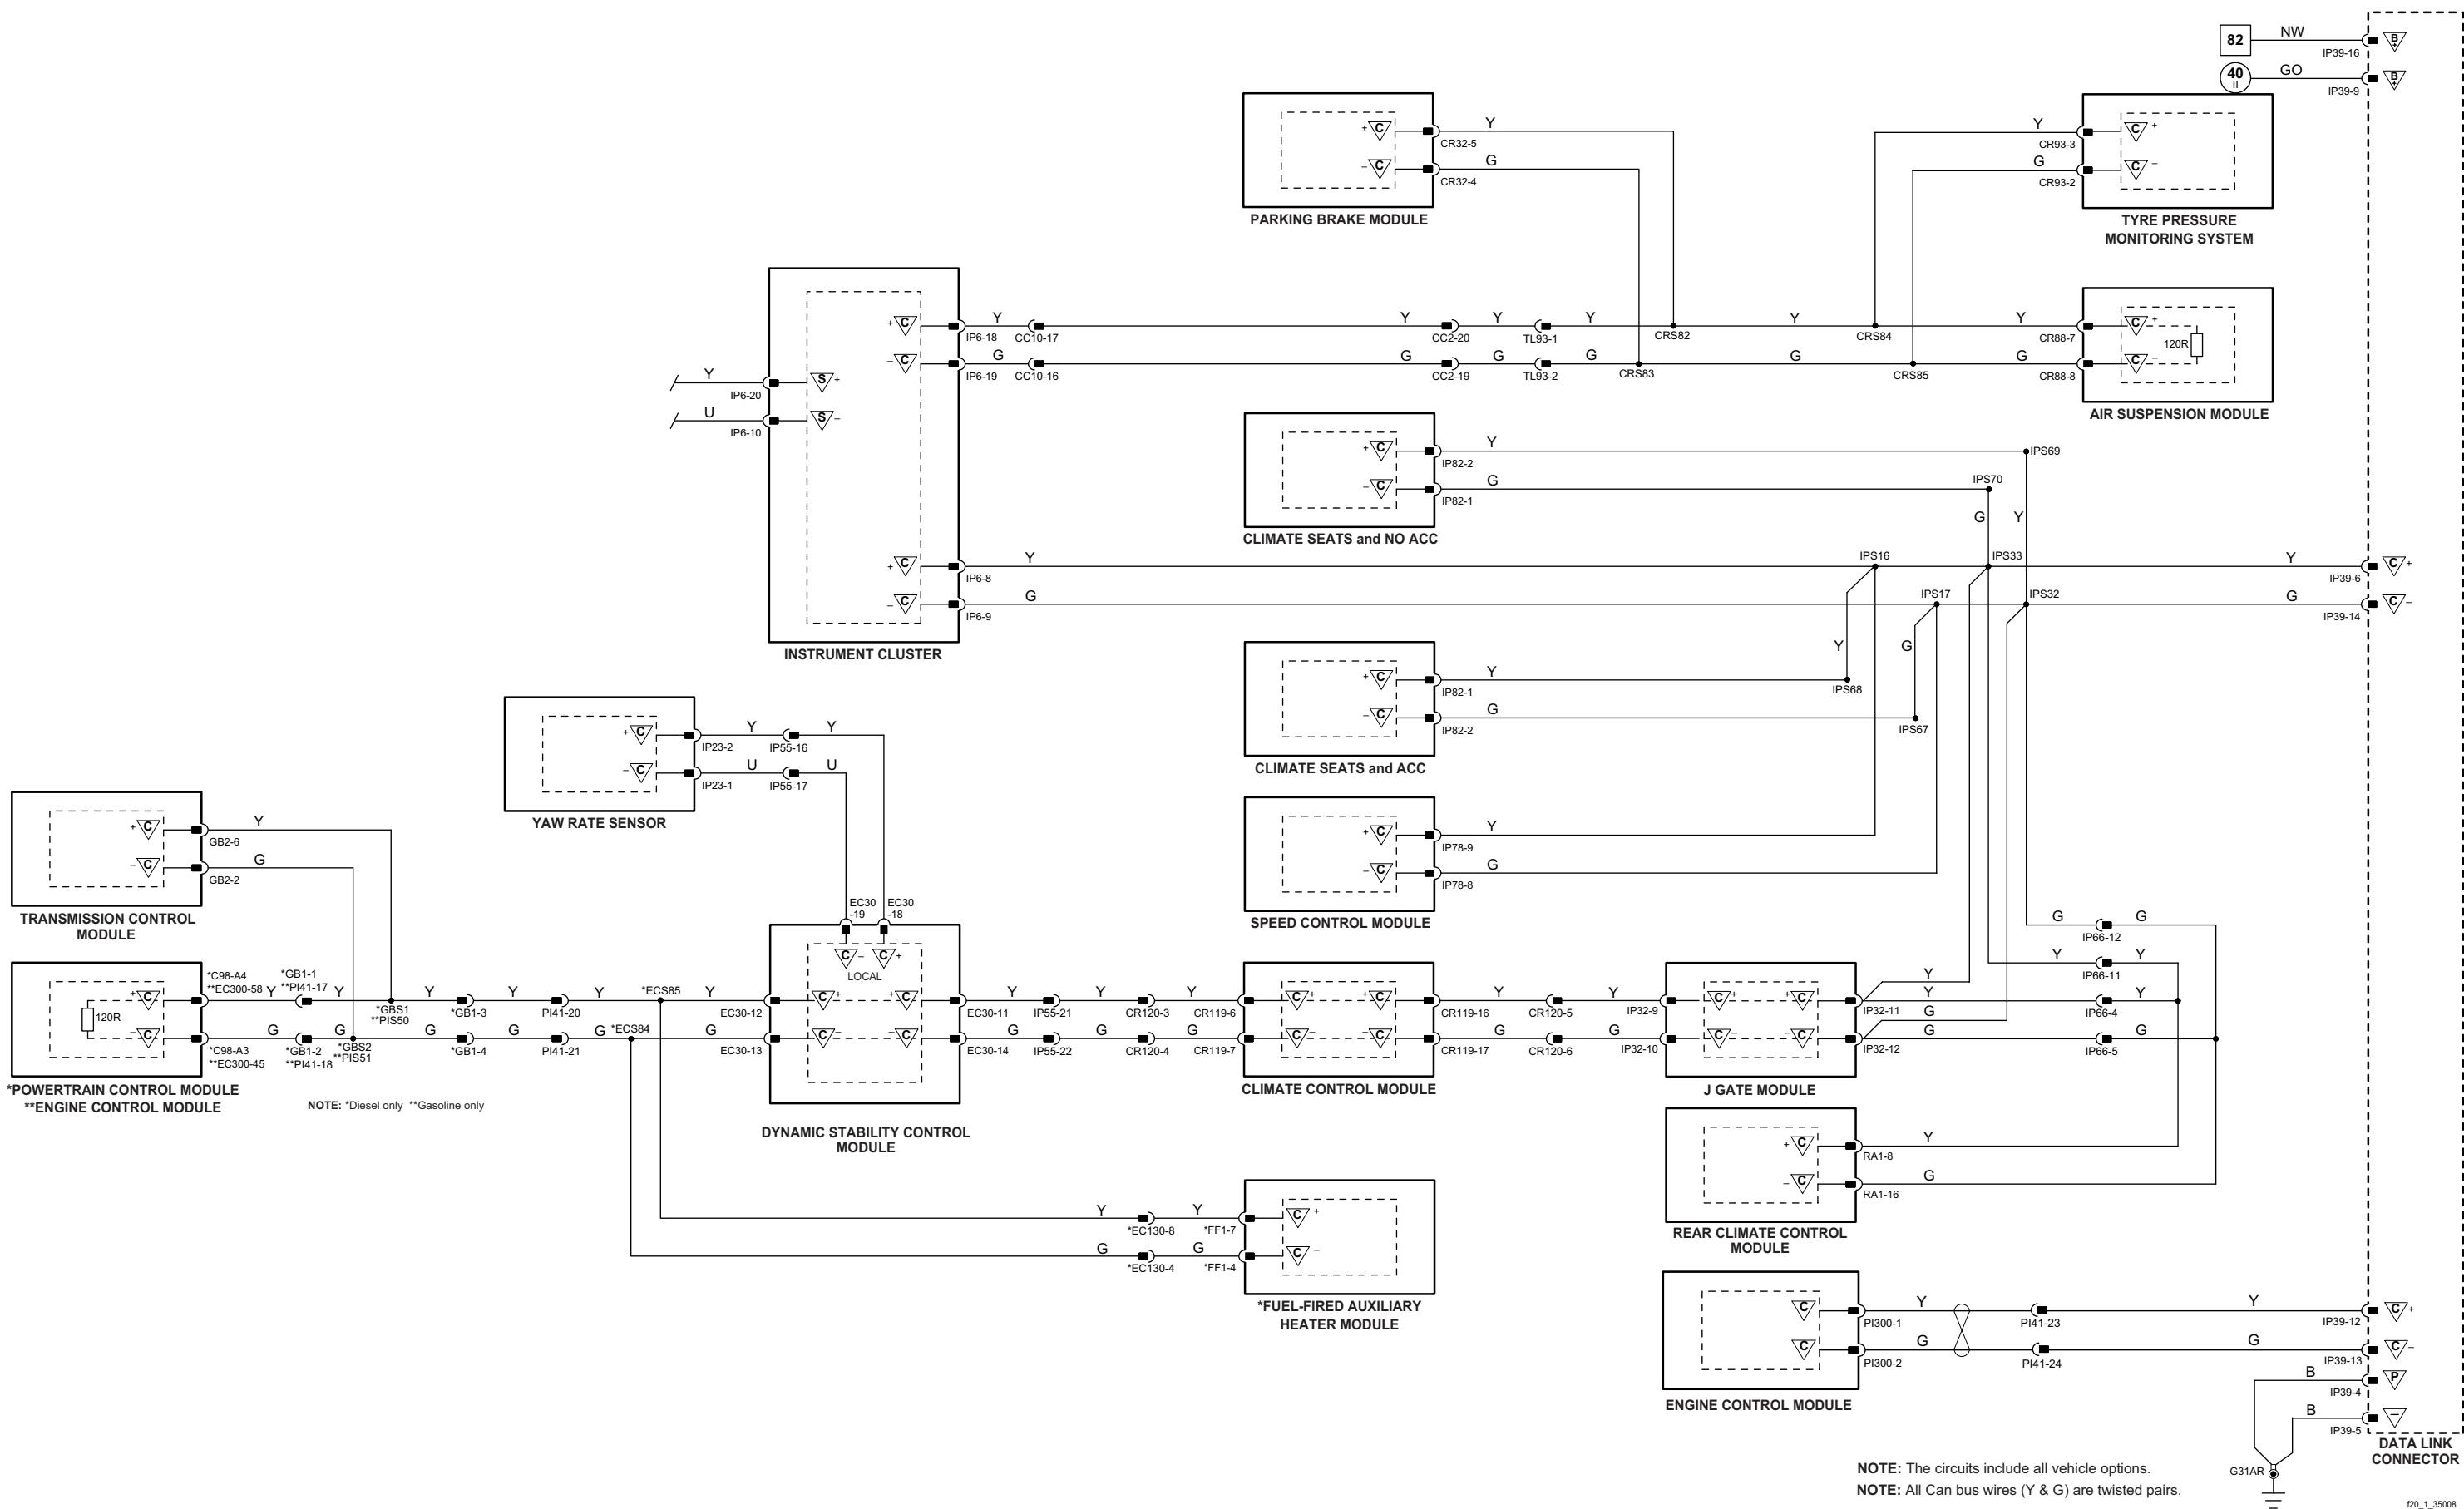

**Fig. 20.2**

COMPONENTS				
Component	Connector(s)	Connector Description	Location	
AUDIO UNIT	CC8 CC9 CC21	20-WAY / BLACK 2-WAY / BLACK FIBER OPTIC CONNECTOR	CENTER CONSOLE	
DATA LINK CONNECTOR	IP39	16-WAY / BLACK	TRANSMISSION TUNNEL / DRIVER SIDE	
DRIVER DOOR MODULE	DD11 DD12	20-WAY / BLACK 26-WAY / NATURAL	DRIVER DOOR	
DRIVER SEAT MODULE	DD13 SD2 SD3 SD4 SD24 SD26 SD27	12-WAY / BLACK 22-WAY / BLACK 6-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK	UNDER DRIVER SEAT	
DYNAMIC STABILITY CONTROL MODULE	EC30	47-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT	
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE	
FRONT ELECTRONIC MODULE	PI300 CR1 CR9 CR10 CR85	96WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE CABIN / LH 'A' POST	
FUEL-FIRED AUXILIARY HEATER MODULE	FF1 FF2 FF3	8-WAY / BLACK 2-WAY / BLACK 9-WAY / BLACK	BELOW LH HEADLAMP ASSEMBLY	
HID HEADLAMP UNIT – LH	EC57	9-WAY / BLACK	ENGINE COMPARTMENT / LH FRONT	
HID HEADLAMP UNIT – RH	EC6	9-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT	
INSTRUMENT CLUSTER	IP5 IP6 IP7	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL	
NAVIGATION CONTROL MODULE	DB6 TL2 TL29 TL30 TL37	FIBER OPTIC CONNECTOR 20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP	
PARKING AID MODULE	CR52	26-WAY / BLACK	TRUNK / SPARE WHEEL WELL	
REAR ELECTRONIC MODULE	CR4 CR11 CR12 CR13 CR71 CR73 CR21 CR37 CR38 CR41 CR53 CR59	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK 4-WAY / BLACK 4-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK 24-WAY / BLACK 40-WAY / BLACK	TRUNK / RH REAR	
REAR MEMORY MODULE	CR21 CR37 CR38 CR41 CR53 CR59 CR86 CR87	4-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK 24-WAY / BLACK 40-WAY / BLACK	REAR BULKHEAD / BEHIND REAR SEAT BACK	
RESTRAINTS CONTROL MODULE	CR86 CR87	24-WAY / BLACK 40-WAY / BLACK	TRANSMISSION TUNNEL, UNDER CENTER CONSOLE	
ROOF CONSOLE	RF3	20-WAY / BLACK	ROOF HEADLINER	
STEERING COLUMN LOCK MODULE	IP24	4-WAY / BLACK	UPPER STEERING COLUMN	


#### HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
EC130	8-WAY / GREY / CABIN HARNESS TO FUEL FIRED HEATER LINK HARNESS	LOWER FRONT RIGHT
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
TL35	22-WAY / GREY / CABIN HARNESS TO REAR CENTRE CONSOLE	TRUNK / LH REAR


#### GROUNDS

Ground	Location
G31	CABIN / BEHIND PASSENGER AIR BAG

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

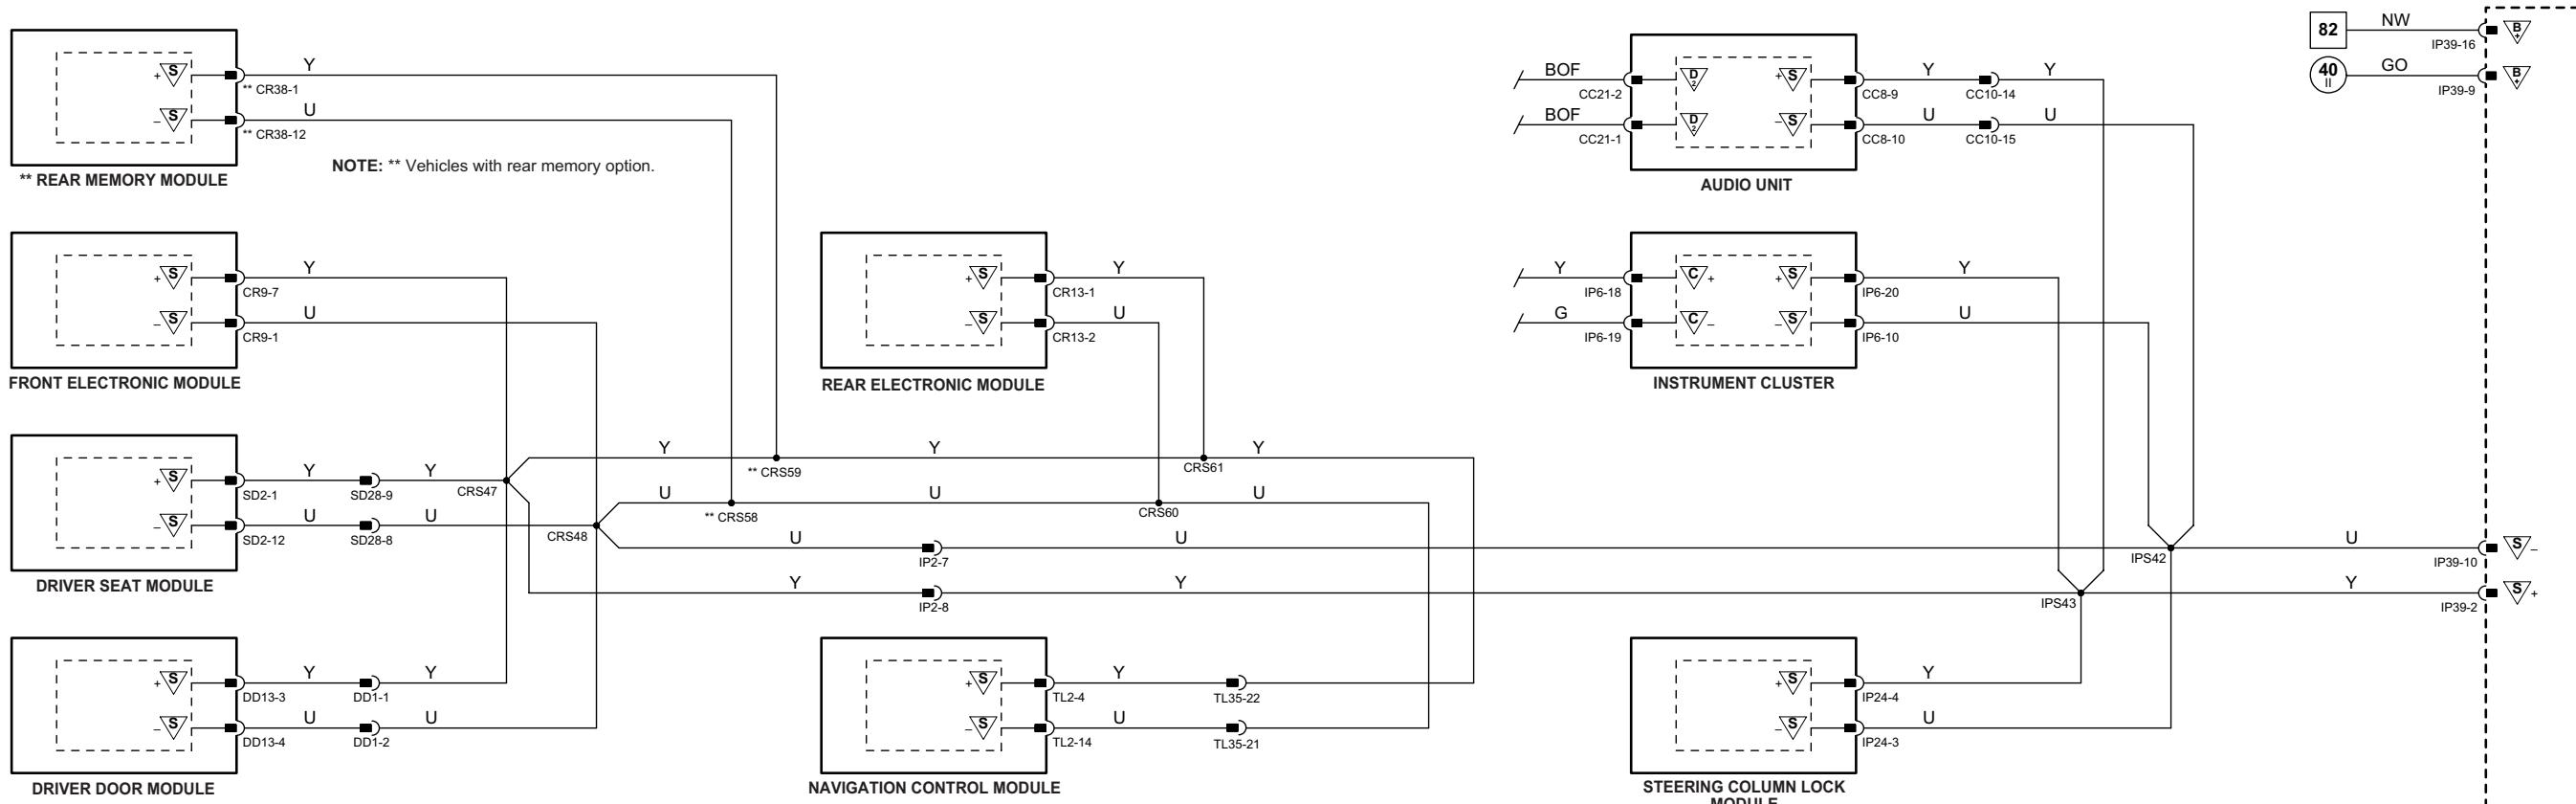

## STANDARD CORPORATE PROTOCOL NETWORK

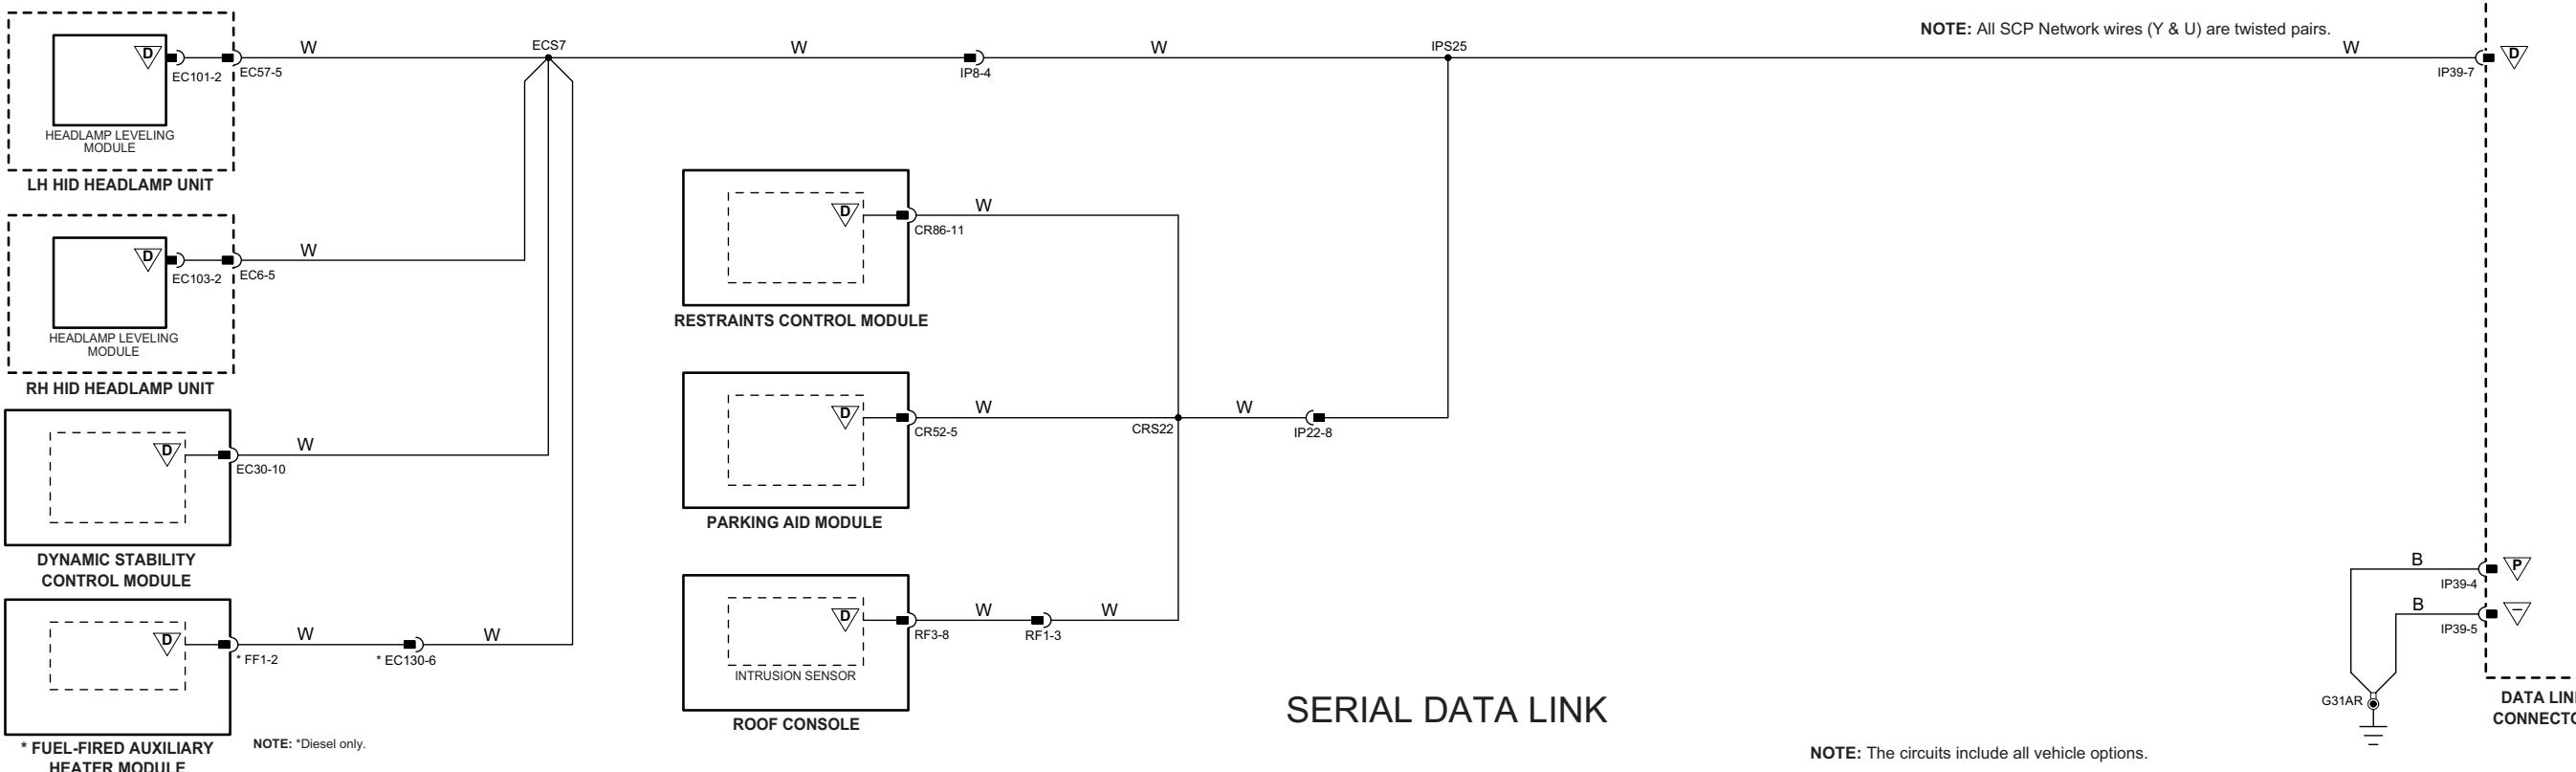

**Fig. 20.3**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
AUDIO UNIT	CC8 CC9 CC21	20-WAY / BLACK 2-WAY / BLACK FIBER OPTIC CONNECTOR	CENTER CONSOLE
DATA LINK CONNECTOR	IP39	16-WAY / BLACK	TRANSMISSION TUNNEL / DRIVER SIDE
DRIVER DOOR MODULE	DD11 DD12 DD13	20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK	DRIVER DOOR
DRIVER SEAT MODULE	SD2 SD3 SD4 SD24 SD26 SD27	22-WAY / BLACK 6-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK	UNDER DRIVER SEAT
DYNAMIC STABILITY CONTROL MODULE	EC30	47-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT
ENGINE CONTROL MODULE	EC300	58-WAY / BLACK	FRONT BULKHEAD, PASSENGER SIDE
FRONT ELECTRONIC MODULE	P1300 CR1 CR9 CR10 CR85	96WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK 20-WAY / BLACK	CABIN / LH 'A' POST
FUEL-FIRED AUXILIARY HEATER MODULE	FF1 FF2 FF3	8-WAY / BLACK 2-WAY / BLACK 22-WAY / BLACK	BELOW LH HEADLAMP ASSEMBLY
HID HEADLAMP UNIT – LH	EC57	9-WAY / BLACK	ENGINE COMPARTMENT / LH FRONT
HID HEADLAMP UNIT – RH	EC6	9-WAY / BLACK	ENGINE COMPARTMENT / RH FRONT
INSTRUMENT CLUSTER	IP5 IP6 IP7	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	INSTRUMENT PANEL
NAVIGATION CONTROL MODULE	DB6	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
PARKING AID MODULE	TL2 TL29 TL30 TL37	20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK	TRUNK / SPARE WHEEL WELL
REAR ELECTRONIC MODULE	CR52 CR4 CR11 CR12 CR13 CR71 CR73 CR21 CR37 CR38 CR41 CR53 CR59	26-WAY / BLACK 20-WAY / BLACK 26-WAY / NATURAL 12-WAY / BLACK 22-WAY / BLACK 17-WAY / BLACK 4-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK	TRUNK / RH REAR
REAR MEMORY MODULE	CR21 CR37 CR38 CR41 CR53 CR59	4-WAY / BLACK 26-WAY / BLACK 22-WAY / BLACK 6-WAY / BLACK 4-WAY / BLACK 6-WAY / BLACK	REAR BULKHEAD / BEHIND REAR SEAT BACK
RESTRAINTS CONTROL MODULE	CR86 CR87	24-WAY / BLACK 40-WAY / BLACK	TRANSMISSION TUNNEL, UNDER CENTER CONSOLE
ROOF CONSOLE	RF3	20-WAY / BLACK	ROOF HEADLINER
STEERING COLUMN LOCK MODULE	IP24	4-WAY / BLACK	UPPER STEERING COLUMN



**HARNESS IN-LINE CONNECTORS**

Connector	Connector Description / Location	Location
CC10	22-WAY / GREEN / CENTER CONSOLE HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BELOW CENTER CONSOLE / LH SIDE (LHD), RH SIDE (RHD)
DD1	22-WAY / DARK GREY / CABIN HARNESS TO DRIVER DOOR HARNESS	CABIN / DRIVER SIDE 'A' POST
EC130	8-WAY / GREY / CABIN HARNESS TO FUEL FIRED HEATER LINK HARNESS	LOWER FRONT RIGHT
IP2	10-WAY / GREY / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND LH SIDE INSTRUMENT PANEL END PLATE
IP8	14-WAY / GREY / ENGINE COMPARTMENT HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / RH 'A' POST
IP22	16-WAY / BLUE / CABIN HARNESS TO INSTRUMENT PANEL HARNESS	CABIN / BEHIND INSTRUMENT PANEL END PLATE / LH SIDE (LHD), RH SIDE (RHD)
RF1	10-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	CABIN / UPPER RH 'A' POST
SD28	20-WAY / BLACK / DRIVER SEAT HARNESS TO CABIN HARNESS	CABIN / BELOW DRIVER SEAT
TL35	22-WAY / GREY / CABIN HARNESS TO REAR CENTRE CONSOLE	TRUNK / LH REAR

**GROUNDS**

Ground	Location
G31	CABIN / BEHIND PASSENGER AIR BAG

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

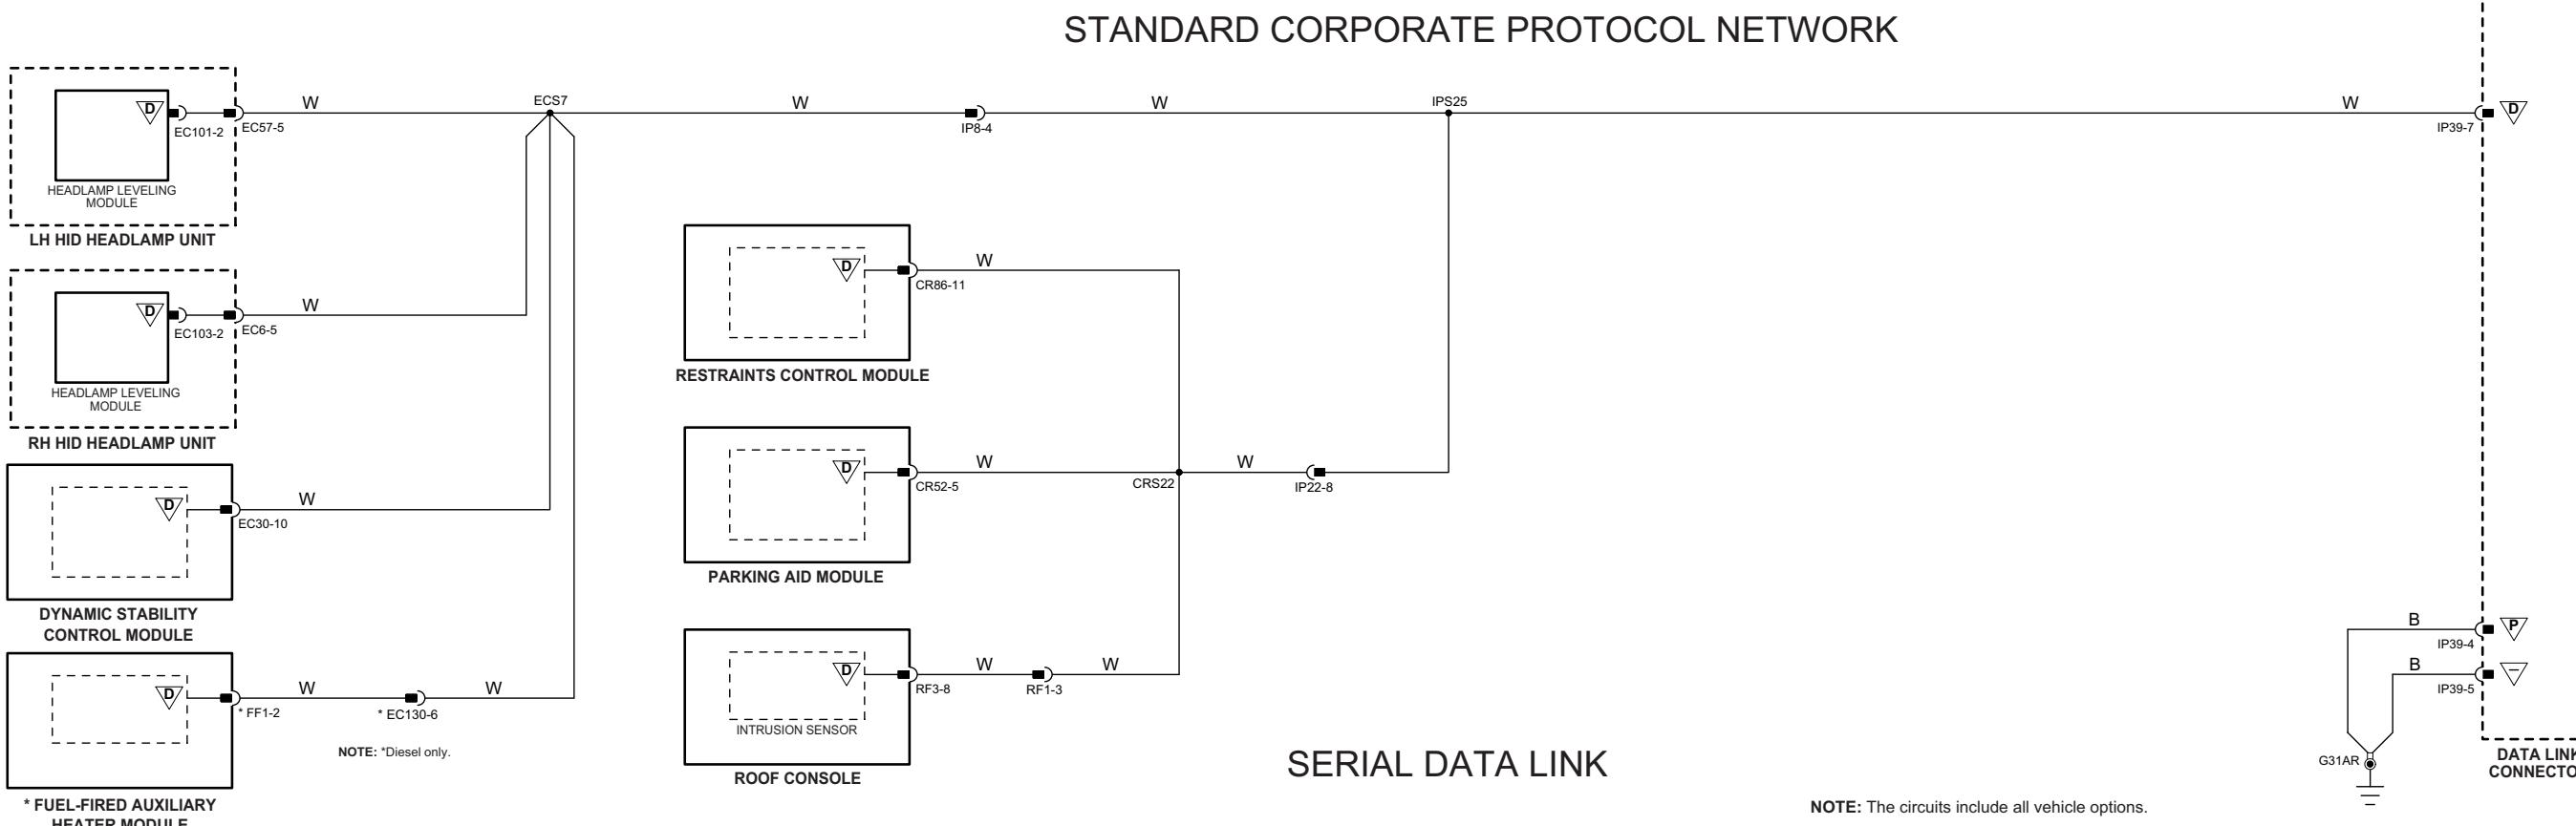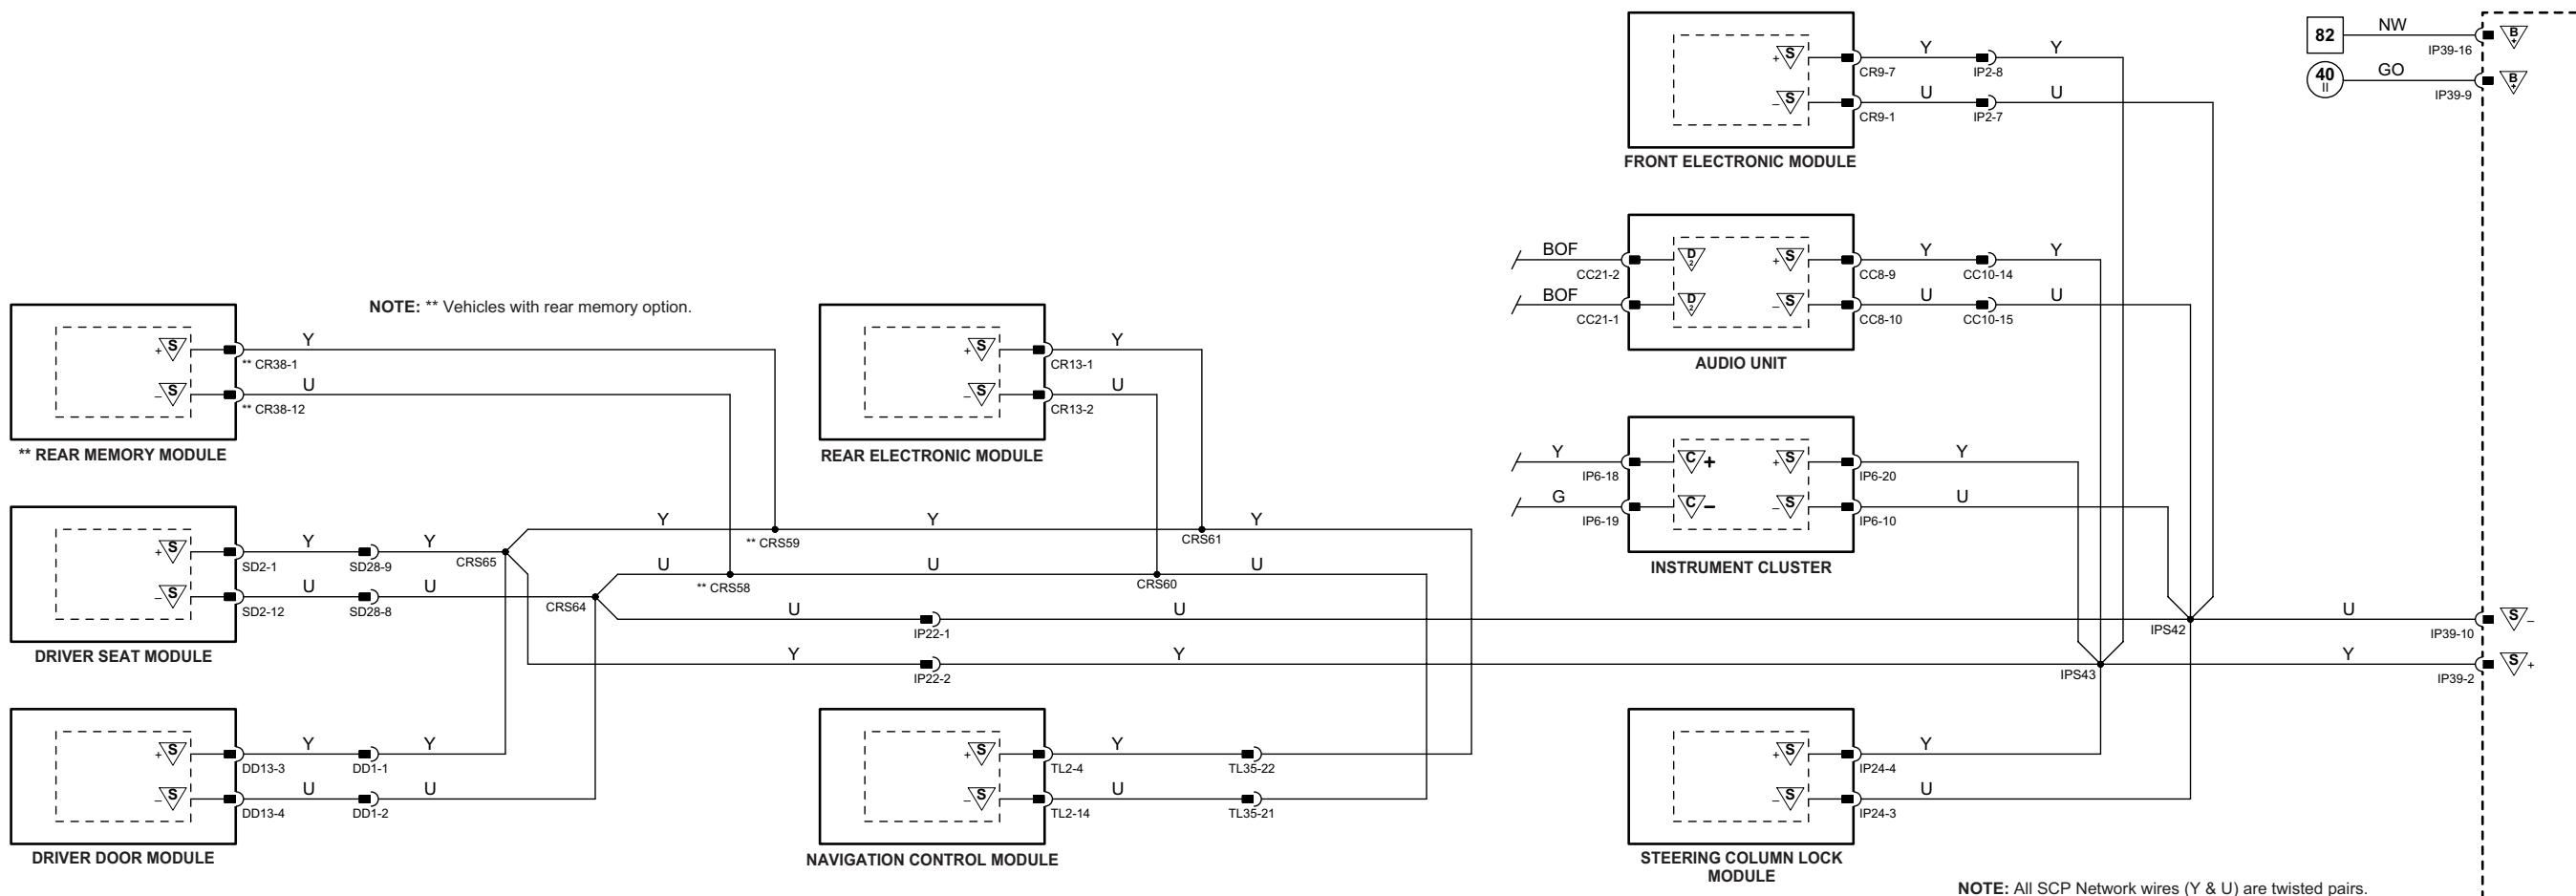


**Fig. 20.4**

<b>COMPONENTS</b>			
<b>Component</b>	<b>Connector(s)</b>	<b>Connector Description</b>	<b>Location</b>
AUDIO UNIT	CC8 CC9 CC21	20-WAY / BLACK 2-WAY / BLACK FIBER OPTIC CONNECTOR	CENTER CONSOLE
CD AUTOCHANGER	DB2	FIBER OPTIC CONNECTOR	TRUNK / LH SIDE / MODULE STACK / THIRD FROM TOP
TELEPHONE TRANSEIVER MODULE	TL5 TL7 TL94	3-WAY / BLACK 32-WAY / BLACK 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / BOTTOM
INFORMATION AND ENTERTAINMENT CONTROL MODULE	DB3 DB8 TL97 TL98	FIBER OPTIC CONNECTOR 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / BOTTOM
MULTIMEDIA CONTROL PANEL	RC1 RC3 RC5	8-WAY / BLACK 20-WAY / BLACK FIBER OPTIC CONNECTOR	REAR SEAT ARM REST OR REAR FLOOR CONSOLE
NAVIGATION CONTROL MODULE	DB6 TL2 TL29 TL30 TL37	FIBER OPTIC CONNECTOR 20-WAY / BLACK 26-WAY / BLACK 12-WAY / BLACK 2-WAY / BLACK	TRUNK / LH SIDE / MODULE STACK / SECOND FROM TOP
POWER AMPLIFIER	DB7 TL9 TL10	FIBER OPTIC CONNECTOR 12-WAY / WHITE 18-WAY / WHITE	TRUNK / LH SIDE
VOICE ACTIVATION MODULE	DB4 TL68	FIBER OPTIC CONNECTOR 22-WAY / GREY	TRUNK / LH SIDE / MODULE STACK / SECOND FROM BOTTOM

**HARNESS IN-LINE CONNECTORS**

<b>Connector</b>	<b>Connector Description / Location</b>	<b>Location</b>
CC1	22-WAY GREEN / TELEMATICS HARNESS TO CENTER CONSOLE HARNESS	CABIN / BELOW CENTER CONSOLE
DB1	2-WAY / BLACK / TELEMATICS HARNESS TO D2B NETWORK HARNESS	TRUNK / LH SIDE
DB5	2-WAY / BLACK / D2B NETWORK HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	TRUNK / LH SIDE
RC2	8-WAY / BLACK / TELEMATICS HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
RC6	2-WAY / BLACK / D2B NETWORK HARNESS TO REAR IN-CAR ENTERTAINMENT CONTROLS HARNESS	CABIN / BELOW CENTER CONSOLE
TL95	2-WAY / BLACK / CENTER CONSOLE HARNESS TO D2B NETWORK HARNESS	CABIN / BELOW REAR CENTER CONSOLE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

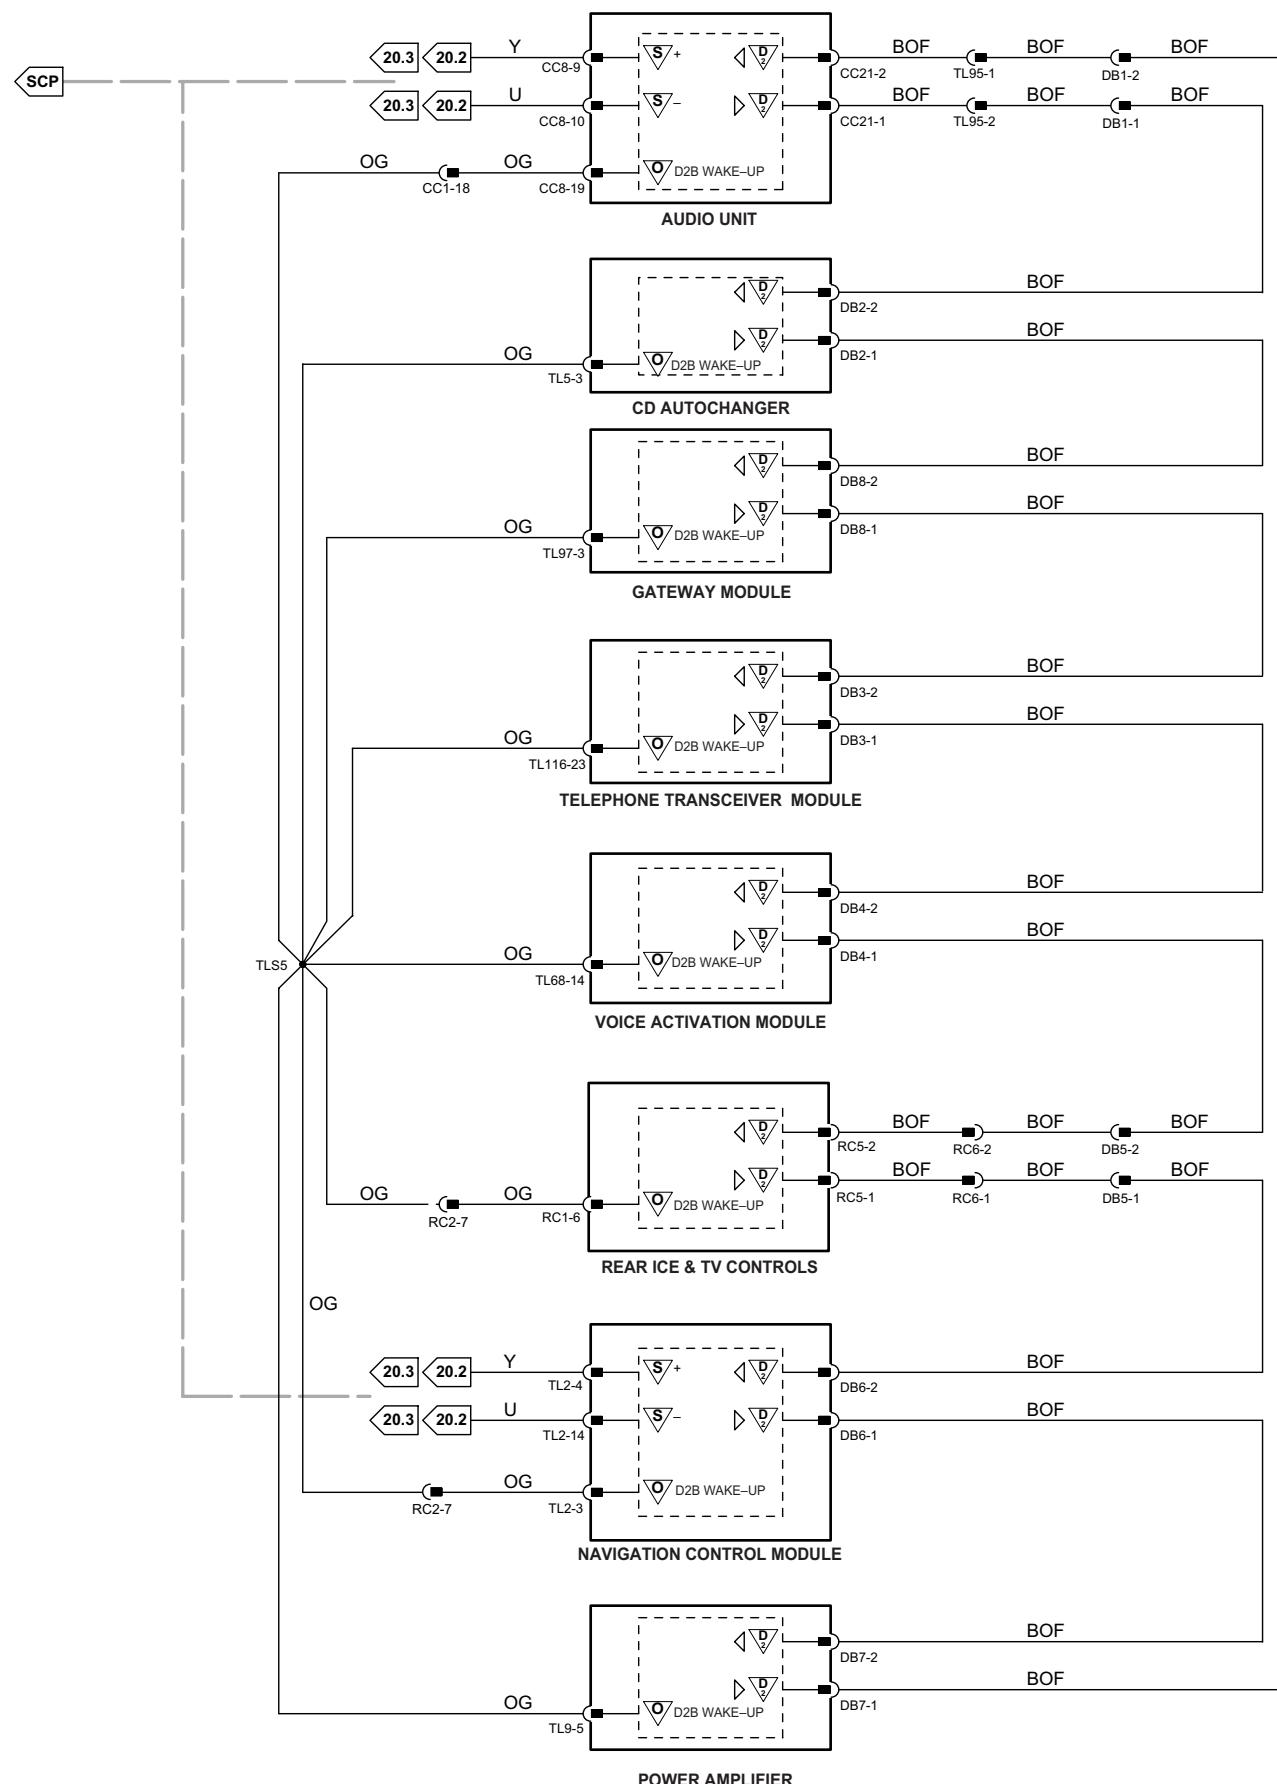**NOTES:**

The 8-module D2B network shown depicts the greatest number of modules available. D2B networks containing less than 8 modules are always connected in the sequence shown from top to bottom.  
Audio Unit – Master Module

- 1 – CD Autochanger
- 2 – Gateway Module
- 3 – Telephone transceiver Module
- 4 – Voice Activation Module
- 5 – Rear ICE and TV controls
- 6 – Navigation Control Module
- 7 – Power Amplifier

When modules are not fitted to the vehicle, the fiber optic cables and the connectors are deleted. Therefore, each network containing less than 8 modules has a unique fiber optic and "wake up" circuit.

f20\_4\_35008



# Jaguar XJ (VIN: H18680 >)

<b>A</b>	
ACCESSORY RELAY . . . . .	Fig. 19.2
ACT SENSOR (DIESEL 2.7V6) . . . . .	Fig. 03.7
ACTIVE ENGINE MOUNTS (DIESEL 2.7V6) . . . . .	Fig. 03.8
AIR BAG IGNITERS	
CURTAIN . . . . .	Fig. 17.1
DRIVER, DUAL . . . . .	Fig. 17.1
PASSENGER, DUAL . . . . .	Fig. 17.2
SIDE . . . . .	Fig. 17.1
AIR CLEANER SOLENOID VALVE . . . . .	Fig. 03.6
AIR CONDITIONING COMPRESSOR CLUTCH . . . . .	Fig. 06.1
AIR CONDITIONING PRESSURE SENSOR . . . . .	Fig. 03.2
. . . . .	Fig. 03.4
. . . . .	Fig. 03.6
. . . . .	Fig. 06.1
AIR CONDITIONING PRESSURE SENSOR (DIESEL 2.7V6) . . . . .	Fig. 03.8
. . . . .	Fig. 06.1
AIR INTAKE SERVO . . . . .	Fig. 06.1
AIR MIX SERVOS . . . . .	Fig. 06.1
AIR SUSPENSION COMPRESSOR . . . . .	Fig. 05.3
AIR SUSPENSION MODULE . . . . .	Fig. 05.3
. . . . .	Fig. 08.6
. . . . .	Fig. 20.1
AIR SUSPENSION PRESSURE SENSOR . . . . .	Fig. 05.3
AIR SUSPENSION RELAY . . . . .	Fig. 05.3
AIR SUSPENSION VALVE BLOCK . . . . .	Fig. 05.3
AIR SUSPENSION VENT SOLENOID . . . . .	Fig. 05.3
AM / FM ANTENNA AMPLIFIER . . . . .	Fig. 15.1
. . . . .	Fig. 15.2
AM/FM DIVERSITY MODULE . . . . .	Fig. 15.4
AMBIENT TEMPERATURE SENSOR . . . . .	Fig. 06.1
APP SENSOR . . . . .	Fig. 03.1
. . . . .	Fig. 03.3
. . . . .	Fig. 03.5
. . . . .	Fig. 03.9
APP SENSOR (DIESEL 2.7V6) . . . . .	Fig. 03.7
APPROACH LAMPS . . . . .	Fig. 09.1
ARMREST LID SWITCH . . . . .	Fig. 15.3
ASL SWITCH . . . . .	Fig. 03.2
. . . . .	Fig. 03.4
. . . . .	Fig. 03.6
ASL SWITCH (DIESEL 2.7V6) . . . . .	Fig. 03.8
AUDIO UNIT . . . . .	Fig. 09.2
. . . . .	Fig. 12.2
. . . . .	Fig. 15.1
. . . . .	Fig. 15.2
. . . . .	Fig. 16.1
. . . . .	Fig. 16.2
. . . . .	Fig. 20.2
. . . . .	Fig. 20.3
. . . . .	Fig. 20.4
AUDIO / VIDEO SELECTOR . . . . .	Fig. 09.2
. . . . .	Fig. 15.3
AUTO LAMP SENSOR . . . . .	Fig. 08.1
. . . . .	Fig. 08.2
. . . . .	Fig. 08.3
. . . . .	Fig. 12.2
AUXILIARY COOLANT PUMP . . . . .	Fig. 06.2
AUXILIARY COOLANT PUMP RELAY . . . . .	Fig. 06.2
AUXILIARY LIGHTING SWITCH . . . . .	Fig. 05.4
. . . . .	Fig. 07.1
. . . . .	Fig. 08.1
. . . . .	Fig. 08.2
. . . . .	Fig. 08.3
. . . . .	Fig. 09.2
. . . . .	Fig. 09.3
. . . . .	Fig. 12.1
. . . . .	Fig. 12.2
AUXILIARY RELAY . . . . .	Fig. 19.2
<b>B</b>	
BAND 3 AMPLIFIER . . . . .	Fig. 15.4
BATTERY . . . . .	Fig. 01.1
. . . . .	Fig. 02.1
. . . . .	Fig. 02.2
. . . . .	Fig. 08.4
. . . . .	Fig. 08.5
BATTERY (DIESEL 2.7V6) . . . . .	Fig. 02.3
BLOWER . . . . .	Fig. 06.2
BLOWER CONTROLLER . . . . .	Fig. 06.2
BLOWER RELAY . . . . .	Fig. 06.2
BRAKE CANCEL SWITCH . . . . .	Fig. 03.2
. . . . .	Fig. 03.4
. . . . .	Fig. 03.6
BRAKE CANCEL SWITCH (DIESEL 2.7V6) . . . . .	Fig. 03.8
BRAKE FLUID RESERVOIR . . . . .	Fig. 05.1
BRAKE ON / OFF SWITCH . . . . .	Fig. 03.1
. . . . .	Fig. 03.3
. . . . .	Fig. 03.5
. . . . .	Fig. 05.2
. . . . .	Fig. 08.3
BRAKE ON / OFF SWITCH (DIESEL 2.7V6) . . . . .	Fig. 03.7
<b>C</b>	
CATALYTIC CONVERTER TEMPERATURE SENSORS (DIESEL 2.7V6) . . . . .	Fig. 03.8
CD AUTOCHANGER . . . . .	Fig. 15.1
. . . . .	Fig. 15.2
. . . . .	Fig. 20.4
CELLULAR PHONE MODULE . . . . .	Fig. 16.1
. . . . .	Fig. 16.2
. . . . .	Fig. 20.4
CENTER CONSOLE SWITCH PACK . . . . .	Fig. 08.1
. . . . .	Fig. 08.2
. . . . .	Fig. 08.3
. . . . .	Fig. 09.2
. . . . .	Fig. 11.6
. . . . .	Fig. 12.1
. . . . .	Fig. 12.2
. . . . .	Fig. 14.1
. . . . .	Fig. 19.1
CIGAR LIGHTERS . . . . .	Fig. 09.2
. . . . .	Fig. 19.2
CKP SENSOR . . . . .	Fig. 03.1
. . . . .	Fig. 03.3
. . . . .	Fig. 03.5
CKP SENSOR (DIESEL 2.7V6) . . . . .	Fig. 03.7
CLIMATE CONTROL MODULE . . . . .	Fig. 06.1
. . . . .	Fig. 06.2
. . . . .	Fig. 09.2
. . . . .	Fig. 20.1
CLIMATE CONTROL PANEL . . . . .	Fig. 06.1
. . . . .	Fig. 09.2
CLOCK . . . . .	Fig. 09.2
. . . . .	Fig. 19.1
CMP SENSOR (DIESEL 2.7V6) . . . . .	Fig. 03.7

CMP SENSORS .....	Fig. 03.1	DYNAMIC STABILITY CONTROL MODULE .....	Fig. 05.1
.....	Fig. 03.3	.....	Fig. 05.4
.....	Fig. 03.5	.....	Fig. 20.1
COLUMN AND PEDAL ADJUST SWITCH .....	Fig. 10.1	.....	Fig. 20.2
COOL AIR BYPASS / DEFROST SERVOS .....	Fig. 06.1	.....	Fig. 20.3
COOLING FAN MODULE .....	Fig. 03.2	<b>E</b>	
.....	Fig. 03.4	ECT SENSOR .....	Fig. 03.1
.....	Fig. 03.6	.....	Fig. 03.3
COOLING FAN MODULE (DIESEL 2.7V6) .....	Fig. 03.8	.....	Fig. 03.5
COURTESY LAMPS .....	Fig. 09.1	ECT SENSOR (DIESEL 2.7V6) .....	Fig. 03.7
<b>D</b>		EFT SENSOR .....	Fig. 03.1
DAB ANTENNA .....	Fig. 15.4	.....	Fig. 03.3
DAB RECEIVER MODULE .....	Fig. 15.4	.....	Fig. 03.5
DAMPER ACTUATORS .....	Fig. 05.3	EFT SENSOR (DIESEL 2.7V6) .....	Fig. 03.7
DATA LINK CONNECTOR .....	Fig. 20.1	EGR THROTTLE BODY (DIESEL 2.7V6) .....	Fig. 03.7
.....	Fig. 20.2	EGR VALVE .....	Fig. 03.3
.....	Fig. 20.3	.....	Fig. 03.5
DIP BEAM RELAY .....	Fig. 08.1	EGR VALVES (DIESEL 2.7V6) .....	Fig. 03.7
.....	Fig. 08.2	ELECTRIC PARK BRAKE .....	Fig. 20.1
DOOR AJAR SWITCH		ELECTROCHROMIC REAR VIEW MIRROR AND COMPASS .....	Fig. 10.2
DRIVER .....	Fig. 09.1	ELECTRONIC ROAD PRICING MODULE CONNECTOR .....	Fig. 19.2
.....	Fig. 10.1	EMS CONTROL RELAY .....	Fig. 01.8
.....	Fig. 12.1	ENGINE CONTROL MODULE .....	Fig. 01.8
.....	Fig. 12.2	.....	Fig. 02.1
LH REAR .....	Fig. 09.1	.....	Fig. 02.2
.....	Fig. 12.2	.....	Fig. 03.1
PASSENGER .....	Fig. 09.1	.....	Fig. 03.2
.....	Fig. 12.1	.....	Fig. 03.3
.....	Fig. 12.2	.....	Fig. 03.4
RH REAR .....	Fig. 09.1	.....	Fig. 03.5
.....	Fig. 12.2	.....	Fig. 03.6
DOOR LATCH ASSEMBLY		.....	Fig. 03.9
DRIVER .....	Fig. 12.1	.....	Fig. 05.4
.....	Fig. 12.2	.....	Fig. 06.1
.....	Fig. 14.1	.....	Fig. 20.1
DOOR MIRRORS .....	Fig. 10.2	.....	Fig. 20.2
DOOR SWITCH PACK		.....	Fig. 20.3
DRIVER .....	Fig. 09.3	ENGINE COOLANT LEVEL SWITCH .....	Fig. 07.1
.....	Fig. 10.2	ENGINE OIL PRESSURE SWITCH .....	Fig. 07.1
.....	Fig. 14.1	EOT SENSOR .....	Fig. 03.1
LH REAR .....	Fig. 09.3	.....	Fig. 03.3
.....	Fig. 14.1	.....	Fig. 03.5
PASSENGER .....	Fig. 09.3	EOT SENSOR (DIESEL 2.7V6) .....	Fig. 03.7
.....	Fig. 14.1	EVAP CANISTER PURGE VALVE .....	Fig. 03.1
RH REAR .....	Fig. 09.3	.....	Fig. 03.3
.....	Fig. 14.1	EVAPORATOR TEMPERATURE SENSOR .....	Fig. 06.1
DOSING PUMP (DIESEL 2.7V6) .....	Fig. 03.8	EXTERNAL TRUNK RELEASE SWITCH .....	Fig. 12.1
DPF PRESSURE SENSOR (DIESEL 2.7V6) .....	Fig. 03.7	<b>F</b>	
DPF TEMPERATURE SENSOR (DIESEL 2.7V6) .....	Fig. 03.8	FASCIA VENTS .....	Fig. 09.2
DRIVER DOOR MODULE .....	Fig. 10.1	FOOTWELL LAMPS .....	Fig. 09.1
.....	Fig. 10.2		
.....	Fig. 11.1		
.....	Fig. 12.1		
.....	Fig. 12.2		
.....	Fig. 14.1		
.....	Fig. 20.2		
.....	Fig. 20.3		
DRIVER SEAT MODULE .....	Fig. 11.1		
.....	Fig. 11.2		
.....	Fig. 20.2		
.....	Fig. 20.3		
DUAL SOLAR SENSOR .....	Fig. 06.1		
DVD PLAYER .....	Fig. 15.3		

# Jaguar XJ (VIN: H18680 >)

FRONT ELECTRONIC MODULE .....	Fig. 01.6	GLOVE BOX MOTOR .....	Fig. 19.1
.....	Fig. 01.7	GLOVE BOX SWITCH .....	Fig. 19.1
.....	Fig. 08.1	GLOW PLUG CONTROL MODULE .....	Fig. 03.8
.....	Fig. 08.2	GLOW PLUGS .....	Fig. 03.8
.....	Fig. 09.1	GPS ANTENNA .....	Fig. 15.4
.....	Fig. 09.2	<b>H</b>	
.....	Fig. 09.3	HEADLAMP UNITS (HID) .....	Fig. 08.2
.....	Fig. 10.1	.....	Fig. 08.6
.....	Fig. 10.2	.....	Fig. 20.2
.....	Fig. 11.6	.....	Fig. 20.3
.....	Fig. 12.1	HEADLAMP UNITS (NON-HID) .....	Fig. 08.1
.....	Fig. 12.2	HEADREST MOTOR	
.....	Fig. 13.1	PASSENGER .....	Fig. 11.4
.....	Fig. 14.1	.....	Fig. 11.5
.....	Fig. 19.1	HEADREST MOTOR AND POSITION SENSOR	
.....	Fig. 20.2	DRIVER .....	Fig. 11.1
FRONT FOG LAMP RELAY .....	Fig. 20.3	.....	Fig. 11.2
.....	Fig. 08.1	LH REAR SEAT .....	Fig. 11.7
FRONT FOG LAMPS .....	Fig. 08.2	RH REAR SEAT .....	Fig. 11.8
FRONT POWER DISTRIBUTION FUSE BOX .....	Fig. 01.1	HEADREST MOTOR PASSENGER .....	Fig. 11.3
.....	Fig. 01.2	HEATED REAR WINDOW .....	Fig. 06.2
.....	Fig. 01.4	.....	Fig. 15.1
.....	Fig. 01.5	.....	Fig. 15.2
.....	Fig. 01.8	HEATED REAR WINDOW RELAY .....	Fig. 06.2
.....	Fig. 02.1	HEIGHT SENSORS .....	Fig. 05.3
.....	Fig. 02.2	HIGH-MOUNTED STOP LAMP .....	Fig. 08.3
.....	Fig. 03.9	.....	Fig. 08.4
.....	Fig. 05.3	.....	Fig. 08.5
.....	Fig. 06.2	HO2 SENSORS .....	Fig. 03.1
.....	Fig. 08.1	.....	Fig. 03.3
.....	Fig. 08.2	.....	Fig. 03.5
FRONT POWER DISTRIBUTION FUSE BOX (DIESEL 2.7V6) .....	Fig. 02.3	HOOD AJAR SWITCH .....	Fig. 12.2
FRP SENSOR (DIESEL 2.7V6) .....	Fig. 03.7	HORN .....	Fig. 19.2
FUEL FILLER FLAP MOTOR .....	Fig. 12.1	HORN RELAY .....	Fig. 19.2
FUEL INJECTORS .....	Fig. 03.2	HORN SWITCH .....	Fig. 19.2
.....	Fig. 03.4	HORNS .....	Fig. 19.2
.....	Fig. 03.6	HUMIDITY SENSOR .....	Fig. 06.1
FUEL INJECTORS (DIESEL 2.7V6) .....	Fig. 03.8	<b>I</b>	
FUEL LEVEL SENSORS .....	Fig. 07.1	IAT SENSOR .....	Fig. 03.3
FUEL LIFT PUMP (DIESEL 2.7V6) .....	Fig. 03.8	IBOC MODULE .....	Fig. 15.4
FUEL LIFT PUMP RELAY (DIESEL 2.7V6) .....	Fig. 03.8	IGNITION CAPACITOR .....	Fig. 03.2
FUEL PUMP .....	Fig. 03.4	.....	Fig. 03.4
.....	Fig. 03.6	.....	Fig. 03.6
FUEL PUMP (DIESEL 2.7V6) .....	Fig. 03.8	IGNITION COIL RELAY .....	Fig. 01.8
FUEL PUMP MODULE .....	Fig. 03.6	IGNITION MODULES AND COILS .....	Fig. 03.2
FUEL PUMP RELAY .....	Fig. 03.2	.....	Fig. 03.4
.....	Fig. 03.4	.....	Fig. 03.6
.....	Fig. 03.6	IGNITION SWITCH .....	Fig. 01.1
FUEL TANK .....	Fig. 03.2	.....	Fig. 01.4
FUEL-FIRED AUXILIARY HEATER MODULE (DIESEL 2.7V6) .....	Fig. 03.8	.....	Fig. 01.5
.....	Fig. 20.1	.....	Fig. 02.1
.....	Fig. 20.2	.....	Fig. 02.2
.....	Fig. 20.3	.....	Fig. 04.1
<b>G</b>		.....	Fig. 07.1
GATEWAY MODULE .....	Fig. 15.4	IGNITION SWITCH (DIESEL 2.7V6) .....	Fig. 12.2
.....	Fig. 20.4	IMPACT SENSOR	
GENERATOR .....	Fig. 02.1	FRONT .....	Fig. 17.1
.....	Fig. 02.2	IMPACT SENSORS	
GENERATOR (DIESEL 2.7V6) .....	Fig. 02.3	SIDE .....	Fig. 17.1
GLOVE BOX LAMP SWITCH .....	Fig. 09.1	IMT SOLENOID VALVES .....	Fig. 03.1
GLOVE BOX LAMPS .....	Fig. 09.1	IN-CAR TEMPERATURE SENSOR .....	Fig. 06.1

INLET PORT SOLENOID (DIESEL 2.7V6) .....	Fig. 03.7	MAF SENSORS (DIESEL 2.7V6) .....	Fig. 03.7
IN-LINE FUSE .....	Fig. 03.9	MAGNETIC VALVE .....	Fig. 06.3
IN-LINE MEGAfuse (DIESEL 2.7V6) .....	Fig. 02.3	MAIN BEAM RELAY .....	Fig. 08.1
INSTRUMENT CLUSTER .....	Fig. 02.1	..... .....	Fig. 08.2
..... .....	Fig. 02.2	MAIN LIGHTING SWITCH (COLUMN SWITCHGEAR) .....	Fig. 07.1
..... .....	Fig. 05.2	..... .....	Fig. 08.1
..... .....	Fig. 05.3	..... .....	Fig. 08.2
..... .....	Fig. 05.4	..... .....	Fig. 08.3
..... .....	Fig. 06.1	MAP LAMPS .....	Fig. 09.1
..... .....	Fig. 07.1	MAP SENSOR .....	Fig. 03.1
..... .....	Fig. 08.1	..... .....	Fig. 03.3
..... .....	Fig. 08.2	..... .....	Fig. 03.5
..... .....	Fig. 08.3	MAP SENSOR (DIESEL 2.7V6) .....	Fig. 03.7
..... .....	Fig. 09.2	MEGAfuse .....	Fig. 01.1
..... .....	Fig. 09.3	..... .....	Fig. 02.1
..... .....	Fig. 10.1	..... .....	Fig. 02.2
..... .....	Fig. 12.2	MEGAfuse (DIESEL 2.7V6) .....	Fig. 02.3
..... .....	Fig. 18.1	MEMORY SWITCH PACK .....	
..... .....	Fig. 20.1	DRIVER .....	Fig. 09.3
..... .....	Fig. 20.2	..... .....	Fig. 10.1
..... .....	Fig. 20.3	..... .....	Fig. 10.2
INSTRUMENT CLUSTER (DIESEL 2.7V6) .....	Fig. 02.3	..... .....	Fig. 11.1
INTERCOOLER PUMP .....	Fig. 03.6	REAR .....	Fig. 09.3
INTERCOOLER RELAY .....	Fig. 01.8	MICROPHONE .....	
IP SENSOR .....	Fig. 03.1	REAR .....	Fig. 16.2
..... .....	Fig. 03.3	ROOF CONSOLE .....	Fig. 16.1
..... .....	Fig. 03.5	..... .....	Fig. 16.2
J		MODE SERVOS .....	Fig. 06.1
J-GATE MODULE .....	Fig. 04.1	MULTIMEDIA CONTROL PANEL .....	Fig. 09.2
..... .....	Fig. 05.1	..... .....	Fig. 15.3
..... .....	Fig. 09.2	..... .....	Fig. 20.4
..... .....	Fig. 20.1	N	
K		NAVIGATION CONTROL MODULE .....	Fig. 06.1
KNOCK SENSORS .....	Fig. 03.1	..... .....	Fig. 15.3
..... .....	Fig. 03.3	..... .....	Fig. 15.4
..... .....	Fig. 03.5	..... .....	Fig. 16.1
KNOCK SENSORS (DIESEL 2.7V6) .....	Fig. 03.7	..... .....	Fig. 16.2
L		..... .....	Fig. 16.3
LEAK DETECTION UNIT (NAS ONLY) .....	Fig. 03.2	..... .....	Fig. 16.4
..... .....	Fig. 03.4	..... .....	Fig. 16.5
..... .....	Fig. 03.6	..... .....	Fig. 20.2
LICENSE PLATE LAMPS .....	Fig. 08.3	..... .....	Fig. 20.3
..... .....	Fig. 08.4	NAVIGATION GPS ANTENNA .....	Fig. 16.3
..... .....	Fig. 08.5	..... .....	Fig. 16.4
LUMBAR PUMP .....		..... .....	Fig. 16.5
12-WAY SEAT .....		O	
DRIVER .....	Fig. 11.1	OCCUPANCY SENSING MODULE .....	Fig. 17.2
PASSENGER .....	Fig. 11.3	OUTLET AIR TEMPERATURE SENSORS .....	Fig. 06.1
16-WAY SEAT .....		P	
DRIVER .....	Fig. 11.2	PARKING AID MODULE .....	Fig. 18.1
PASSENGER .....	Fig. 11.4	..... .....	Fig. 20.2
LH REAR SEAT .....	Fig. 11.7	..... .....	Fig. 20.3
PASSENGER .....	Fig. 11.5	PARKING AID SENSORS .....	Fig. 18.1
RH REAR SEAT .....	Fig. 11.8	PARKING AID SOUNDERS .....	Fig. 18.1
LUMBAR SOLENOIDS .....		PARKING BRAKE MODULE .....	Fig. 05.2
DRIVER .....	Fig. 11.2	PARKING BRAKE MOTOR .....	Fig. 05.2
LH REAR SEAT .....	Fig. 11.7	PARKING BRAKE SWITCH .....	Fig. 05.2
PASSENGER .....	Fig. 11.4	PASSENGER (PRIMARY) JUNCTION FUSE BOX .....	Fig. 01.1
..... .....	Fig. 11.5	..... .....	Fig. 01.3
RH REAR SEAT .....	Fig. 11.8	..... .....	Fig. 01.4
..... .....	Fig. 11.2	..... .....	Fig. 01.5
M		PASSENGER AIR BAG DEACTIVATED INDICATOR LAMP .....	Fig. 01.6
MAF SENSOR .....	Fig. 03.1	..... .....	Fig. 17.2
..... .....	Fig. 03.3		
..... .....	Fig. 03.5		

# Jaguar XJ (VIN: H18680 >)

PASSENGER SEAT POSITION SWITCH.....	Fig. 17.1	REAR POWER DISTRIBUTION FUSE BOX .....	Fig. 01.1
PASSENGER SEAT WEIGHT PRESSURE SENSOR .....	Fig. 17.2	.....	Fig. 01.2
PASSENGER SEAT WEIGHT SENSING MODULE .....	Fig. 17.2	.....	Fig. 01.4
PASSIVE ANTI-THEFT SYSTEM TRANSCIVER.....	Fig. 02.1	.....	Fig. 01.5
.....	Fig. 02.2	.....	Fig. 01.7
.....	Fig. 12.2	.....	Fig. 01.8
<b>PASSIVE ANTI-THEFT SYSTEM TRANSCIVER</b>		.....	Fig. 03.2
(DIESEL 2.7V6).....	Fig. 02.3	.....	Fig. 03.4
PEDAL ADJUST MOTOR .....	Fig. 10.1	.....	Fig. 03.6
POWER AMPLIFIER .....	Fig. 15.2	.....	Fig. 06.2
.....	Fig. 20.4	.....	Fig. 19.2
POWER POINTS.....	Fig. 09.2	<b>REAR POWER DISTRIBUTION FUSE BOX</b>	
.....	Fig. 19.2	(DIESEL 2.7V6) .....	Fig. 03.8
POWER WASH PUMP .....	Fig. 13.1	<b>REAR SEAT SWITCH PACK</b>	
POWER WASH RELAY.....	Fig. 13.1	LH .....	Fig. 11.5
POWERTRAIN CONTROL MODULE (DIESEL 2.7V6).....	Fig. 01.8	RH .....	Fig. 11.5
.....	Fig. 02.3	REAR VENTS.....	Fig. 09.2
.....	Fig. 03.7	REAR VIEW MIRRORS – HEATED .....	Fig. 06.2
.....	Fig. 03.8	REMOTE KEYLESS ENTRY MODULE.....	Fig. 12.1
.....	Fig. 05.4	.....	Fig. 12.2
.....	Fig. 06.1	<b>RESTRAINTS CONTROL MODULE</b> .....	Fig. 17.1
.....	Fig. 20.1	.....	Fig. 17.2
PUDDLE LAMPS.....	Fig. 09.1	.....	Fig. 20.2
<b>R</b>		.....	Fig. 20.3
RAIN SENSING MODULE.....	Fig. 13.1	<b>ROOF CONSOLE</b> .....	Fig. 09.1
REAR ACCESSORY CONNECTOR.....	Fig. 19.2	.....	Fig. 09.3
REAR AIR MIX SERVOS .....	Fig. 06.3	.....	Fig. 12.2
REAR ASSIST HANDLES.....	Fig. 09.3	.....	Fig. 14.1
REAR BLOWER .....	Fig. 06.3	.....	Fig. 18.1
REAR BLOWER CONTROLLER.....	Fig. 06.3	.....	Fig. 19.2
REAR CENTER CONSOLE SWITCH PACK .....	Fig. 09.2	.....	Fig. 20.2
.....	Fig. 11.9	.....	Fig. 20.3
REAR CLIMATE CONTROL MODULE .....	Fig. 06.3	<b>ROTARY ELECTRONIC ACTUATORS</b>	
.....	Fig. 09.2	(DIESEL 2.7V6) .....	Fig. 03.7
.....	Fig. 20.1	<b>S</b>	
REAR DOOR LOCK MOTORS .....	Fig. 12.1	SAI MAP SENSOR (NAS ONLY) .....	Fig. 03.9
REAR ELECTRONIC MODULE .....	Fig. 01.6	SAI PUMP (NAS ONLY) .....	Fig. 03.9
.....	Fig. 01.7	SAI RELAY (NAS ONLY) .....	Fig. 03.9
.....	Fig. 03.2	SDARS .....	Fig. 15.4
.....	Fig. 03.4	<b>SEAT (CLIMATE CONTROLLED) SWITCHES</b>	
.....	Fig. 03.6	(LHD) .....	Fig. 11.10
.....	Fig. 07.1	(RHD) .....	Fig. 11.11
.....	Fig. 08.3	<b>SEAT BACK HEATERS</b>	
.....	Fig. 08.4	FRONT .....	Fig. 11.6
.....	Fig. 08.5	REAR .....	Fig. 11.9
.....	Fig. 09.1	<b>SEAT BACK INCLINE / RECLINE MOTOR AND POSITION SENSOR</b>	
.....	Fig. 09.3	LH REAR .....	Fig. 11.7
.....	Fig. 10.2	RH REAR .....	Fig. 11.8
.....	Fig. 11.5	<b>SEAT BELT COMFORT SOLENOID</b>	
.....	Fig. 11.9	LH REAR .....	Fig. 11.7
.....	Fig. 12.1	RH REAR .....	Fig. 11.8
.....	Fig. 12.2	<b>SEAT BELT COMFORT SWITCH</b>	
.....	Fig. 14.1	LH REAR .....	Fig. 11.7
.....	Fig. 18.1	RH REAR .....	Fig. 11.8
.....	Fig. 20.2	<b>SEAT BELT PRETENSIONER IGNITERS</b> .....	Fig. 17.1
.....	Fig. 20.3	<b>SEAT BELT SWITCH</b>	
<b>REAR ELECTRONIC MODULE (DIESEL 2.7V6)</b> .....	Fig. 03.8	DRIVER .....	Fig. 17.1
REAR EVAPORATOR TEMPERATURE SENSOR .....	Fig. 06.3	PASSENGER .....	Fig. 17.2
REAR IGNITION RELAY.....	Fig. 01.4	<b>SEAT BELT TENSION SENSOR – PASSENGER</b> .....	Fig. 17.2
REAR MEMORY MODULE .....	Fig. 09.3	<b>SEAT CLIMATE-CONTROLLED MODULE</b> .....	Fig. 20.1
.....	Fig. 11.7	(LHD) .....	Fig. 11.10
.....	Fig. 11.8	(RHD) .....	Fig. 11.11
.....	Fig. 20.2	<b>SEAT CUSHION EXTEND MOTOR AND POSITION SENSOR – DRIVER</b> .....	Fig. 11.2
.....	Fig. 20.3		
REAR MODE SERVO .....	Fig. 06.3		
REAR OVERRIDE RELAY PACK .....	Fig. 11.5		

SEAT CUSHION EXTEND MOTOR – PASSENGER .....	Fig. 11.4	SPEAKERS .....	
.....	Fig. 11.5	MID-BASS .....	Fig. 15.1
SEAT CUSHION FRONT RAISE / LOWER MOTOR PASSENGER .....	Fig. 11.3	.....	Fig. 15.2
.....	Fig. 11.4	MID-RANGE .....	Fig. 15.2
.....	Fig. 11.5	SUBWOOFERS .....	Fig. 15.2
SEAT CUSHION FRONT RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER .....	Fig. 11.1	TWEETER .....	Fig. 15.1
.....	Fig. 11.2	.....	Fig. 15.2
SEAT CUSHION HEATERS FRONT .....	Fig. 11.6	SPEED CONTROL CHIME MODULE .....	Fig. 05.4
REAR .....	Fig. 11.9	SPEED CONTROL MODULE .....	Fig. 05.4
SEAT CUSHION REAR RAISE / LOWER MOTOR PASSENGER .....	Fig. 11.3	.....	Fig. 20.1
.....	Fig. 11.4	SPEED CONTROL SENSOR .....	Fig. 05.4
.....	Fig. 11.5	STARTER MOTOR .....	Fig. 02.1
SEAT CUSHION REAR RAISE / LOWER MOTOR AND POSITION SENSOR – DRIVER .....	Fig. 11.1	.....	Fig. 02.2
.....	Fig. 11.2	STARTER MOTOR (DIESEL 2.7V6) .....	Fig. 02.3
SEAT FORE / AFT MOTOR PASSENGER .....	Fig. 11.3	STARTER RELAY .....	Fig. 02.1
.....	Fig. 11.4	.....	Fig. 02.2
.....	Fig. 11.5	STARTER RELAY (DIESEL 2.7V6) .....	Fig. 02.3
SEAT FORE / AFT MOTOR AND POSITION SENSOR – DRIVER .....	Fig. 11.1	STEERING ANGLE SENSOR .....	Fig. 05.1
.....	Fig. 11.2	STEERING COLUMN LOCK MODULE .....	Fig. 12.2
SEAT INCLINE / RECLINE MOTOR PASSENGER .....	Fig. 11.3	.....	Fig. 20.2
.....	Fig. 11.4	.....	Fig. 20.3
.....	Fig. 11.5	STEERING COLUMN MOTOR, SOLENOIDS AND POSITION SENSORS .....	Fig. 10.1
SEAT INCLINE / RECLINE MOTOR AND POSITION SENSOR – DRIVER .....	Fig. 11.1	STEERING WHEEL .....	Fig. 19.1
.....	Fig. 11.2	STEERING WHEEL AUDIO SWITCHES .....	Fig. 15.1
SEAT MEMORY SWITCH PACK LH REAR .....	Fig. 11.7	.....	Fig. 15.2
RH REAR .....	Fig. 11.8	STEERING WHEEL HEATER MODULE .....	Fig. 19.1
SEAT POSITION SWITCH – DRIVER .....	Fig. 17.1	STEERING WHEEL LIGHTING .....	Fig. 09.2
SEAT POSITION SWITCH – PASSENGER .....	Fig. 17.1	STEERING WHEEL SPEED CONTROL SWITCHES .....	Fig. 03.2
SEAT SWITCH PACK DRIVER .....	Fig. 11.1	.....	Fig. 03.4
.....	Fig. 11.2	.....	Fig. 03.6
LH REAR .....	Fig. 11.7	.....	Fig. 03.8
PASSENGER .....	Fig. 11.3	.....	Fig. 05.4
.....	Fig. 11.4	SUN SHADE MOTOR .....	Fig. 19.2
.....	Fig. 11.5	SWITCHED SYSTEM POWER RELAY 1 .....	Fig. 01.6
RH REAR .....	Fig. 11.8	SWITCHED SYSTEM POWER RELAY 2 .....	Fig. 01.6
SEATS CLIMATE DRIVER (LHD) .....	Fig. 11.10	SWITCHED SYSTEM POWER RELAY 3 .....	Fig. 01.7
DRIVER (RHD) .....	Fig. 11.11	SWITCHED SYSTEM POWER RELAY 4 .....	Fig. 01.7
PASSENGER (LHD) .....	Fig. 11.10	SWITCHED SYSTEM POWER RELAY 5 .....	Fig. 01.7
PASSENGER (RHD) .....	Fig. 11.11	<b>T</b>	
SECURITY SOUNDER ACTIVE .....	Fig. 12.2	TAIL LAMP UNITS .....	Fig. 08.3
PASSIVE .....	Fig. 12.2	.....	Fig. 08.4
SIDE MARKER LAMPS FRONT .....	Fig. 08.1	.....	Fig. 08.5
.....	Fig. 08.2	TCM CAPACITOR .....	Fig. 04.1
REAR .....	Fig. 08.3	TELEMATICS DISPLAY .....	Fig. 09.2
SLAVE IGNITION RELAY .....	Fig. 01.4	.....	Fig. 12.2
.....	Fig. 01.8	.....	Fig. 15.3
SLIDING ROOF MODULE .....	Fig. 14.1	.....	Fig. 16.1
SMOG SENSOR .....	Fig. 06.1	.....	Fig. 16.2
Spatial SENSORS .....	Fig. 17.2	.....	Fig. 16.3
.....		.....	Fig. 16.4
.....		.....	Fig. 16.5
TELEPHONE ANTENNA .....		TELEPHONE TRANSEIVER MODULE .....	Fig. 20.4
.....		TELEVISION ANTENNAS .....	Fig. 16.4
.....		.....	Fig. 16.5
TELEVISION SCREENS – REAR .....		TELEVISION SCREENS – REAR .....	Fig. 15.3
THROTTLE BODY .....		THROTTLE BODY .....	Fig. 03.1
.....		.....	Fig. 03.3
THROTTLE MOTOR .....		THROTTLE MOTOR .....	Fig. 03.1
.....		.....	Fig. 03.3
TIRE PRESSURE SENSORS .....		.....	Fig. 03.5
.....		TIRE PRESSURE SENSORS .....	Fig. 05.5

## Jaguar XJ (VIN: H18680 >)

TMAP SENSOR .....	Fig. 03.5
TP SENSOR .....	Fig. 03.1
.....	Fig. 03.3
.....	Fig. 03.5
TPMS ANTENNA .....	Fig. 05.5
TPMS INITIATORS .....	Fig. 05.5
TPMS MODULE .....	Fig. 05.5
.....	Fig. 20.1
TRAILER TOWING CONNECTOR .....	Fig. 08.4
.....	Fig. 08.5
TRAILER TOWING JUNCTION FUSE BOX .....	Fig. 08.4
.....	Fig. 08.5
TRAILER TOWING MODULE .....	Fig. 08.4
.....	Fig. 08.5
TRAILER TOWING RELAY .....	Fig. 08.4
.....	Fig. 08.5
TRANSIT ISOLATION RELAY .....	Fig. 01.1
TRANSMISSION CONTROL MODULE .....	Fig. 02.1
.....	Fig. 02.2
.....	Fig. 04.1
.....	Fig. 05.4
.....	Fig. 20.1
TRANSMISSION CONTROL MODULE (DIESEL 2.7V6) .....	Fig. 02.3
TRUNK AND FUEL FLAP RELEASE SWITCH PACK .....	Fig. 09.2
.....	Fig. 12.1
.....	Fig. 12.2
TRUNK LAMP .....	Fig. 09.1
TRUNK LATCH .....	Fig. 09.1
.....	Fig. 12.1
.....	Fig. 12.2
TRUNK LID LAMP .....	Fig. 09.1
TURN SIGNAL REPEATERS .....	Fig. 08.1
.....	Fig. 08.2
TV ANTENNA AMPLIFIERS .....	Fig. 16.4
.....	Fig. 16.5
<b>V</b>	
VACUUM SENSOR .....	Fig. 05.1
VACUUM SOLENOID (NAS ONLY) .....	Fig. 03.9
VANITY MIRROR LAMPS .....	Fig. 09.1
VARIABLE ASSIST STEERING ACTUATOR .....	Fig. 05.2
VEHICLE INFORMATION ANTENNA .....	Fig. 16.5
VEHICLE INFORMATION CONTROL MODULE .....	Fig. 16.5
VEHICLE INFORMATION SENSOR .....	Fig. 16.5
VERTICAL ACCELEROMETERS .....	Fig. 05.3
VOICE ACTIVATION MODULE .....	Fig. 16.2
.....	Fig. 20.4
VVT SOLENOID VALVES .....	Fig. 03.1
.....	Fig. 03.3
.....	Fig. 03.5
<b>W</b>	
WASHER FLUID LEVEL SWITCH .....	Fig. 13.1
WHEEL SPEED SENSORS .....	Fig. 05.1
WINDOW MOTOR ASSEMBLIES .....	Fig. 14.1
WINDSHIELD HEATER RELAYS .....	Fig. 06.2
WINDSHIELD HEATERS .....	Fig. 06.2
WINDSHIELD WASHER PUMP .....	Fig. 13.1
WIPE / WASH SWITCH .....	Fig. 13.1
WIPER FAST / SLOW RELAY .....	Fig. 13.1
WIPER MOTOR ASSEMBLY .....	Fig. 13.1
WIPER ON / OFF RELAY .....	Fig. 13.1
WIPER PARK RELAY .....	Fig. 06.2
WIPER PARK – HEATED .....	Fig. 06.2
<b>Y</b>	
YAW RATE AND LATERAL ACCELERATION SENSORS CLUSTER .....	Fig. 05.1
YAW RATE SENSOR .....	Fig. 20.1





---

Published by Technical Communications, **Jaguar Cars Limited**  
Publication Part Number JLR 12 85 10\_1E, May 2007